

MODIFICATION HISTORY

MODEL NAME : KDE-50XS955

SERVICE MANUAL

PARTS No. : 9-878-259-04


* Blue characters are linking.

[illegible]

KDE-50XS955

SERVICE MANUAL

US Model
Canadian Model

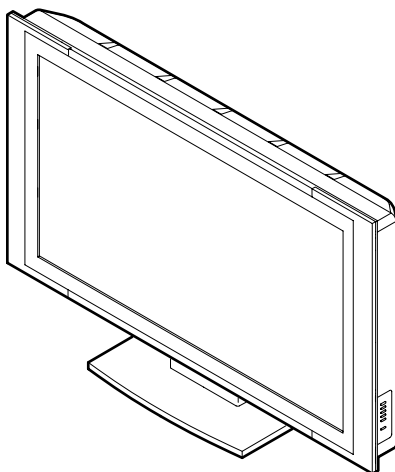

XS2 CHASSIS

SPECIFICATIONS

Panel System	Plasma Display panel	
Display resolution	KDE-50XS955	1365 pixels (horizontal) × 768 pixels (vertical)
Antenna	75 ohm external terminal for VHF/UHF	
Television System	NTSC	American TV Standard
	ATSC (8VSB terrestrial)	ATSC compliant 8VSB
	QAM on cable	ITU-T J.83 Annex B compliant 64/256 QAM
Channel Coverage	Terrestrial (analog)	2-69
	Cable TV (analog)	1-125
	Terrestrial (digital)	2-69
	Cable TV (digital)	1-135
Power Requirements	120V, 60 Hz	
Inputs/Outputs		
HDMI IN	Video	1080i, 720p, 480p, 480i
	Audio	Two channel linear PCM 32, 44.1 and 48 kHz, 16, 20 and 24 bits
Video (IN)	3 total (1 on left side panel)	1 Vp-p, 75 ohms unbalanced, sync negative
S Video (IN)	3 total (1 on left side panel)	Y: 1 Vp-p, 75 ohms unbalanced, sync negative C: 0.286 Vp-p (Burst signal), 75 ohms
Audio (IN)	5 total (1 on left side panel)	500 mVrms (100% modulation) Impedance: 47 kilohm

FLAT PANEL COLOR TV
SONY®

Component Video Input	2 (Y, PB, PR)	Y: 1.0 Vp-p, 75 ohms unbalanced, sync negative; PB: 0.7 Vp-p, 75 ohms PR: 0.7 Vp-p, 75 ohms
CONTROL S (IN)	1	Mini jack
CONTROL S (OUT)		Mini jack
Digital Audio Optical Output (PCM/Dolby Digital)	1	Optical rectangular (1)
Variable/Fixed Audio (OUT)	1	More than 408 mVrms at the maximum volume setting (Variable) More than 408 mVrms (Fixed) Impedance (output): 2 kilohms
Sub woofer (OUT)	1	Phono jack
CableCARD™ slot	PCMCIA Type I/II	
Screen Size (measured diagonally)	KDE-50XS955	50 inches
Speaker Output	25 W × 2 + 50 W woofer	
CENTER SPEAKER IN	Max. 180 W (6 Ω), 1 kHz, Sensitivity 30 Vp-p	
Dimensions (W × H × D)	KDE-50XS955	1136 × 870 × 360 mm (52 5/8 × 34 3/8 × 14 1/4 in)
Mass	KDE-50XS955	68.0 kg (149 lb 14 5/8 oz)
Power Consumption	In Use	KDE-37XS955: 350 W KDE-42XS955: 385 W KDE-50XS955: 450 W
	In Standby	0.5 W
	CableCARD Standby	KDE-50XS955: 29 W
Supplied Accessories	Remote Control (1) AA (R6) Batteries (2) AC power cord (1) AC plug holder (1) Cable band (1) Cable band screw (1) AC cord clamp (1) Cleaning Cloth (1) Operating Instructions (1) Quick Setup Guide (1) Warranty Card (1)	RM-Y1004

Design and specifications are subject to change without notice.

WARNING AND CAUTIONS


CAUTION

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

WARNING!!

An isolation transformer should be used during any service to avoid possible shock hazard, because of live chassis. The chassis of this receiver is directly connected to the ac power line.

SAFETY-RELATED COMPONENT WARNING!!


Components identified by shading and  mark on the schematic diagrams, exploded views, and in the parts list are critical for safe operation. Replace these components with Sony parts whose part numbers appear as shown in this manual or in supplements published by Sony. Circuit adjustments that are critical for safe operation are identified in this manual. Follow these procedures whenever critical components are replaced or improper operation is suspected.

ATTENTION!!

Ces instructions de service sont à l'usage du personnel de service qualifié seulement. Pour prévenir le risque de choc électrique, ne pas faire l'entretien autre que celui contenu dans le Mode d'emploi à moins que vous soyez qualifié faire ainsi.

Afin d'éviter tout risque d'électrocution provenant d'un châssis sous tension, un transformateur d'isolement doit être utilisé lors de tout dépannage. Le châssis de ce récepteur est directement raccordé à l'alimentation du secteur.

ATTENTION AUX COMPOSANTS RELATIFS A LA SECURITE!!

Les composants identifiés par une trame et par une marque  sur les schémas de principe, les vues explosées et les listes de pièces sont d'une importance critique pour la sécurité du fonctionnement. Ne les remplacer que par des composants Sony dont le numéro de pièce est indiqué dans le présent manuel ou dans des suppléments publiés par Sony. Les réglages de circuit dont l'importance est critique pour la sécurité du fonctionnement sont identifiés dans le présent manuel. Suivre ces procédures lors de chaque remplacement de composants critiques, ou lorsqu'un mauvais fonctionnement suspecte.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:


1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are “pinched” or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC Leakage. Check leakage as described right.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes).

Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOMs that are suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

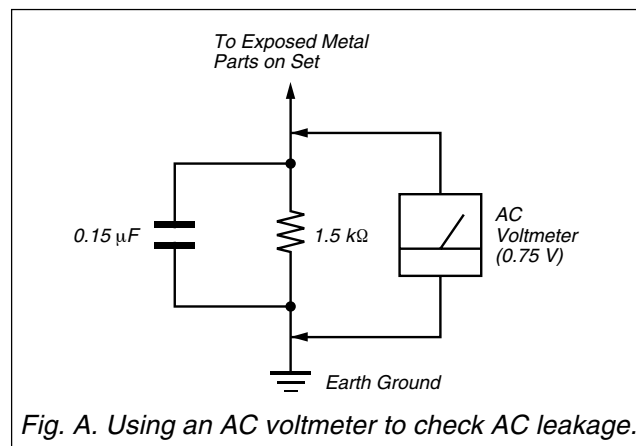

WARNING!!

SAFETY-RELATED COMPONENT WARNING!!
COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

AVERTISSEMENT!!

ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!
LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET UNE MARQUE ! SONT CRITIQUES POUR LA SÉCURITÉ. NE LES REMPLACER QUE PAR UNE PIÈCE PORTANT LE NUMÉRO SPECIFIÉ. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIÉS DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.


TABLE OF CONTENTS

1. DISASSEMBLY	1-1	3-3. CIRCUIT BOARDS LOCATION	3-14
1-1. SERVICE POSITION	1-1	3-4. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS	3-14
1-1-1. PANELS AND CAP REMOVAL	1-1	(1) Schematic Diagrams of A1U Board	3-15
1-1-2. WOOFER BLOCK REMOVAL	1-1	(2) Schematic Diagrams of A2NU Board	3-19
1-1-3. REAR COVER ASSY REMOVAL	1-1	(3) Schematic Diagrams of DE1 Board	3-22
1-2. STAND REMOVAL	1-2	(4) Schematic Diagrams of DIC3 Board	3-27
1-3. REAR COVER REMOVAL	1-2	(5) Schematic Diagram of F Board	3-34
1-4. QU BOARD REMOVAL	1-3	(6) Schematic Diagrams of G1 Board	3-35
1-5. QM AND QT BOARDS REMOVAL	1-3	(7) Schematic Diagrams of G2N Board	3-38
1-6. A2FN, DE1, DIC3 AND M1U BOARDS REMOVAL	1-4	(8) Schematic Diagram of H1U and H2 Boards	3-41
1-7. A1U, H2, P AND QH BOARDS REMOVAL ..	1-4	(9) Schematic Diagram of H3 and H4 Boards	3-42
1-8. H1U BOARDS REMOVAL	1-5	(10) Schematic Diagram of H5 Board	3-43
1-9. F AND K BOARDS REMOVAL	1-5	(11) Schematic Diagram of J1NU and J2NU Boards	3-44
1-10. PLASMA DISPLAY PANEL ASSY REMOVAL	1-6	(12) Schematic Diagram of K Board	3-45
1-11. H3 AND H4 BOARDS REMOVAL	1-7	(13) Schematic Diagrams of M1U Board	3-47
1-12. H5 BOARD REMOVAL	1-7	(14) Schematic Diagram of P Board	3-53
2. ADJUSTMENTS and TROUBLESHOOTING	2-1	(15) Schematic Diagram of QH Board	3-55
2-1. WHITE BALANCE ADJUSTMENT	2-1	(16) Schematic Diagrams of QM Board	3-56
2-1-1. Measurement equipment	2-1	(17) Schematic Diagrams of QT Board	3-61
2-1-2. Measuring procedure	2-1	(18) Schematic Diagram of QU Board	3-64
2-1-3. Service mode	2-1	3-5. SEMICONDUCTORS	3-65
2-2. TROUBLESHOOTING	2-2	4. EXPLODED VIEWS	4-1
3. DIAGRAMS	3-1	4-1. REAR COVER ASSY AND STAND	4-2
3-1. BLOCK DIAGRAMS	3-1	4-2. CHASSIS-1	4-4
(1) A1U AND H2 BOARDS	3-1	4-3. CHASSIS-2	4-5
(2) A2NU (1/2) AND J1NU BOARDS	3-2	4-4. CHASSIS-3	4-6
(3) A2NU (2/2), H4 AND J2NU BOARDS	3-3	4-5. CHASSIS-4	4-7
(4) DE1 BOARD	3-4	4-6. PACKING MATERIALS	4-8
(5) DIC3 BOARD	3-5	5. ELECTRICAL PARTS LIST	5-1
(6) F AND G1 BOARDS	3-6		
(7) G2N BOARD	3-7		
(8) K BOARD	3-8		
(9) H1U, H3, H5 AND M1U BOARDS	3-9		
(10) P BOARD	3-10		
(11) QH AND QM BOARDS	3-11		
(12) QT AND QU BOARDS	3-12		
3-2. FRAME DIAGRAMS	3-13		


SECTION 1 DISASSEMBLY

1-1. SERVICE POSITION


1-1-1. PANELS AND CAP REMOVAL

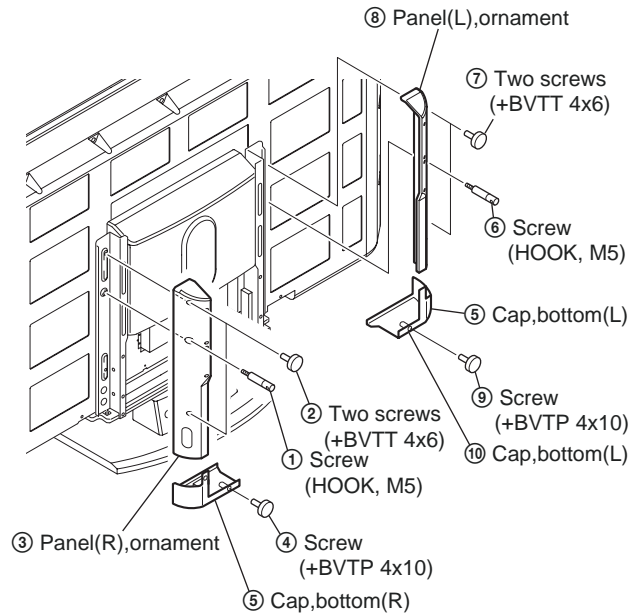


1-1-2. WOOFER BLOCK REMOVAL

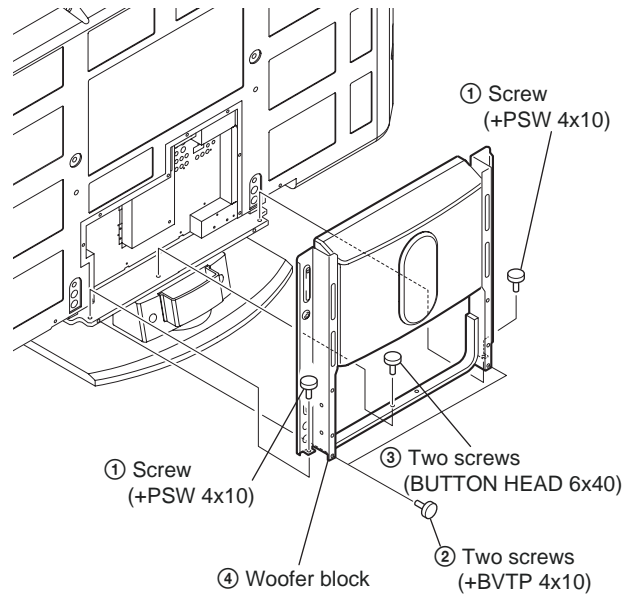


1-1-3. REAR COVER ASSY REMOVAL

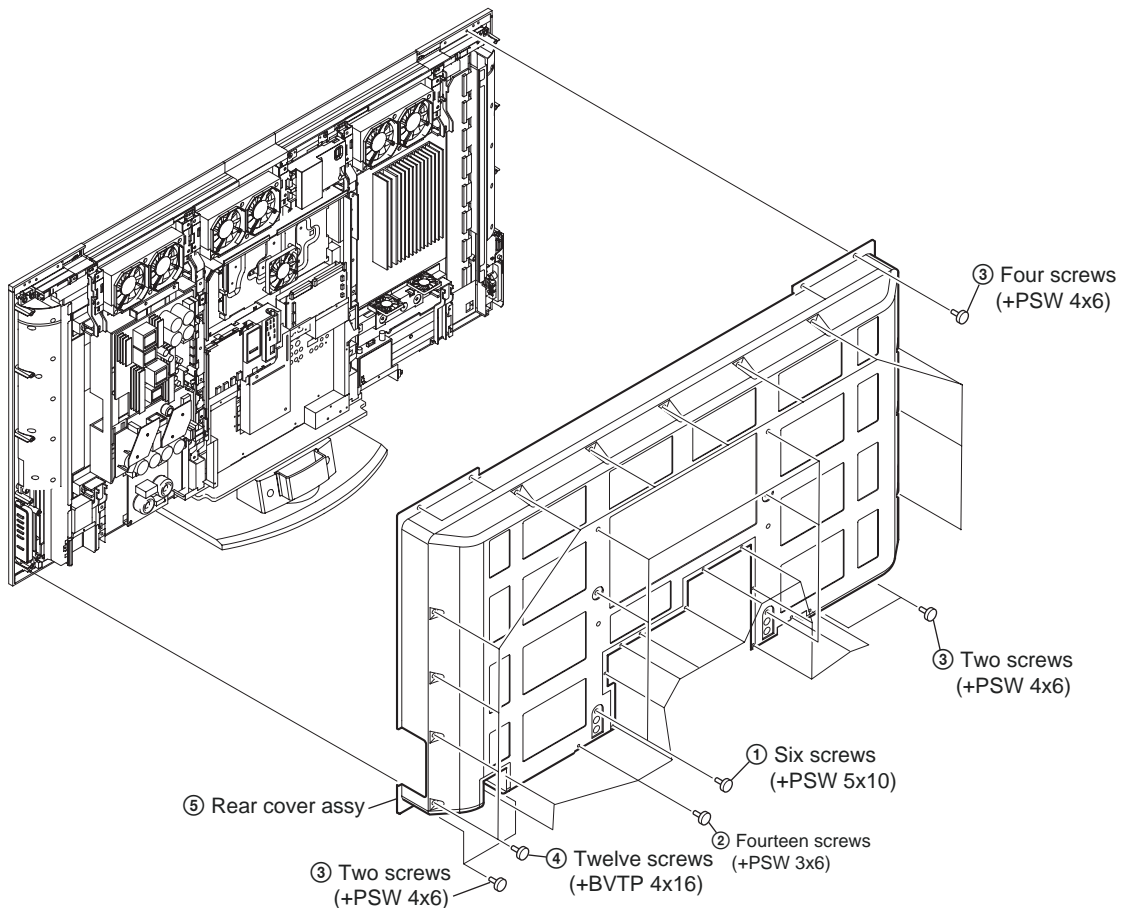


1-2. STAND REMOVAL

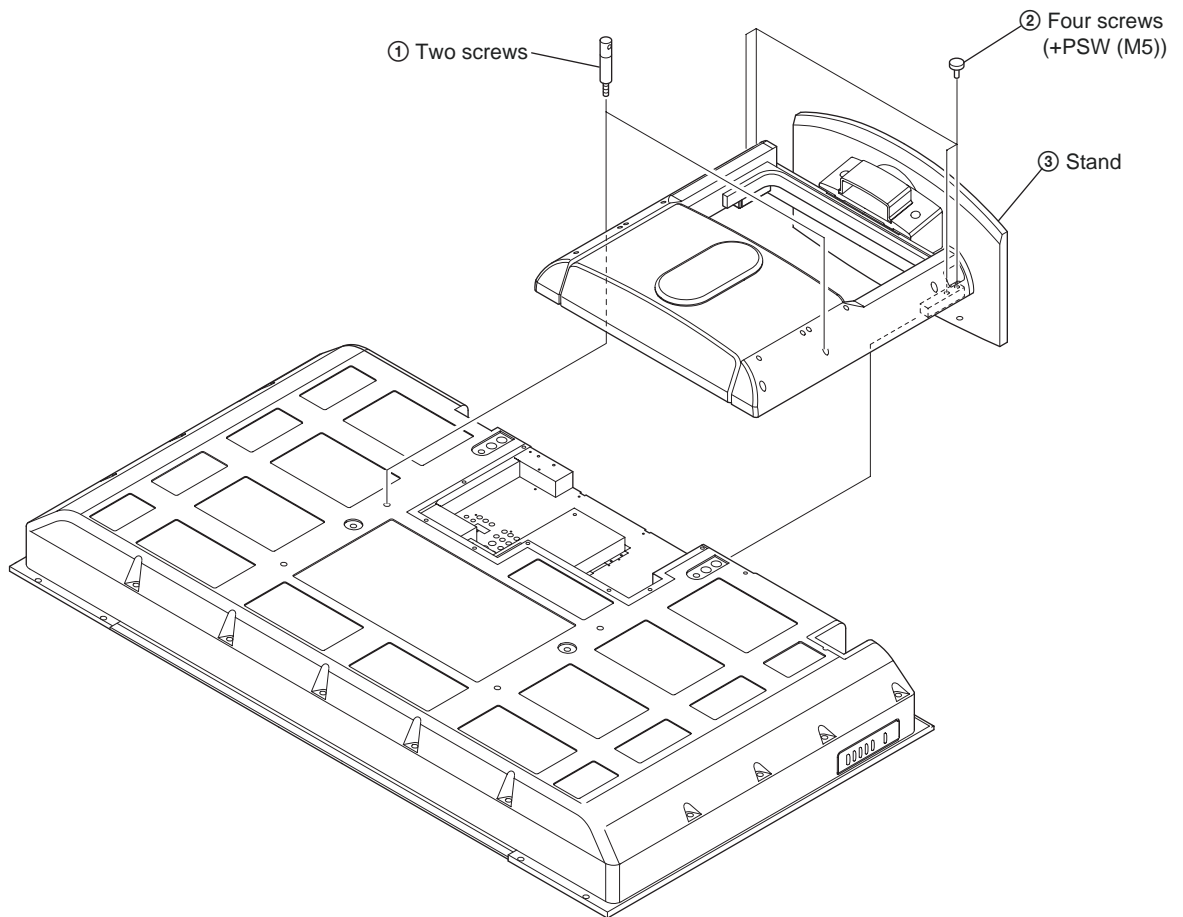


1-3. REAR COVER ASSY REMOVAL

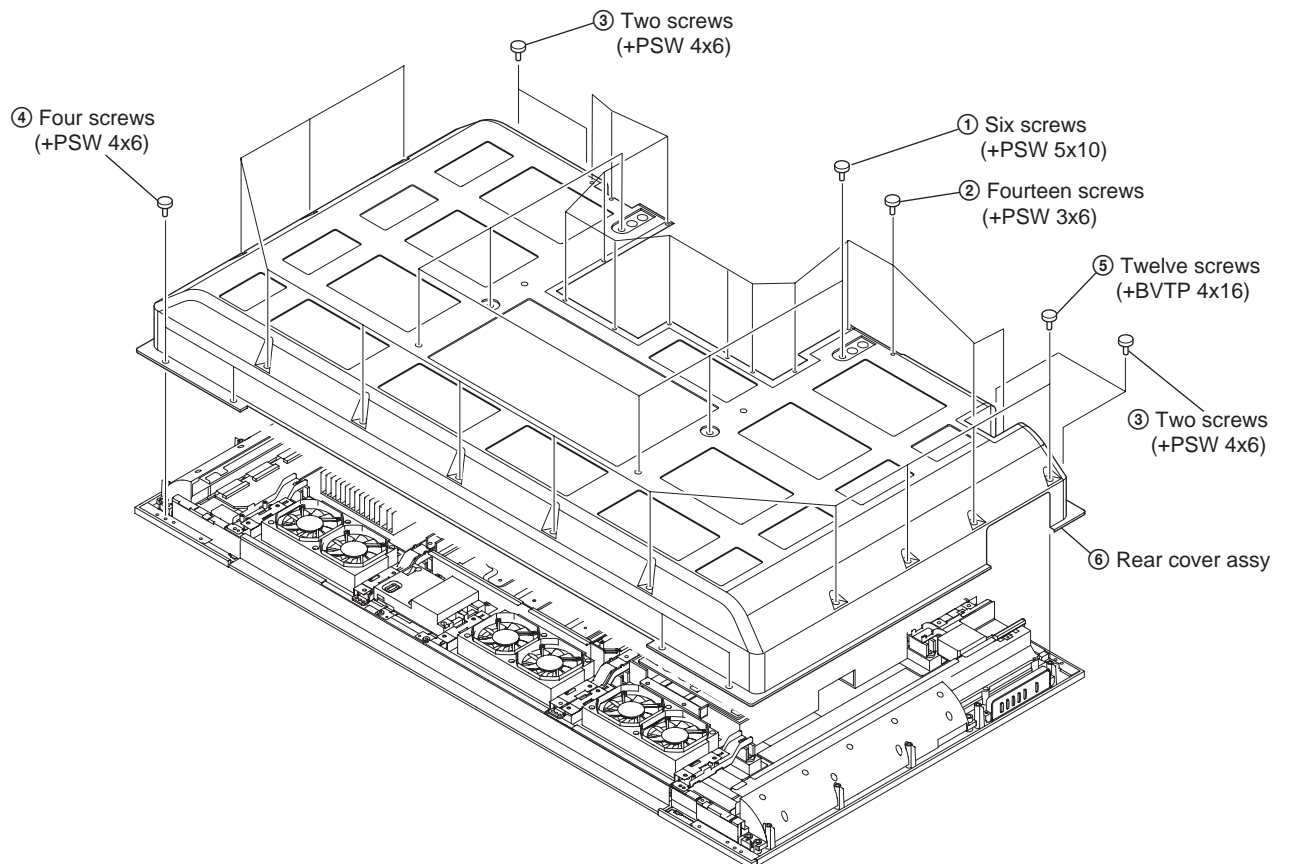


1-4. QU BOARD REMOVAL

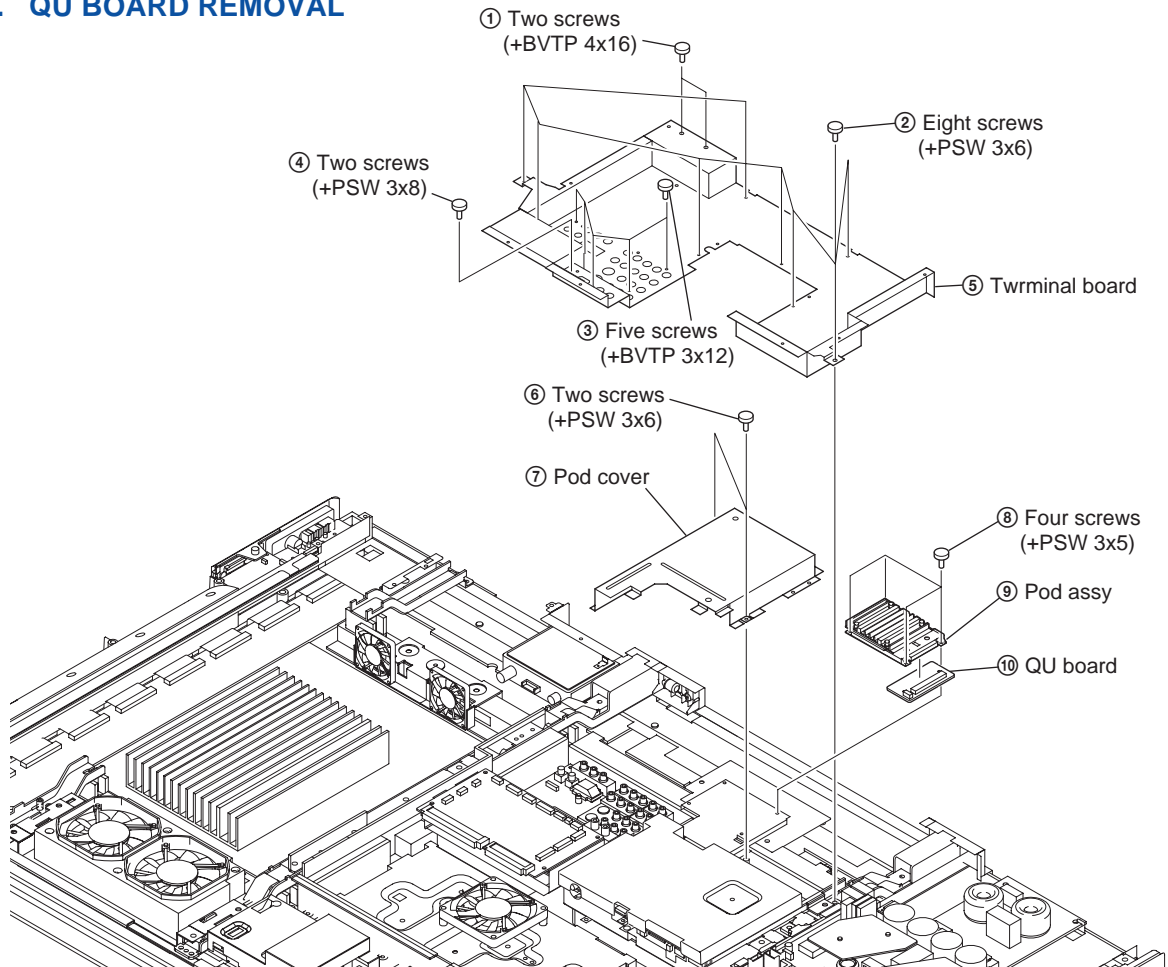


1-5. QM AND QT BOARDS REMOVAL

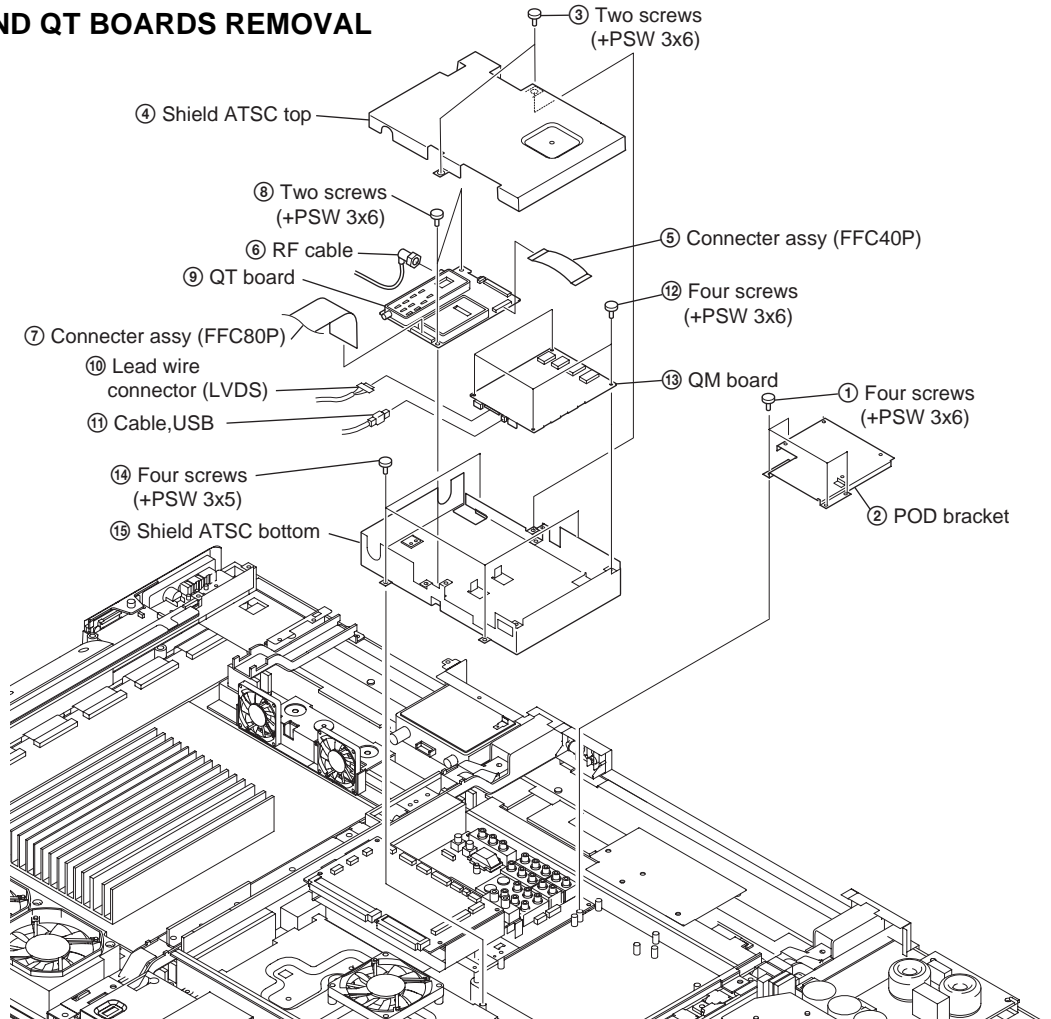


1-6. DE1, DIC3, J1NU AND M1U BOARDS REMOVAL

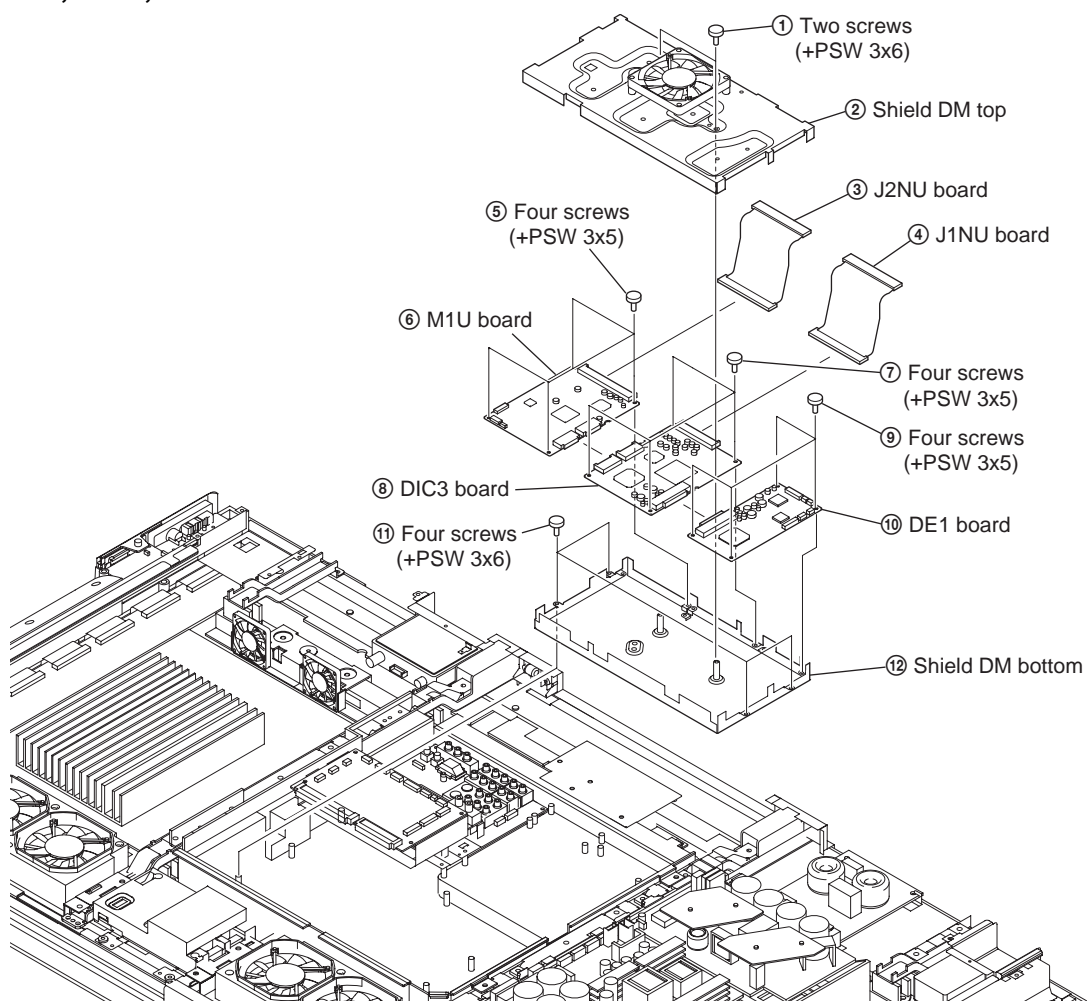


1-7. A1U, A2NU AND P BOARDS REMOVAL

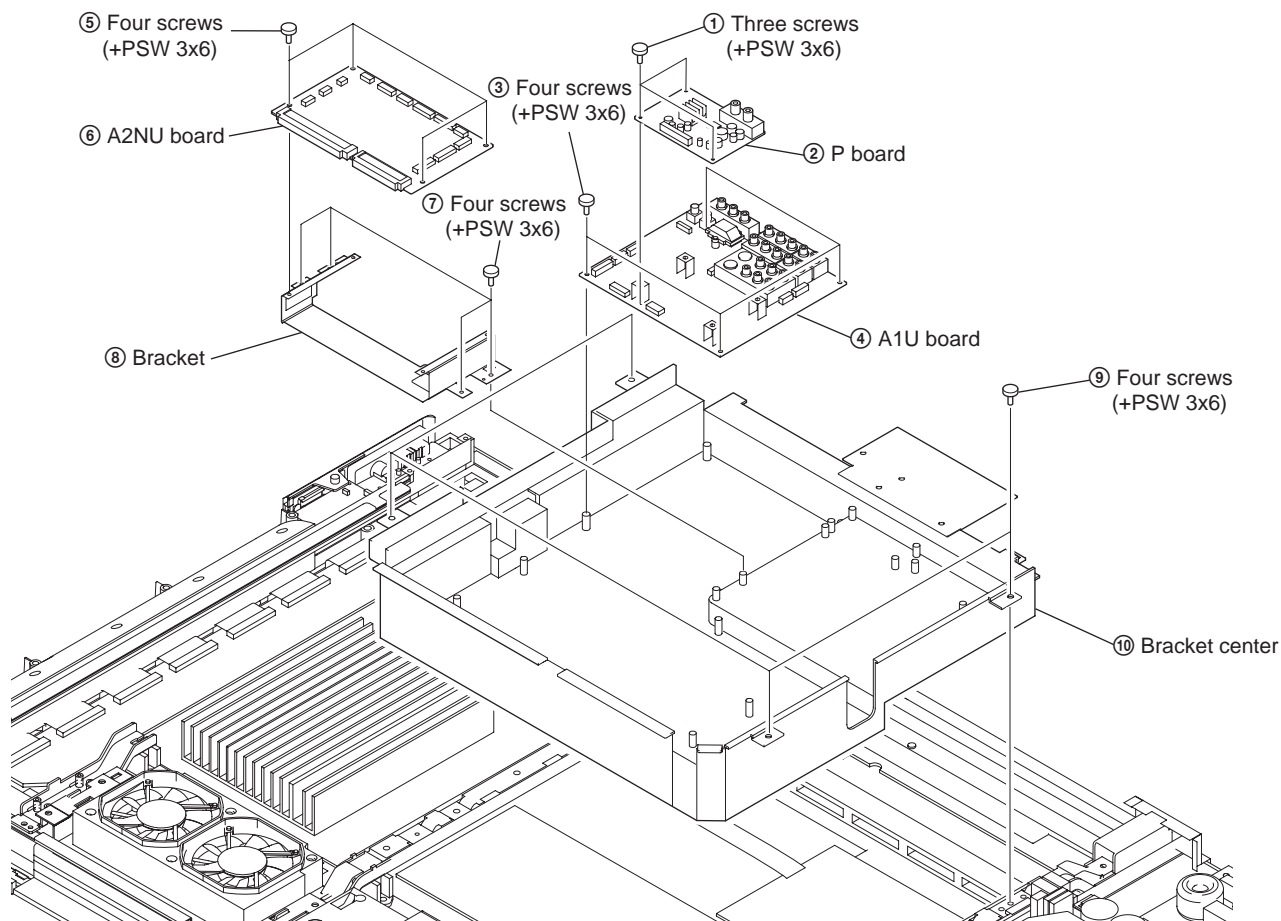


1-8. G1 AND G2N BOARDS REMOVAL

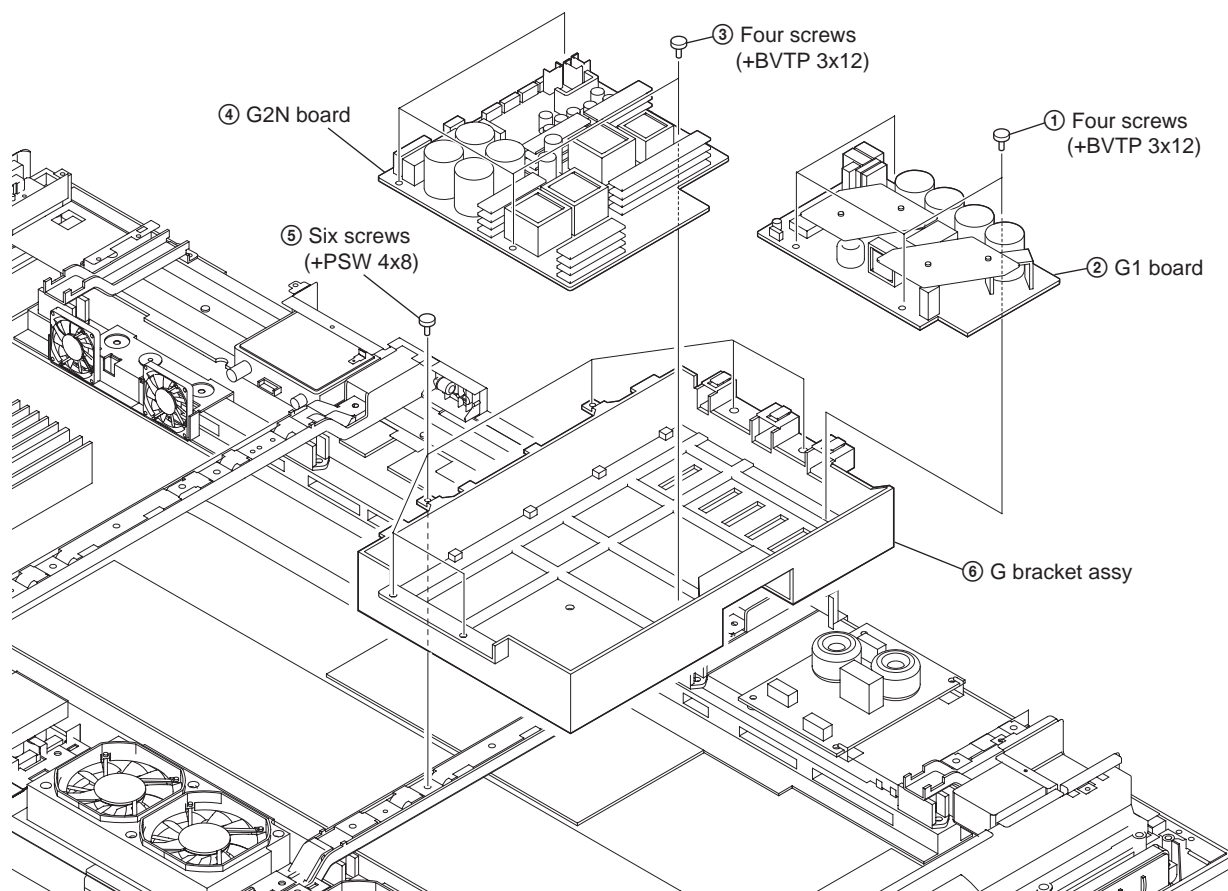


1-9. F AND K BOARDS REMOVAL

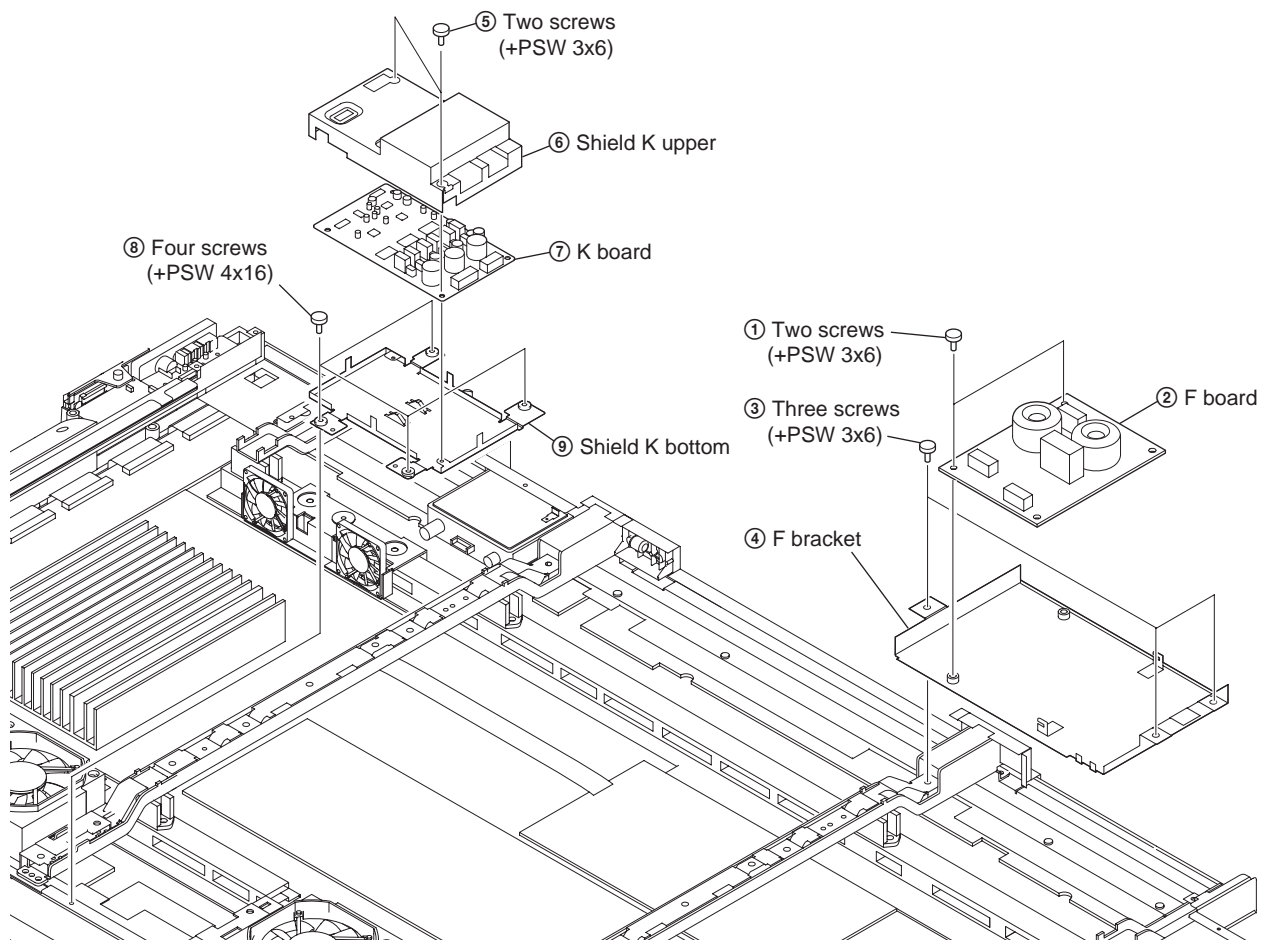


1-10. H1U BOARD REMOVAL

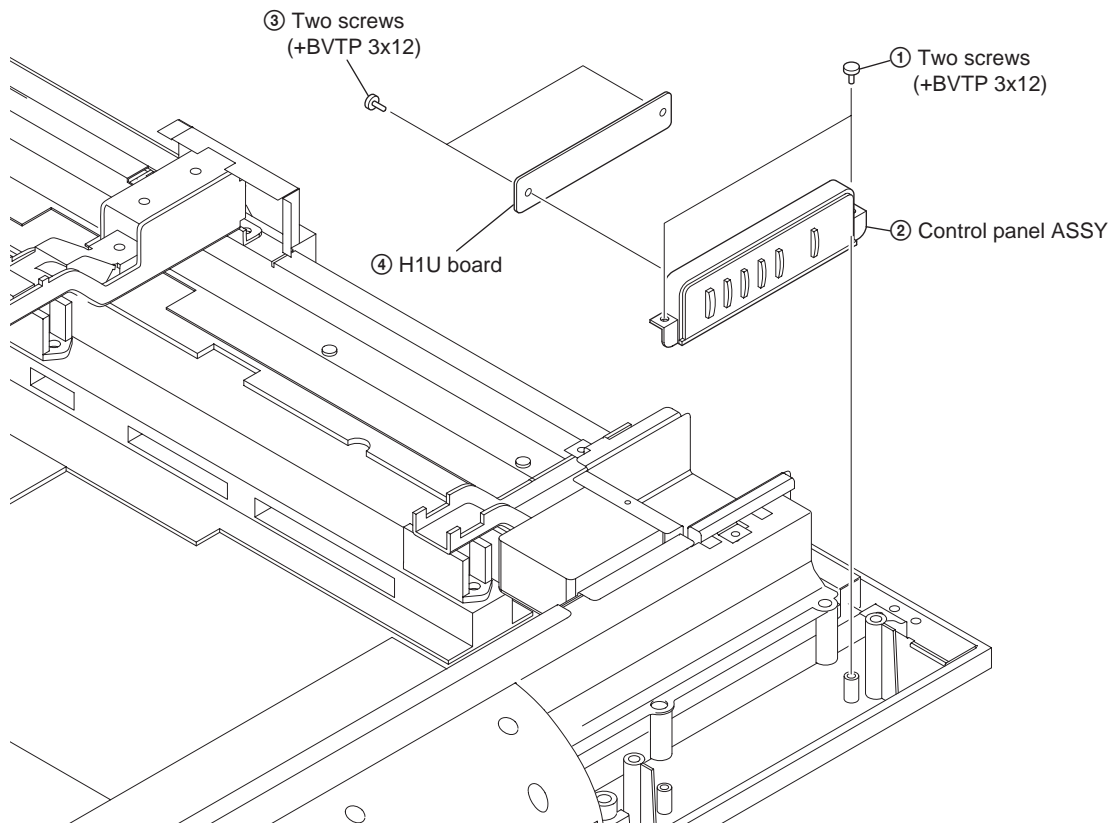


1-11. H2 AND QH BOARDS REMOVAL

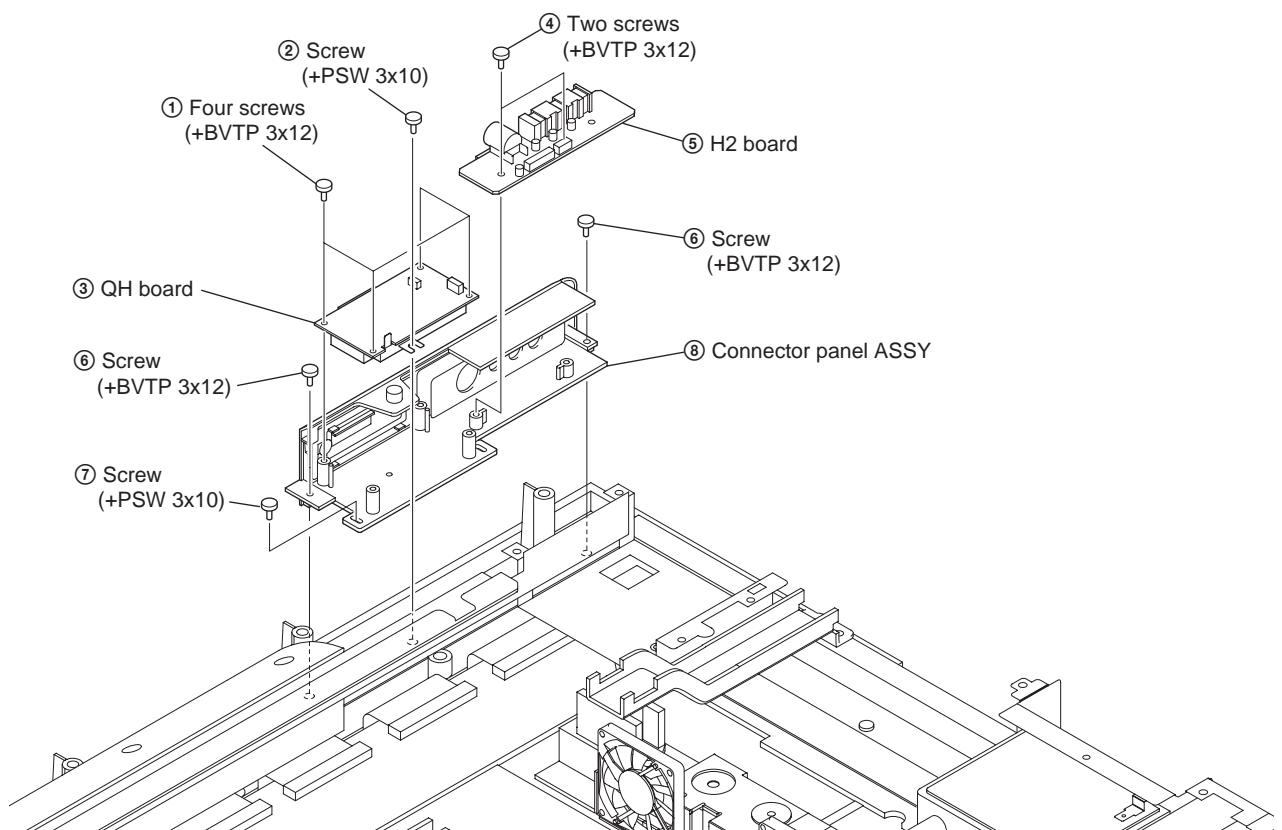


1-12. PLASMA DISPLAY PANEL ASSY REMOVAL

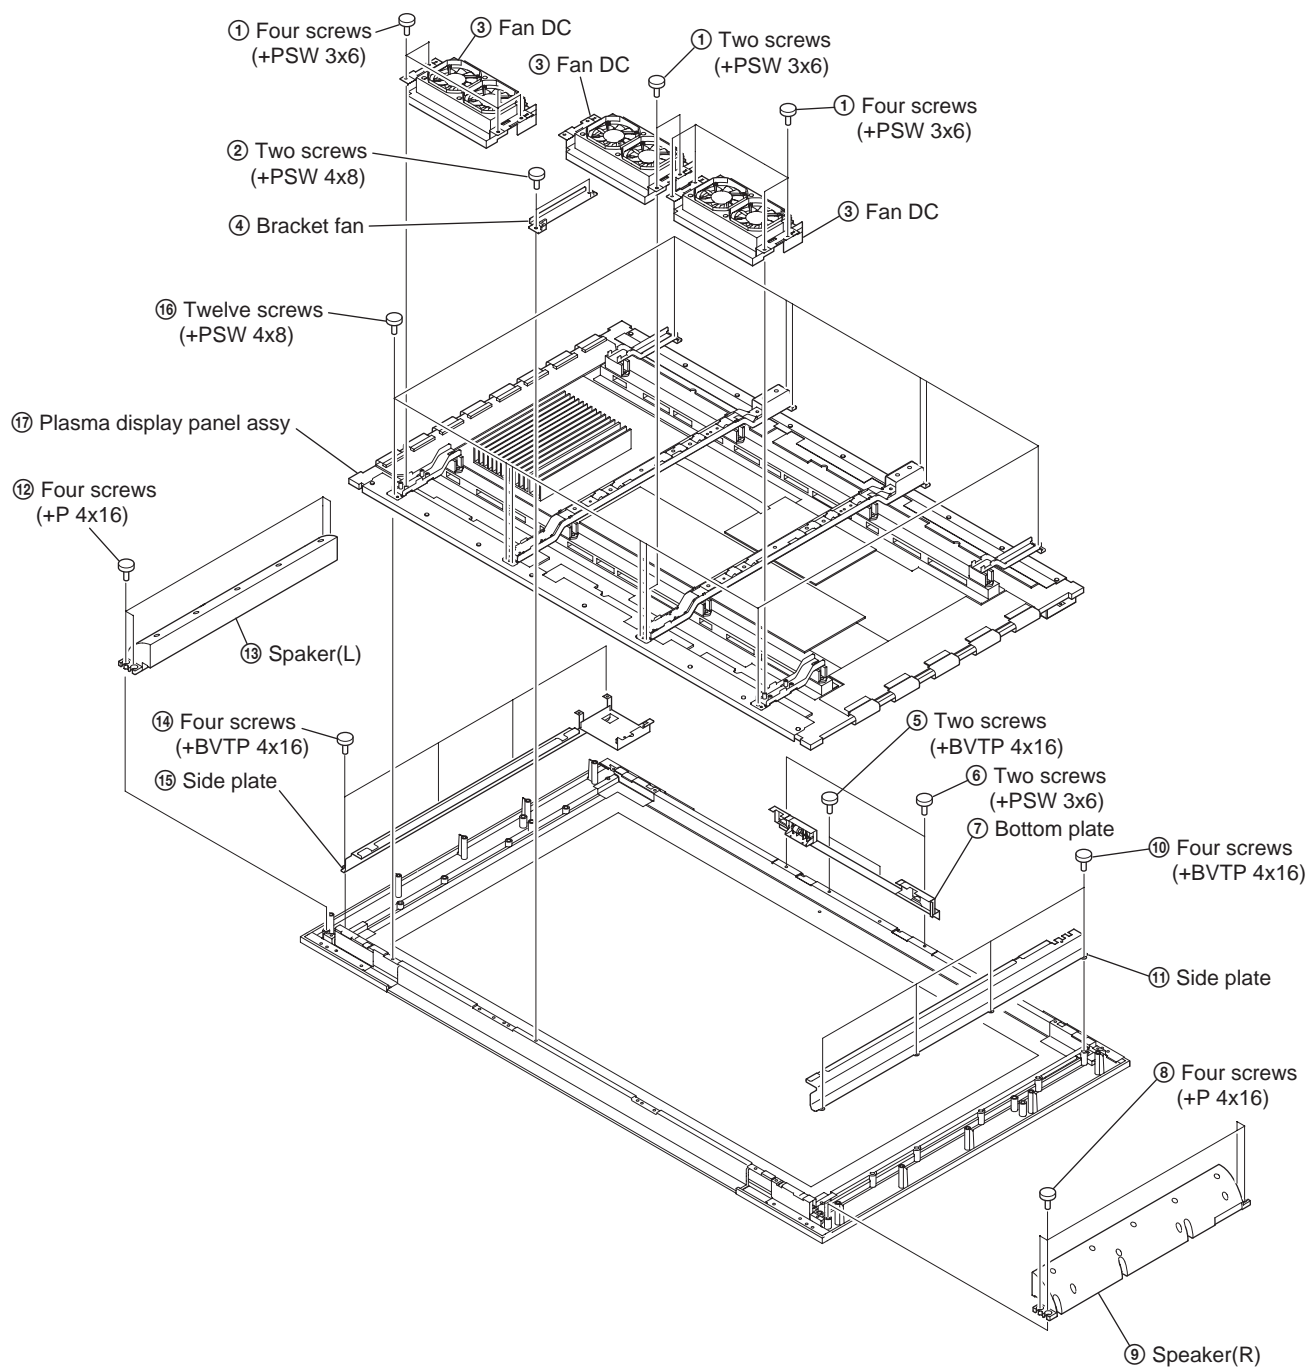

1-13. H3 AND H4 BOARDS REMOVAL

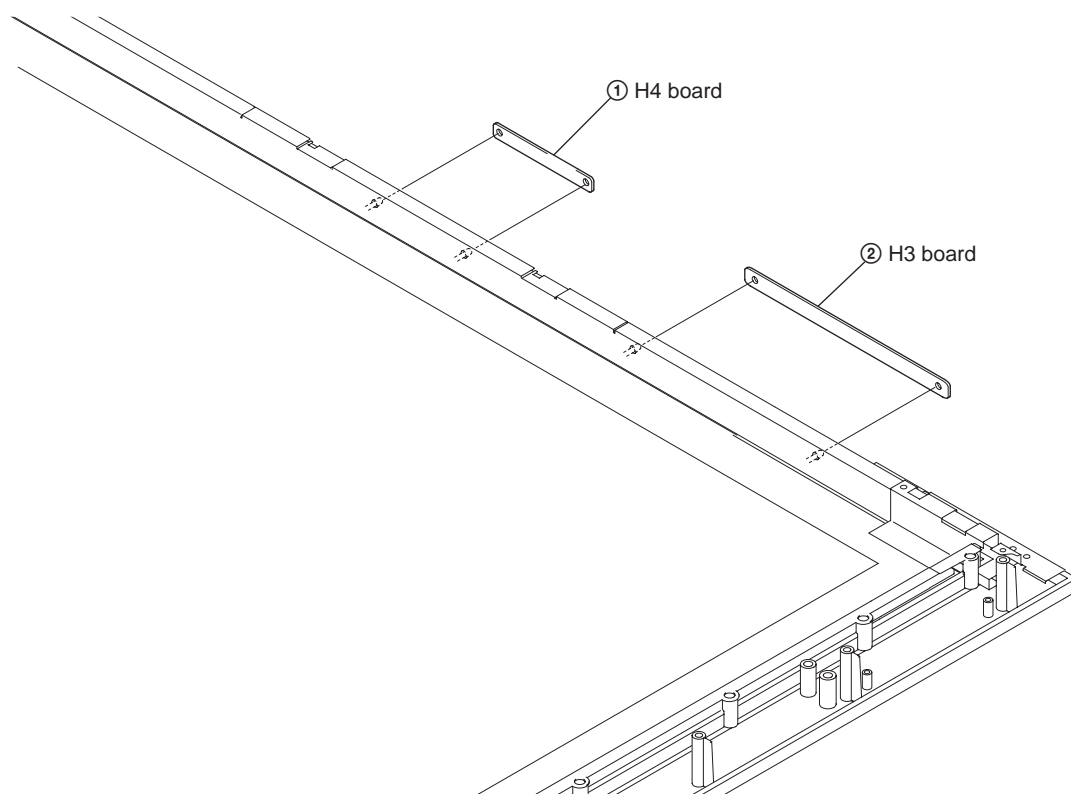

1-14. H5 BOARD REMOVAL

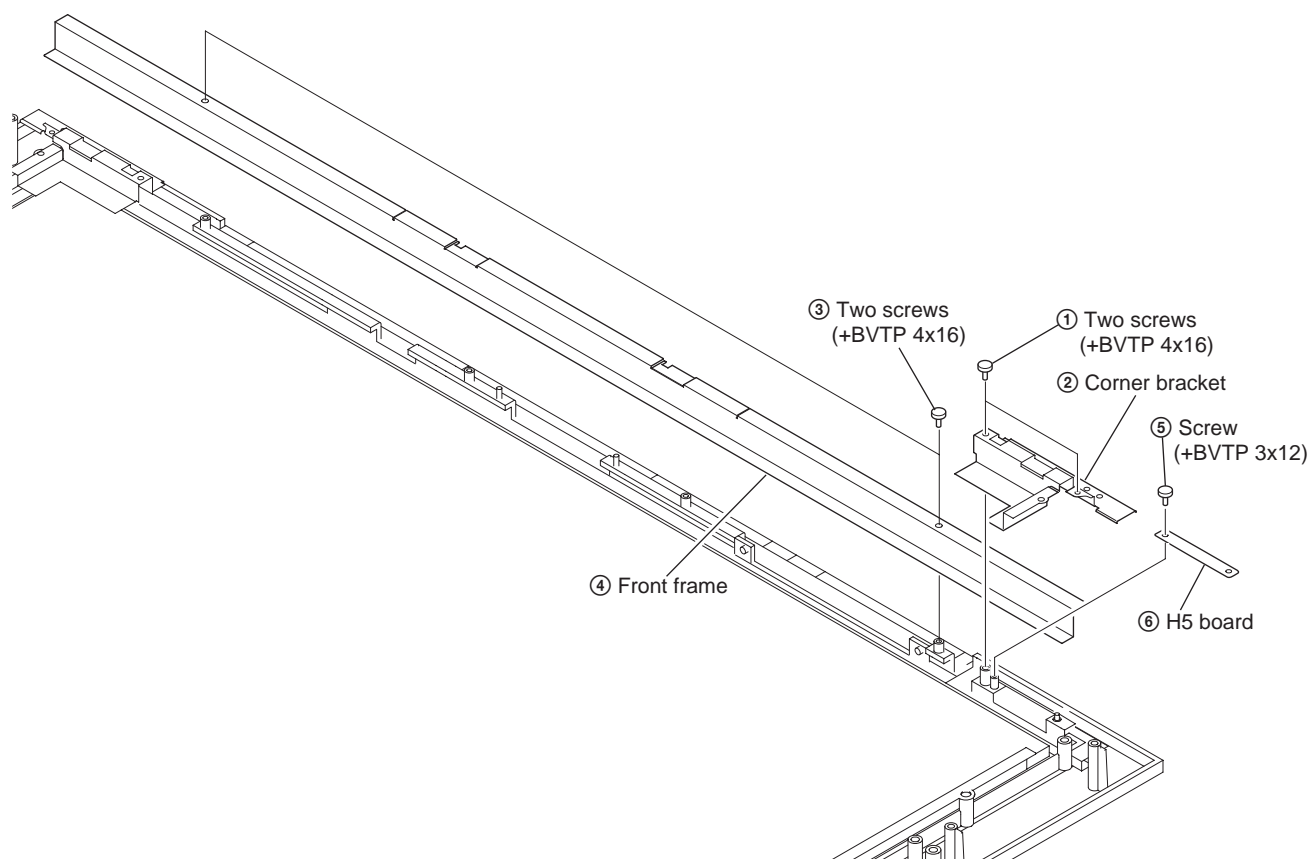

SECTION 2

ADJUSTMENTS and TROUBLESHOOTING

2-1. WHITE BALANCE ADJUSTMENT

When the Panel or DE1 Board is replaced or is repaired, W/B should be adjusted.

2-1-1. Measurement equipment

1. Color analyzer (CA-100 manufactured by MINOLTA)
2. Signal generator (ASTRO DESIGN VG-828D)

2-1-2. Measuring procedure

1. Dab the W/B adjustment jig (CA-100) at the glass face of the panel.
2. Connect the Signal generator (VG-828D) to the component terminal.
3. Input All-white signal (70%).
4. Make the settings as follows.
 - Set the quality mode to PRO.
 - Set the PICTURE to MAX.
 - Set the Color corrector to Low.
5. Set the color temp, be adjusted cool.
6. Adjust the color temperature of the “highlight” side with the following items of side mode menu, fixed a value of one of RGBs 512.

There are 3 mode (COOL, NEUTRAL, WARM):

MODE	COLOR TEMPERATURE	W/B
COOL	13550K + 0MPCD	4
NEUTRAL	9300K + 8MPCD	2
WARM	8000K + 8MPCD	1

*Operation Register

Service mode “27 MAIN_WB”

5 : GAINR

6 : GAING

7 : GAINB

7. Adjust Cool, Neutral, Warm of each color temperature.

Adjustment target values:

MODE	X	Y	
COOL	0.2684 ± 0.003	0.2700 ± 0.003	13550K + 0MPCD
NEUTRAL	0.2849 ± 0.003	0.2931 ± 0.003	9300K + 0MPCD
WARM	0.2951 ± 0.003	0.3044 ± 0.003	8000K + 0MPCD

2-1-3. Service Mode

1. How to Enter Service Mode

- 1) Turn on the main power switch to place this set in standby mode. (The LED will light red.)
- 2) Press the buttons on the commander as follows to enter service mode.



2. Press the **JUMP** key on the commander three times.

3. How to Adjust

“27 MAIN_WB”

Category name.

(Can be changed with the 2 and 5 keys on the commander.)

5 GAINR 512

Data — Can be changed with the 3 and 6 keys on the commander.

Item Name } Can be changed with the 1 and 4 keys on the commander.

Item No. }

4. After the adjustment is completed, save the data using the **MUTE** and **ENTER** keys.

2-2. TROUBLESHOOTING

Twin View

Problem	Possible Remedies
I cannot get Twin View to work	<ul style="list-style-type: none">❑ If you are using a cable box to unscramble all channels (as shown on page 26), you cannot use the Twin View feature. This is because the cable box can unscramble only one channel at a time. But if you need the cable box to unscramble only some (usually premium) channels, you can use Twin View for unscrambled channels if you connect both a cable and cable box, as shown on page 25.❑ You can use Twin View to view a signal from a different source that is connected to the TV's A/V jacks (such as a VCR or DVD player) in the second window by pressing the TV/VIDEO button while in Twin View.❑ Digital sources, as well as any sources connected to the VIDEO 4, VIDEO 5, VIDEO 6 inputs, display in the left window, but not in the right windows.
There is no Twin View window, or it is just static	<ul style="list-style-type: none">❑ Be sure the Twin View window is set to a video input or channel that has a signal airing.❑ You might be tuned to a video input with nothing connected to it. Try cycling through the video inputs by pressing the TV/VIDEO button.
Twin View cannot display anything but TV channels	<ul style="list-style-type: none">❑ Try cycling through the video inputs by pressing the TV/VIDEO button. Check that the Label Video Inputs option is not set to Skip. (See the Setup Menu on page 105.)
Twin View displays the same program in both windows	<ul style="list-style-type: none">❑ Both Twin View windows might be set to the same channel. Try changing channels in either window.

Remote Control

Problem	Possible Remedies
Remote control does not operate	<ul style="list-style-type: none">❑ The batteries could be weak. Replace the batteries.❑ Check the orientation of the batteries.❑ Press the TV (FUNCTION) button. You may have inadvertently pressed the SAT/CABLE (FUNCTION) button, which changes the remote control to SAT or CABLE mode.❑ Make sure the TV's power cord is connected securely to the wall outlet.❑ Locate the TV at least 3-4 feet away from fluorescent lights.
Cannot change channels with the remote control	<ul style="list-style-type: none">❑ If you are using the TV to change channels, first press the TV (FUNCTION) button.❑ If you are using another device to change channels, be sure you have not inadvertently switched your TV from the channel 3 or 4 setting. Use the Channel Fix option to fix the channel based on the hookup you used (see page 99).❑ If you are using another device to change channels, be sure to press the FUNCTION button for that device. For example, if you are using your cable box to change channels, be sure to press the SAT/CABLE (FUNCTION) button.
Remote control does not operate non-Sony video equipment	<ul style="list-style-type: none">❑ If you replaced the batteries to the remote recently, the code numbers for the video equipment may need to be reset.❑ There may be more than one code for the equipment that you are attempting to operate.❑ There is a possibility that some non-Sony equipment cannot be operated by your Sony TV remote. You may need to use the equipment's original remote control.

CableCARD™

Problem	Possible Remedies
Problems using CableCARD™ or CableCARD™ services	<ul style="list-style-type: none">❑ Check that the CableCARD™ is inserted properly (see page 51).❑ The CableCARD™ must be activated by your local cable TV provider before you can receive digital cable TV services. See the activation instructions on page 51.❑ Check the Diagnostics and CableCARD™ menu options (see page 108). (This can be useful in providing information to an authorized technician or repair person.)❑ Contact your cable TV provider.





Channels

Problem	Possible Remedies
Cannot receive upper channels (UHF) when using an antenna	<ul style="list-style-type: none"> □ Press ANT to select the VHF/UHF input (see page 57). □ Use Auto Program in the Channel Menu to add receivable channels that are not presently in the TV's memory (see page 99).
TV is fixed to one channel	<ul style="list-style-type: none"> □ Use Auto Program in the Channel Menu to add receivable channels that are not presently in the TV's memory (see page 99). □ Check your Channel Fix settings (see page 99).
Cannot receive any channels when using cable TV	<ul style="list-style-type: none"> □ Use Auto Program in the Channel Menu to add receivable channels that are not presently in the TV's memory (see page 99). □ Press ANT to select the CABLE input (see page 57).
Cannot receive or select channels	<ul style="list-style-type: none"> □ Use Auto Program in the Channel Menu to add receivable TV channels that are not presently in TV memory (see page 99).
Some digital cable channels are not being displayed	<ul style="list-style-type: none"> □ Certain cable TV companies have limitations on the broadcast of digital cable channels. Check with your cable TV company for more information. □ Check with your cable TV company if the channels are scrambled or encrypted. You will need a CableCARD or a separate set-top box to view those channels. □ Some optional digital cable broadcast formats may not be supported. If your cable TV company is broadcasting digital signals in unsupported broadcast formats, you will need a separate set-top box provided by your cable TV company to view those channels. □ The digital cable channel may be set to Hide in the Channel Menu (see page 99). □ Use the Digital Channels feature to search for new digital channels (see page 99).

Memory Stick

Problem	Possible Remedies
Image does not display/Cannot see all files	<ul style="list-style-type: none"> □ Make sure the image file is a JPEG (.jpg, .jpeg) file or an MPEG1 (.mpg, .mpeg) file. □ Make sure the Memory Stick is inserted properly (see page 78). □ Check the Filter option setting (see page 89). □ Check the Select Folder setting (see page 89) and ensure that files are either in DCF directories if Digital Camera Folders is selected (see page 89), or in the currently selected folder if Select a Folder is selected (see page 89). □ The maximum number of files the Memory Stick Viewer can display is 2,000 files total, including all JPEG, MPEG1, and MP3 files. □ If you are using a Memory Stick with the Memory Select function, try changing the position of the A/B select switch.
JPEG image displays undesirable motion or flicker in full screen	<ul style="list-style-type: none"> □ JPEGs captured using a digital video camera may appear to display motion in full screen. This is a result of the way digital video cameras record still images, and is not a result of a malfunction with the TV.
Rotation not saved after Memory Stick is ejected or Memory Stick Viewer is closed	<ul style="list-style-type: none"> □ The Memory Stick might be locked. Unlock the Memory Stick and try rotating the image again. □ The file might not have information (EXIF data) that is usually generated when a digital camera records a photo. In this case, it is not possible to save the rotation. □ There might be insufficient space on the Memory Stick to save the rotated file. Try deleting one or more files and rotating the image again.
Cannot show (or hide) file information in full screen or Slide Show	<ul style="list-style-type: none"> □ Set the File Information option to On or Off (see page 88).
Cannot set print quantity	<ul style="list-style-type: none"> □ The Memory Stick might be locked. Unlock the Memory Stick and try rotating the image again.
Cannot see Menu	<ul style="list-style-type: none"> □ Press ▲ to display the Menu again.
Cannot hear audio while using Memory Stick	<ul style="list-style-type: none"> □ Check the TV's volume or Speaker (page 96) settings. □ To hear JPEG voice memo in full screen view, select the Digital Camera Folders option and set the Filter option to Show All Print Marks. □ Check that the Music option is not set to Off (see page 88).
Not all MP3 files on Memory Stick are included when the Music /Complete List option is selected (page 88)	<ul style="list-style-type: none"> □ The Memory Stick Viewer can display a maximum of 2,000 files total, including all JPEG, MPEG1, and MP3 files. □ Make sure that the file is named with the file extension (.mp3).
Cannot see MP3 list to play music	<ul style="list-style-type: none"> □ MP3 files on your Memory Stick only can be played as background music during a Slide Show (see page 88).
MP3 file does not play back correctly	<ul style="list-style-type: none"> □ The Memory Stick Viewer supports only MP3 files with a fixed data rate of 128 kbps (kilobits per second).

MP3 files on the Memory Stick are not listed	<input type="checkbox"/>	Only MP3 files that are named with the file extension (.mp3) are displayed in the list.
Music files are playing in wrong order	<input type="checkbox"/>	MP3 files are played in alphabetical order, according to the folder in which they are stored. If you want to change the playlist order, rename your files alphabetically in the order in which you want them to play.
MPEG1 movie does not play back correctly	<input type="checkbox"/>	Some variations of MPEG1 movies may not be compatible with the Memory Stick Viewer.

<i>Problem</i>	<i>Possible Remedies</i>	
MPEG1 quality is poor when enlarged (page 86)	<input type="checkbox"/>	The quality of the movie when enlarged depends on the resolution of the MPEG1 file. See your camera's instruction manual for details.
Error message is displayed	<input type="checkbox"/>	No Memory Stick There is no Memory Stick in the slot.
	<input type="checkbox"/>	Memory Stick Locked The lock mechanism on the Memory Stick is engaged.
	<input type="checkbox"/>	Memory Stick Error The Memory Stick in the slot might be damaged; try a different Memory Stick.
	<input type="checkbox"/>	Format Error The Memory Stick may have been formatted using a PC or other device that is not compatible with cameras.
Error icon is displayed		The file is not a valid MPEG1 or JPEG format, or it is a progressive JPEG (which is not supported).
		The thumbnail is not DCF-compatible.
		The file is a JPEG or an MPEG1, but the thumbnail is unreadable.
		The file is unreadable.

Audio

<i>Problem</i>	<i>Possible Remedies</i>	
Good picture, no sound	<input type="checkbox"/>	Press MUTING so that the word Muting disappears from the screen (see page 56).
	<input type="checkbox"/>	Make sure the Speaker option is set to On in the Audio Menu (see page 96).
	<input type="checkbox"/>	Make sure the MTS option is set to Stereo or Mono (see page 95).
Cannot gain enough volume when using a cable box	<input type="checkbox"/>	Increase the volume of the cable box using the cable box's remote control. Then press TV (FUNCTION) and adjust the TV's volume.
Sound seems weak or insufficient	<input type="checkbox"/>	The TV's audio might be set to Auto SAP or Mono , when it might be better set to Stereo . In the Audio Menu (see page 95), set the MTS setting to Stereo . If already set to Stereo , switch to Mono (which may reduce background noise during weak stereo broadcasts).
Cannot raise the volume on external audio speakers	<input type="checkbox"/>	If the Speaker option is set to Off and the Audio Out option is set to Fixed (in order to output the sound to your audio system) use your audio receiver to adjust the sound (see page 96). Or, to use the TV remote control, set the Audio Out option to Variable .
	<input type="checkbox"/>	To turn on the TV speakers, set the Speaker option to On (see page 96).

Video


Problem	Possible Remedies
No picture (screen not lit), no sound	<ul style="list-style-type: none"> <input type="checkbox"/> If your TV does not turn on, and a red light keeps flashing, your TV may need service. Call your local Sony Service Center. <input type="checkbox"/> Make sure the power cord is plugged in. <input type="checkbox"/> Press the POWER button on the right side of the TV. <input type="checkbox"/> Press the TV/VIDEO button to cycle through the connected video sources. <input type="checkbox"/> Try another channel; it could be station trouble.
Dark, poor or no picture (screen lit), good sound	<ul style="list-style-type: none"> <input type="checkbox"/> Adjust the Picture option in the Video Menu (see page 92). <input type="checkbox"/> Adjust the Brightness option in the Video Menu (see page 92). <input type="checkbox"/> Check the antenna/cable connections.
No color./Dark picture./Color is not correct.	<ul style="list-style-type: none"> <input type="checkbox"/> Press the PICTURE (MODE) button to select the desired Picture mode (see page 56). <input type="checkbox"/> Adjust the Color option in the Video Menu (see page 92).
Only snow and noise appear on the screen	<ul style="list-style-type: none"> <input type="checkbox"/> Check the antenna/cable connections. <input type="checkbox"/> Try another channel; it could be station trouble. <input type="checkbox"/> Press ANT to change the input mode (see page 57).
Dotted lines or stripes	<ul style="list-style-type: none"> <input type="checkbox"/> Adjust the antenna. <input type="checkbox"/> Move the TV away from noise sources such as cars, neon signs, or hair-dryers.
Double images or ghosts	<ul style="list-style-type: none"> <input type="checkbox"/> Using a highly directional outdoor antenna or a cable may solve the problem.
Striped noise during playback/recording of a VCR	<ul style="list-style-type: none"> <input type="checkbox"/> Video head interference. Keep your VCR away from the TV. <input type="checkbox"/> Leave a space of 30 cm (11 7/8 inches) between your VCR and the TV to avoid noise. <input type="checkbox"/> Avoid installing your VCR in front of the TV or at the side of the TV.
Image left on screen	<ul style="list-style-type: none"> <input type="checkbox"/> Perform image retention recovery. (see page 98) <input type="checkbox"/> Use the Screen Saver function (see page 98).
The screen flickers when turning on the TV.	<ul style="list-style-type: none"> <input type="checkbox"/> This is caused by feature of the Plasma Display Panel, and does not indicate a malfunction of the TV.
Black box on screen	<ul style="list-style-type: none"> <input type="checkbox"/> You have selected a text option in the Setup Menu and no text is available. (See page 104 to reset Setup selections.) To turn off this feature, set the Caption Vision option to Off. If you were trying to select closed captioning, select CC1 instead of TEXT 1-4.
Bars appear at the top and bottom of the screen	<ul style="list-style-type: none"> <input type="checkbox"/> Some wide-screen programs are filmed in aspect ratios that are greater than 16:9, such as 2.35:1. (This is especially common with theatrical releases). Your TV will show these programs with bars at the top and bottom of the screen. For more details, check the documentation that came with your DVD (or contact your program provider).
Certain programs on DVD or other digital sources display a loss of detail, especially during fast-motion or dark scenes	<ul style="list-style-type: none"> <input type="checkbox"/> The compression used by certain digital broadcasts and DVDs may cause your TV's screen to display less detail than usual, or cause artifacts (small blocks or dots, pixelations) to appear on your screen. This is due to your TV's large screen and ability to show very fine detail, and is normal for certain digitally recorded programs. Adjust the reality/clarity in the DRC Palette option (see page 93) to optimize the picture while viewing these sources.

General


Problem	Possible Remedies
How to reset TV to factory settings	<input type="checkbox"/> Turn on the TV. While holding down the RESET button on the remote control, press the POWER button on the right side of the TV. (The TV will turn itself off, then back on again.) Release the RESET button.
How to restore Video settings to factory settings	<input type="checkbox"/> Press the RESET button on the remote control while in the Video Menu (see page 92).
How to restore Audio settings to factory settings	<input type="checkbox"/> Press the RESET button on the remote control while in the Audio Menu (see page 95).
Cannot cycle through the other video equipment connected to the TV	<input type="checkbox"/> Be sure the Label Video Inputs option is not set to Skip (see page 105).
Cannot operate Menu	<input type="checkbox"/> If a Menu option appears in gray, this indicates that the TV is in a state in which the Menu option is not available.
Lost password	<input type="checkbox"/> In the password screen (see page 101), enter the following master password: 4357 . The master password clears your previous password; it cannot be used to temporarily unblock channels.
TIMER LED on front panel is lit	<input type="checkbox"/> The LED (see page 16) blinks when the TV is turned on, then shuts off when the picture is displayed. If the LED blinks continuously, this may indicate the TV needs service. When lit, indicates that the timer is set (page 107). When the timer is set, this LED will remain lit even when the TV is turned off.
Digital cable box does not work	<input type="checkbox"/> If you are connecting a VCR and digital cable box using a splitter, as described on page 32, you must use a special bi-directional splitter that is designed to work with your digital cable box. Contact your cable TV company for details.
Cannot record digital channels to VCR	<input type="checkbox"/> Only analog channels can be recorded to your VCR.


3-1. BLOCK DIAGRAMS

(1) A1U AND H2 BOARDS

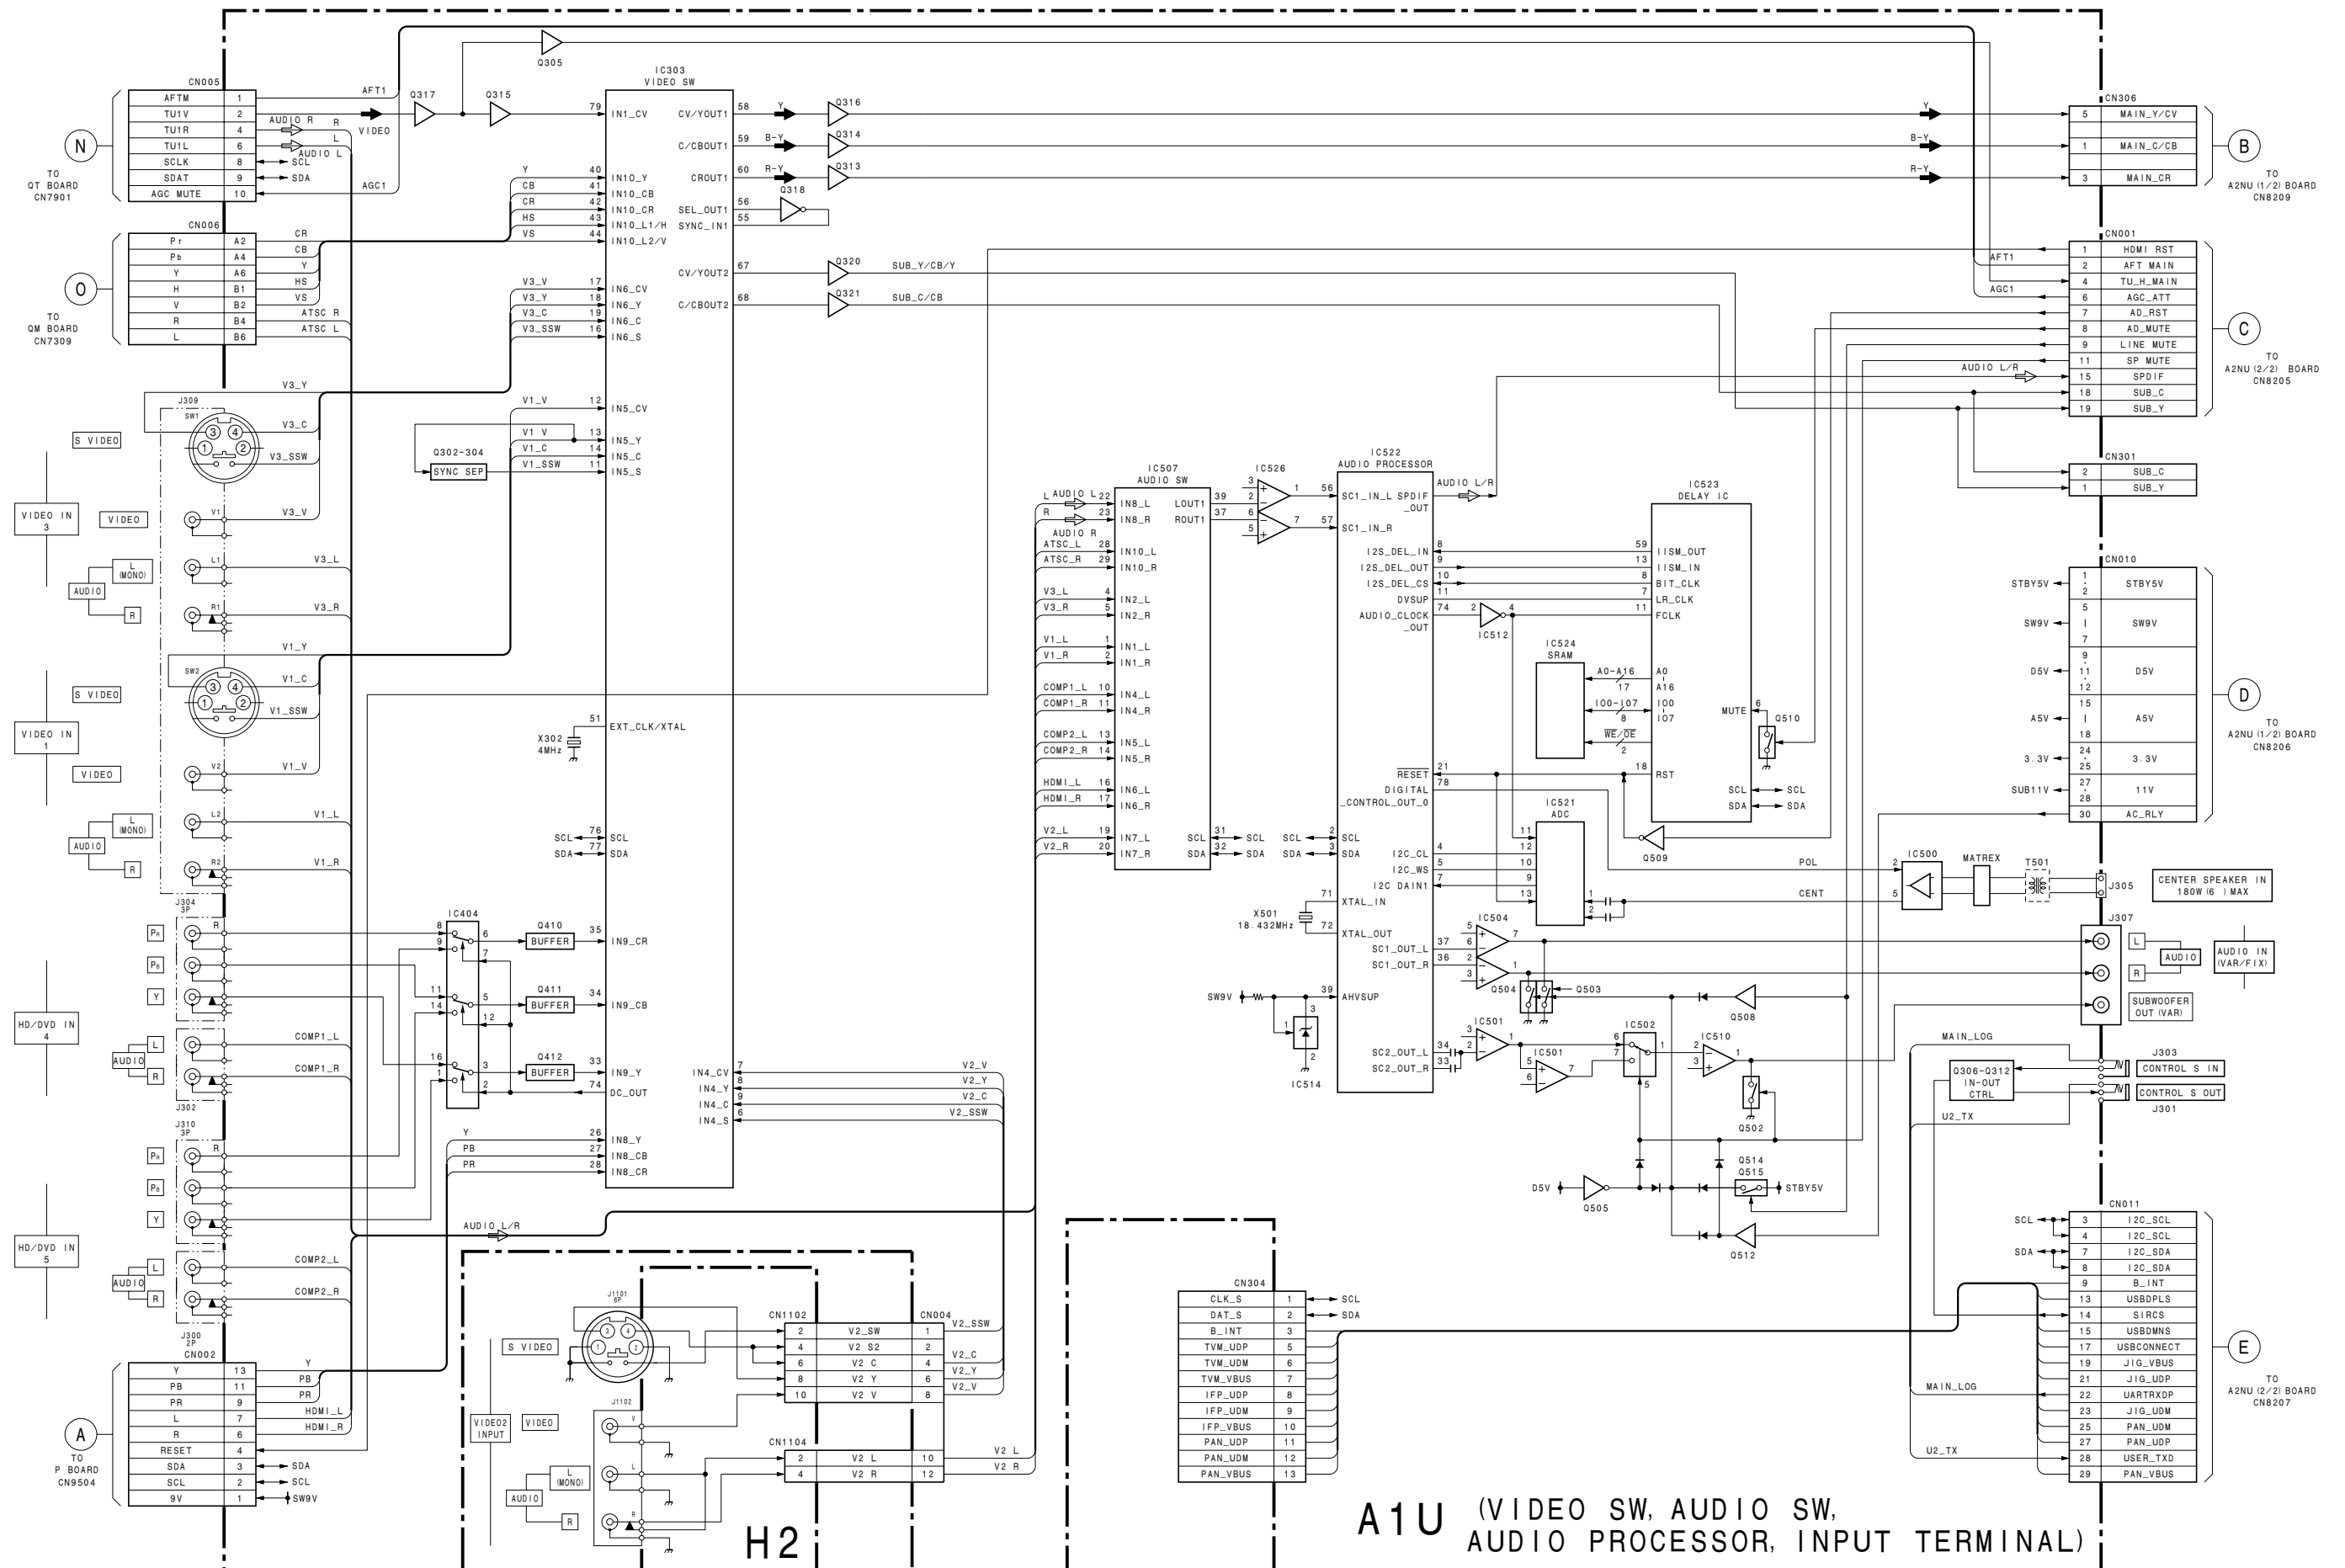


(2) A2NU (1/2) AND J1NU BOARDS

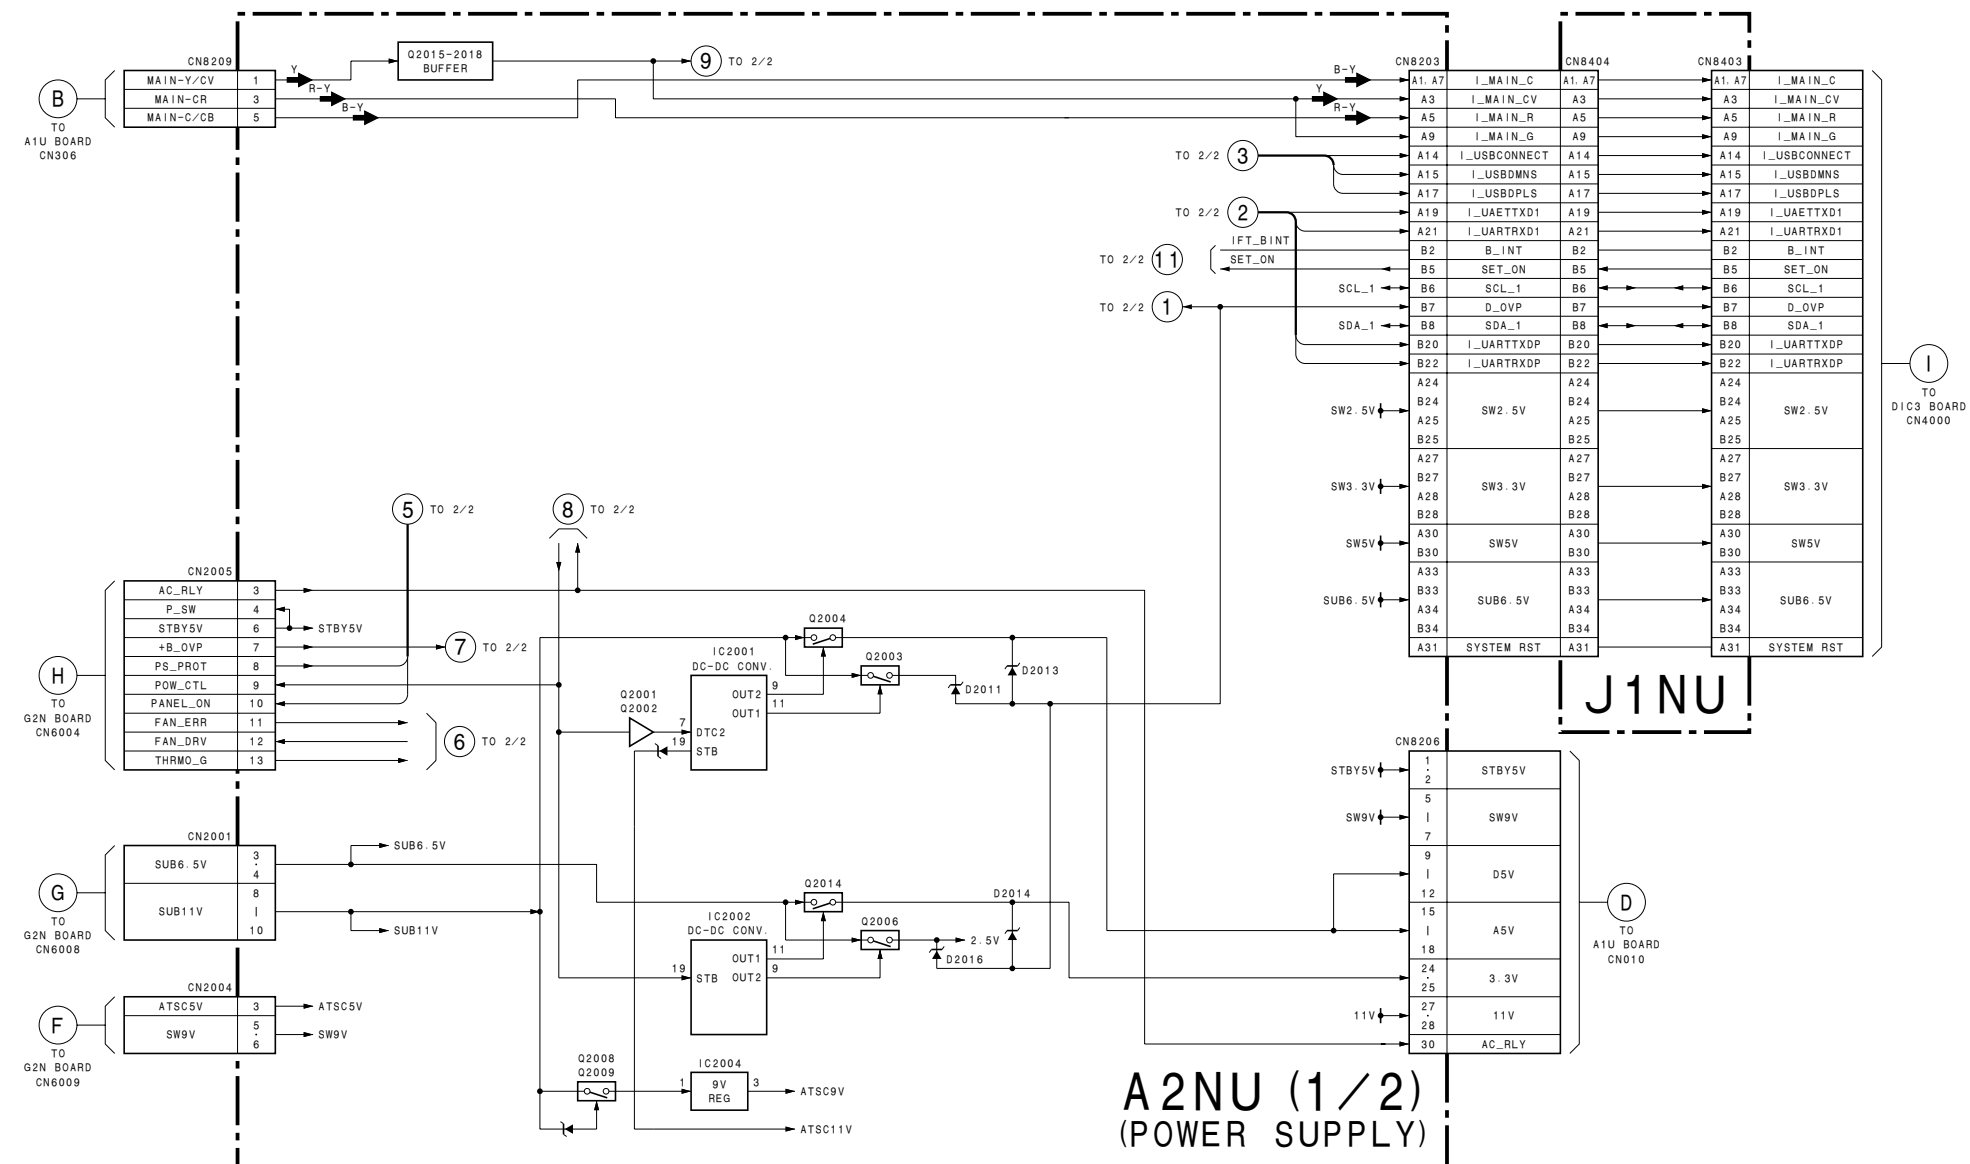


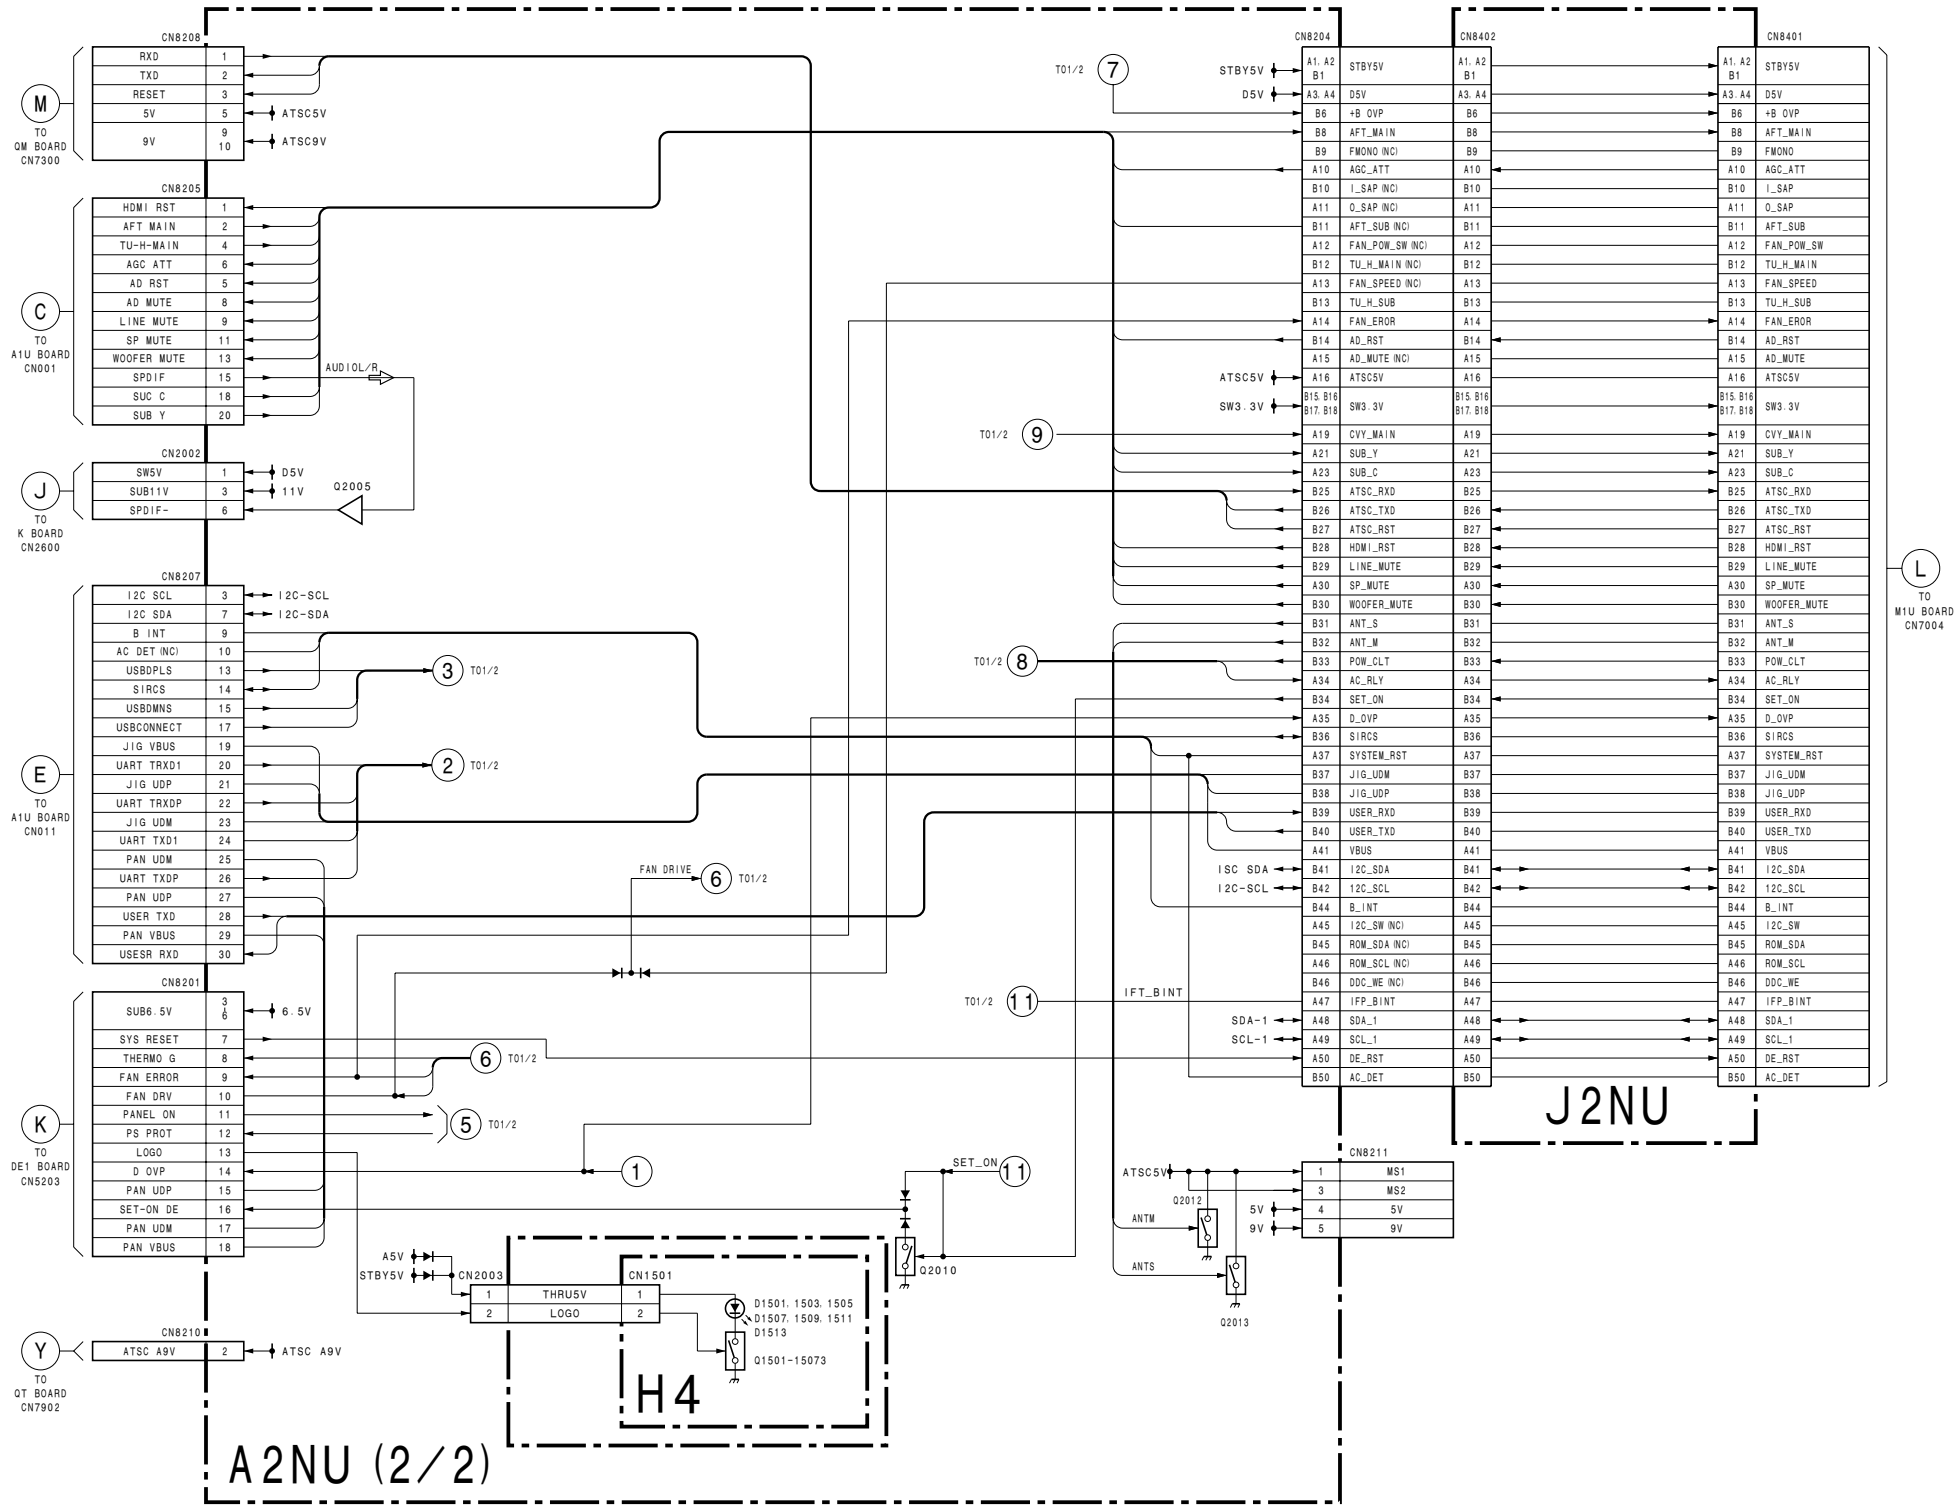


(4) DE1 BOARD

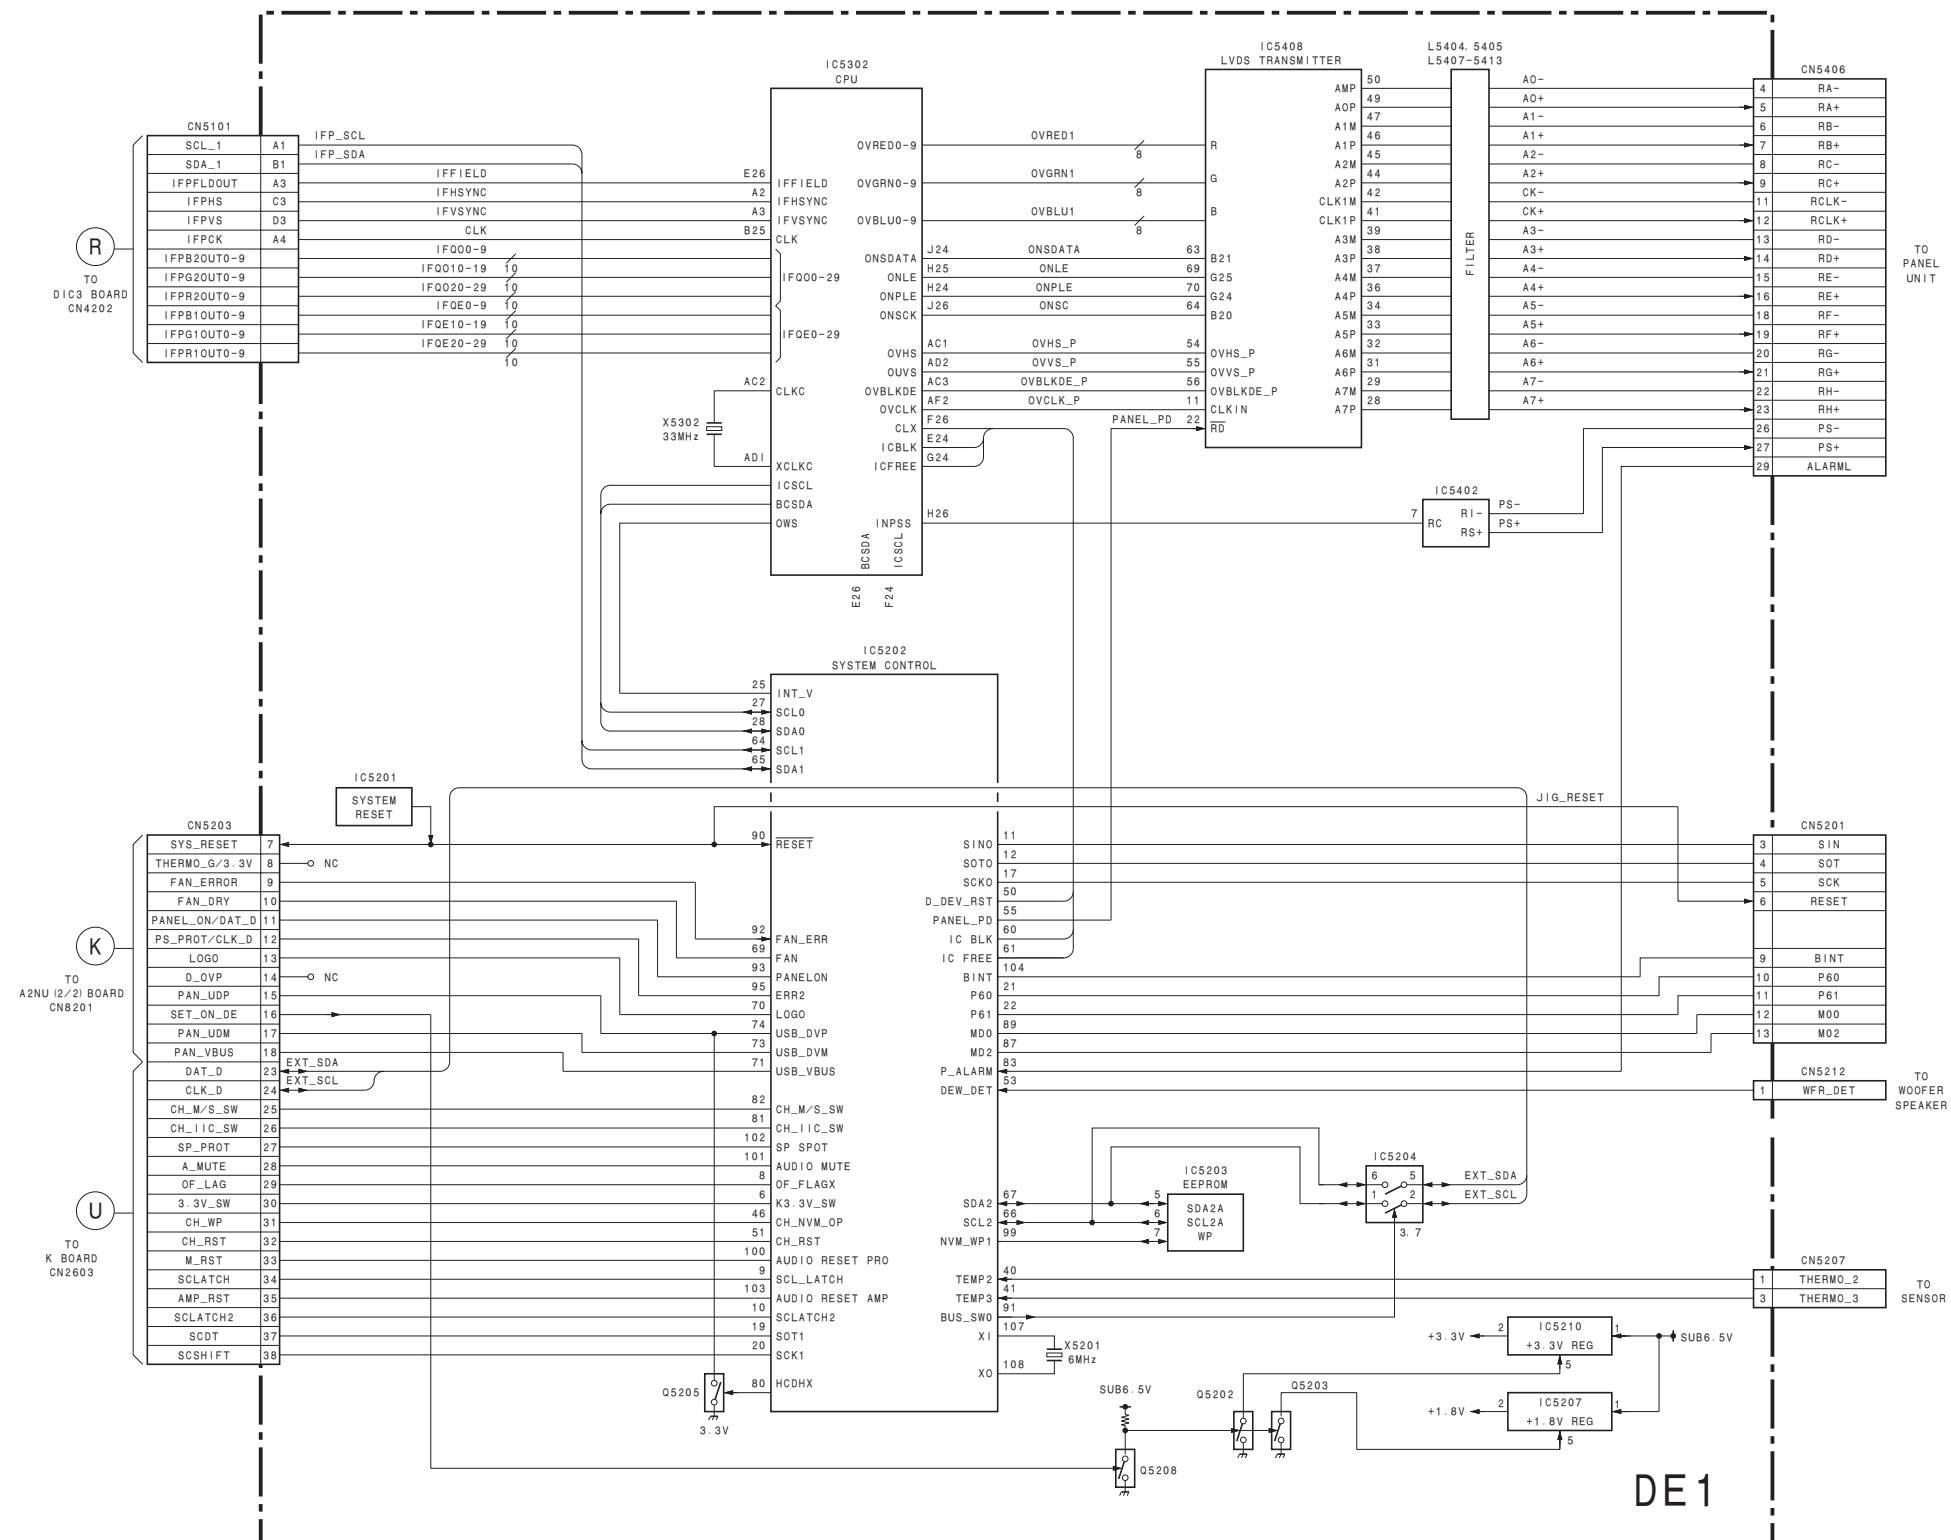


(5) DIC3 BOARD

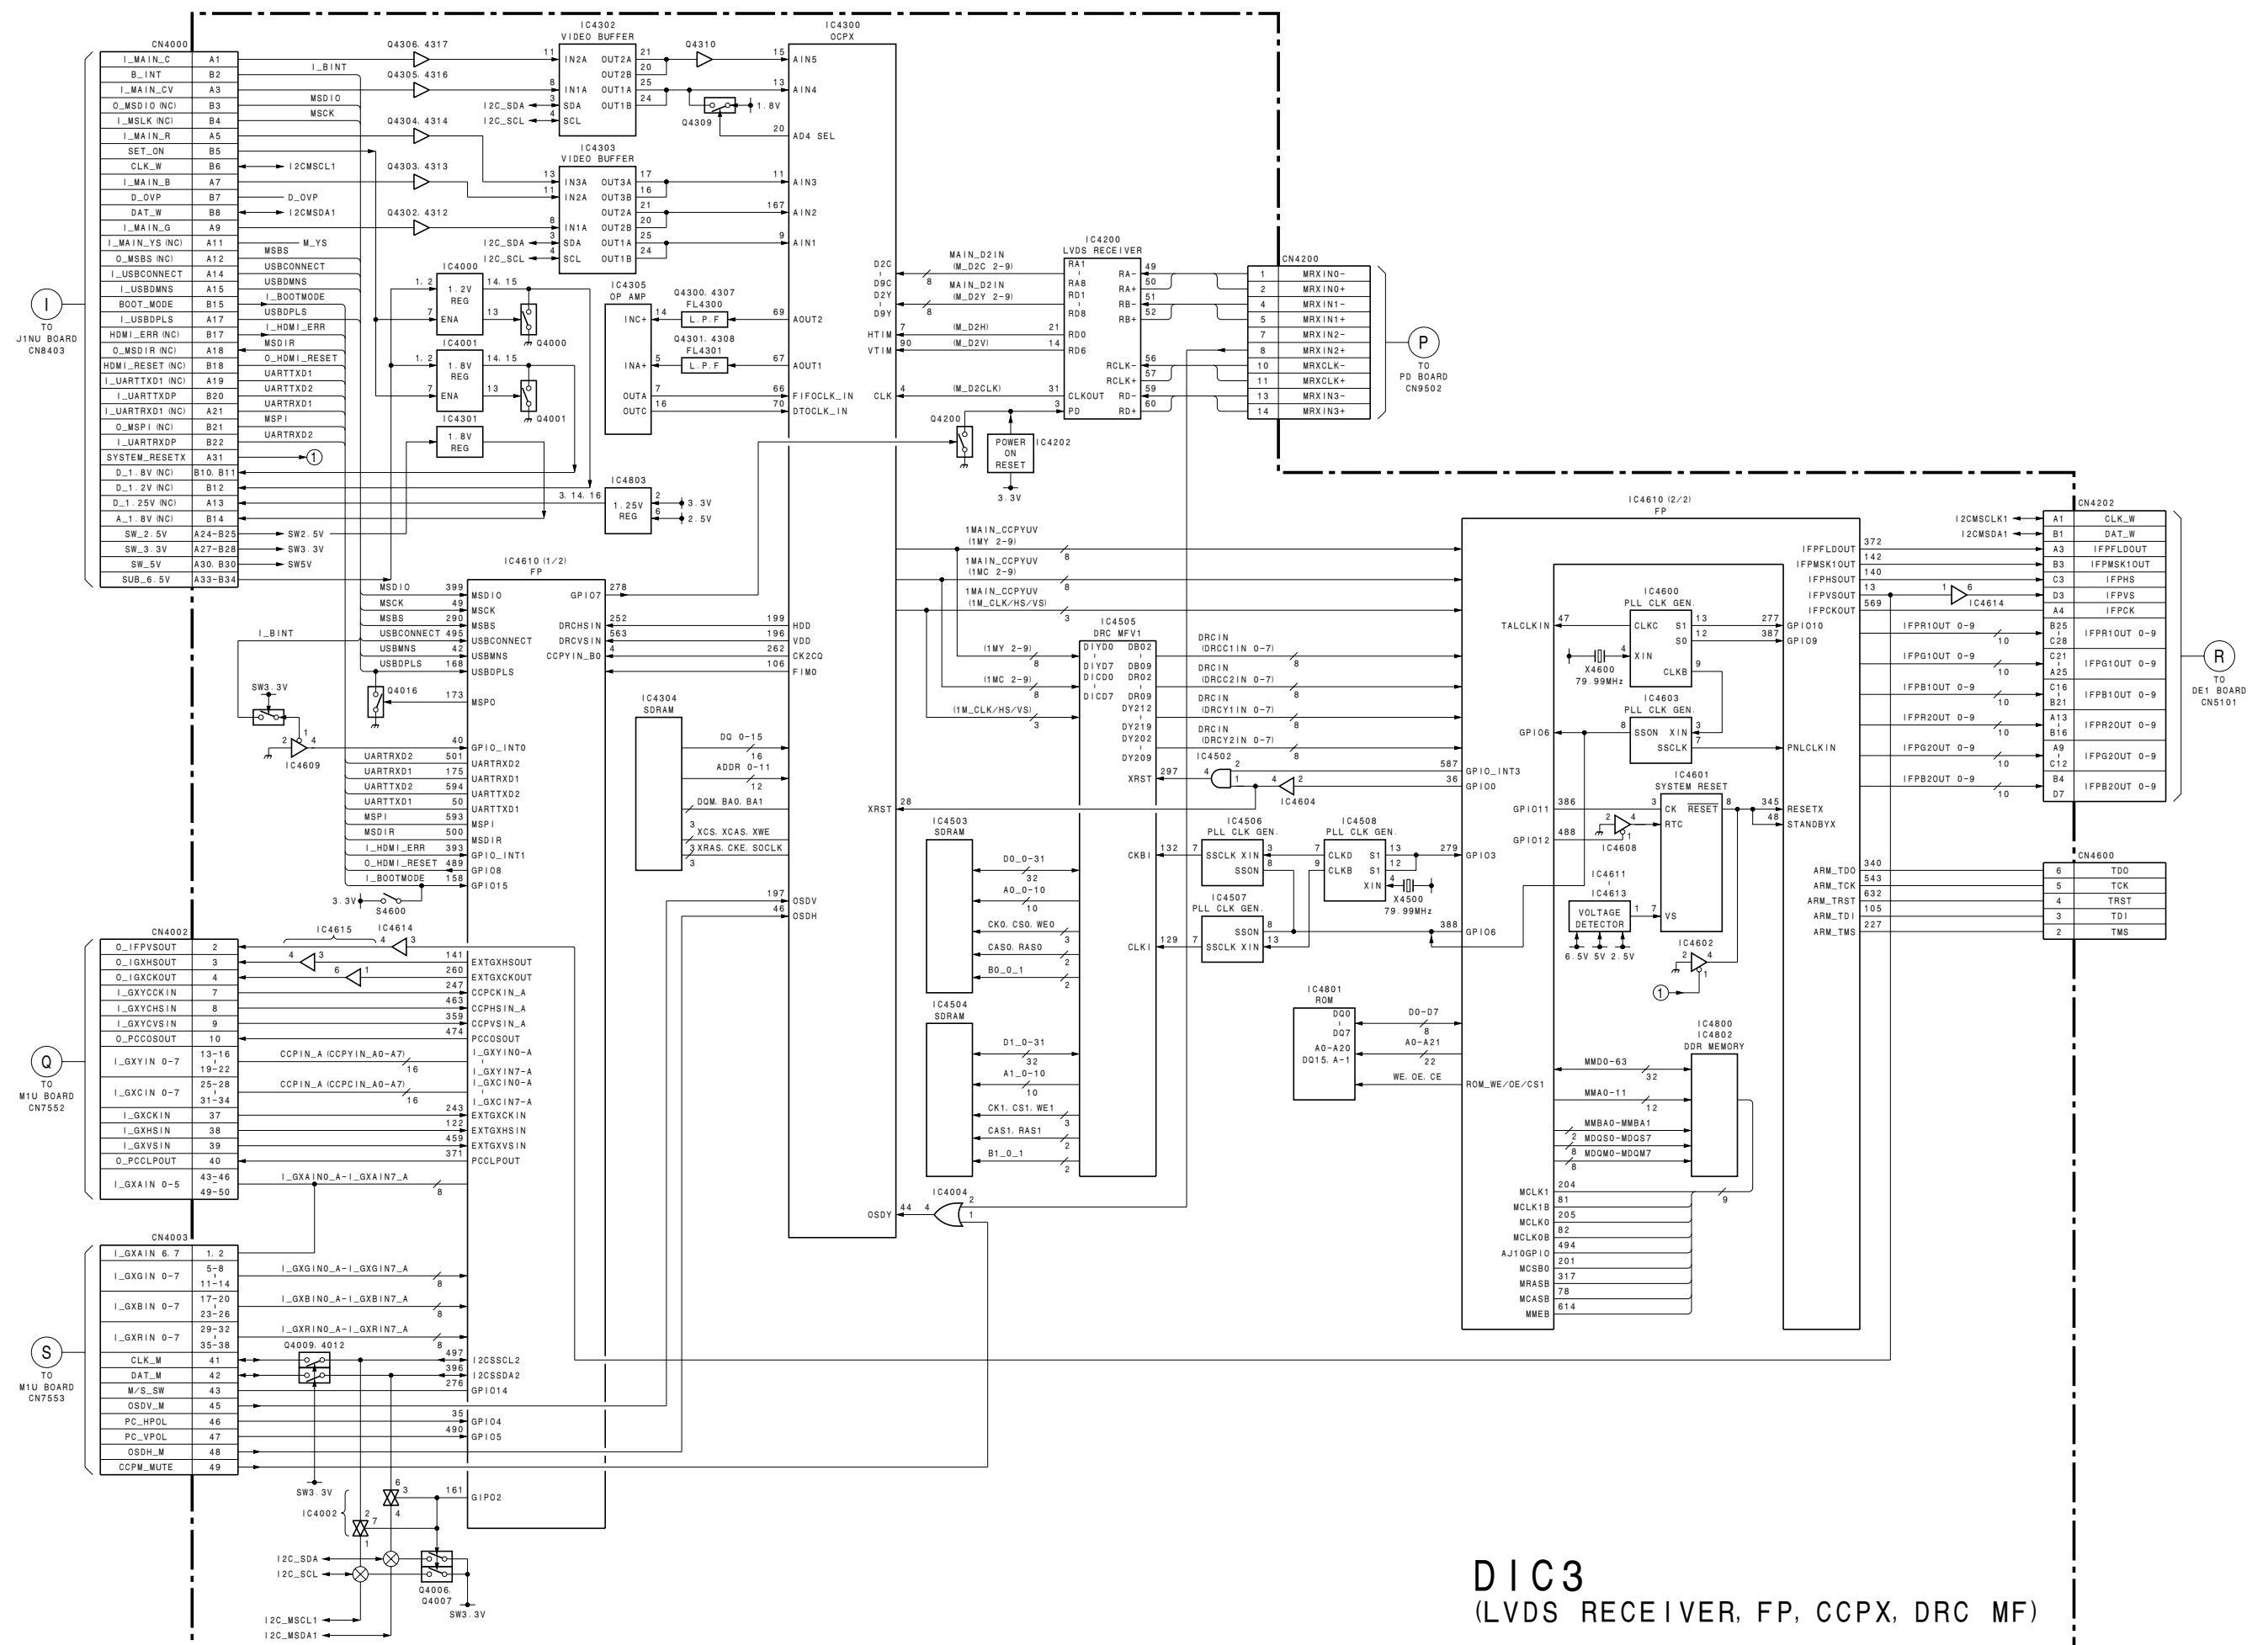


(6) F AND G1 BOARDS

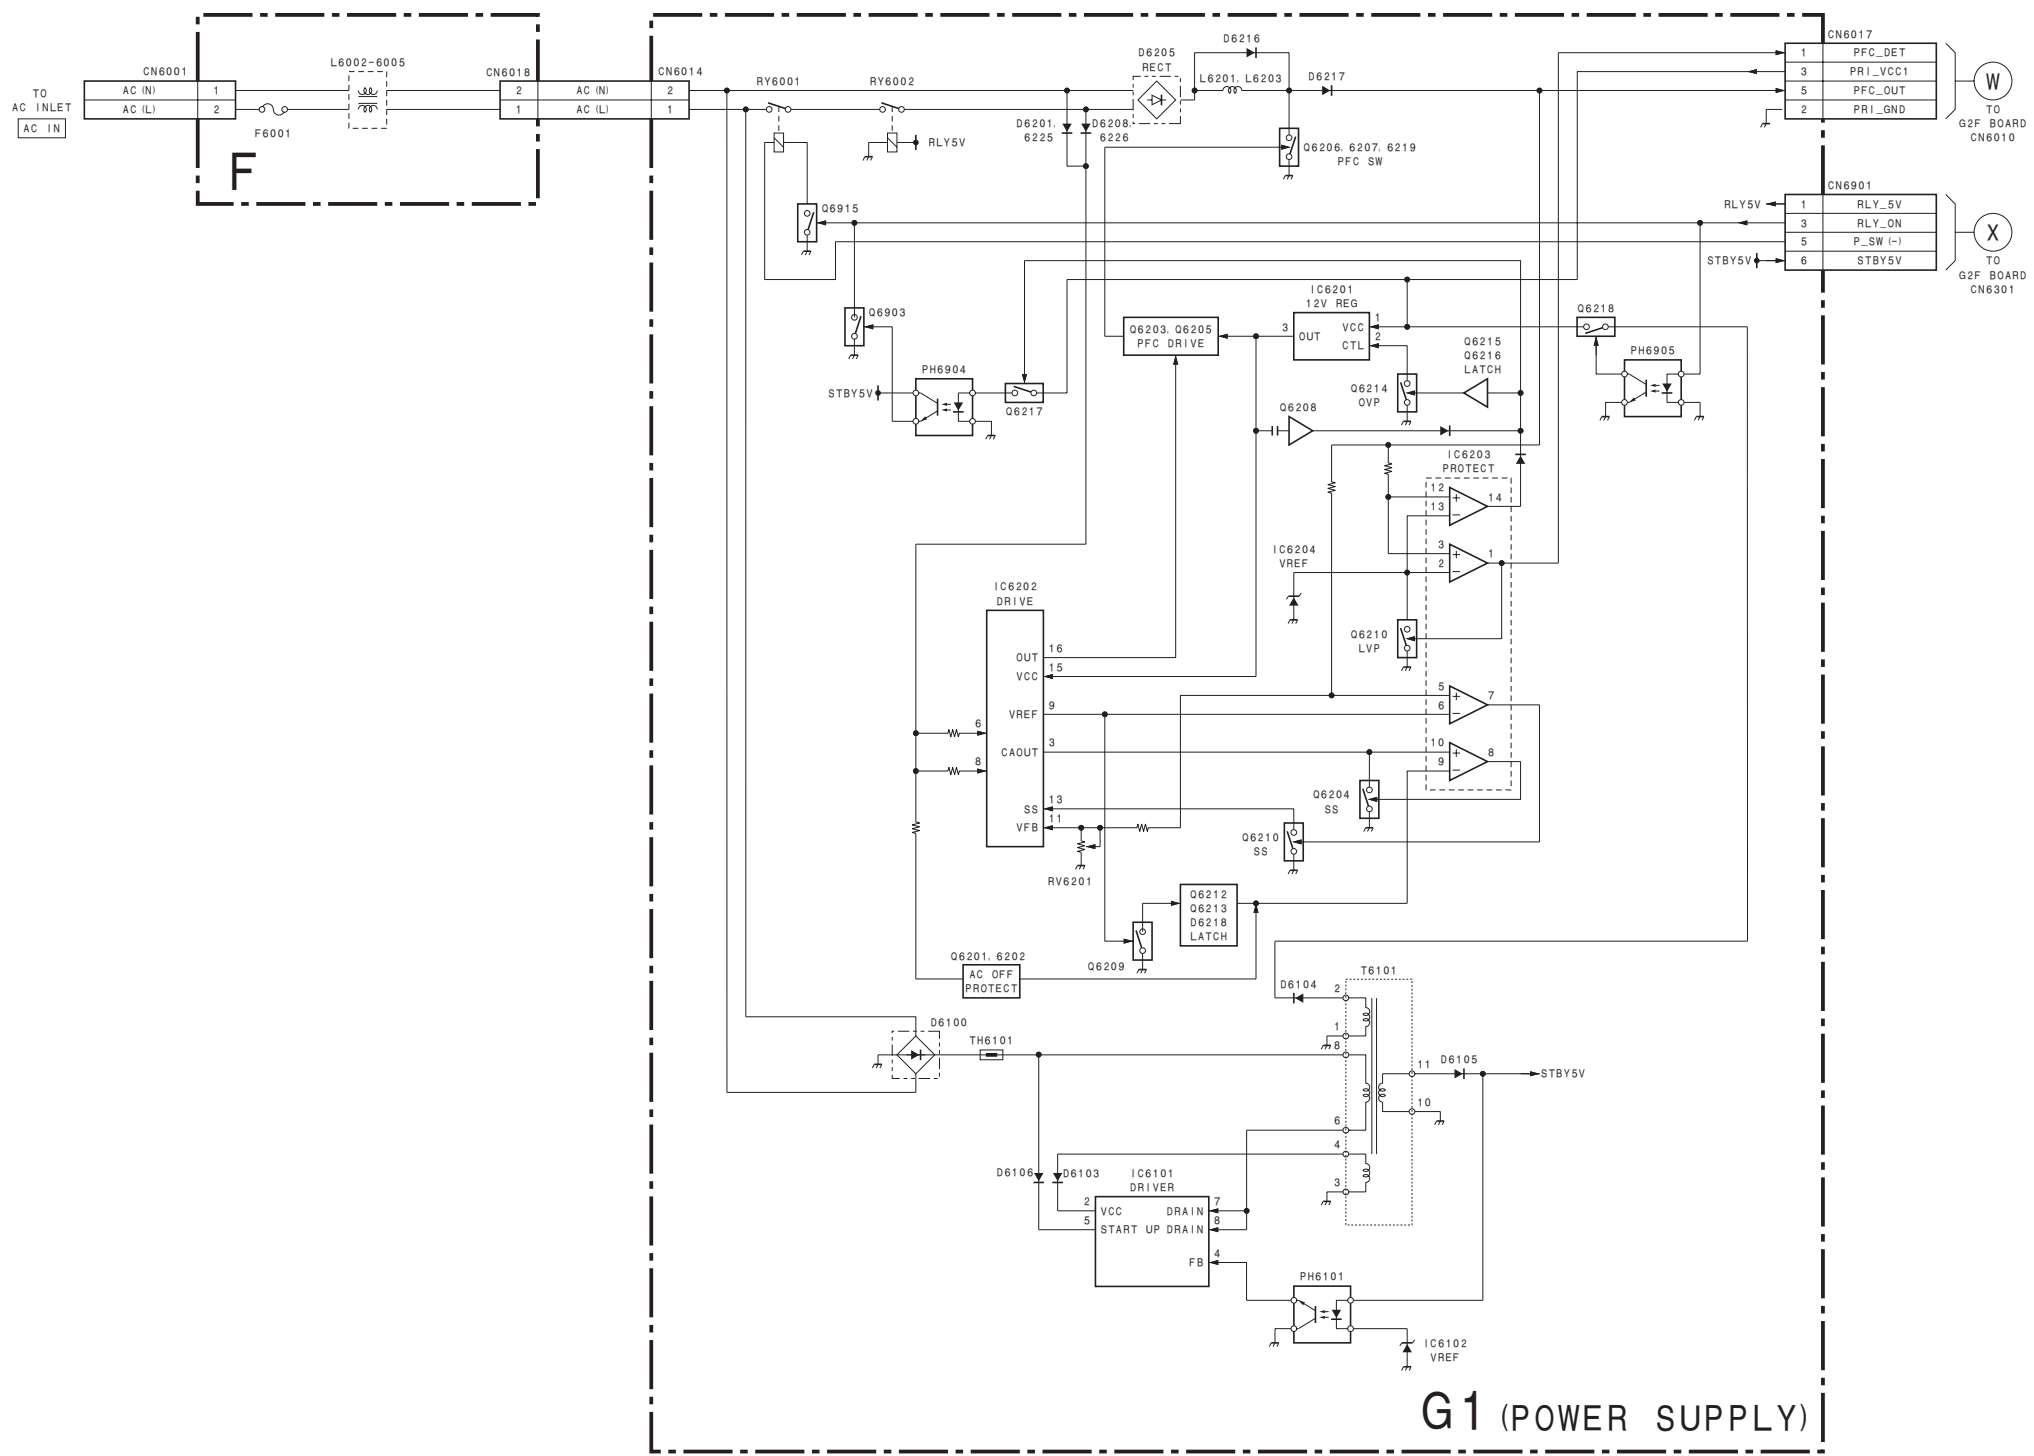


(7) G2N BOARD

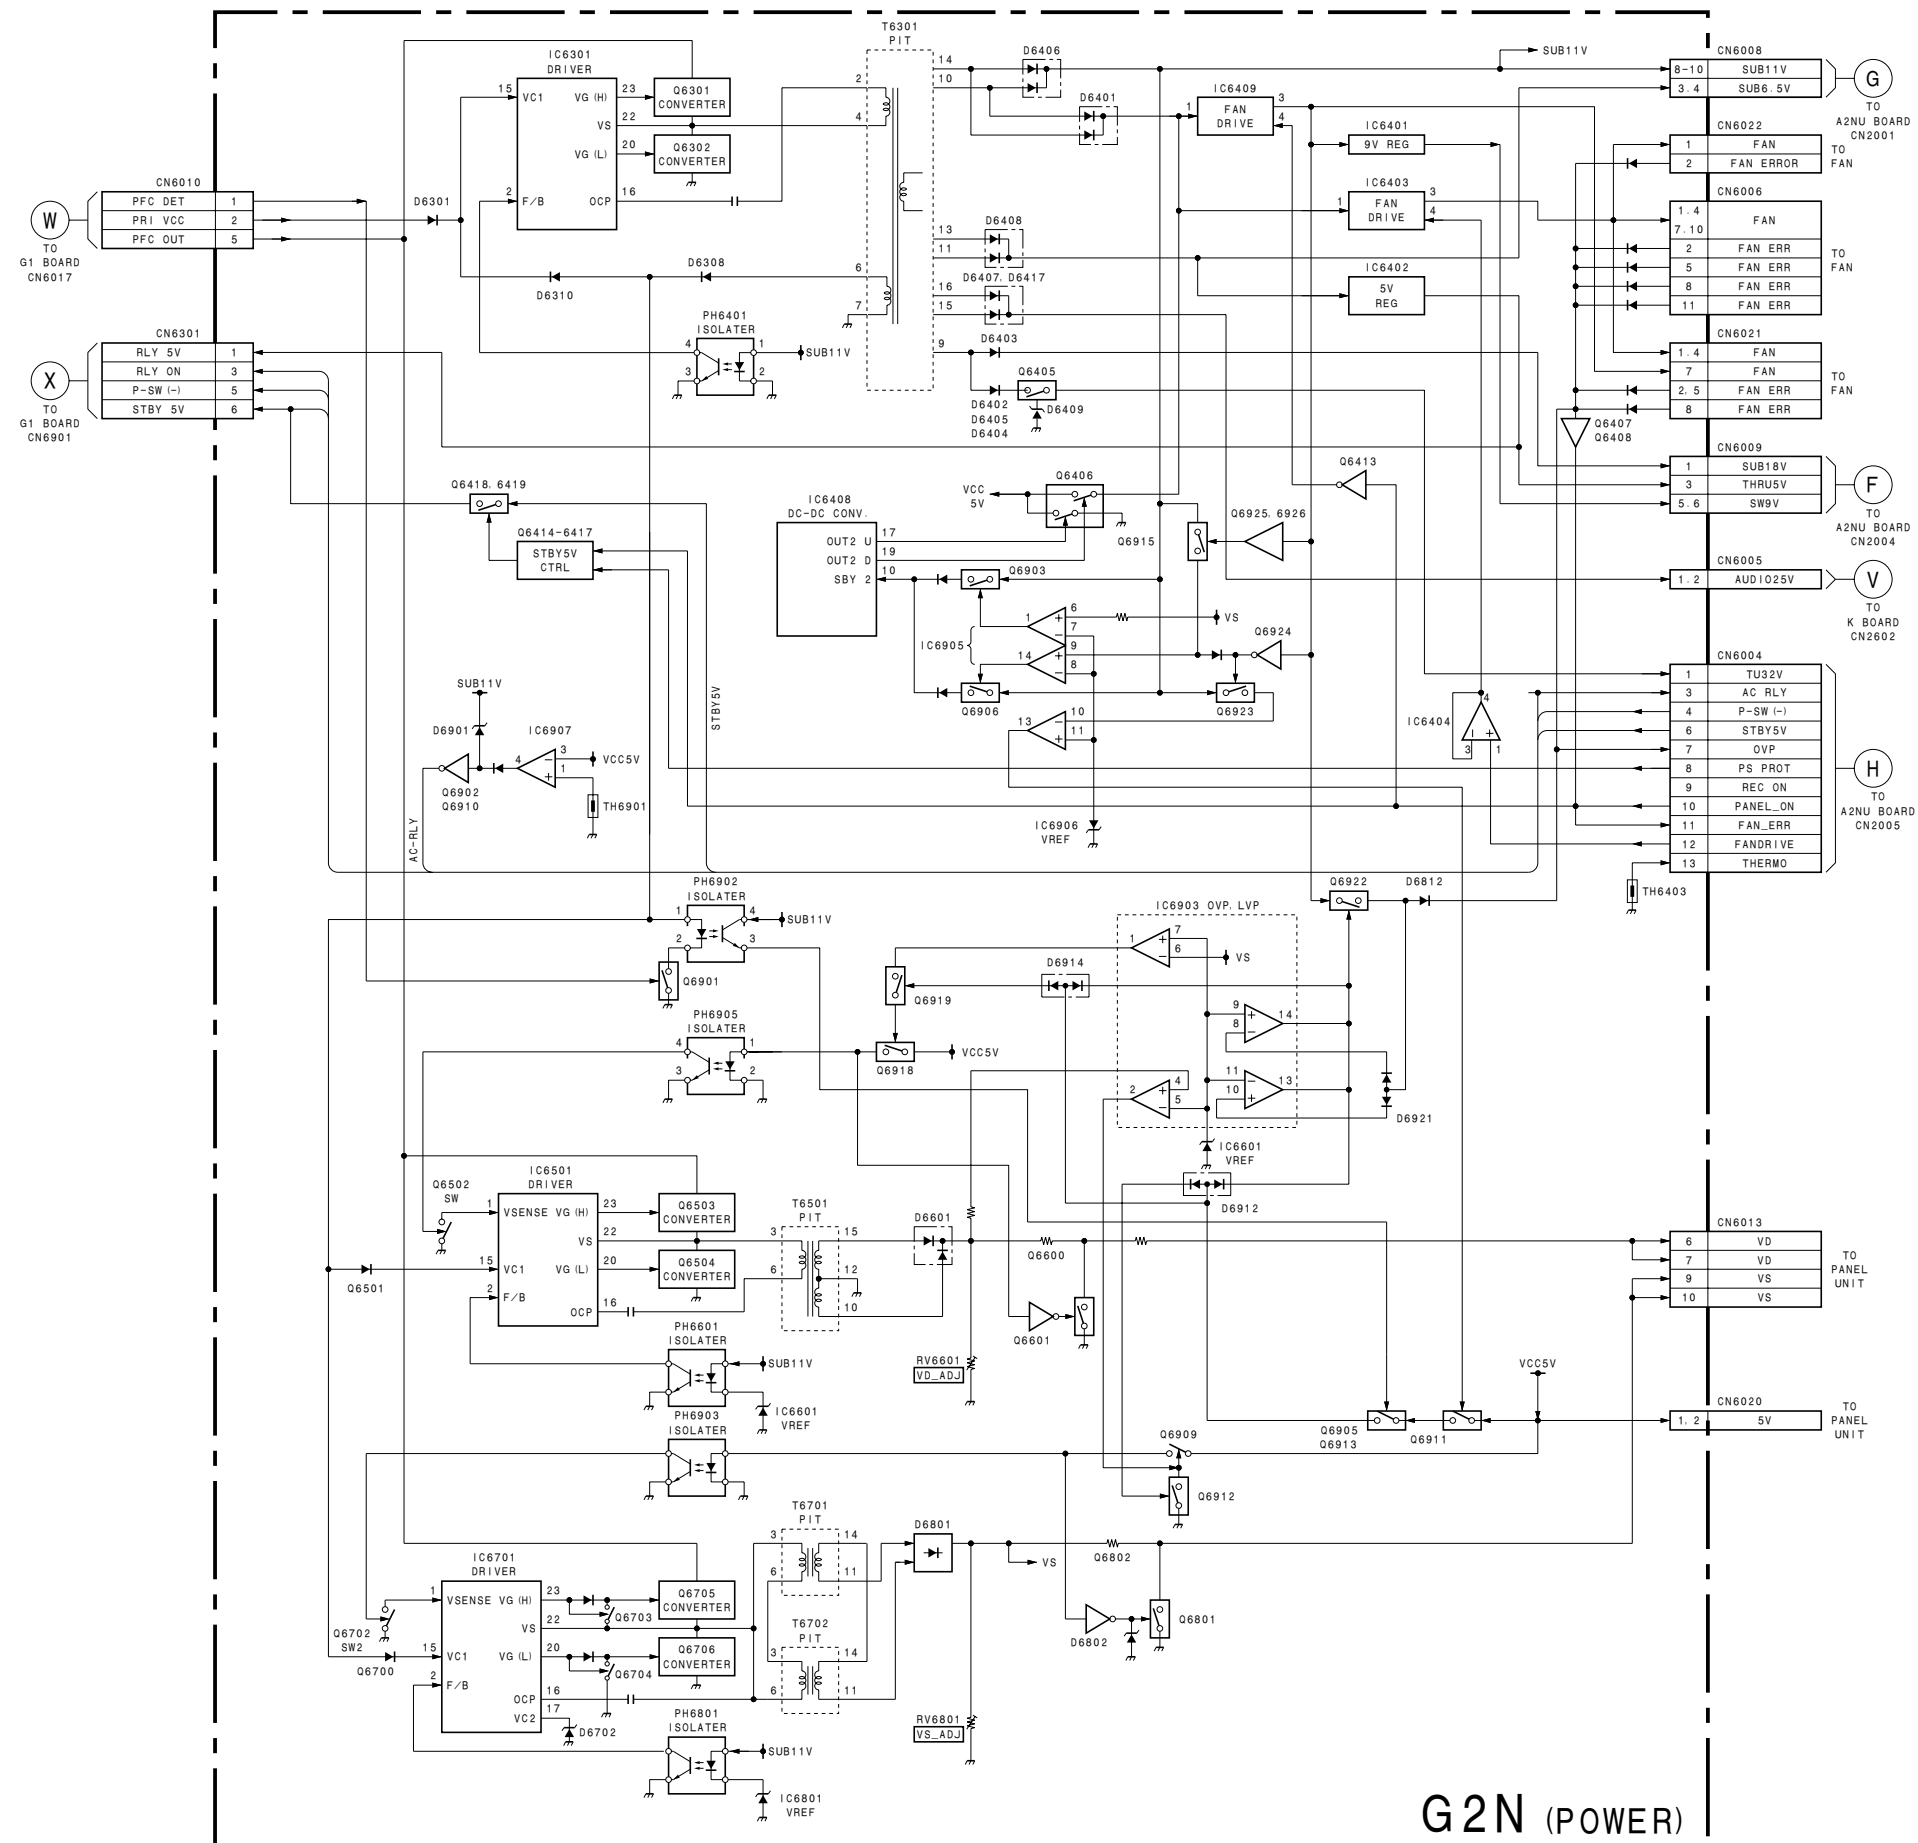



(8) K BOARD

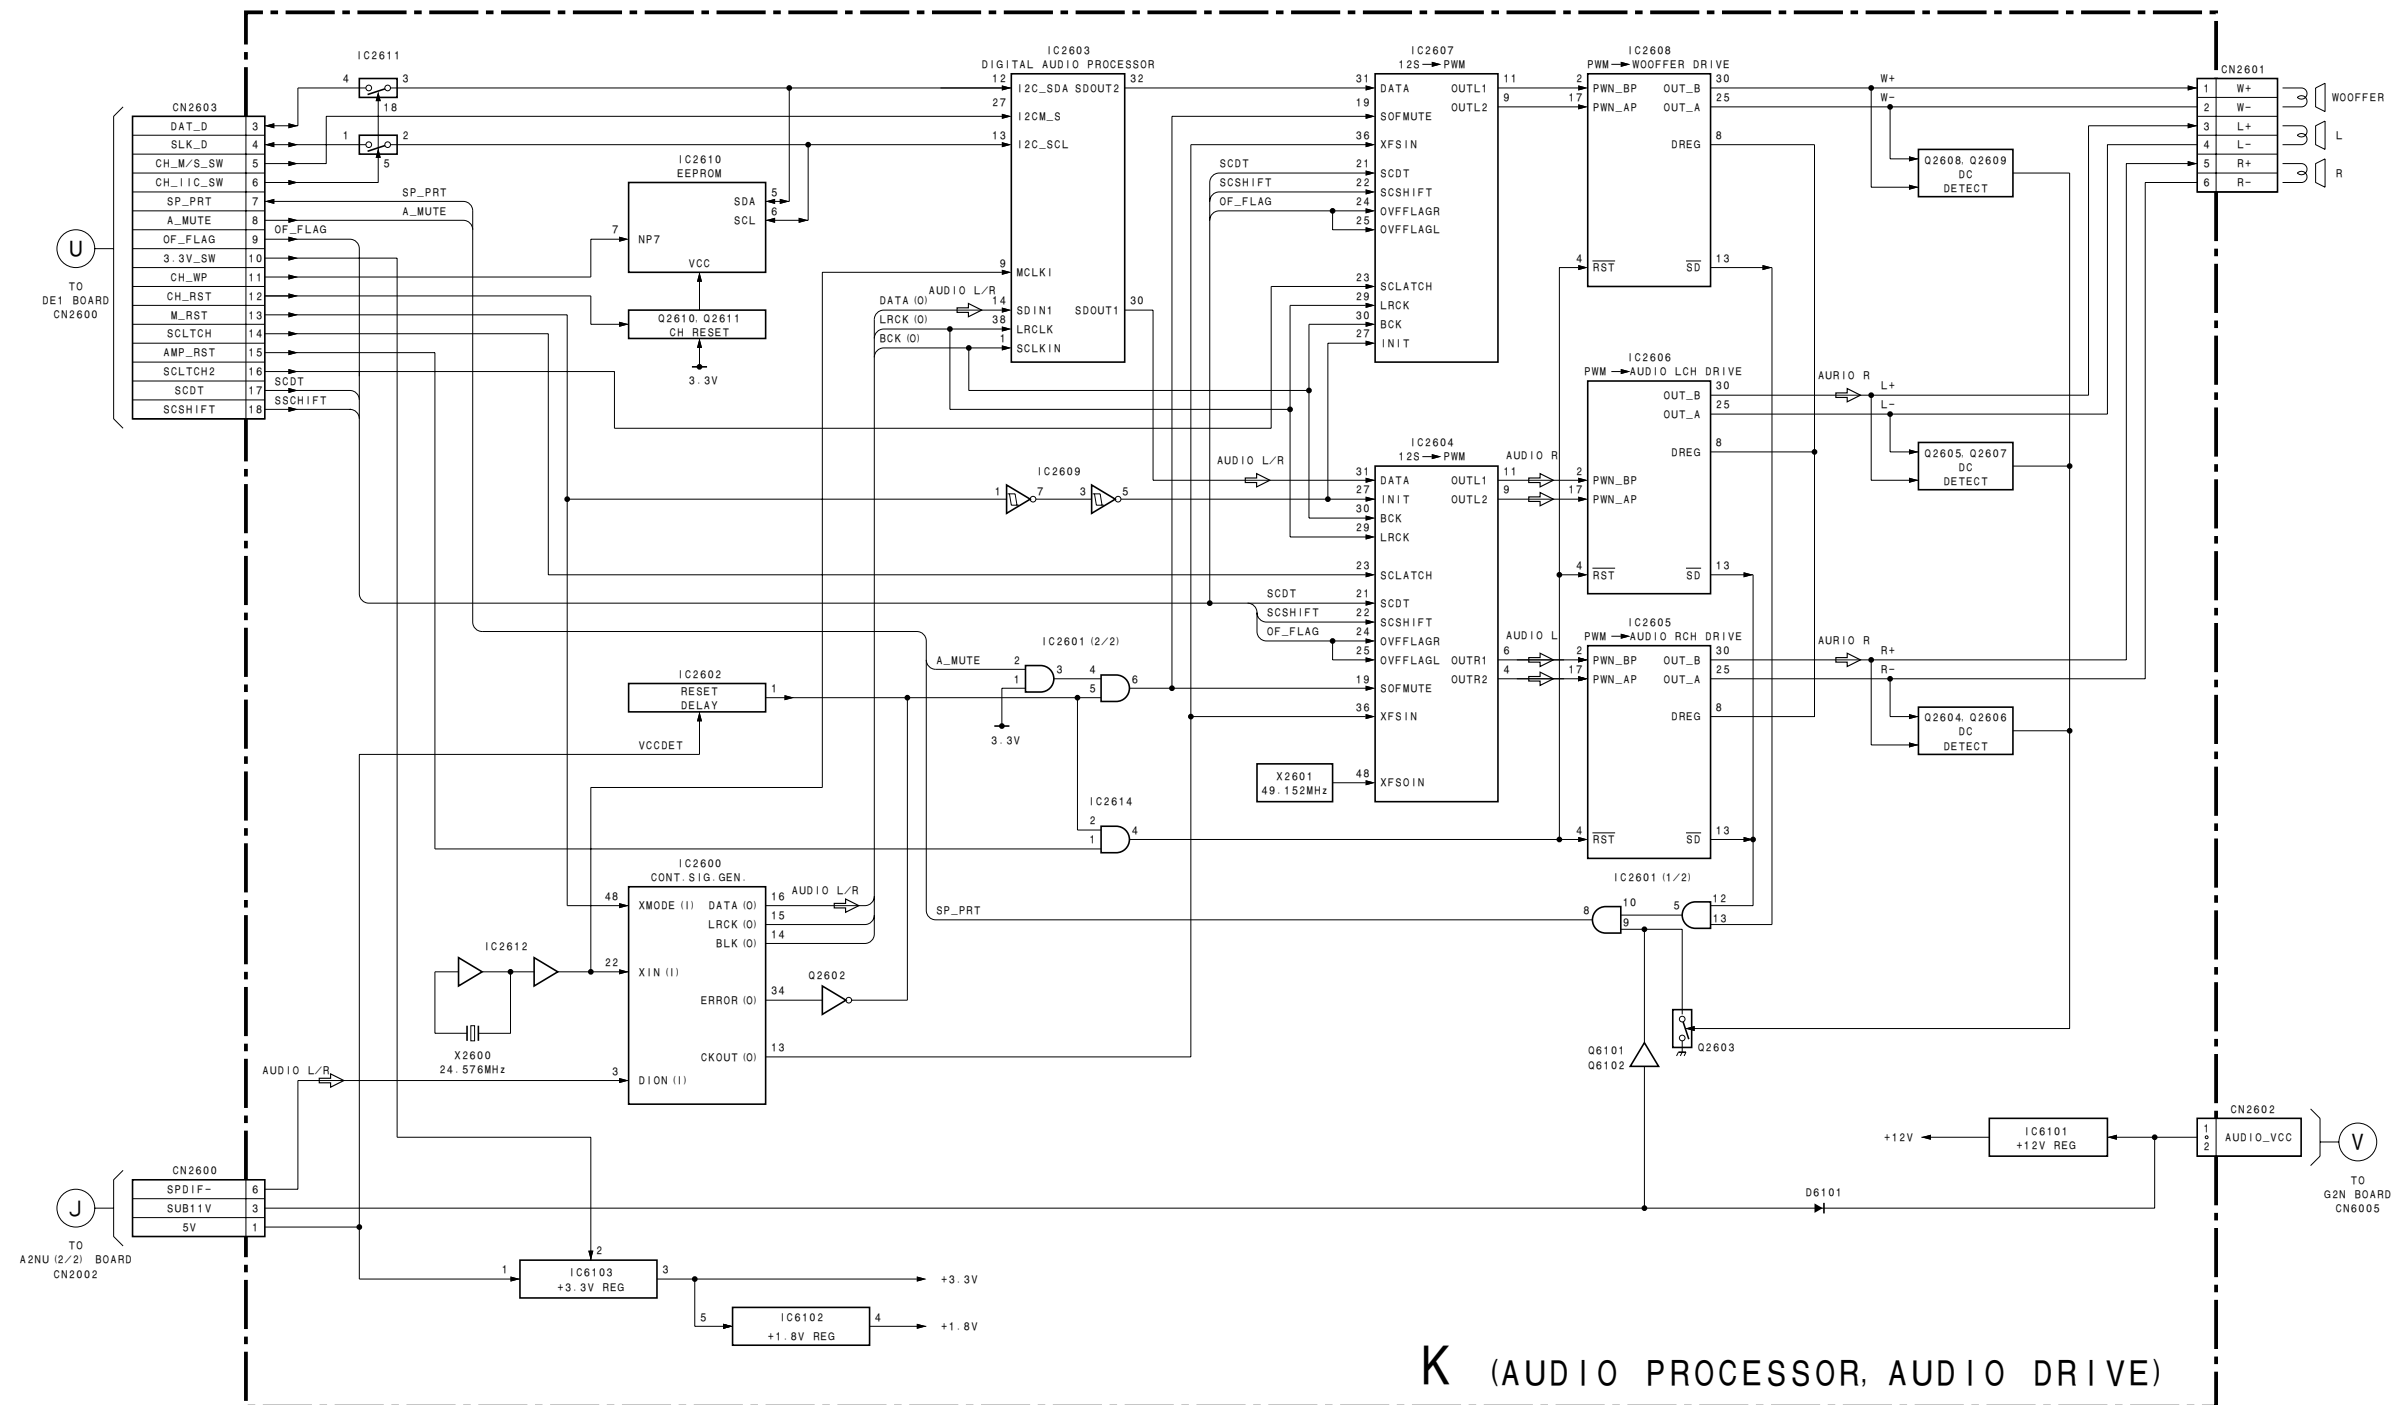


(9) H1U, H3, H5 AND M1U BOARDS

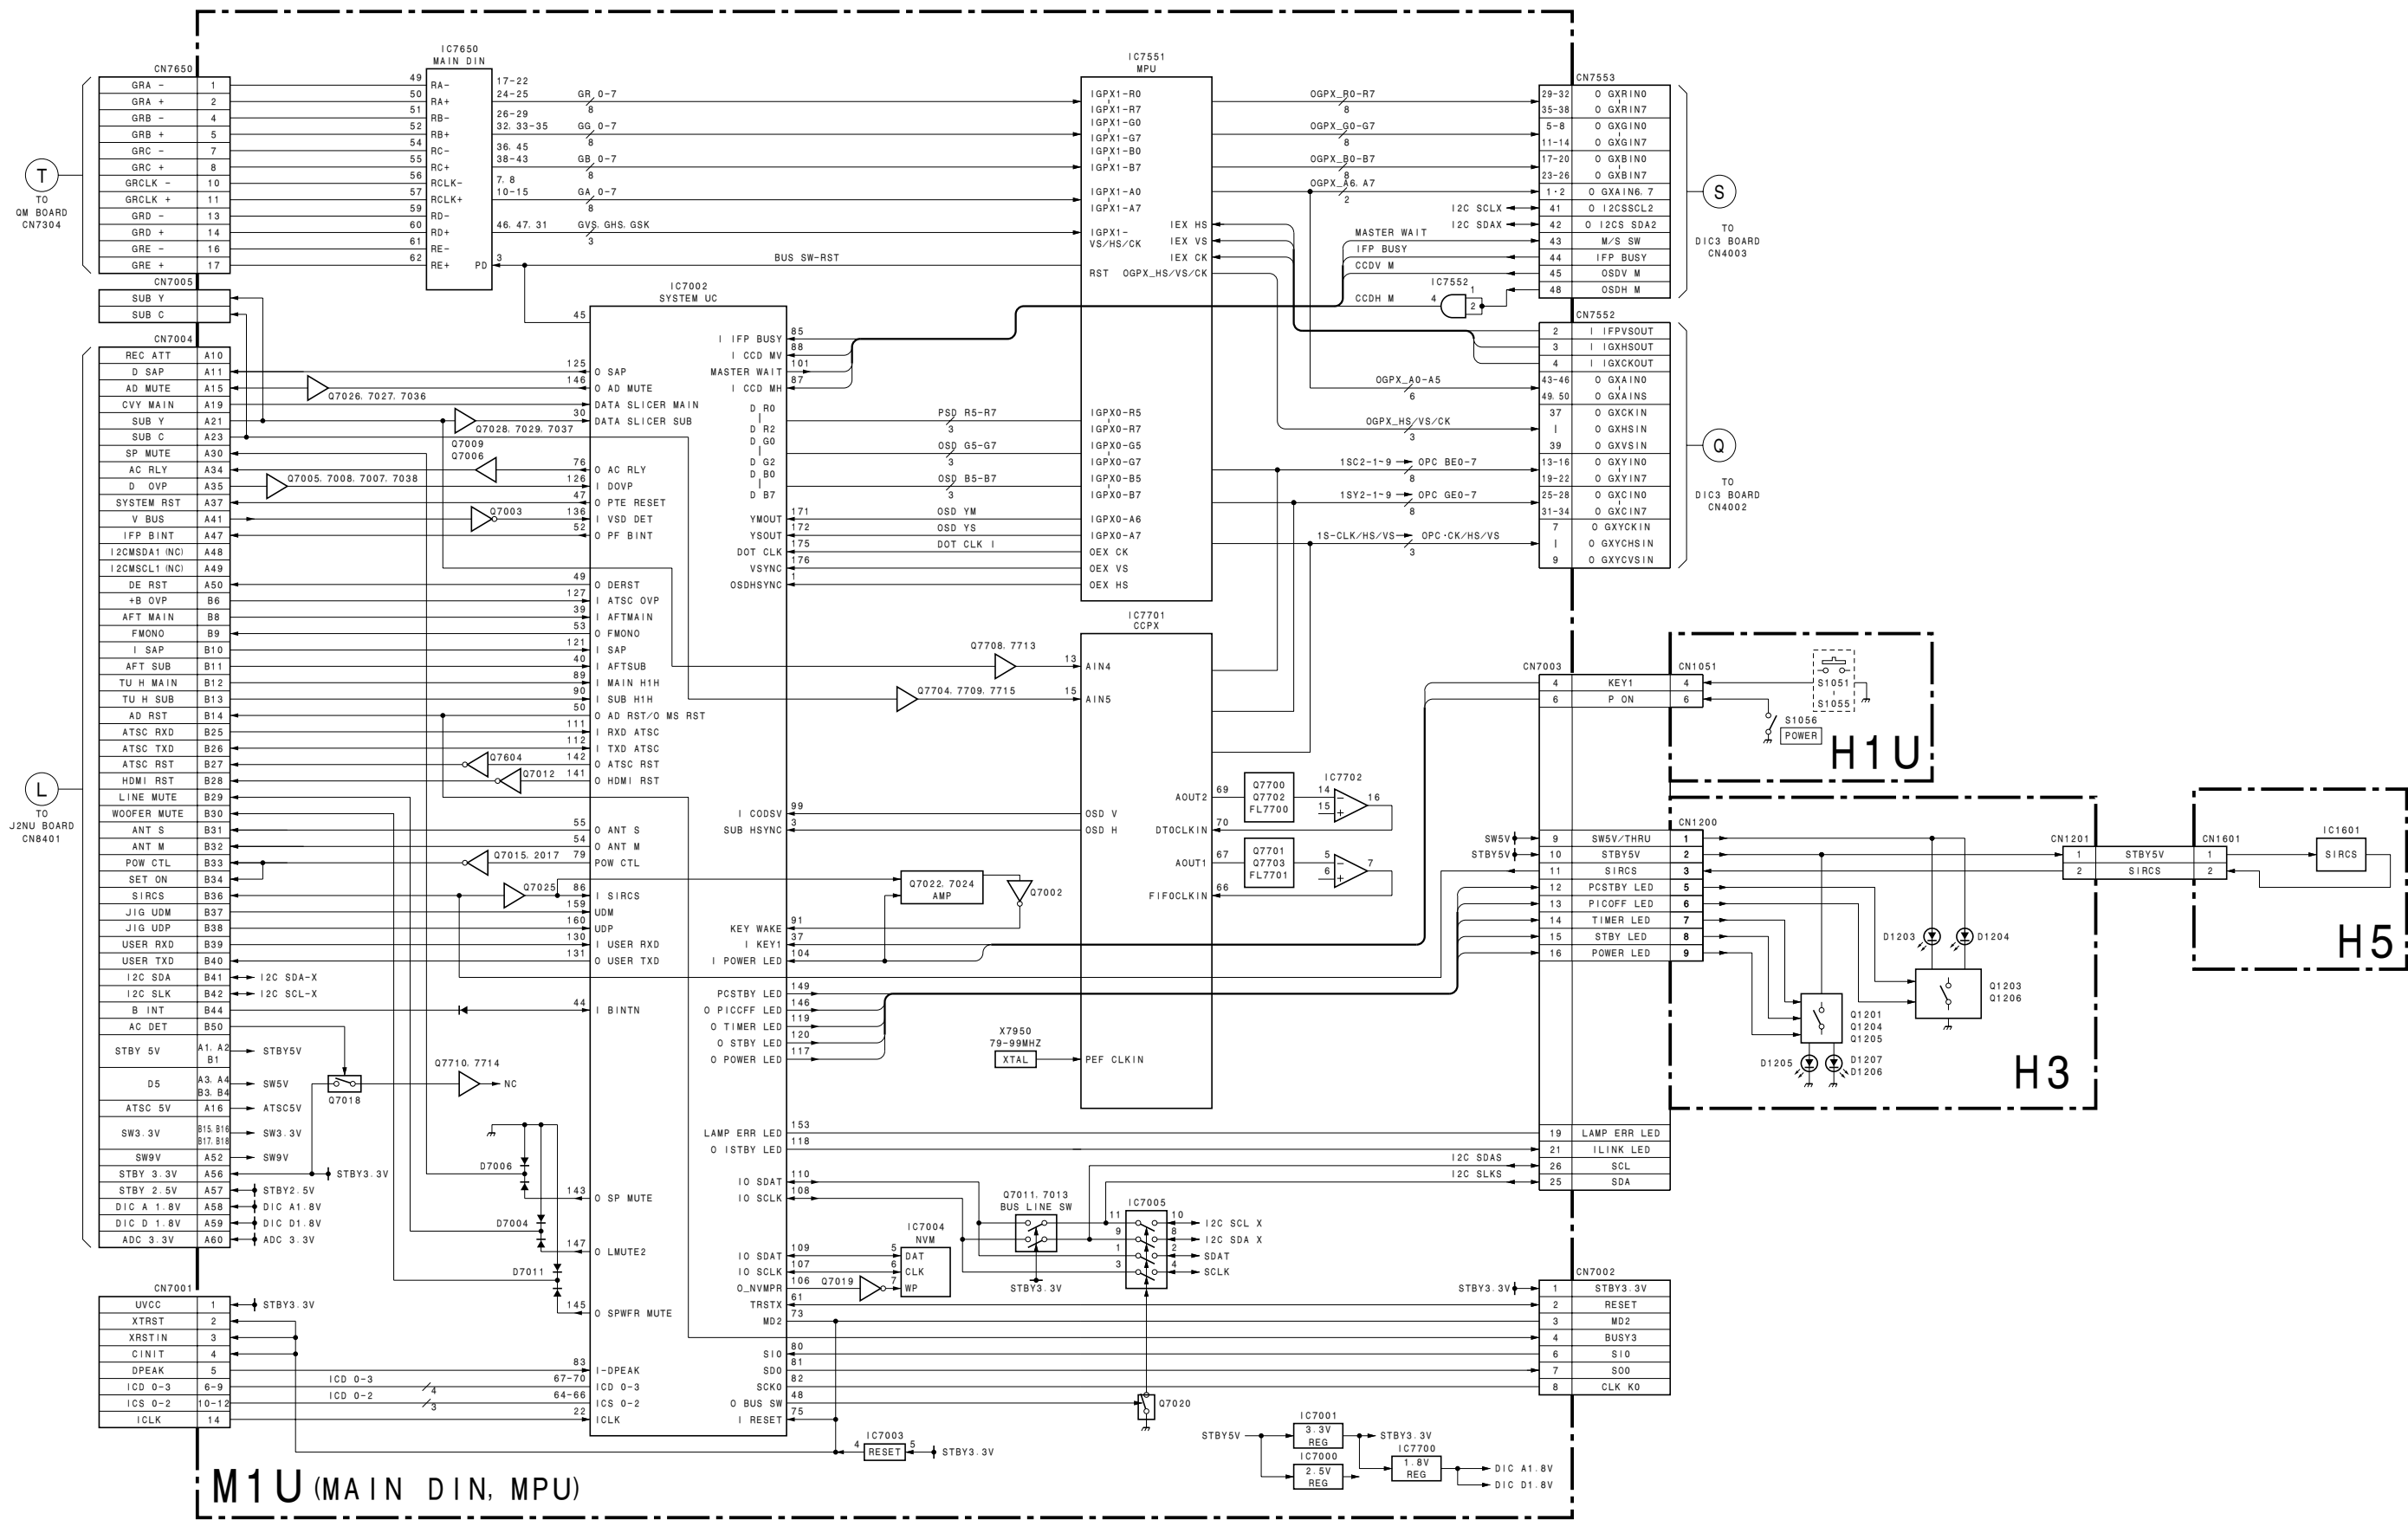


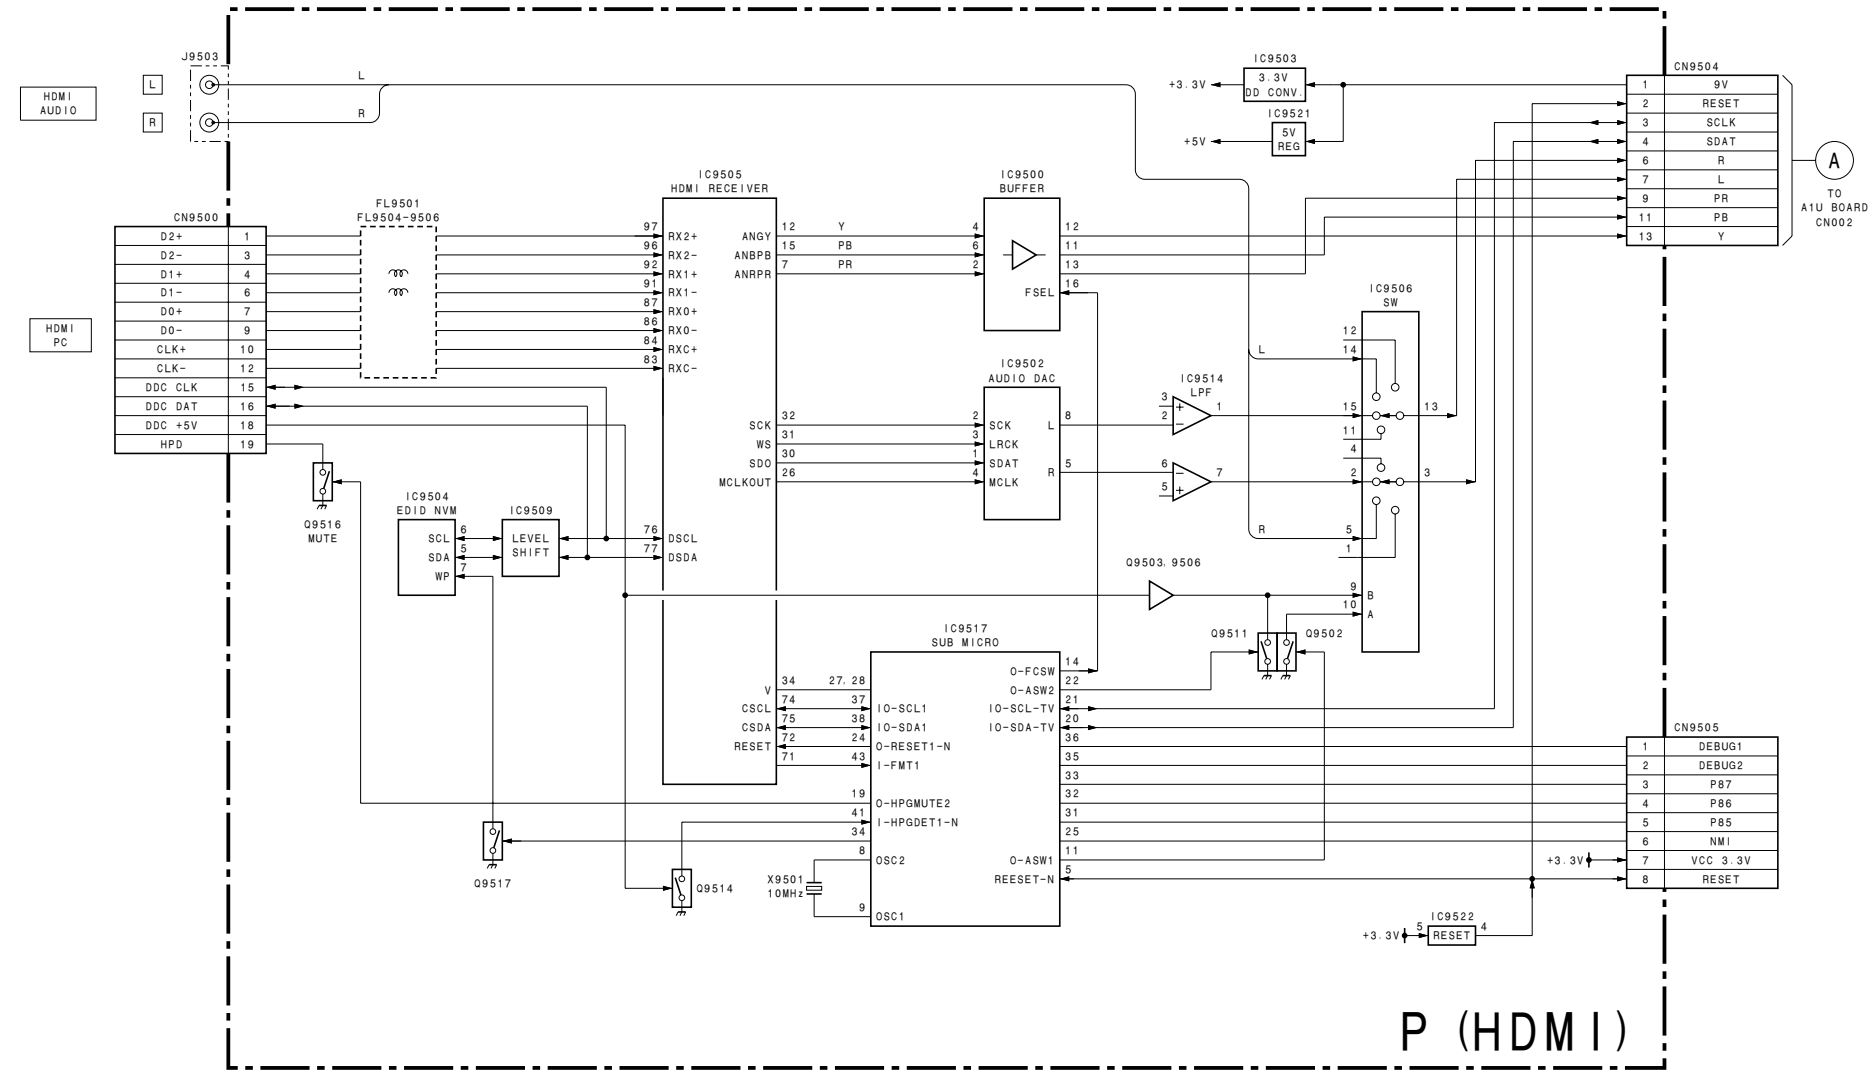

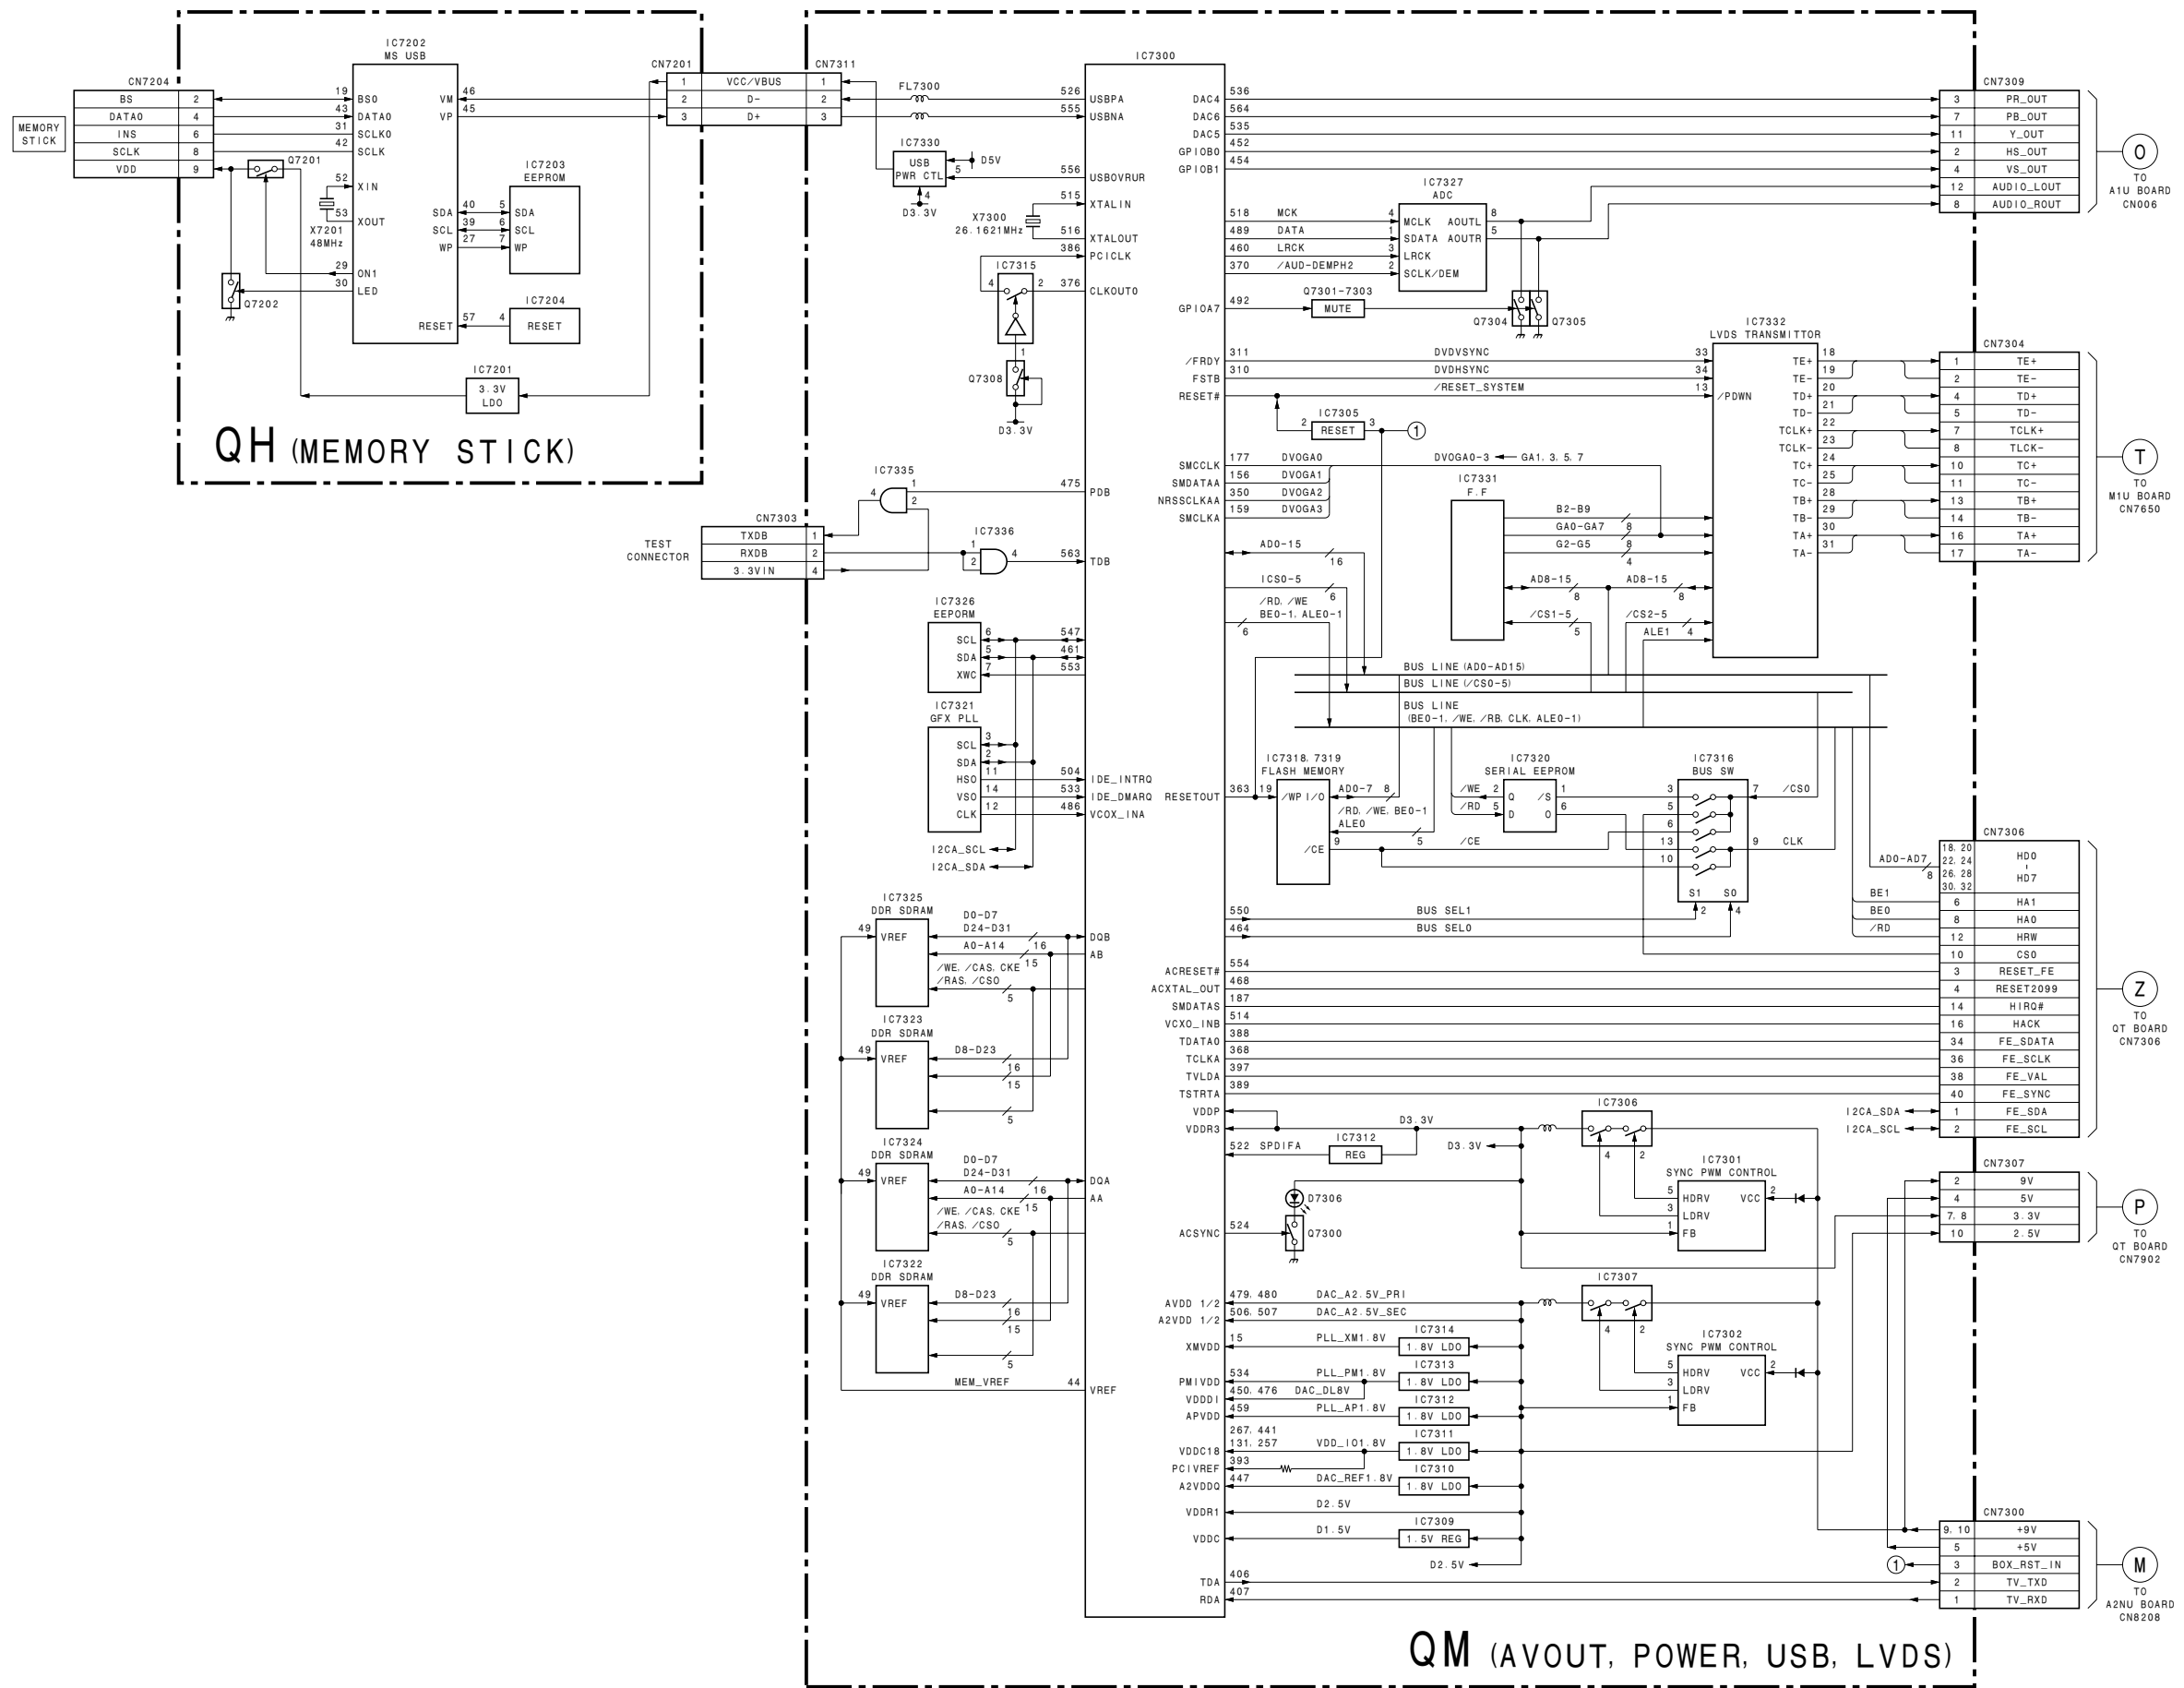


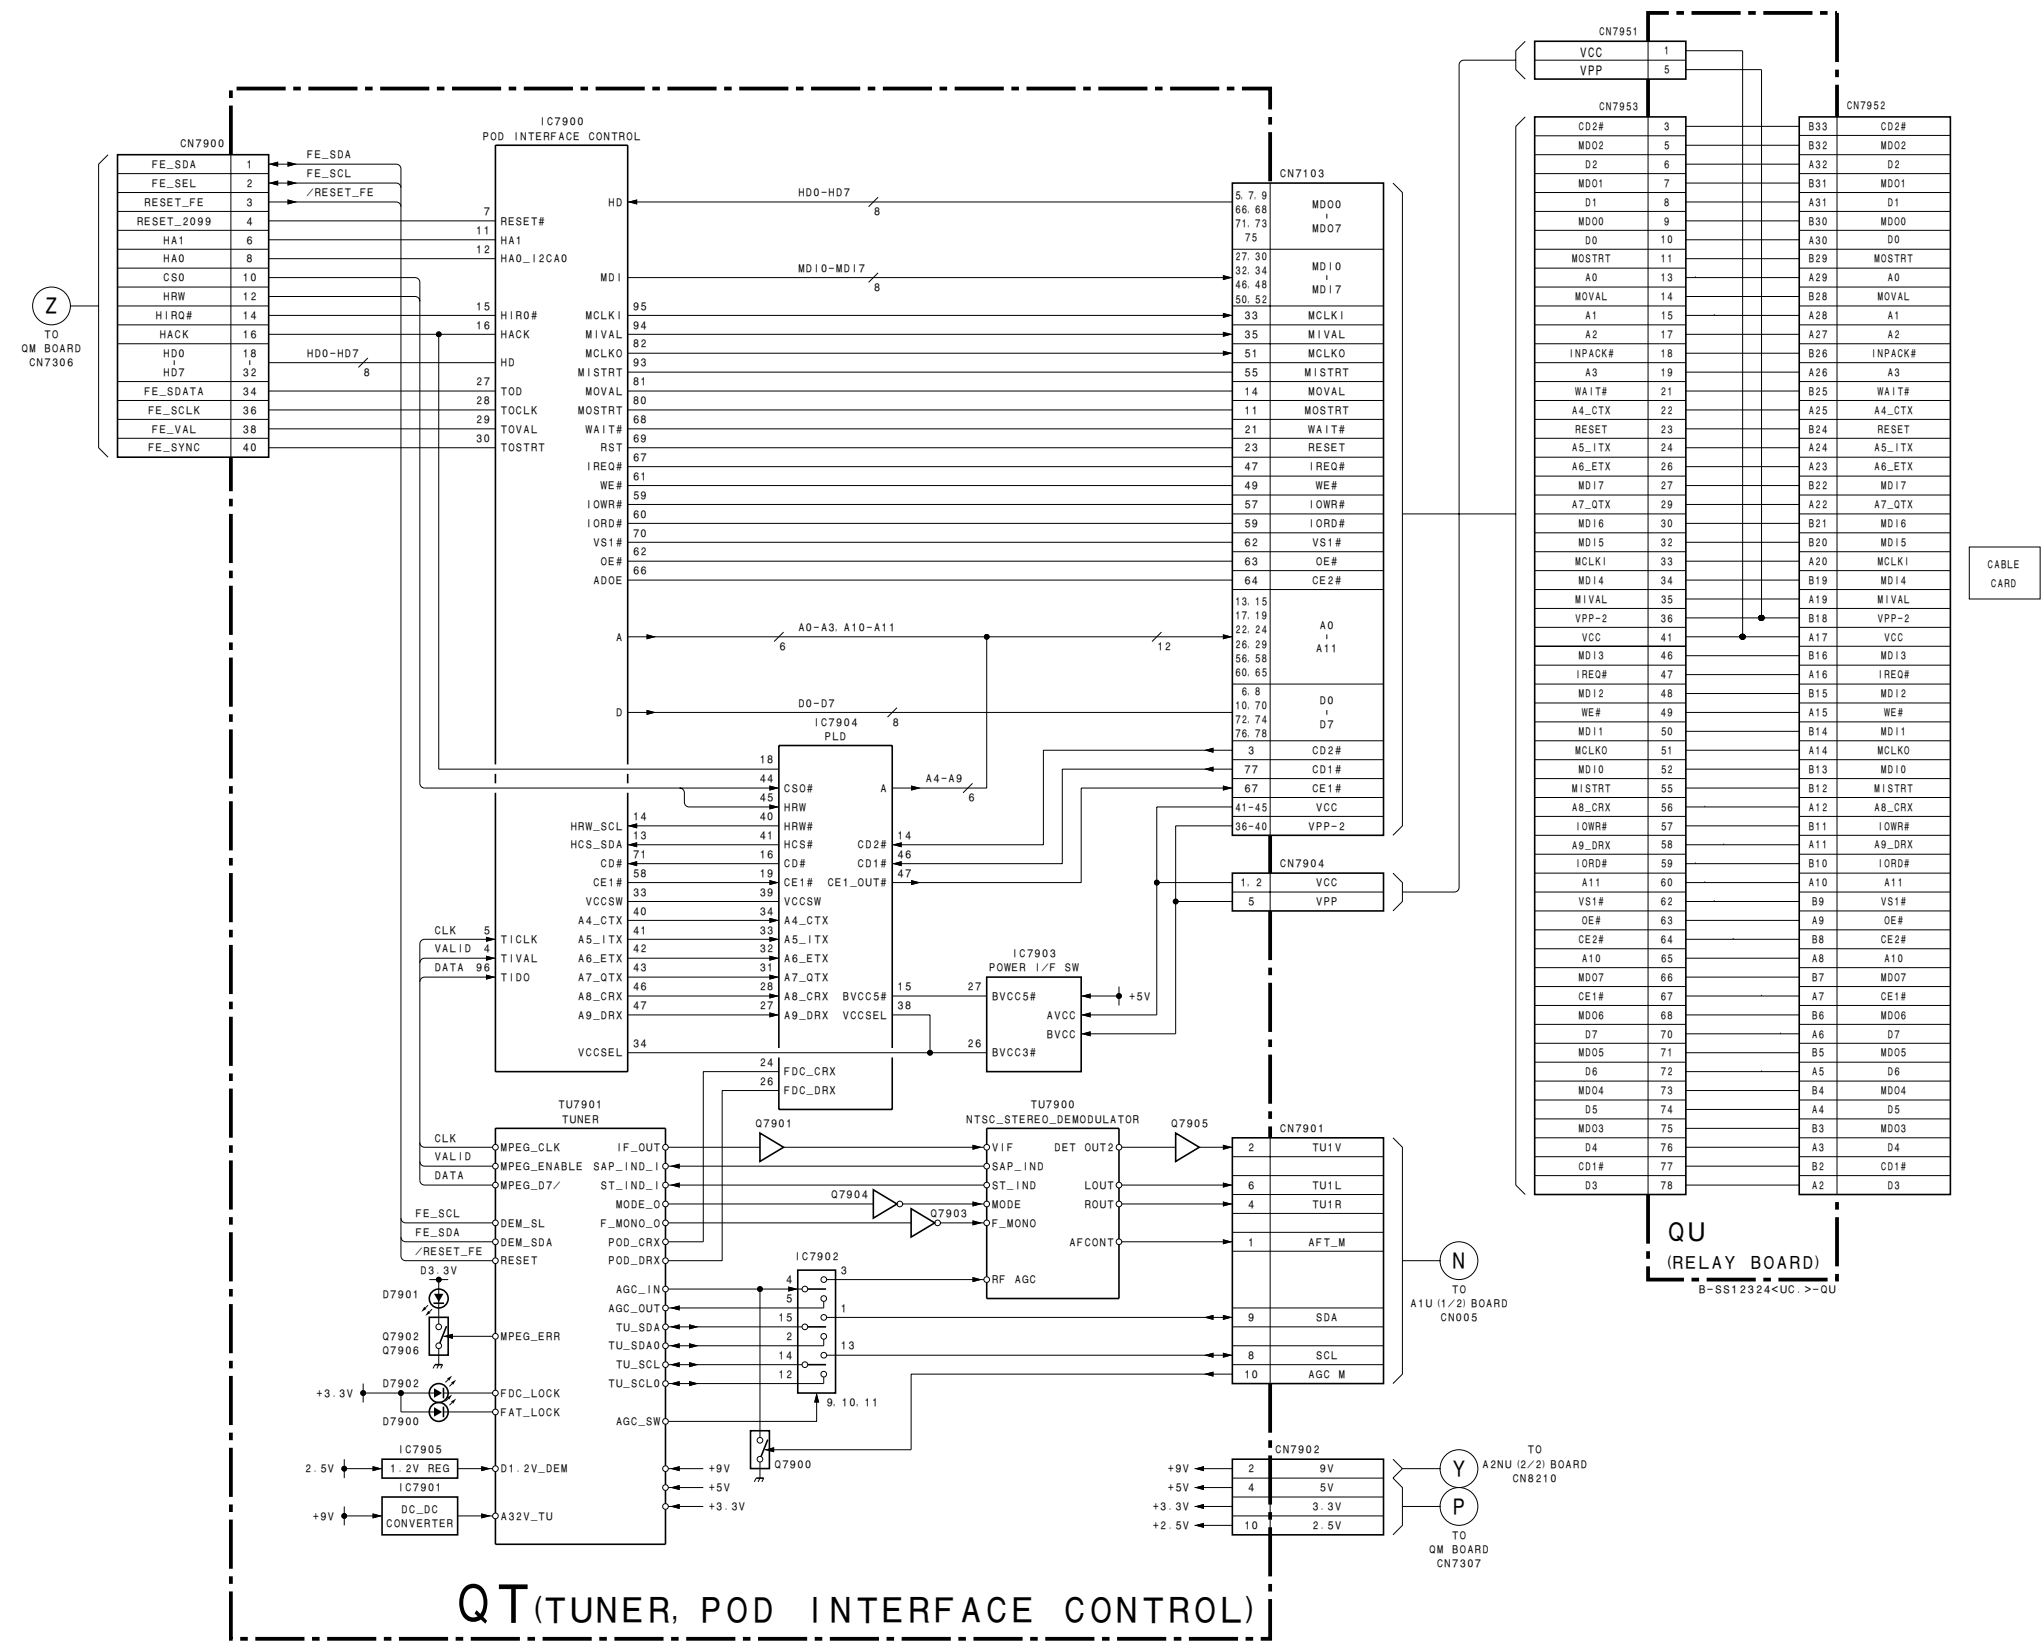

3-2. FRAME DIAGRAMS

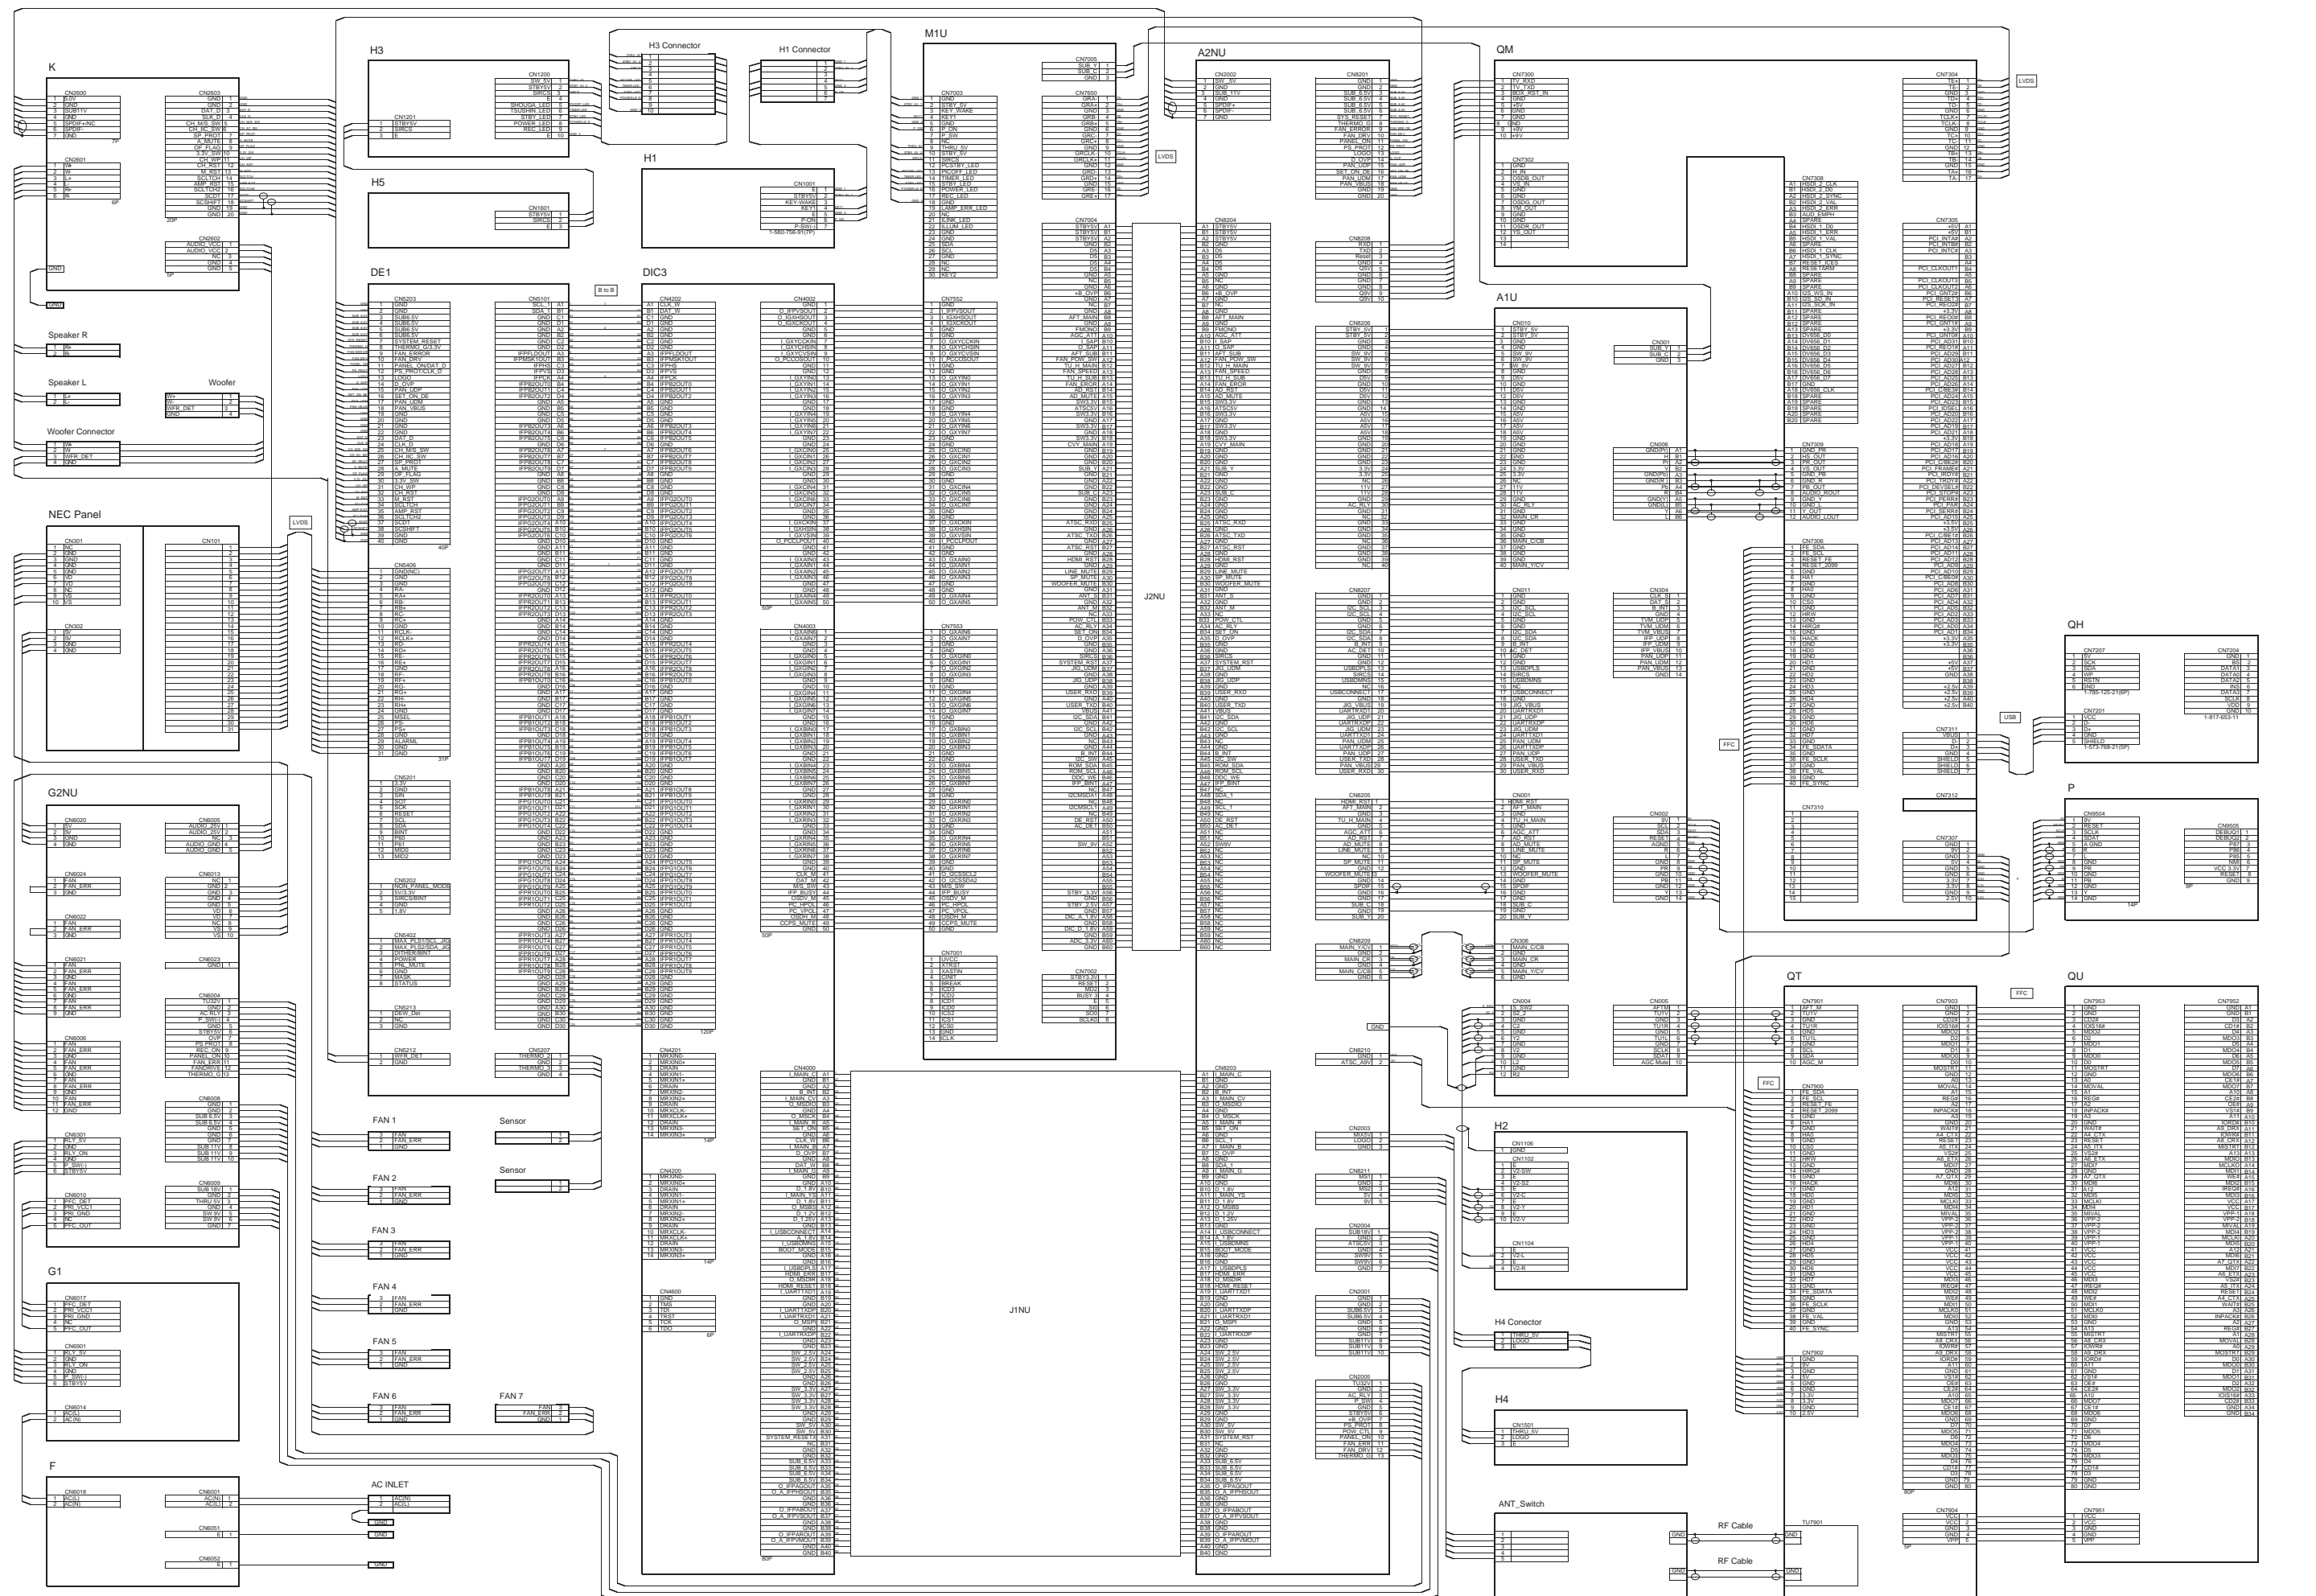

3-3. CIRCUIT BOARDS LOCATION

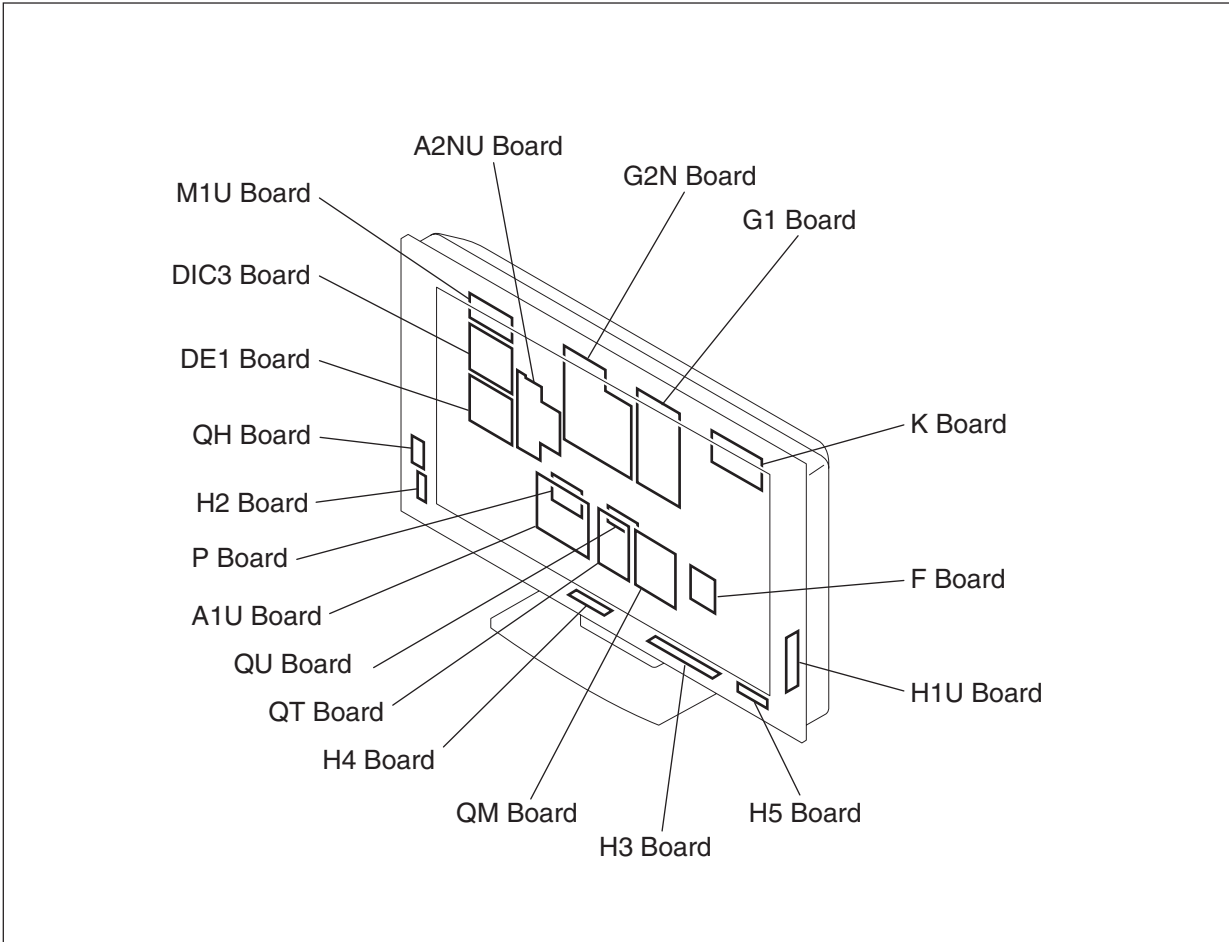

3-4. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

- Note:**
- All capacitors are in μF unless otherwise noted. (pF : μF)
Capacitors without voltage indication are all 50 V.
 - Indication of resistance, which does not have one for rating electrical power, is as follows.
Pitch: 5 mm
Rating electrical power 1/4 W (CHIP : 1/10 W)
 - All resistors are in ohms.
 - : nonflammable resistor.
 - : fusible resistor.
 - : internal component.
 - : panel designation, and adjustment for repair.
 - All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
 - : earth-ground.
 - : earth-chassis.
 - When replacing the part in below table, be sure to perform the related adjustment.
 - All voltages are in V.
 - Readings are taken with a 10 M digital multimeter.
 - Readings are taken with a color-bar signal input.
 - Voltage variations may be noted due to normal production tolerances.
 - * : Names and values of parts depend on models.
 - * : Can not be measured.
 - Circled numbers are waveform references.
 - : B + bus.
 - : B - bus.
 - : Signal path.

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un tramé et une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


Terminal name of semiconductors in silk screen printed circuit (※)

	Device	Printed symbol	Terminal name	Circuit
①	Transistor		Collector Base Emitter	
②	Transistor		Collector Base Emitter	
③	Diode		Cathode Anode	
④	Diode		Cathode Anode (NC)	
⑤	Diode		Cathode Anode (NC)	
⑥	Diode		Common Anode Cathode	
⑦	Diode		Common Anode Cathode	
⑧	Diode		Common Anode Anode	
⑨	Diode		Common Anode Anode	
⑩	Diode		Common Cathode Cathode	
⑪	Diode		Common Cathode Cathode	
⑫	Diode		Anode Anode Cathode Cathode	
⑬	Transistor (FET)		Drain Source Gate	
⑭	Transistor (FET)		Drain Source Gate	
⑮	Transistor (FET)		Source Drain Gate	
⑯	Transistor		Emitter Collector Base	
⑰	Transistor		C2(B1)E1 E2(B2)C1	
⑱	Transistor		C1(B2)E2 E1(B1)C2	
⑲	Transistor		C1 B2 E2 E1 B1 C2	
⑳	Transistor		C1 B2 E2 E1 B1 C2	
㉑	Transistor		E2 B1 E1 C2 C1(B2)	
㉒	Transistor		(B2) B1 E1 E2 C1 C2	
㉓	Transistor		(B2) E2 E1 B1 C2 C1	
—	Discrete semiconductot			


(Chip semiconductors that are not actually used are included.)

Ver.1.6

(1) Schematic Diagrams of A1U Board

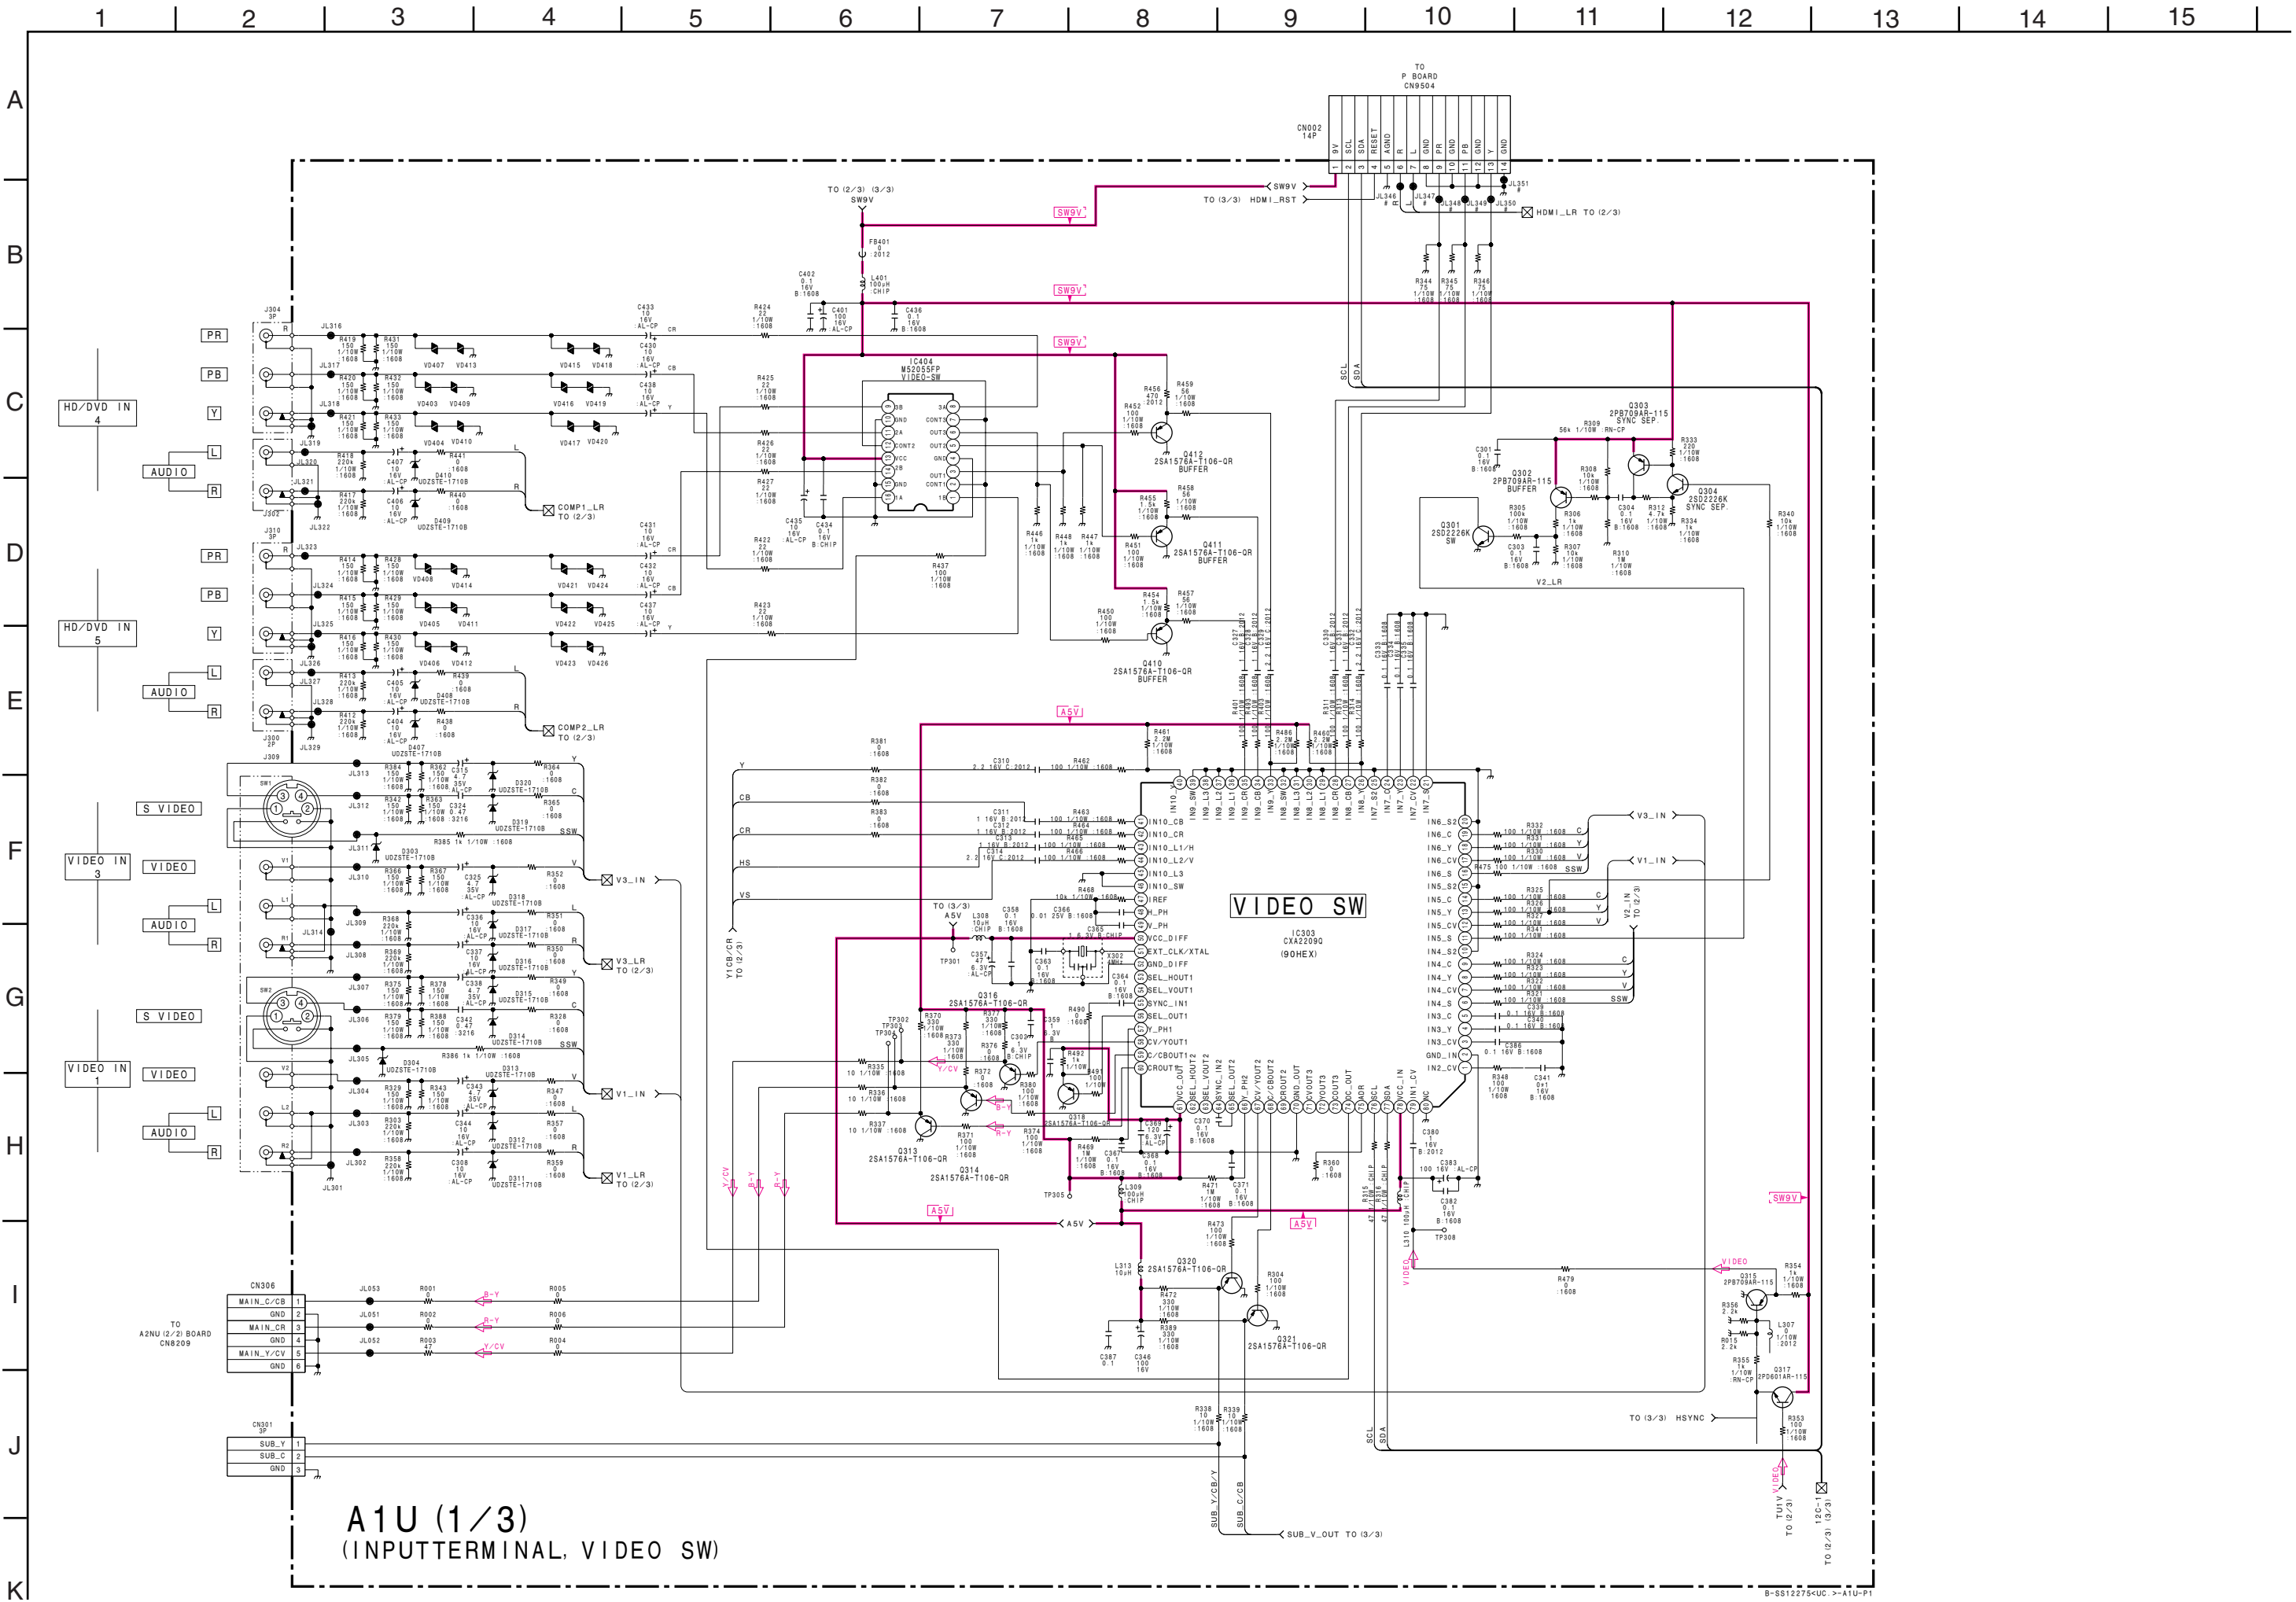



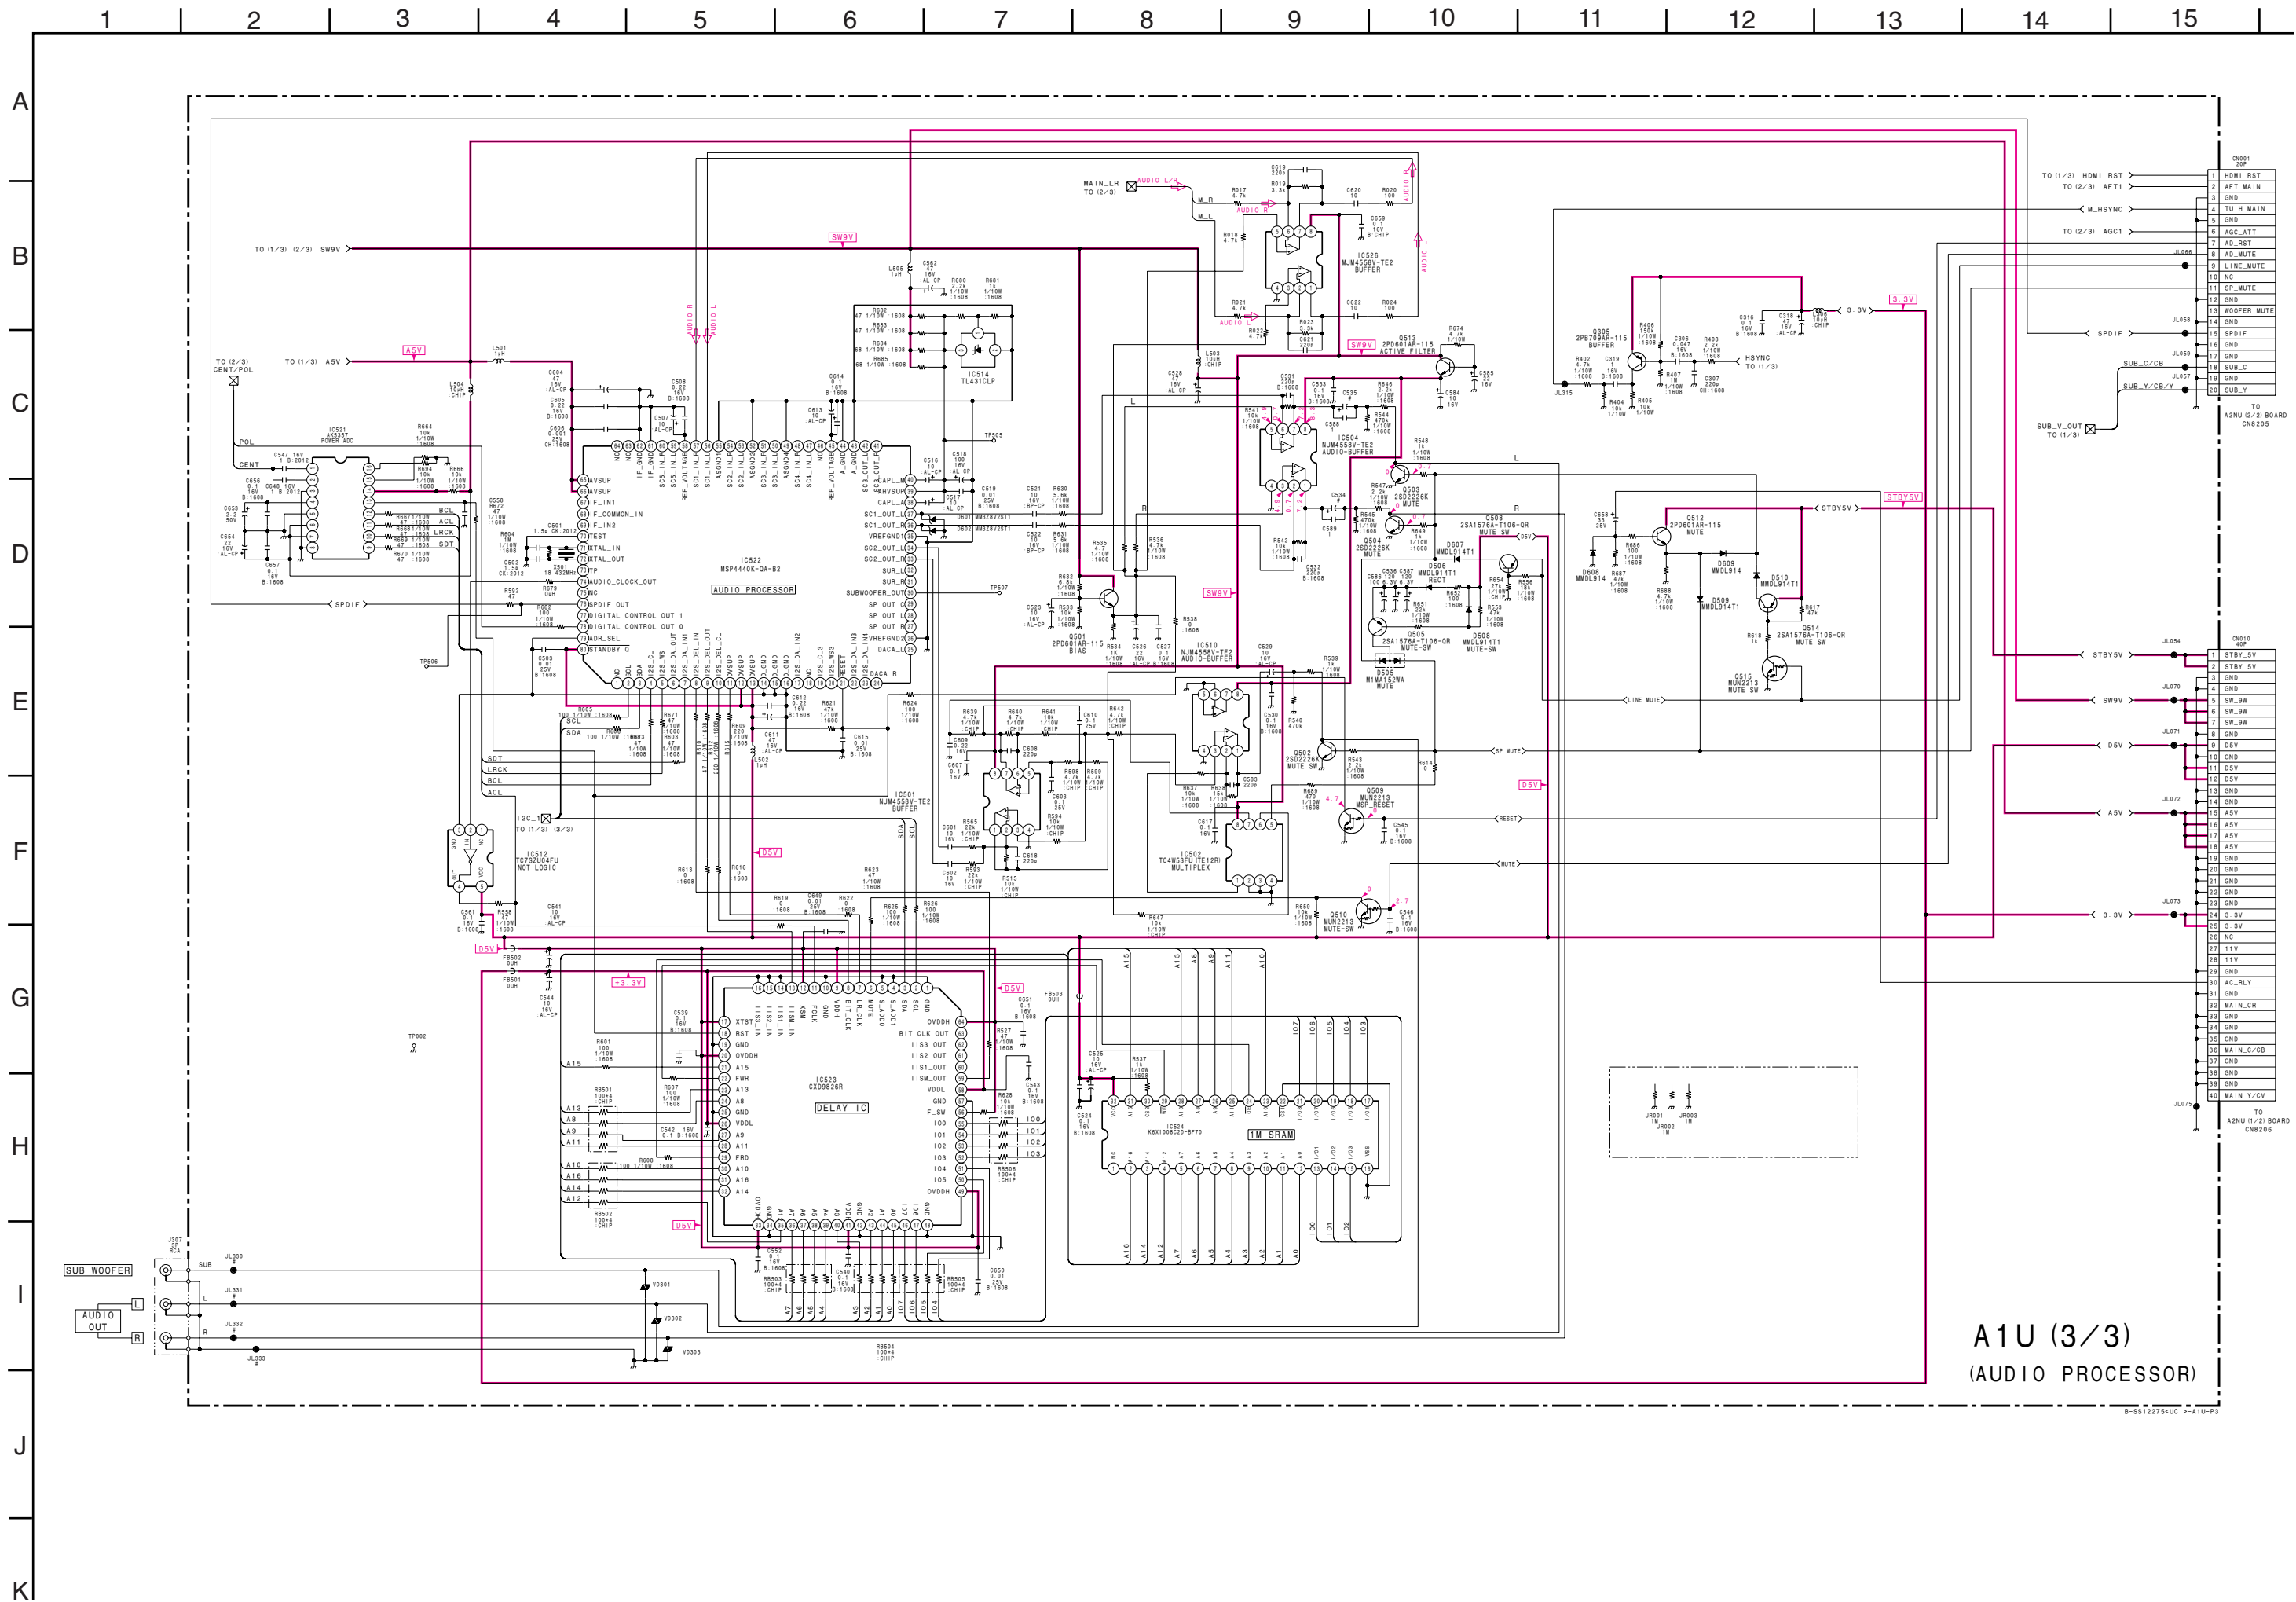


[AUDIO SW, AUDIO PROCESSOR, VIDEO SW, INPUT TERMINAL]


[illegible]

IC			IC510	D-2	TRANSISTOR			Q308	D-1	②	Q318	B-3	②	Q504	D-1	②	DIODE			D314	B-2	③	D408	C-3	③	D601	C-2	③			
(Component Side)	(Conductor Side)				(Component Side)	(Conductor Side)	*										(Component Side)	(Conductor Side)	*												
IC303		A-1	IC512	D-2		Q301	B-1	②	Q309	D-1	②	Q320		B-1	②	Q505	D-2	②	D301	D-1	③	D317	C-3	③	D501		③	D608	D-1	③	
IC404	A-3		IC522	D-2		Q302	B-1	②	Q312	D-1	②	Q410		A-1	②	Q510	D-3	②	D302	D-1	③	D318	B-2	③	D502	C-3	③	D609	D-3	③	
IC500	C-2		IC523	C-3		Q303	B-1	②	Q313		B-1	②	Q411		A-1	②	Q512	D-3	②	D303		B-2	③	D319	B-2	③	D505	D-2	③		
IC501	D-2		IC524	C-3		Q304	B-1	②	Q314		B-1	②	Q412		A-1	②	Q513	D-2	②	D304		B-2	③	D320		C-2	③	D506	C-2	③	
IC502		D-2	IC526		D-2	Q305		B-1	②	Q315		B-1	②	Q501		D-2	②	Q514		D-1	②	D311		C-2	③	D322	D-1	③	D508	D-2	③
IC504	D-2					Q306	D-1	②	Q316		B-1	②	Q502	D-2		②	Q515		D-1	②	D312		C-3	③	D323	D-1	-	D509	D-3	③	
IC507		C-1				Q307	D-1	②	Q317		B-1	②	Q503	D-1		②				D313		B-2	③	D407		C-3	③	D510		D-1	③


KDE-50XS955 (UC) 3-18

(2) Schematic Diagrams of A2NU Board

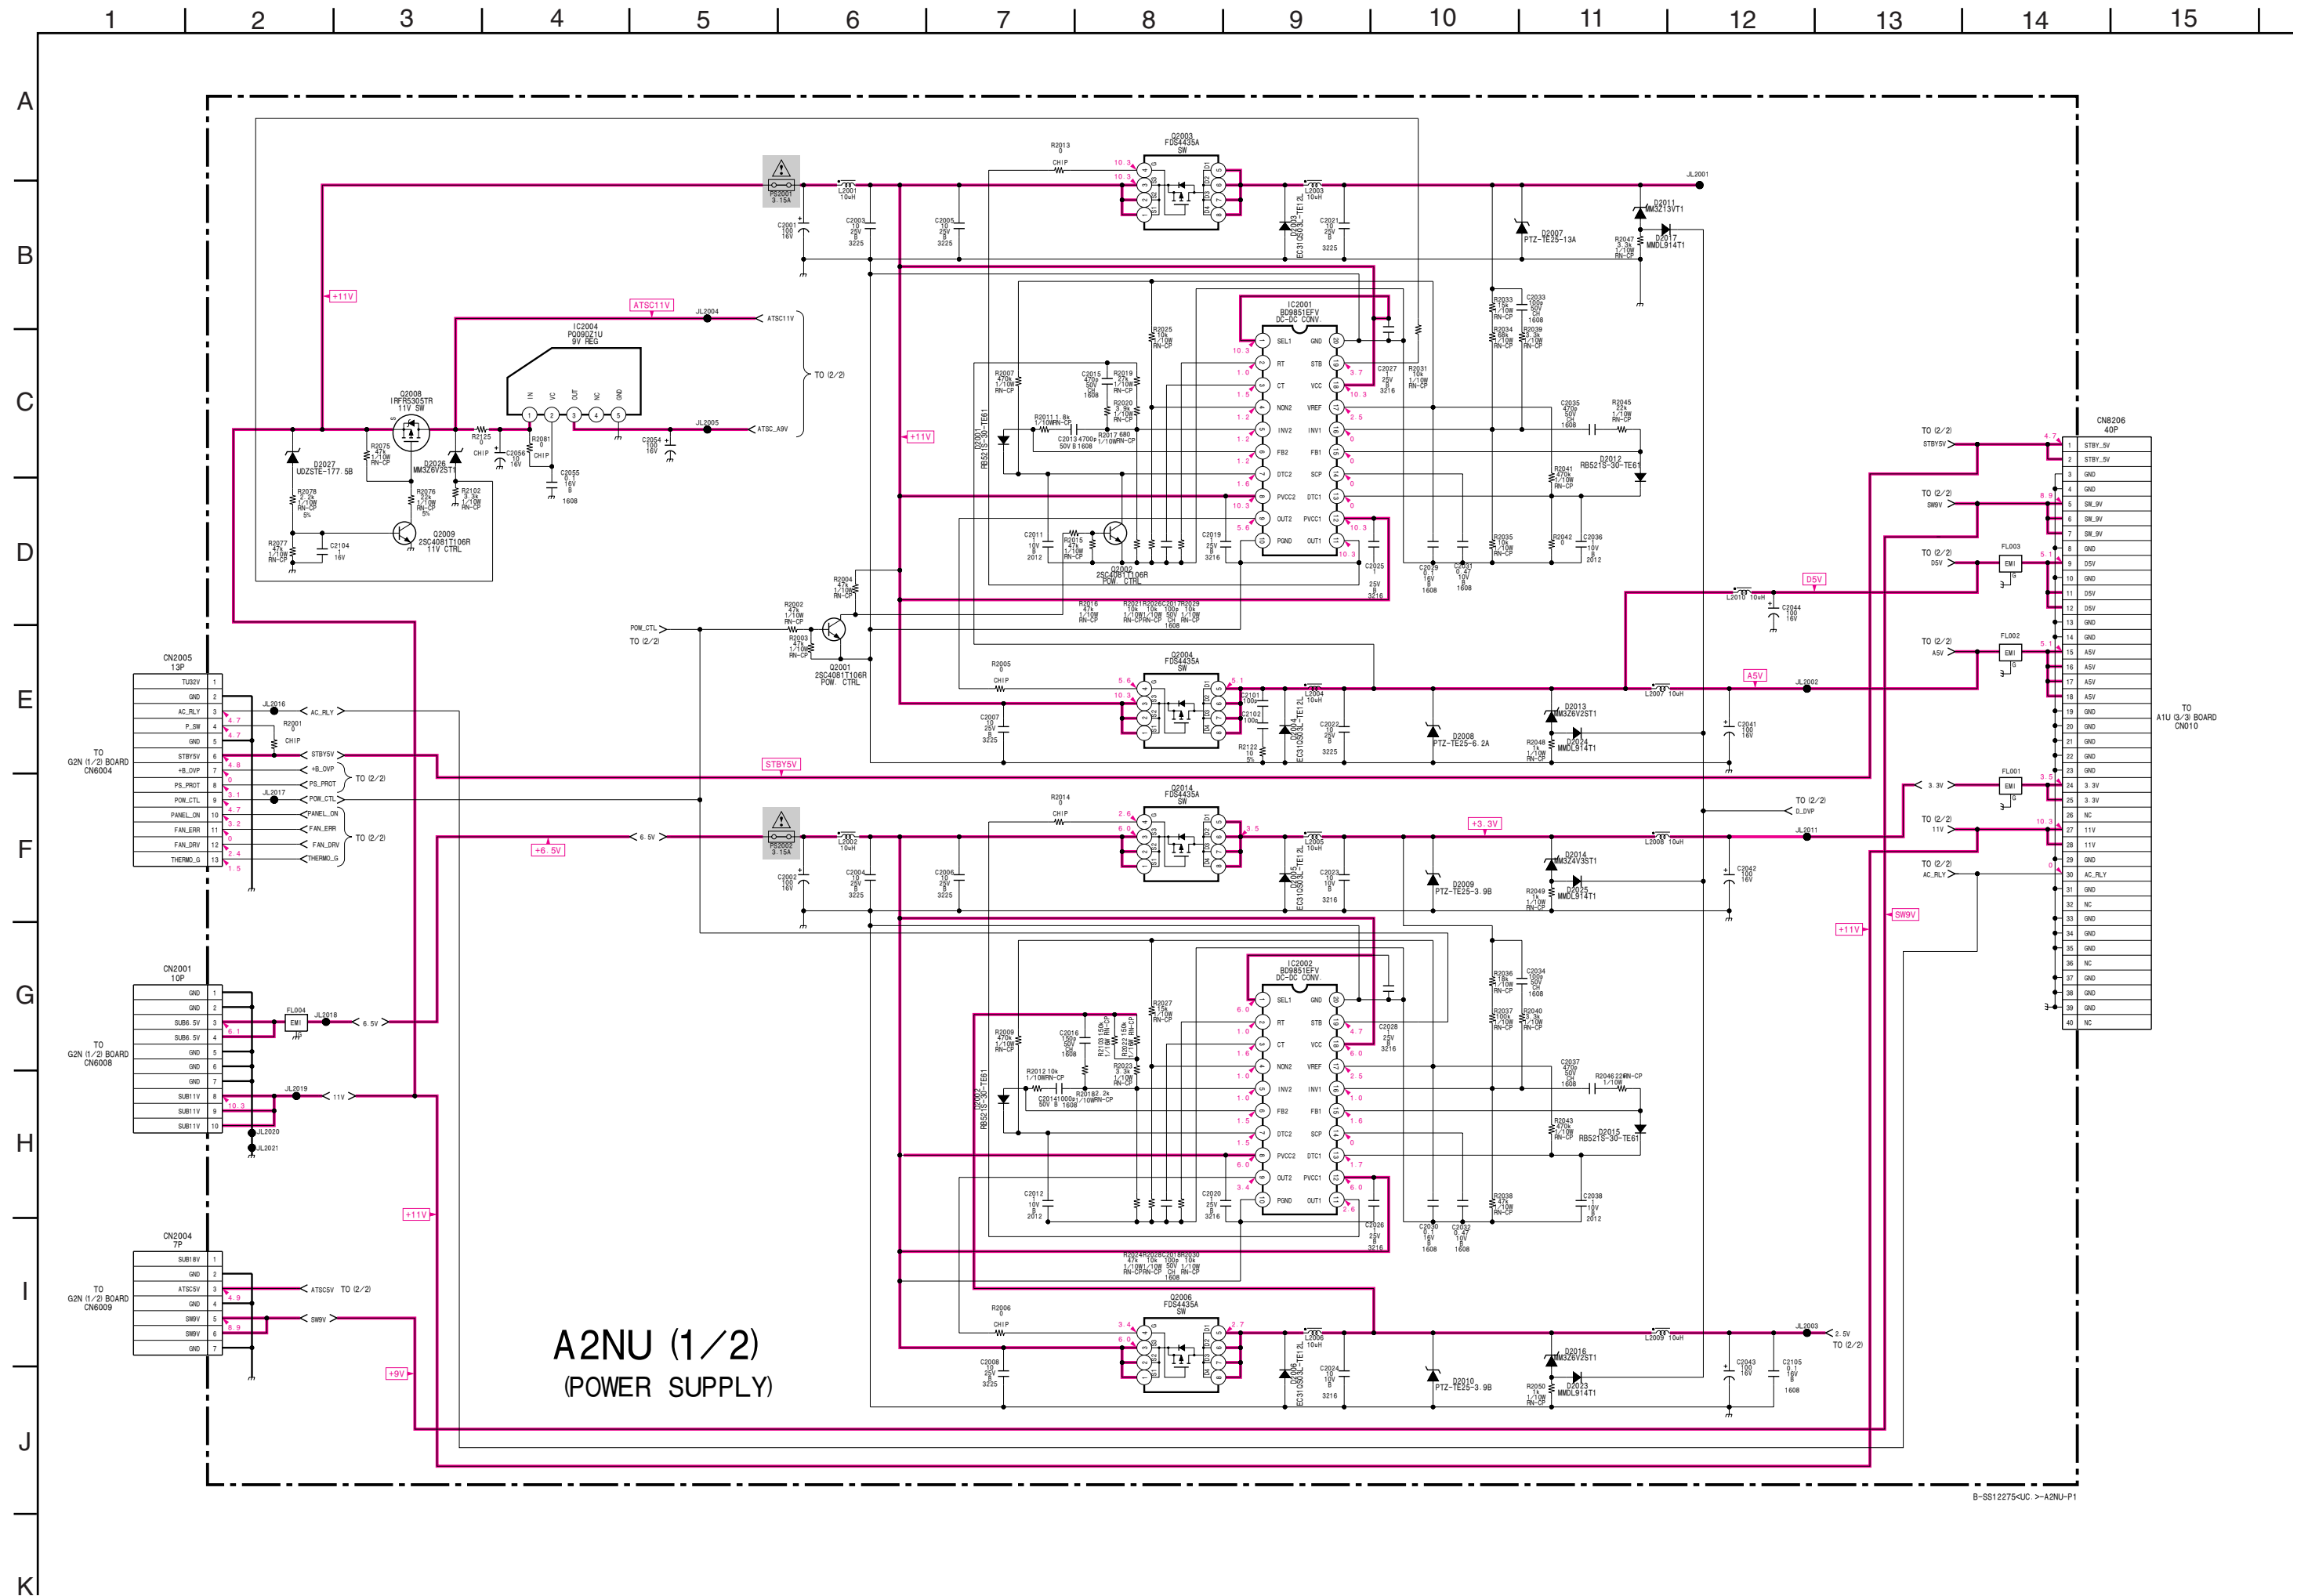


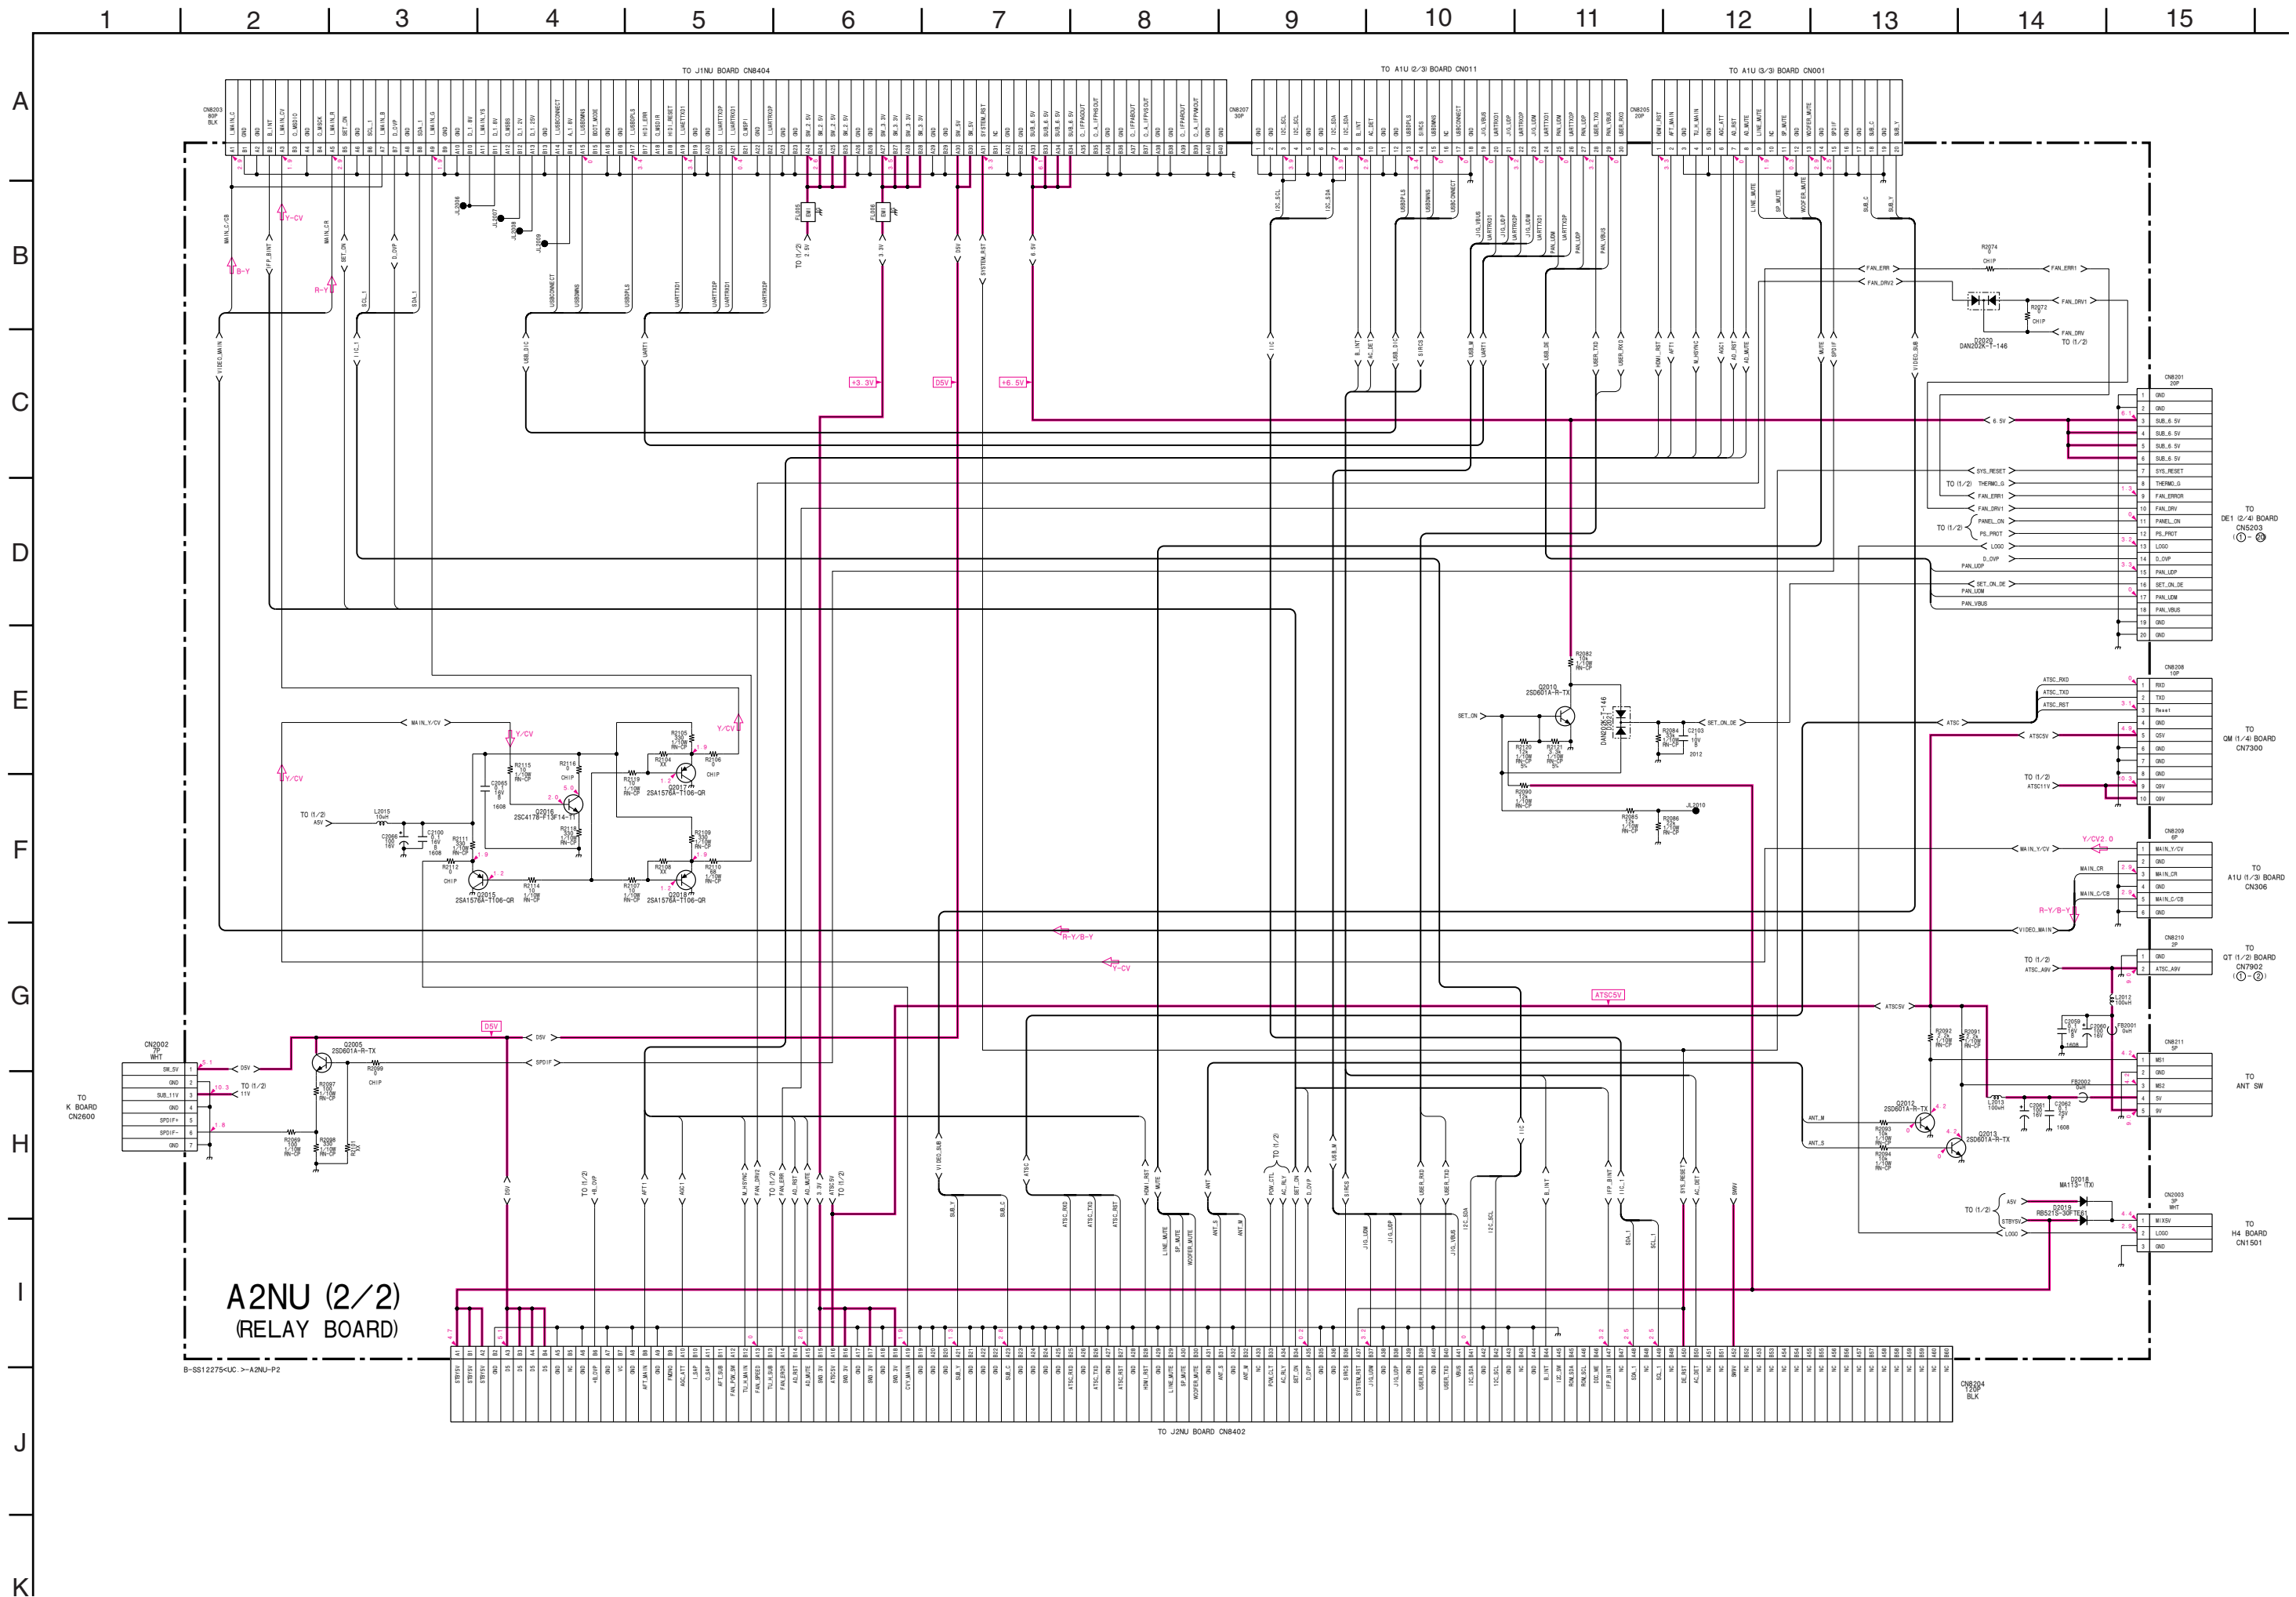

— A2NU BOARD —

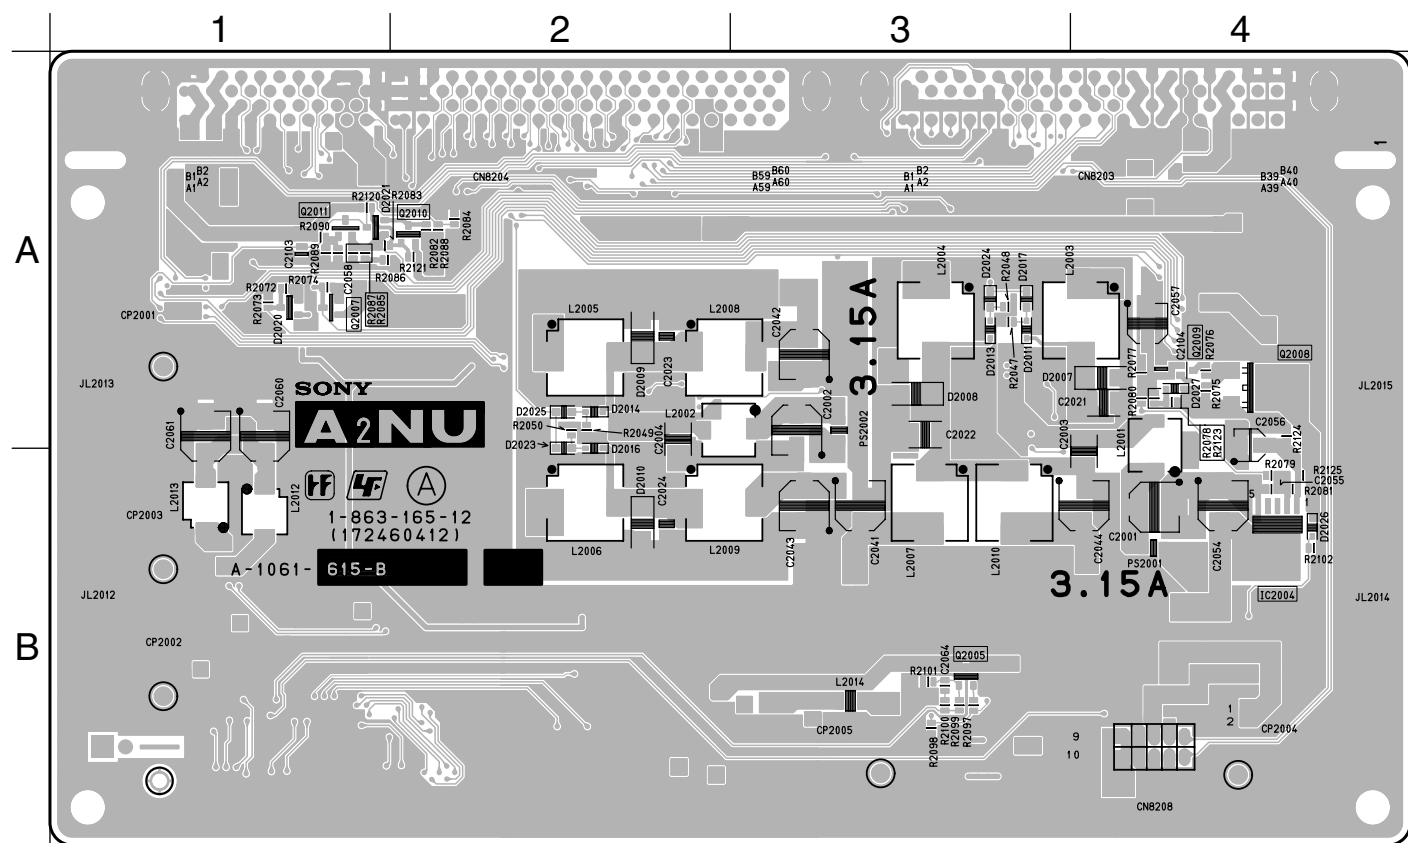

<COMPONENT SIDE>

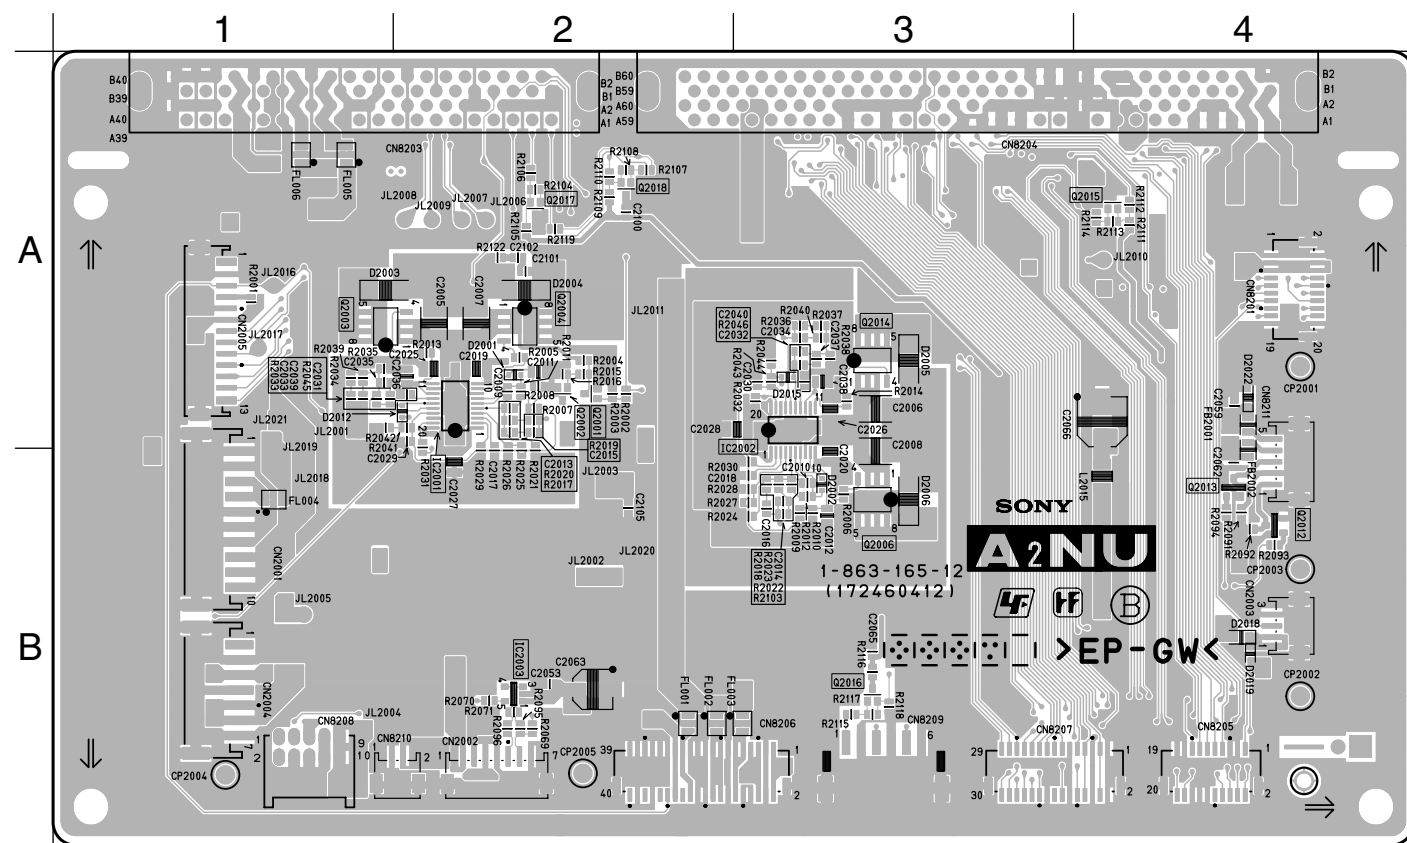

<CONDUCTOR SIDE>

• A2NU BOARD SEMICONDUCTOR LOCATION


IC							
(Component Side)	(Conductor Side)						
IC2001	A-2	Q2010	A-2	②	D2008	A-3	③
IC2002	A-3	Q2011	A-1	②	D2009	A-2	③
IC2003	B-2	Q2012		②	D2010	B-2	③
IC2004	B-4	Q2013	B-4	②	D2011	A-3	③
		Q2014	A-3	-	D2012		A-2
		Q2015	A-4	②	D2013	A-3	③
		Q2016	B-3	②	D2014	A-2	③
		Q2017	A-2	②	D2015		A-3
		Q2018	A-2	②	D2016	B-2	③
					D2017	A-3	③
					D2018	B-4	③
					D2019	B-4	③
					D2020	A-1	③
					D2021	A-1	③
					D2022		A-4
					D2023	B-2	③
					D2024	A-3	③
					D2025	A-2	③
					D2026	B-4	③
					D2027	A-4	③


TRANSISTOR							
(Component Side)	(Conductor Side)						
Q2001	A-2	②					
Q2002	A-2	②					
Q2003	A-1	-					
Q2004	A-2	-					
Q2005	B-3	②					
Q2006	-	-					
Q2007	A-1	②					
Q2008	A-4	-					
Q2009	A-4	②					

DIODE							
(Component Side)	(Conductor Side)						
D2001	A-2	③					
D2002	B-3	③					
D2003	A-1	③					
D2004	A-2	③					
D2005	A-3	③					
D2006	B-3	③					
D2007	A-4	③					


※: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-14)

(3) Schematic Diagrams of DE1 Board


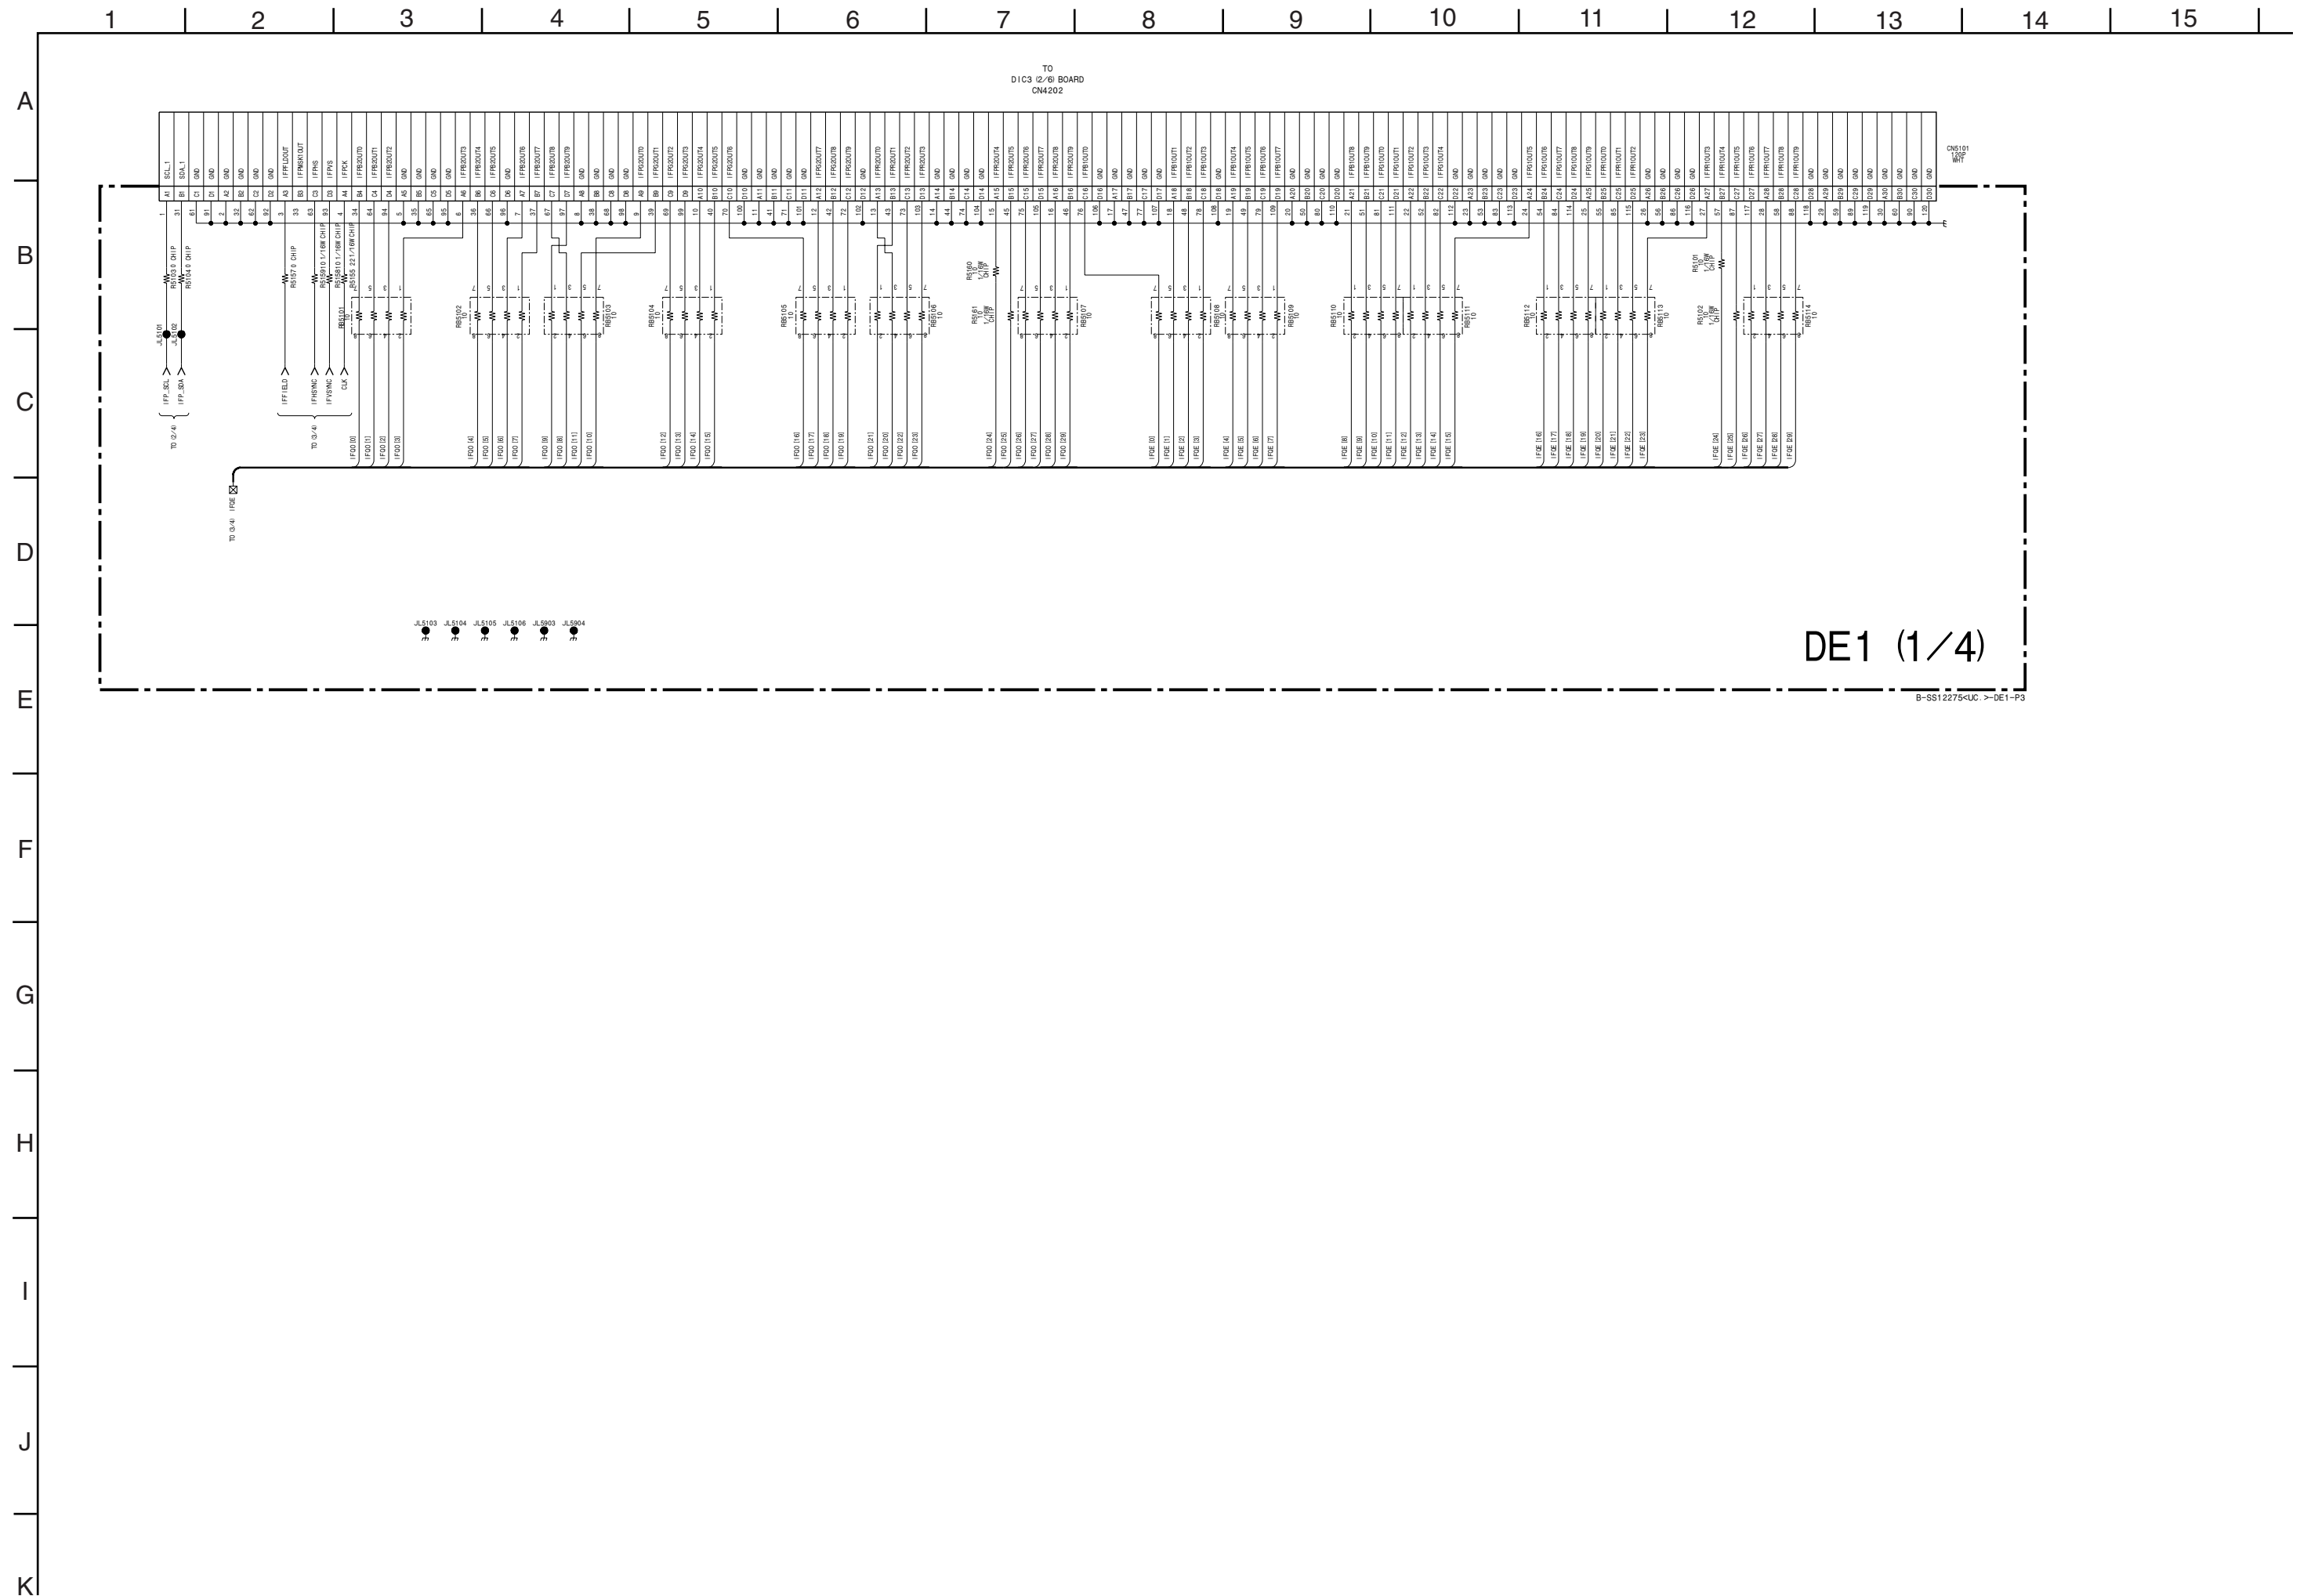


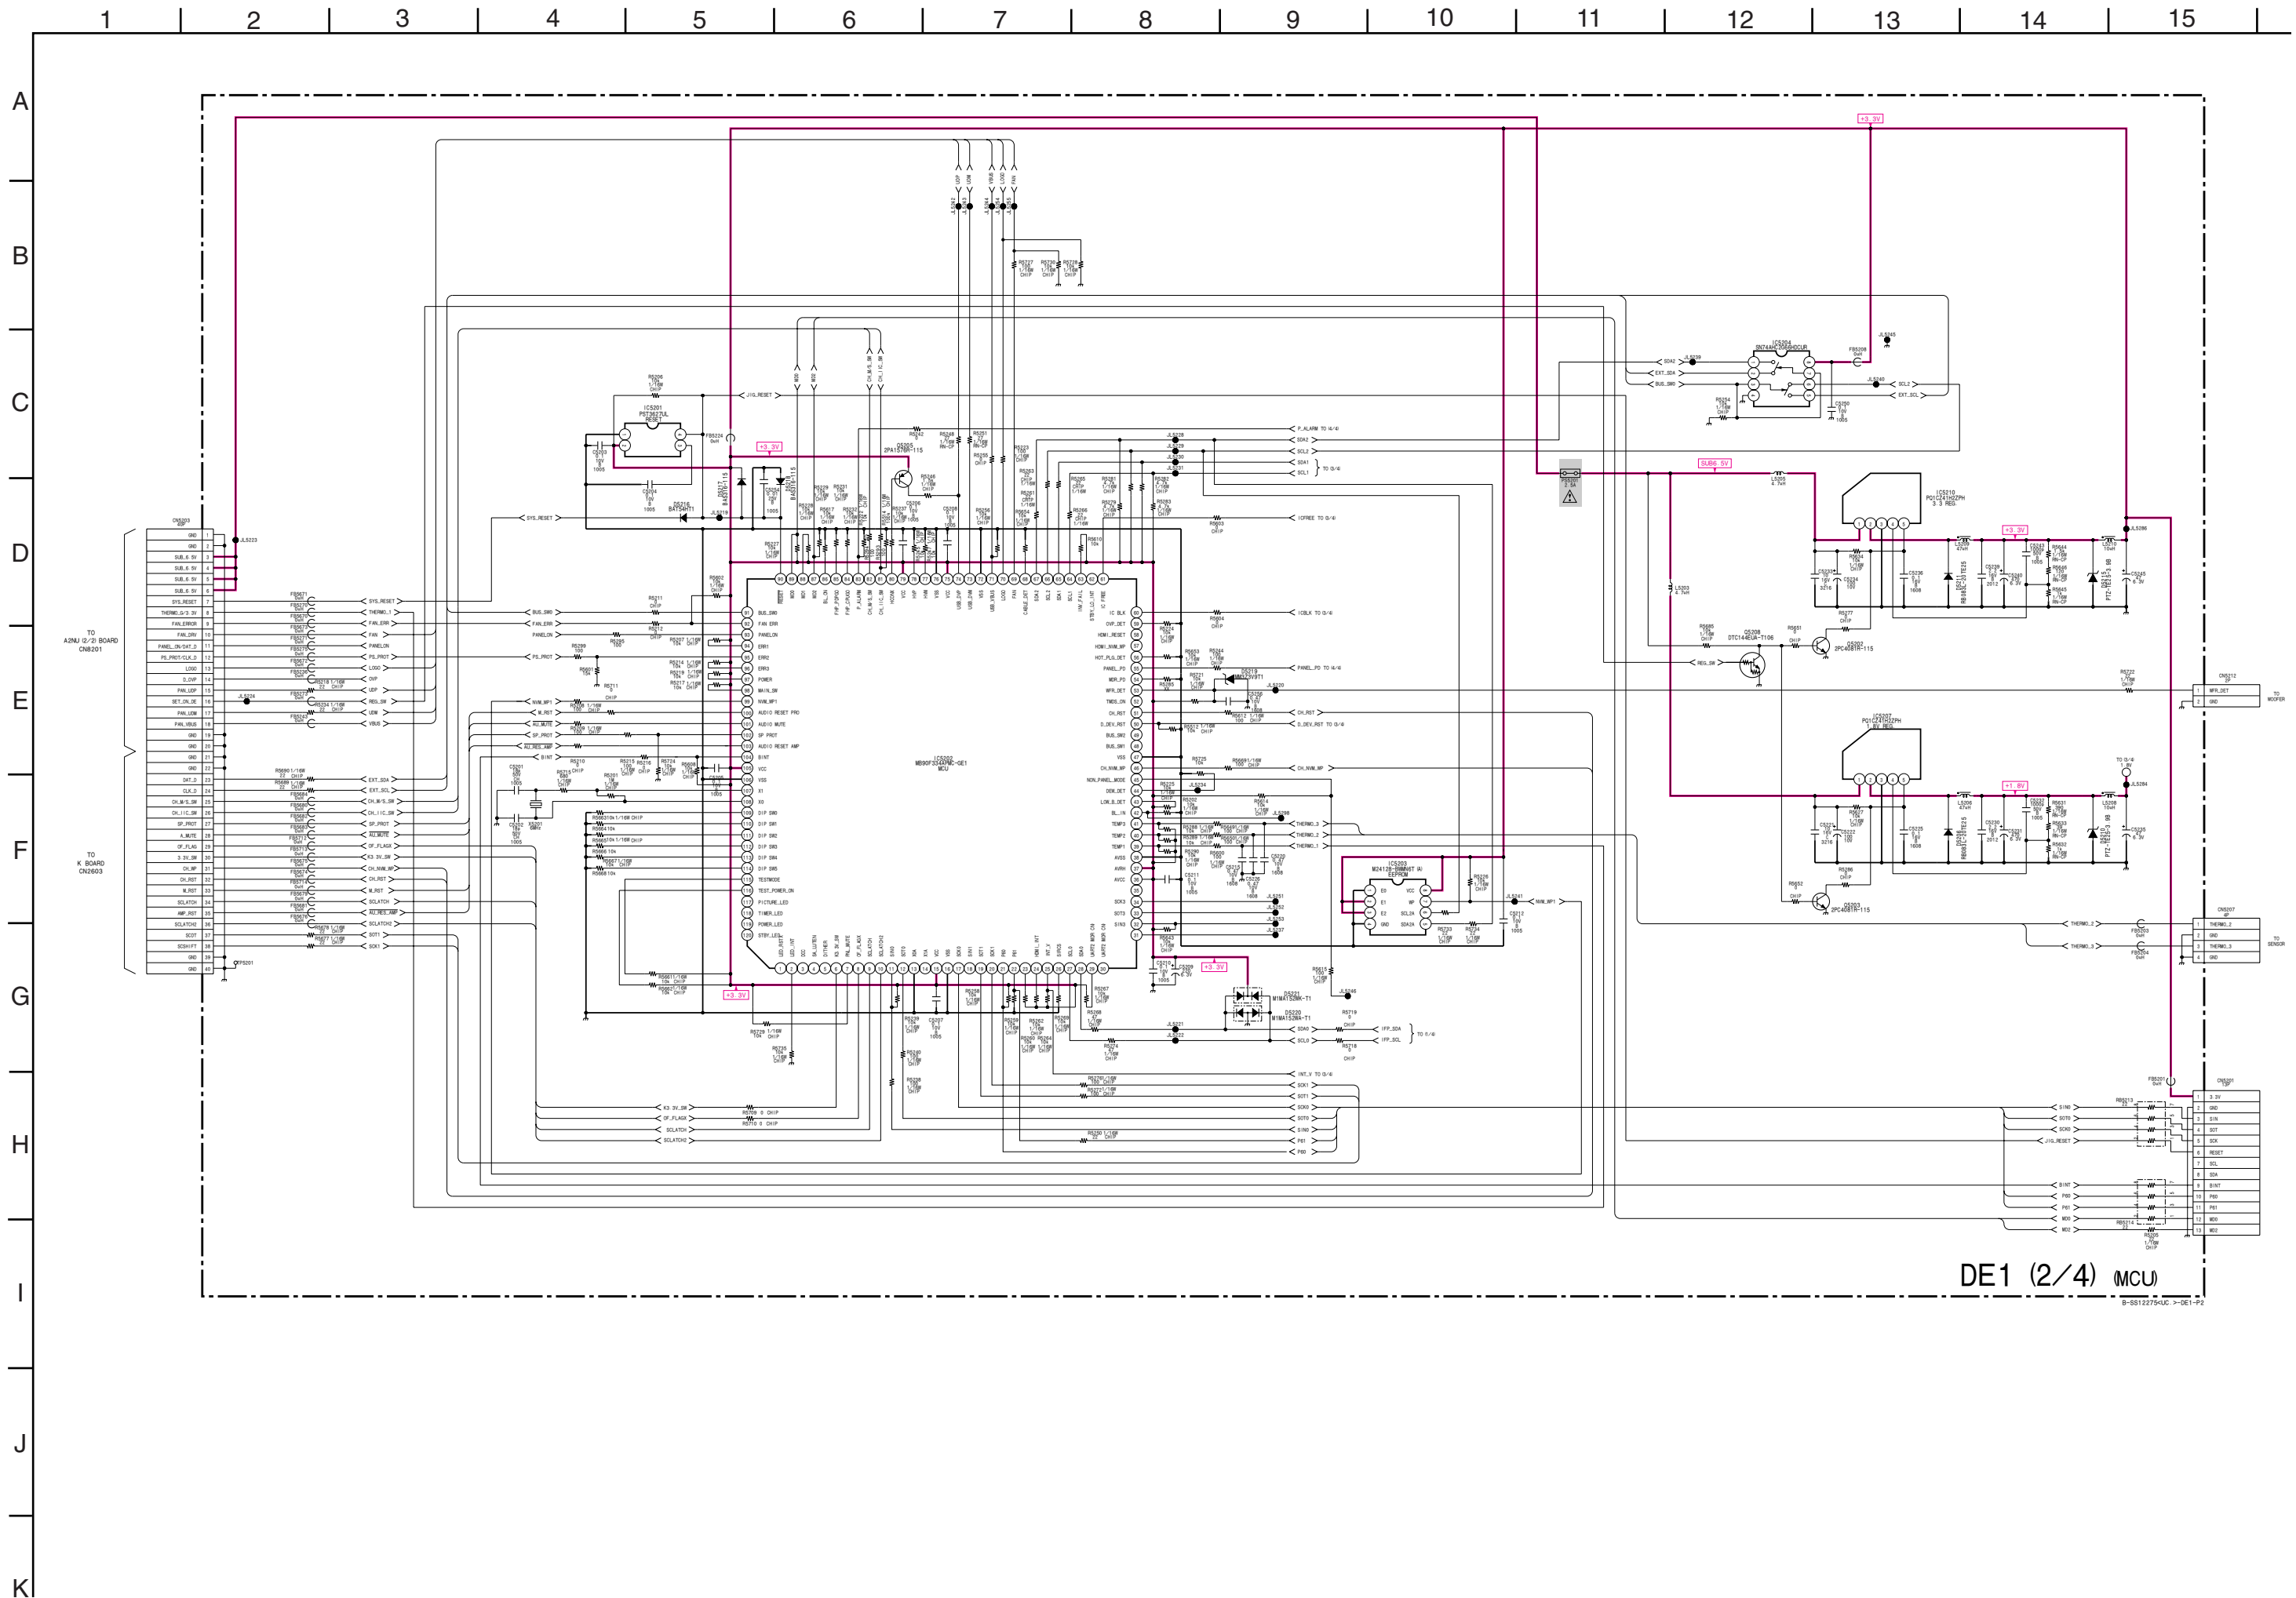



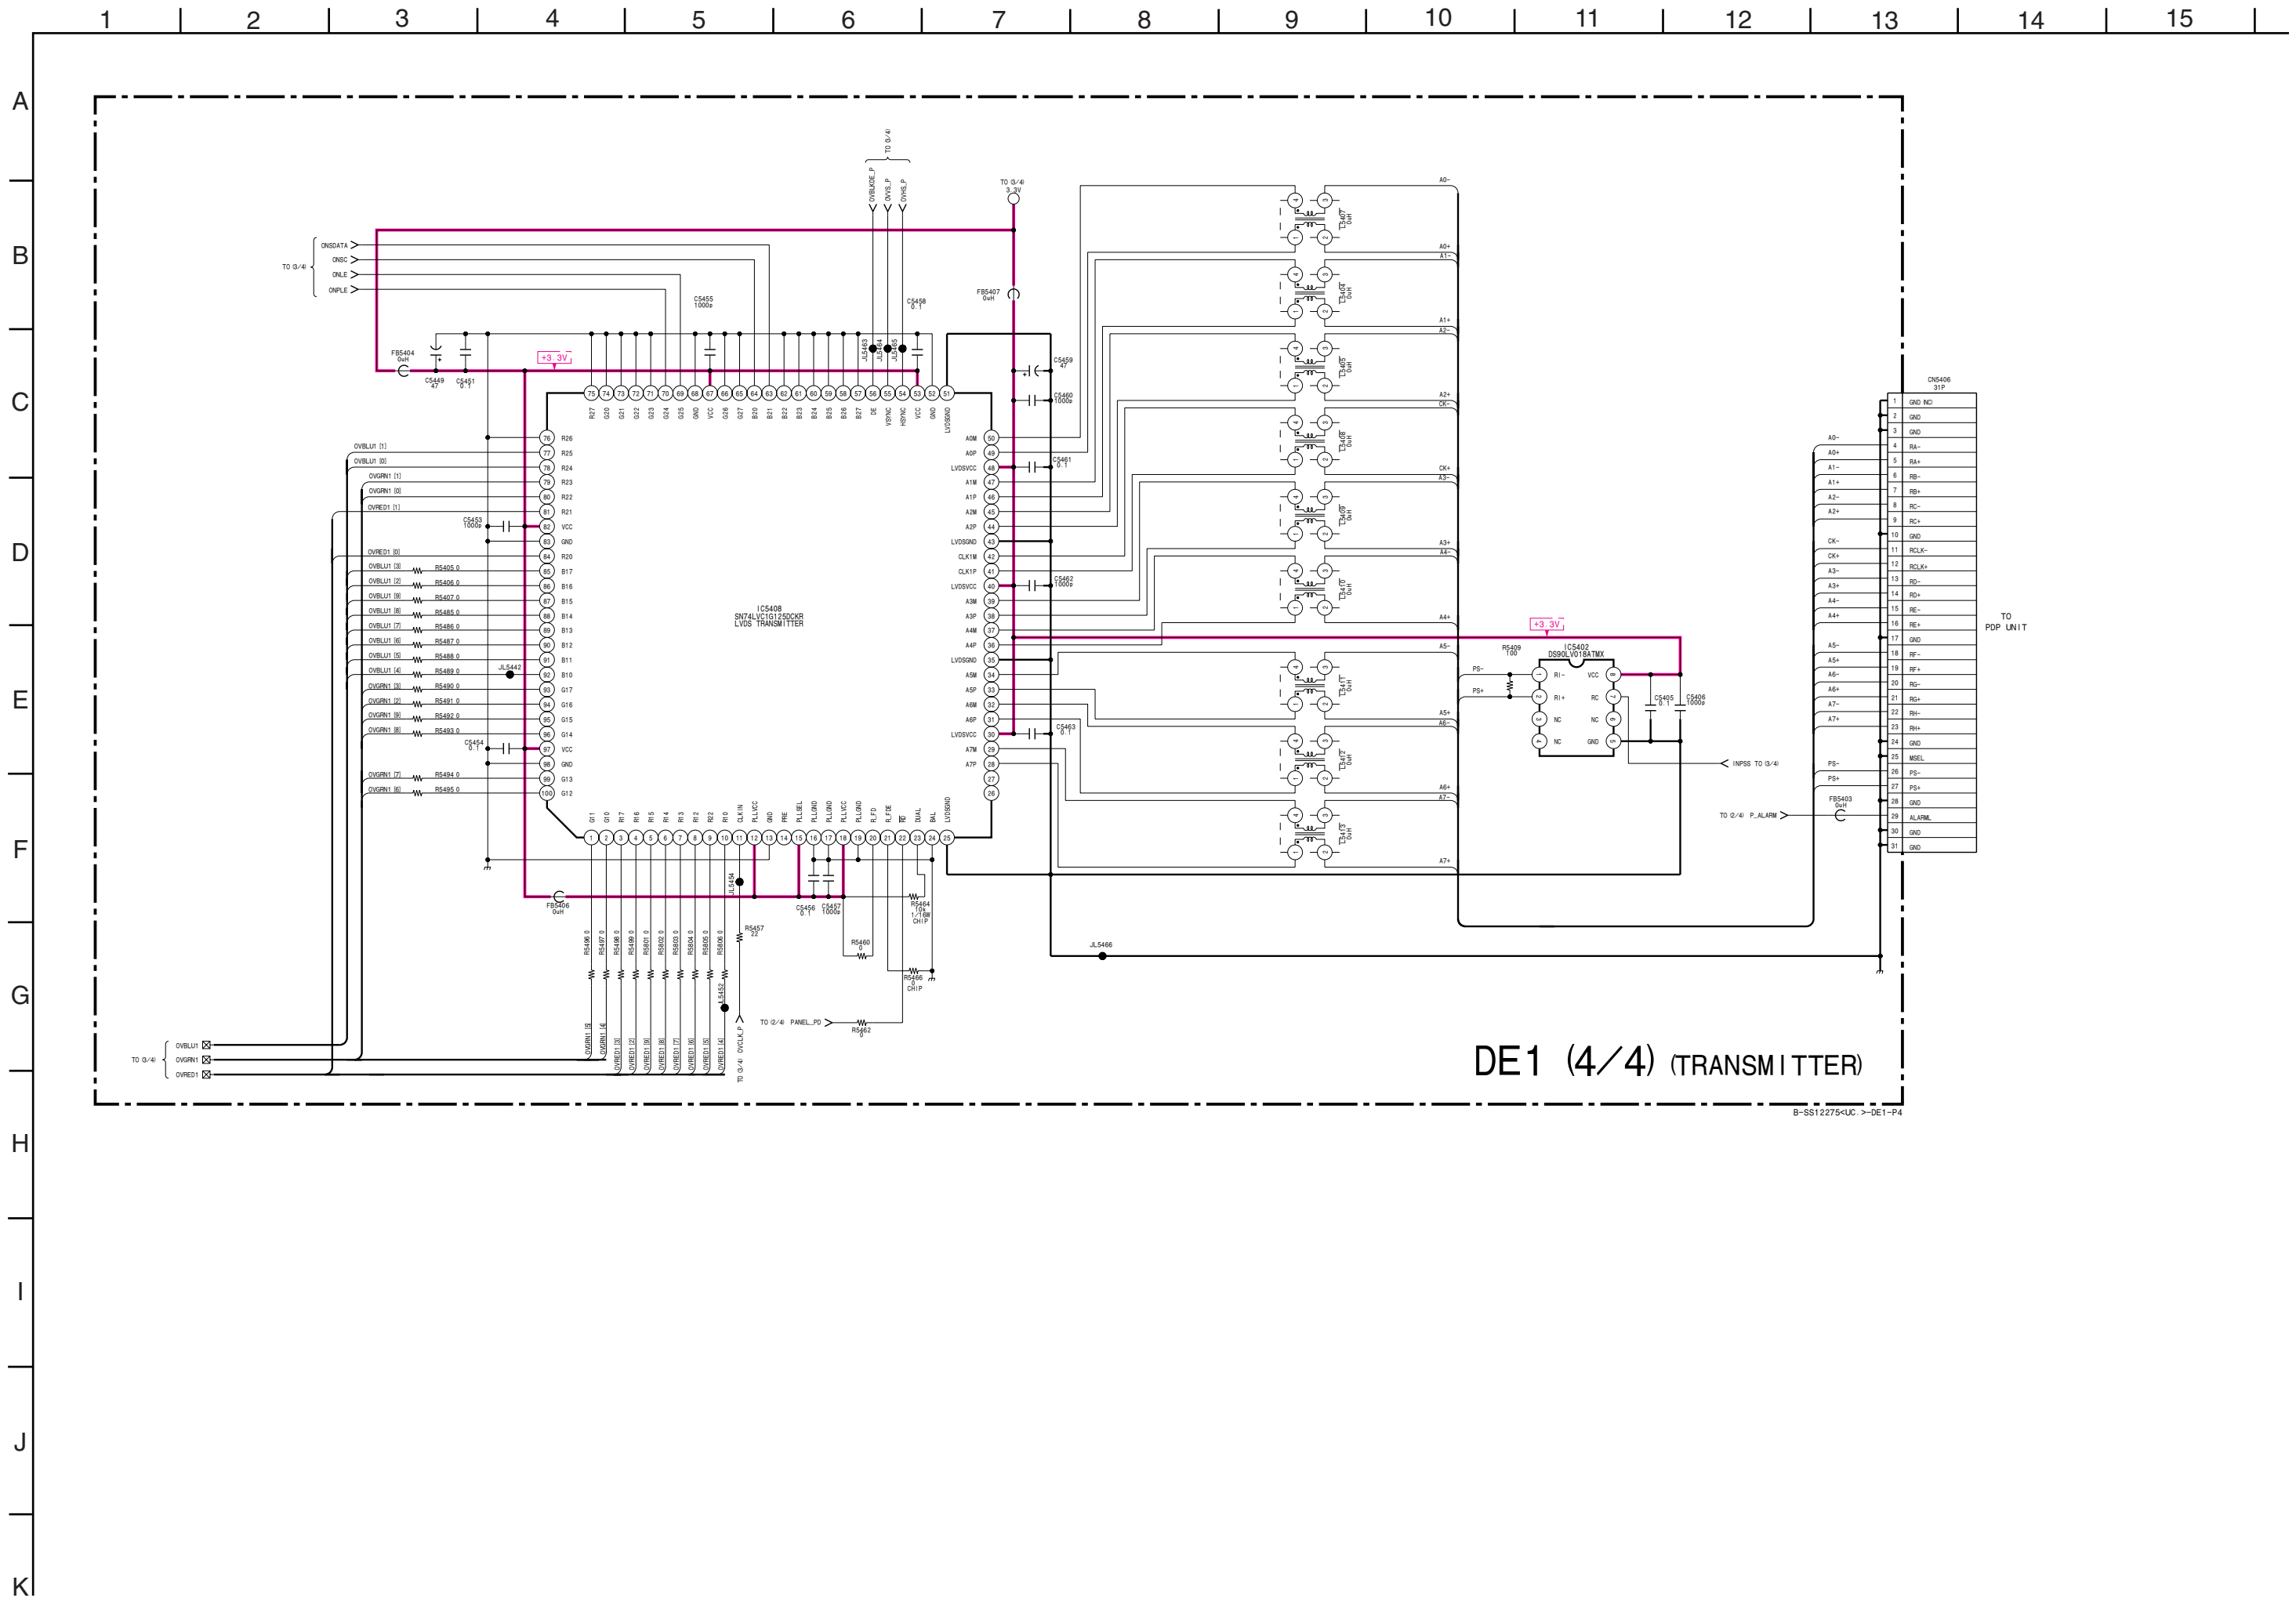

— DE1 BOARD —

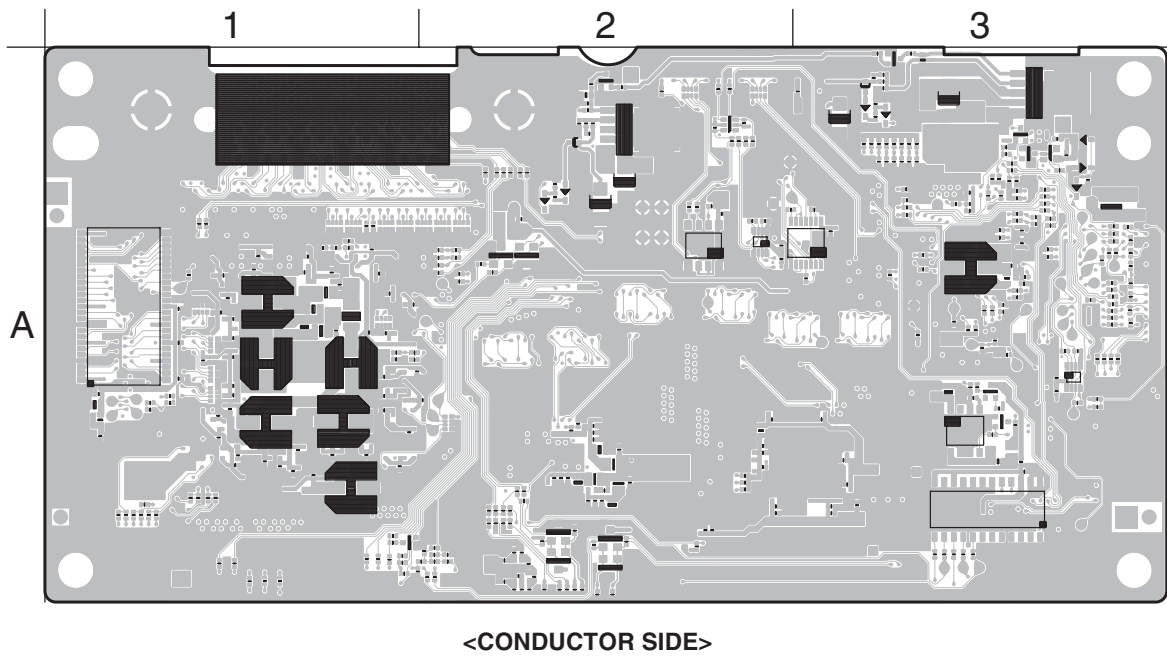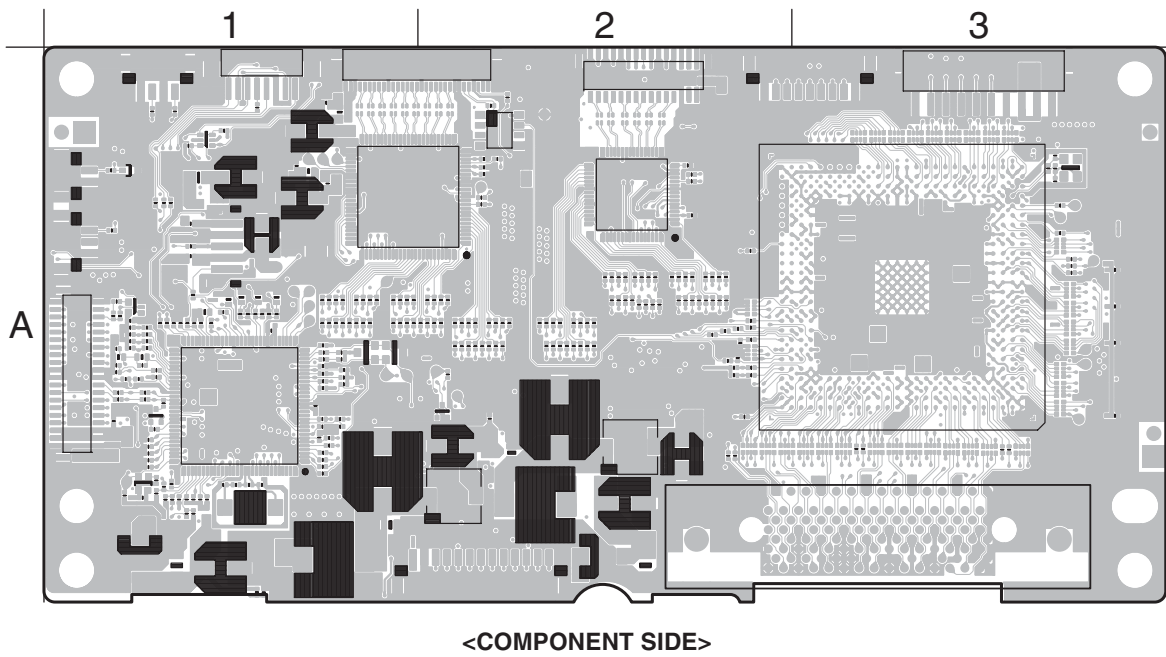


• DE1 BOARD SEMICONDUCTOR LOCATION


IC			Q2010	A-2	②	D2008	A-3	③
(Component Side) (Conductor Side)			Q2011	A-1	②	D2009	A-2	③
IC2001	A-2		Q2012	B-4		D2010	B-2	③
IC2002	A-3		Q2013	B-4	② <td>D2011</td> <td>A-3</td> <td>③</td>	D2011	A-3	③
IC2003	B-2		Q2014	A-3	-	D2012	A-2	③
IC2004	B-4		Q2015	A-4		D2013	A-3	③
			Q2016	B-3	② <th>D2014</th> <th>A-2</th> <th>③</th>	D2014	A-2	③
			Q2017	A-2	② <th>D2015</th> <th>A-3</th> <th>③</th>	D2015	A-3	③
			Q2018	A-2	② <th>D2016</th> <th>B-2</th> <th>③</th>	D2016	B-2	③
TRANSISTOR						D2017	A-3	③
(Component Side) (Conductor Side) *			DIODE			D2018	B-4	③
Q2001	A-2	②	(Component Side) (Conductor Side) *			D2019	B-4	③
Q2002	A-2	②				D2020	A-1	③
Q2003	A-1	-	D2001	A-2	③	D2021	A-1	③
Q2004	A-2	-	D2002	B-3	③	D2022	A-4	③
Q2005	B-3	②	D2003	A-1	③	D2023	B-2	③
Q2006	B-3	-	D2004	A-2	③	D2024	A-3	③
Q2007	A-1	②	D2005	A-3	③	D2025	A-2	③
Q2008	A-4	-	D2006	B-3	③	D2026	B-4	③
Q2009	A-4	②	D2007	A-4	③	D2027	A-4	③

*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-14)

(4) Schematic Diagrams of DIC3 Board

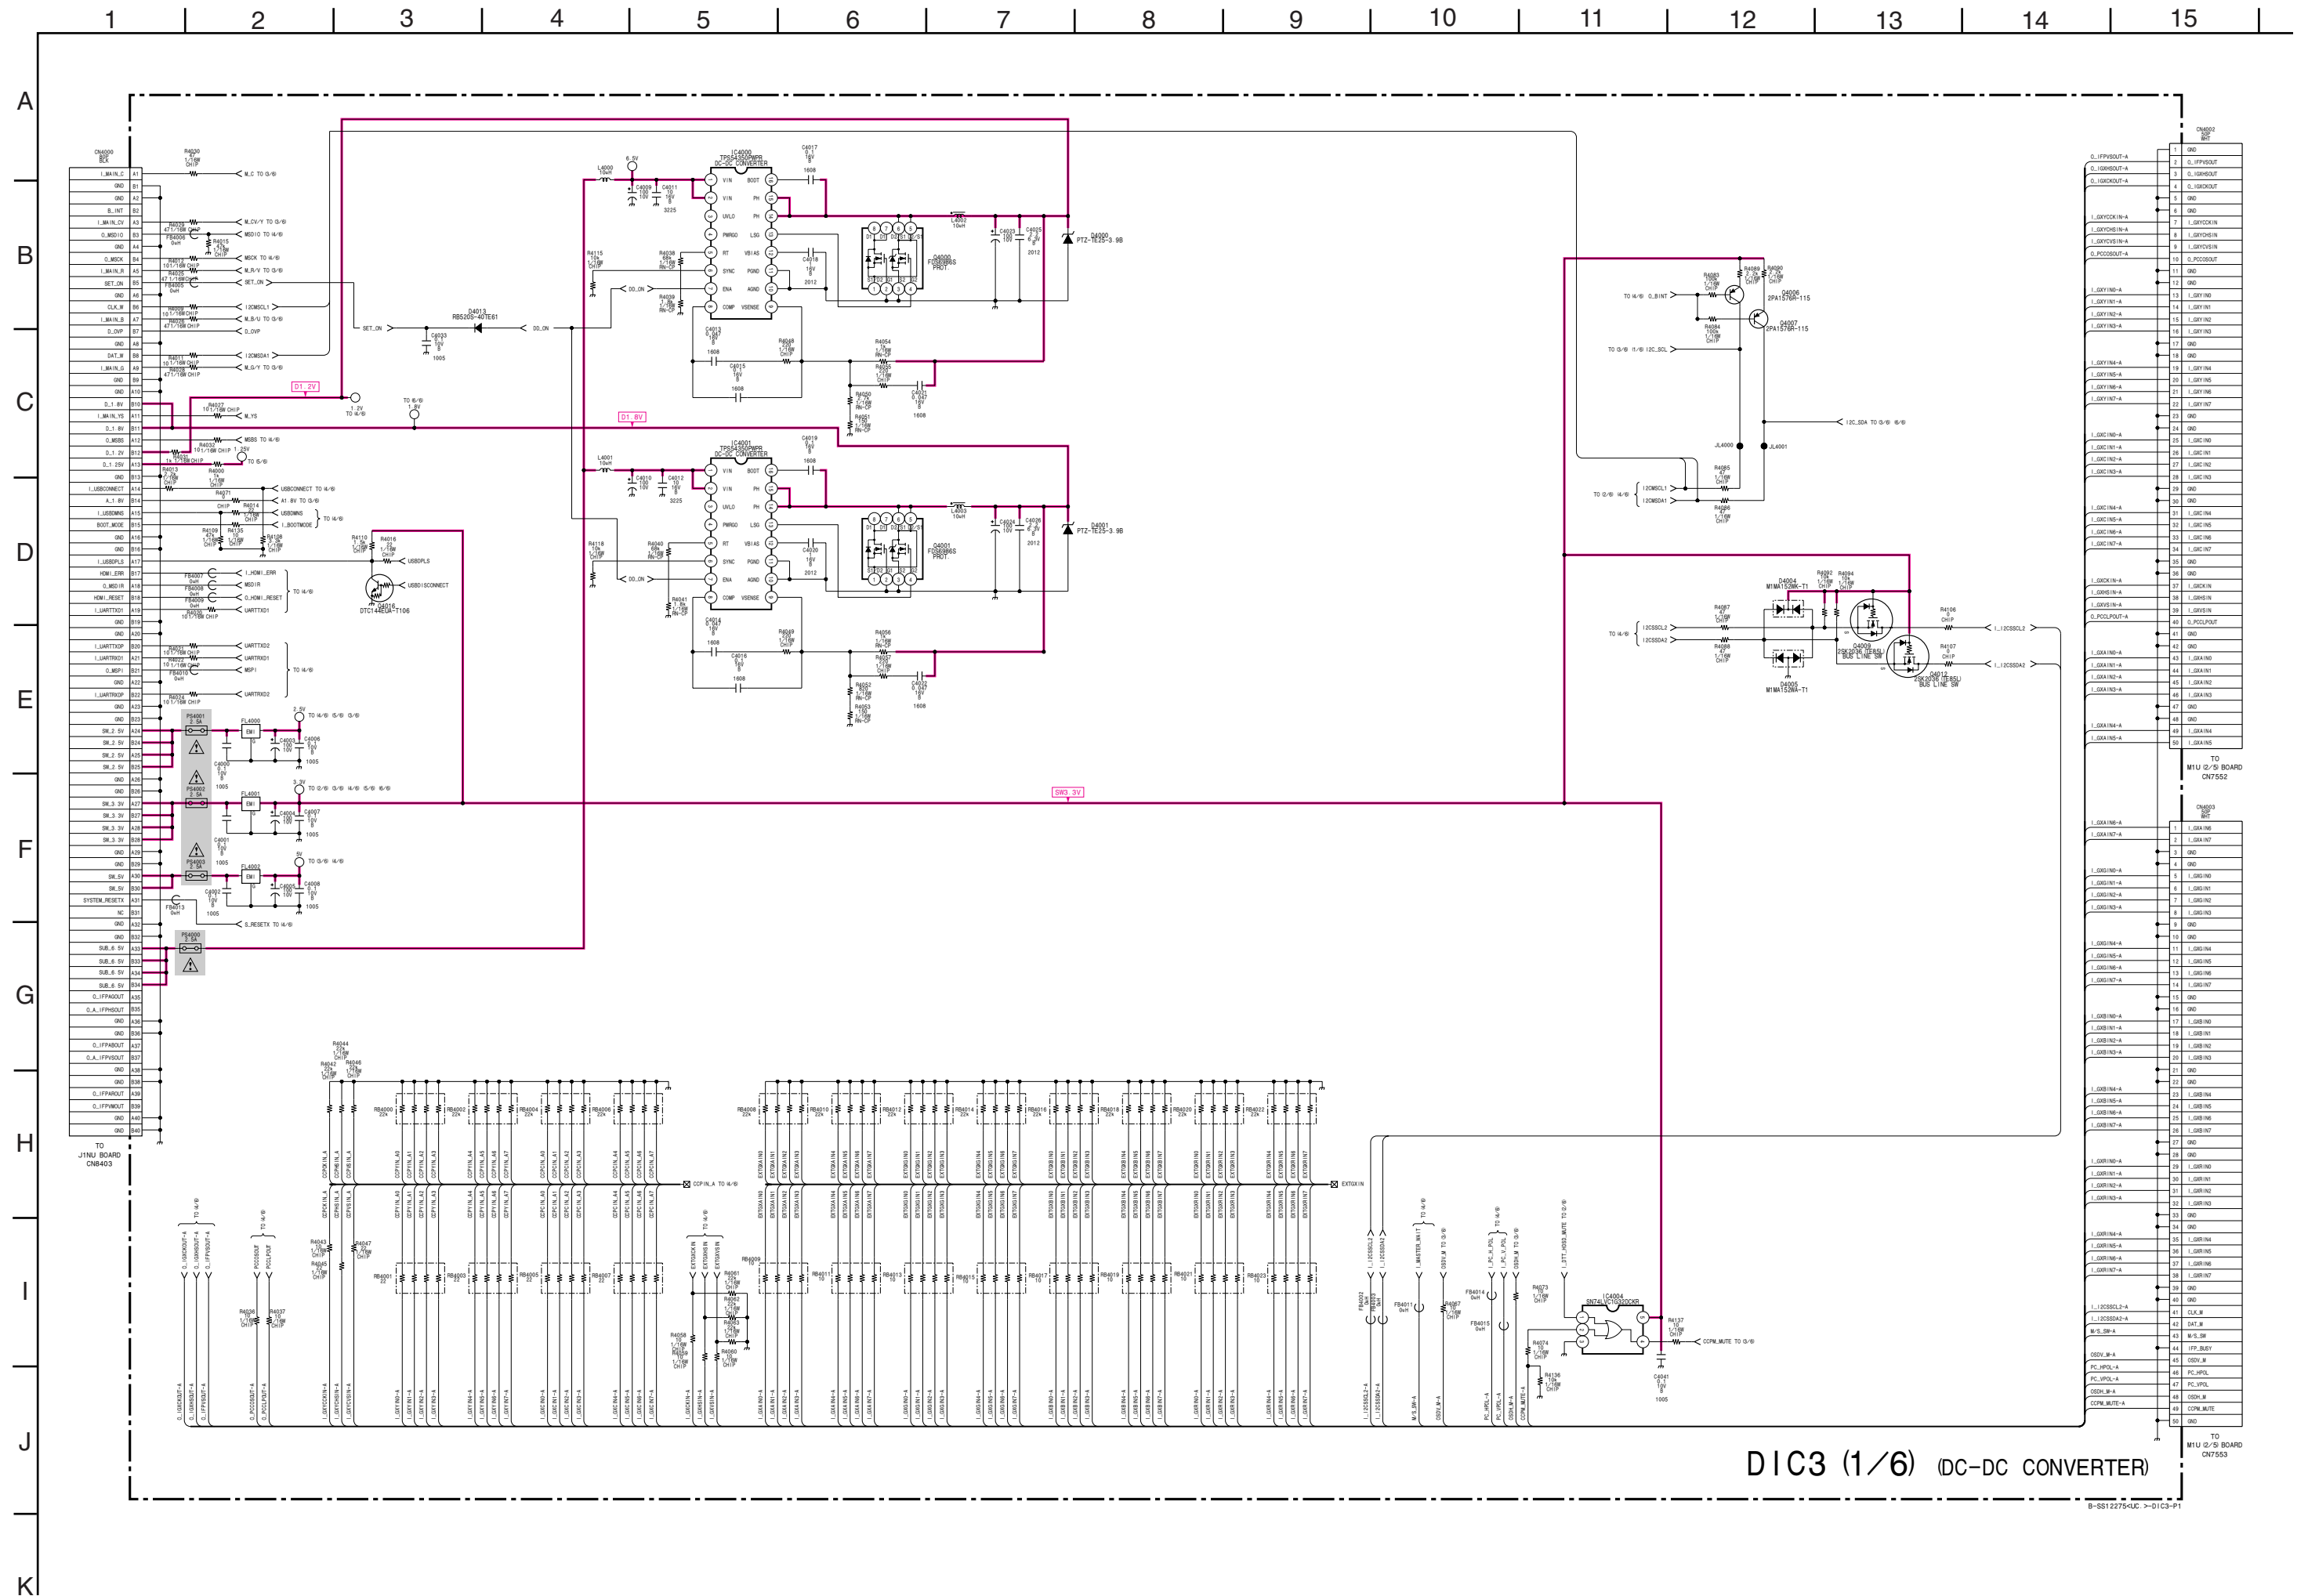


DIC3 (1/6) (DC-DC CONVERTER)

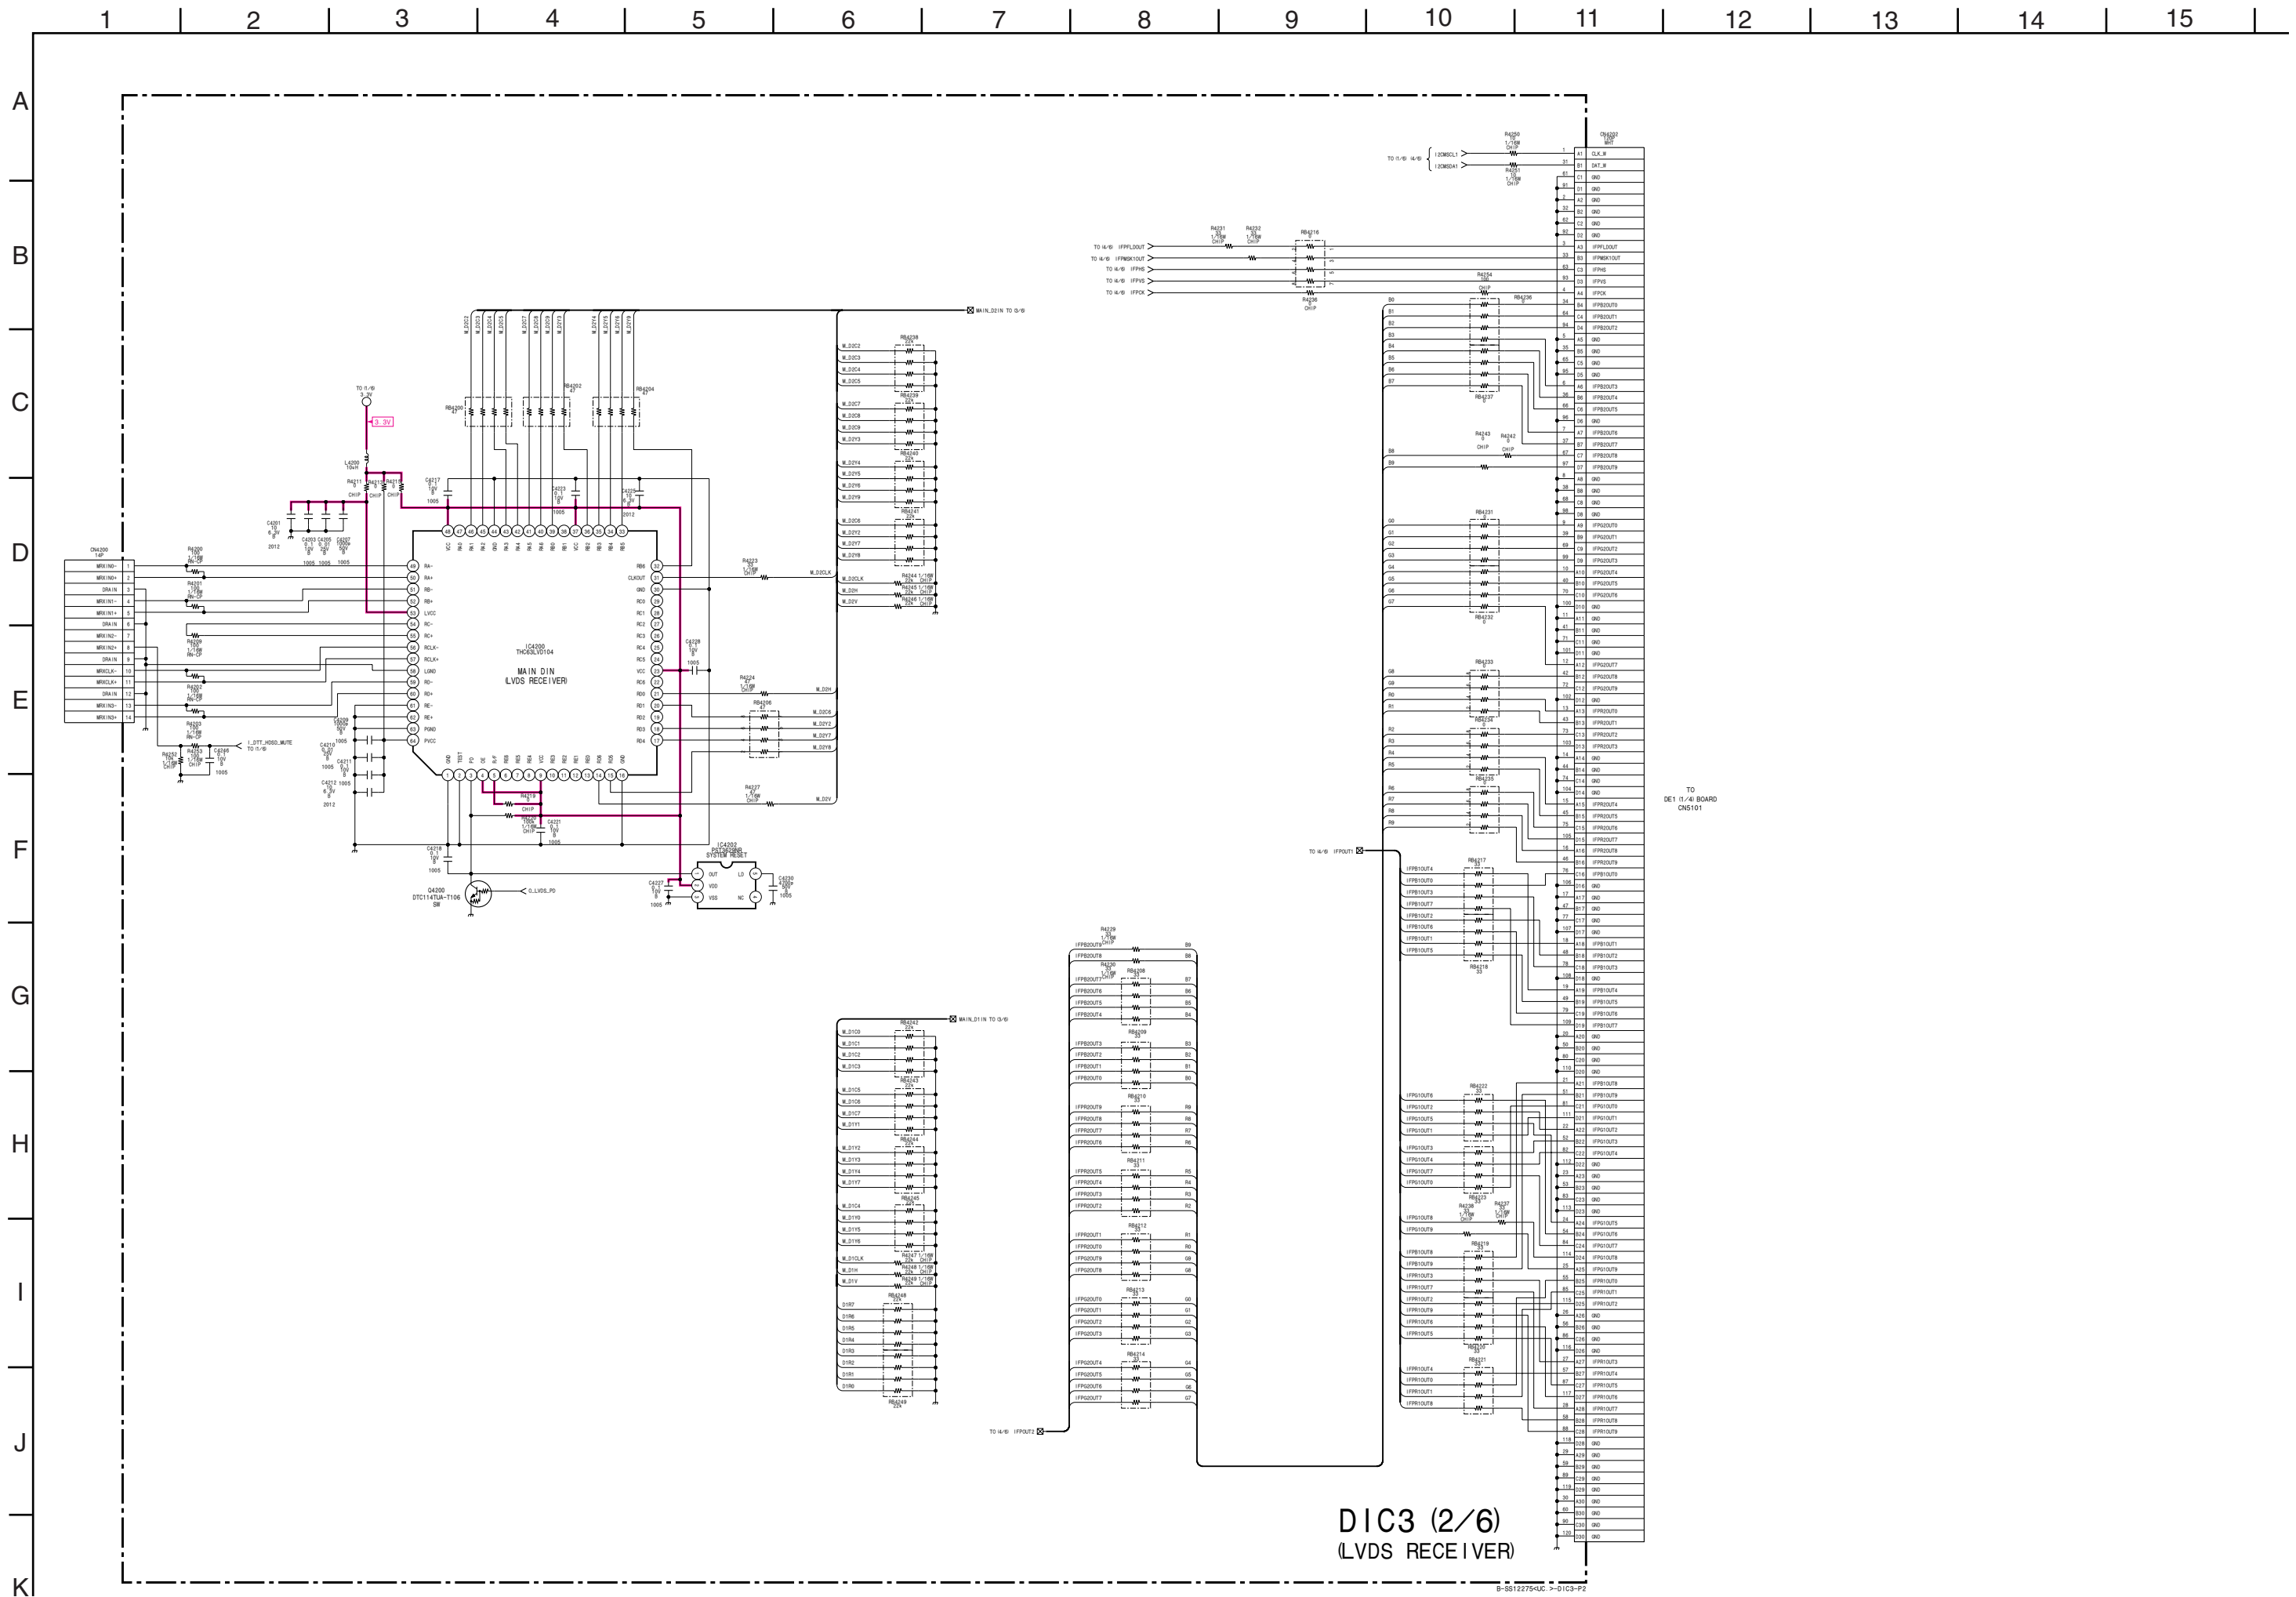


1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

A
B
C
D
E
F
G
H
I
J
K

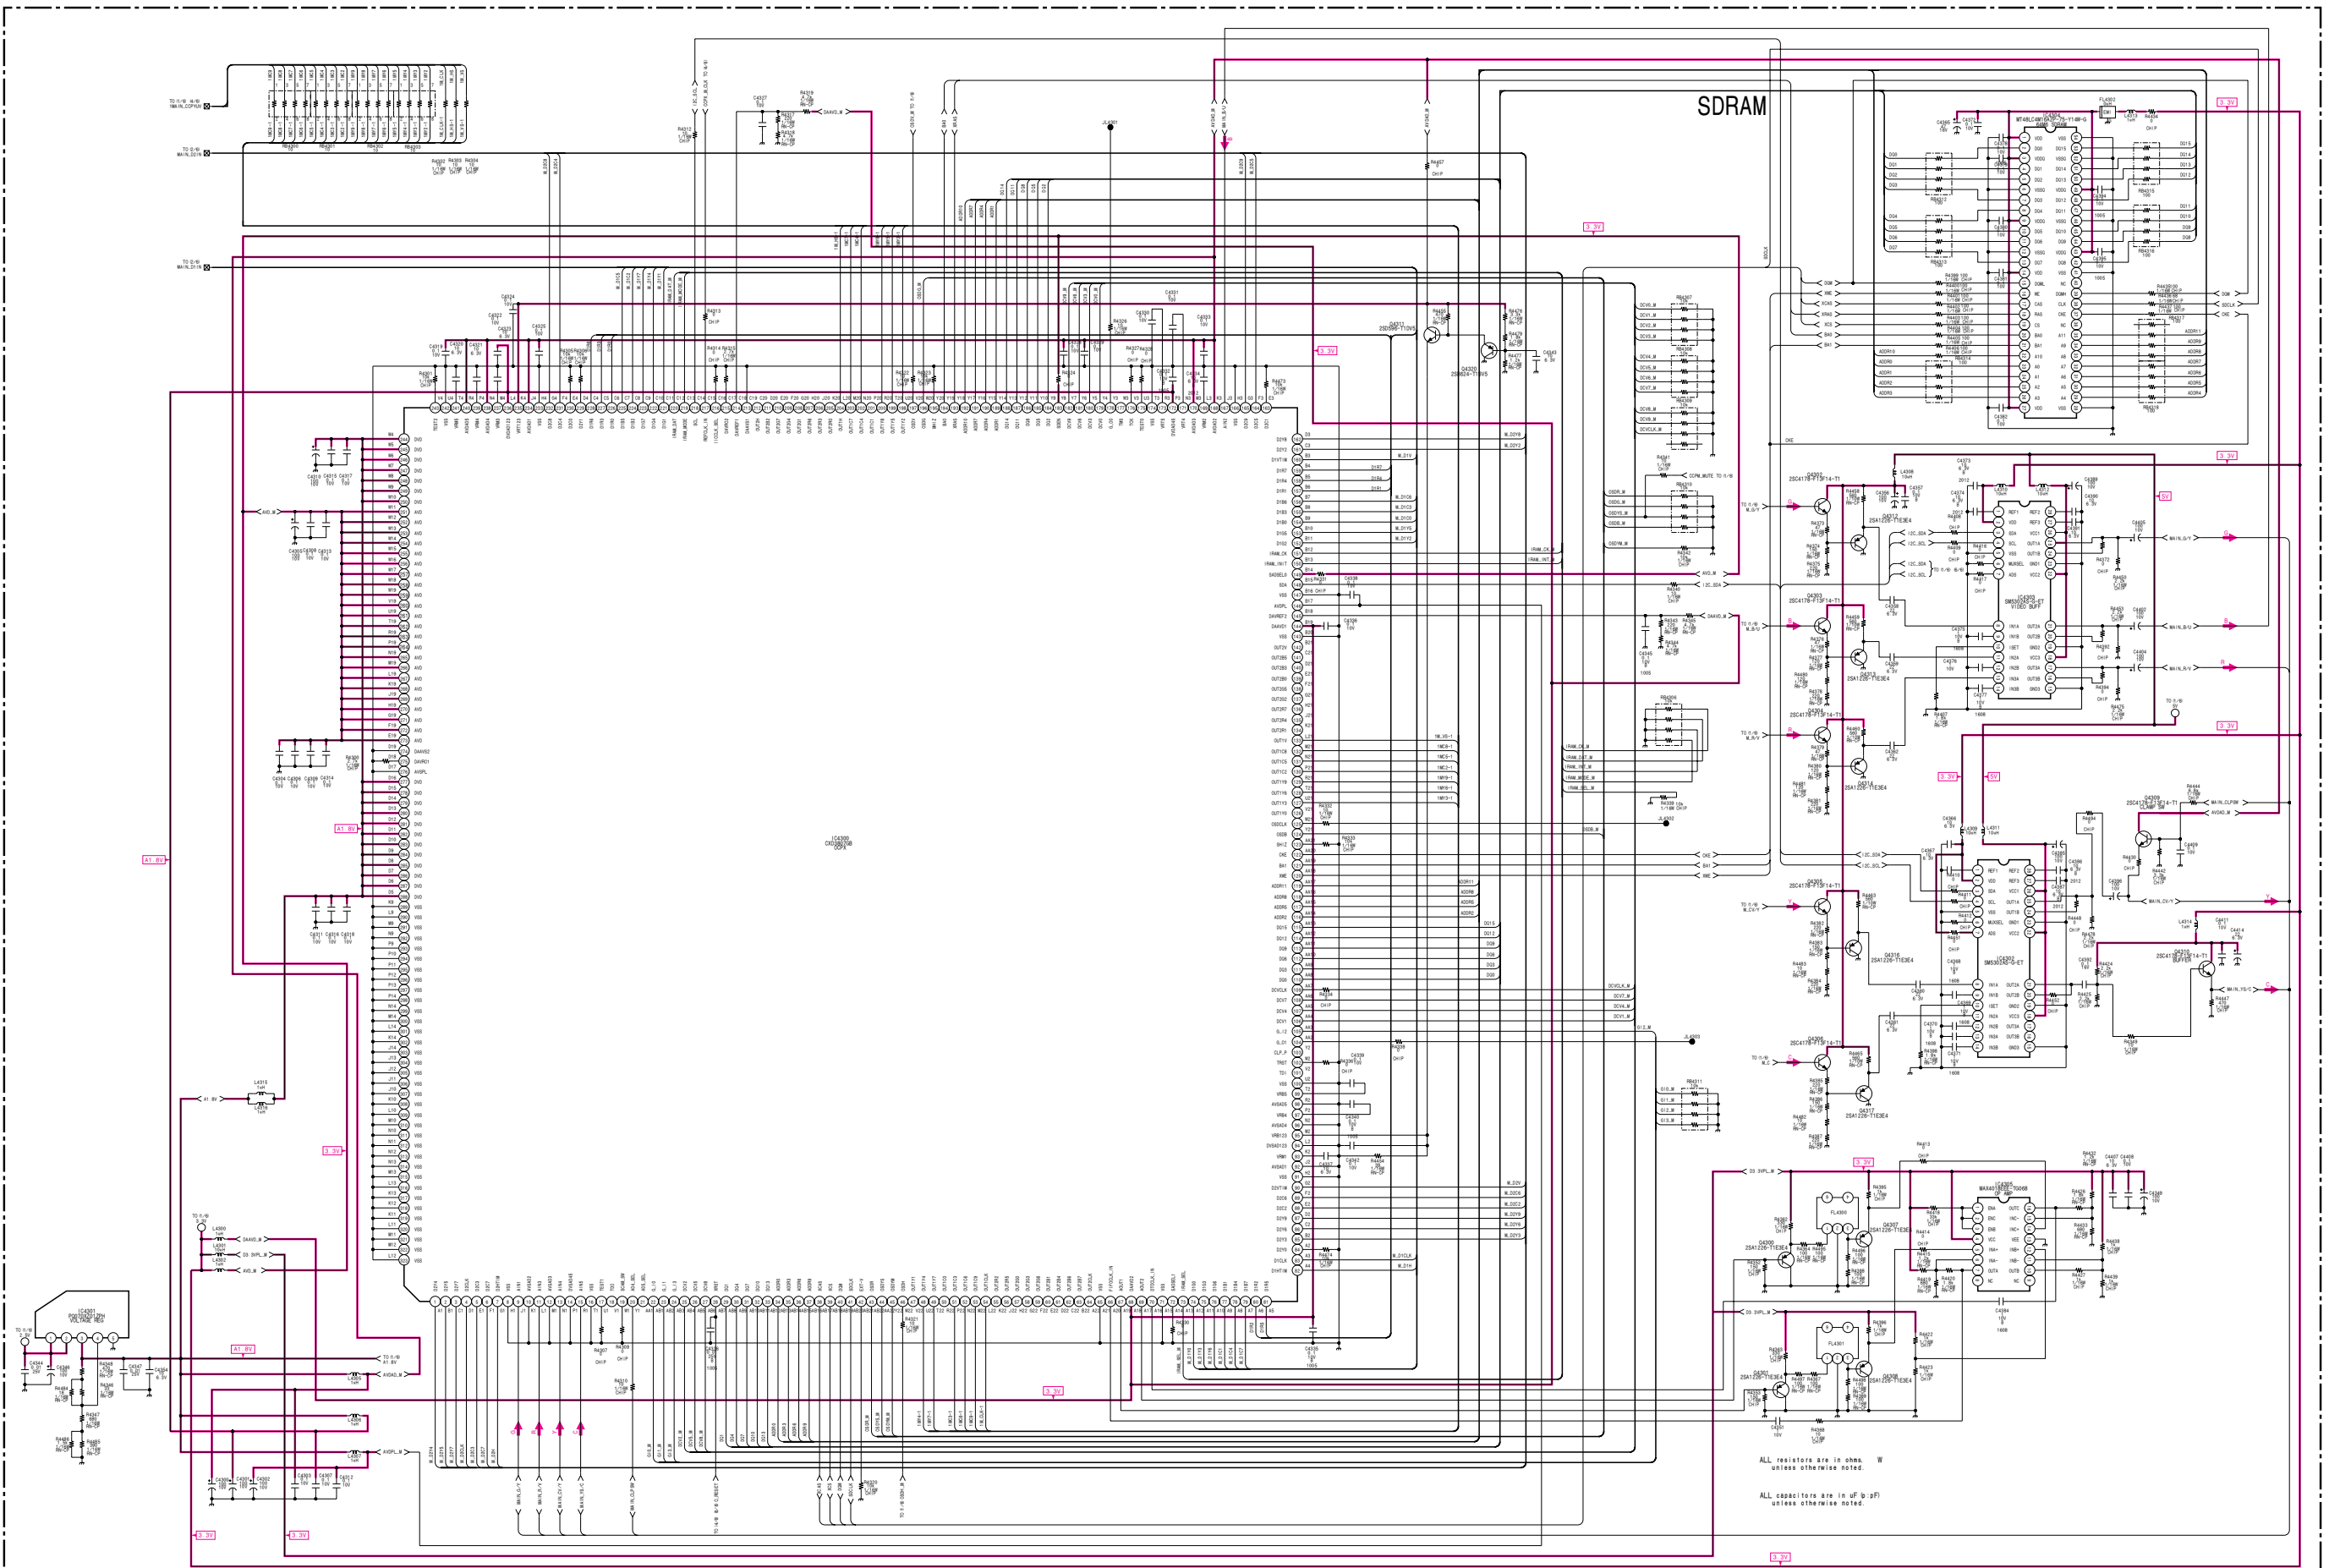

ALL resistors are in ohms, W unless otherwise noted.
ALL capacitors are in pF, nF, uF unless otherwise noted.


DIC3 (3/6) (Y/C BUFFER OCPX)

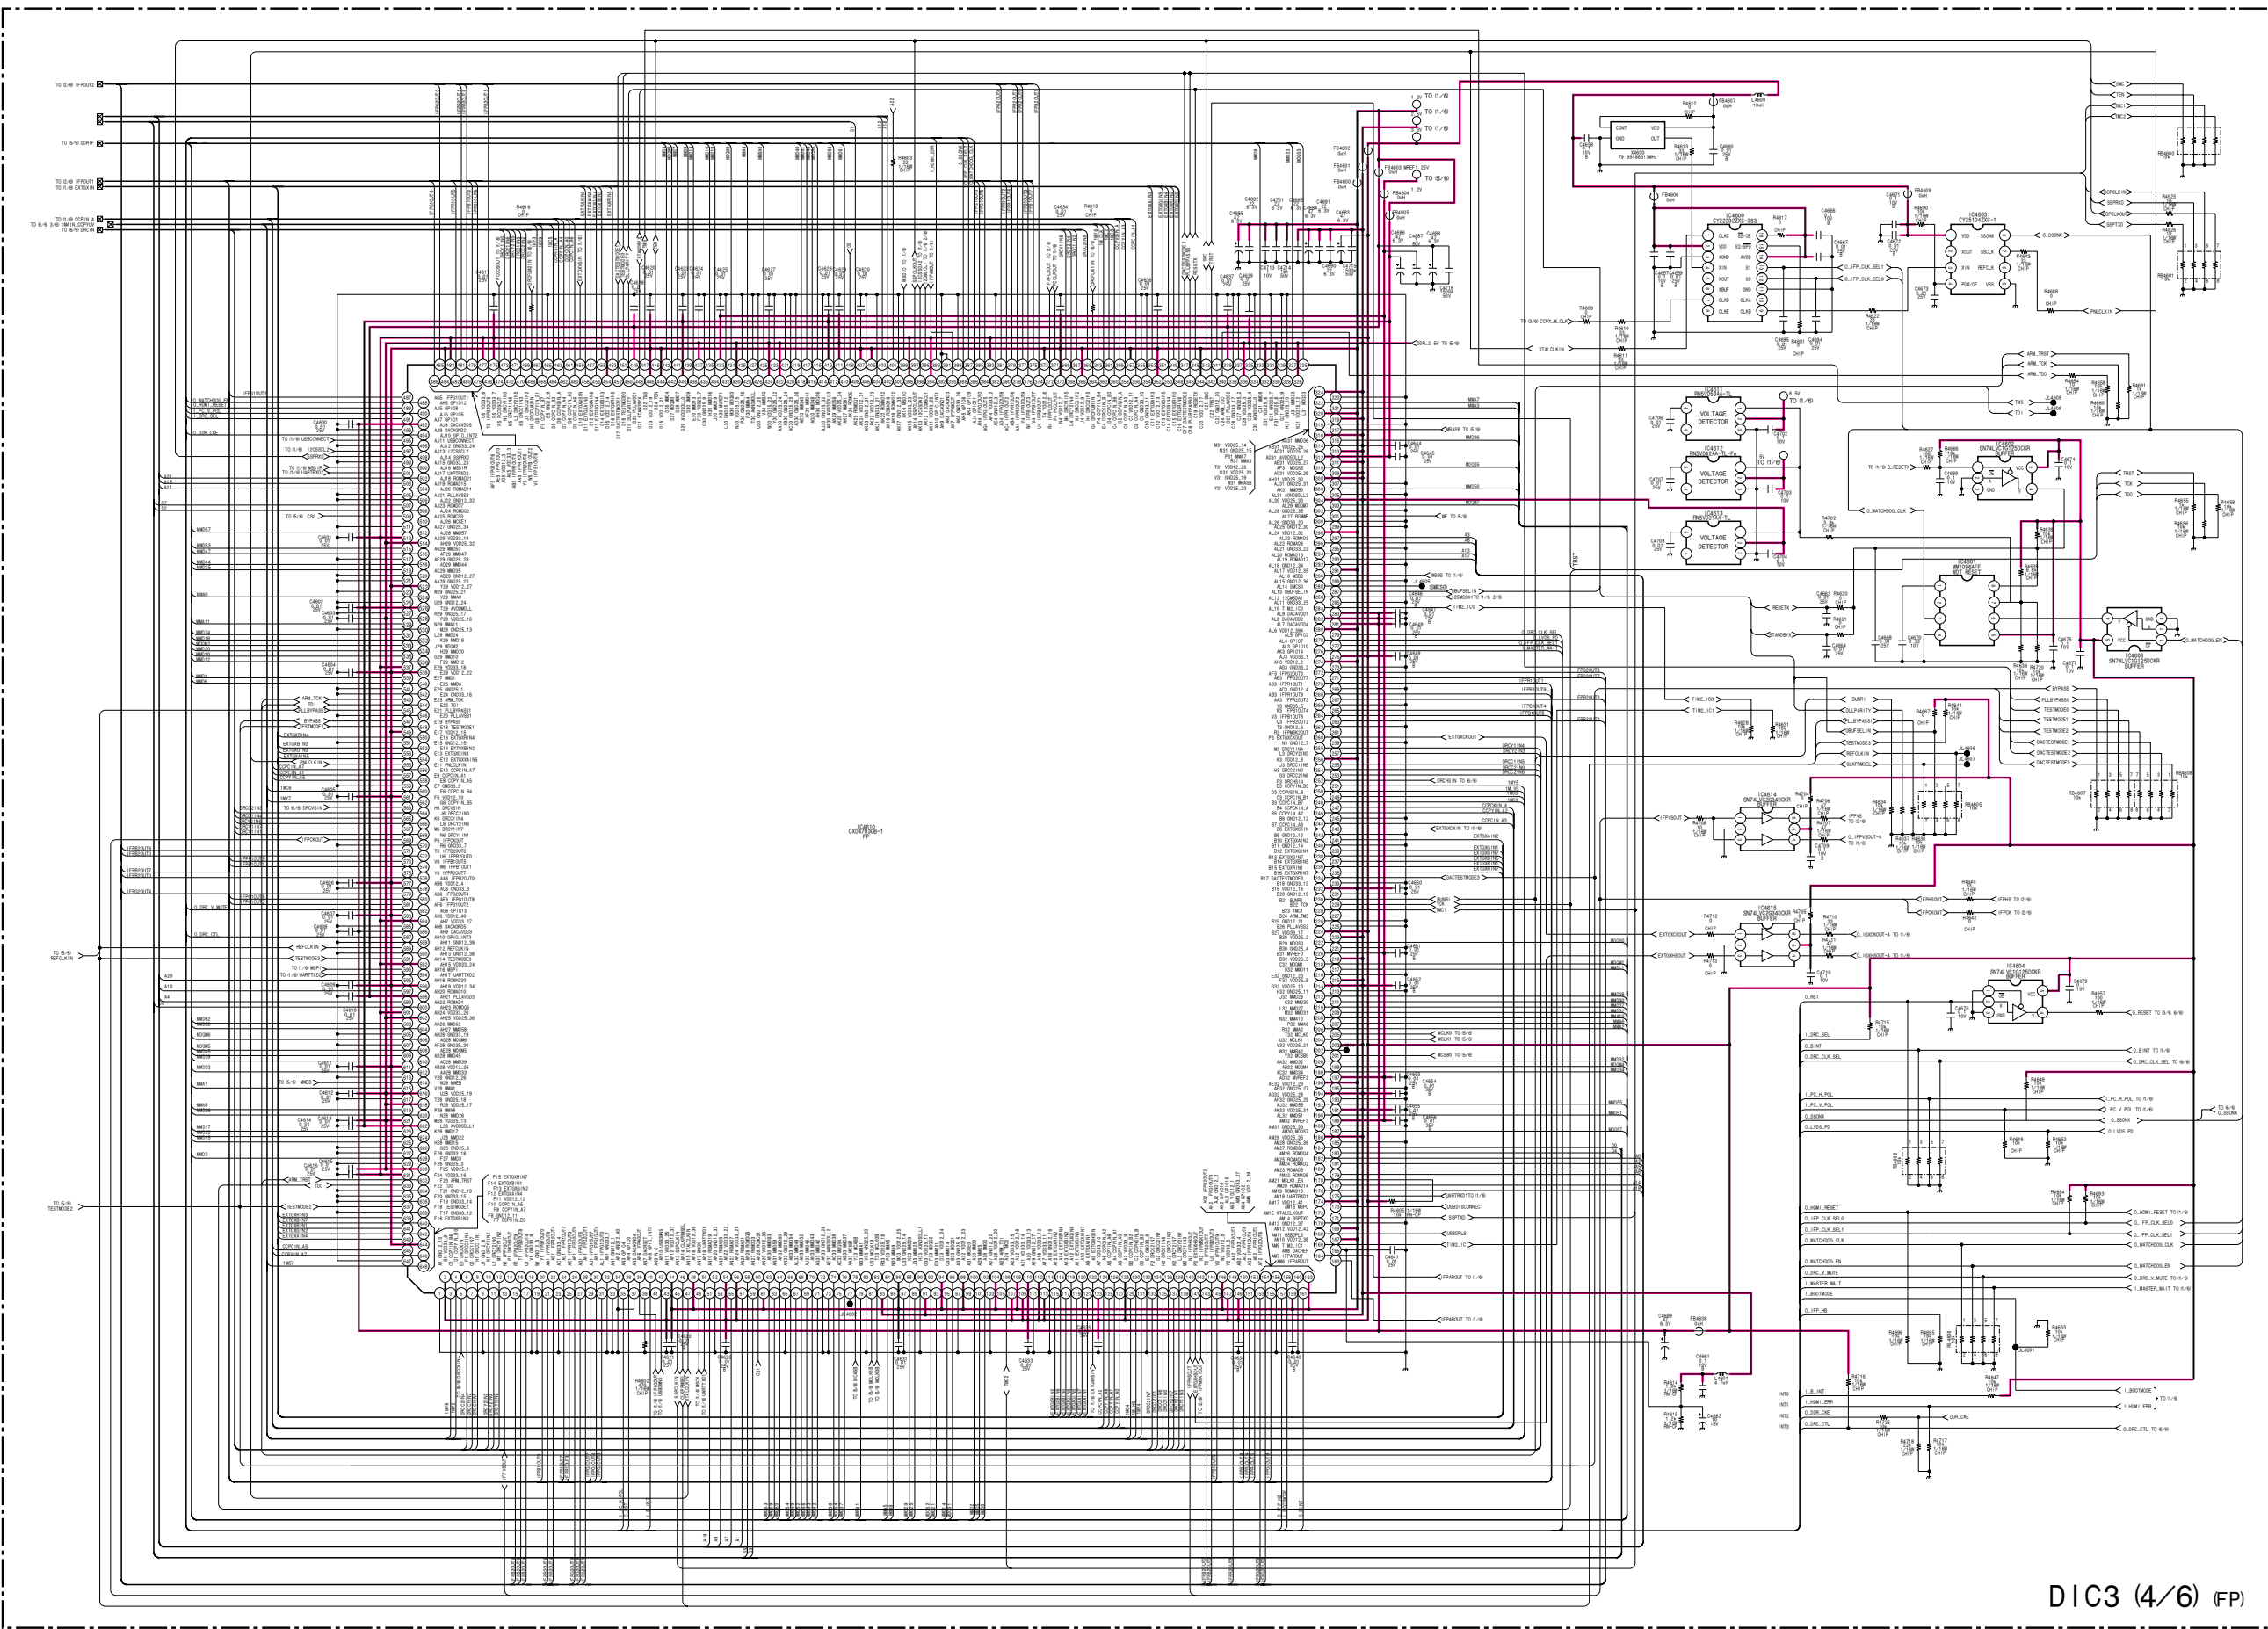

DIC3 (4/6) (FP)

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

A
B
C
D
E
F
G
H
I
J
K

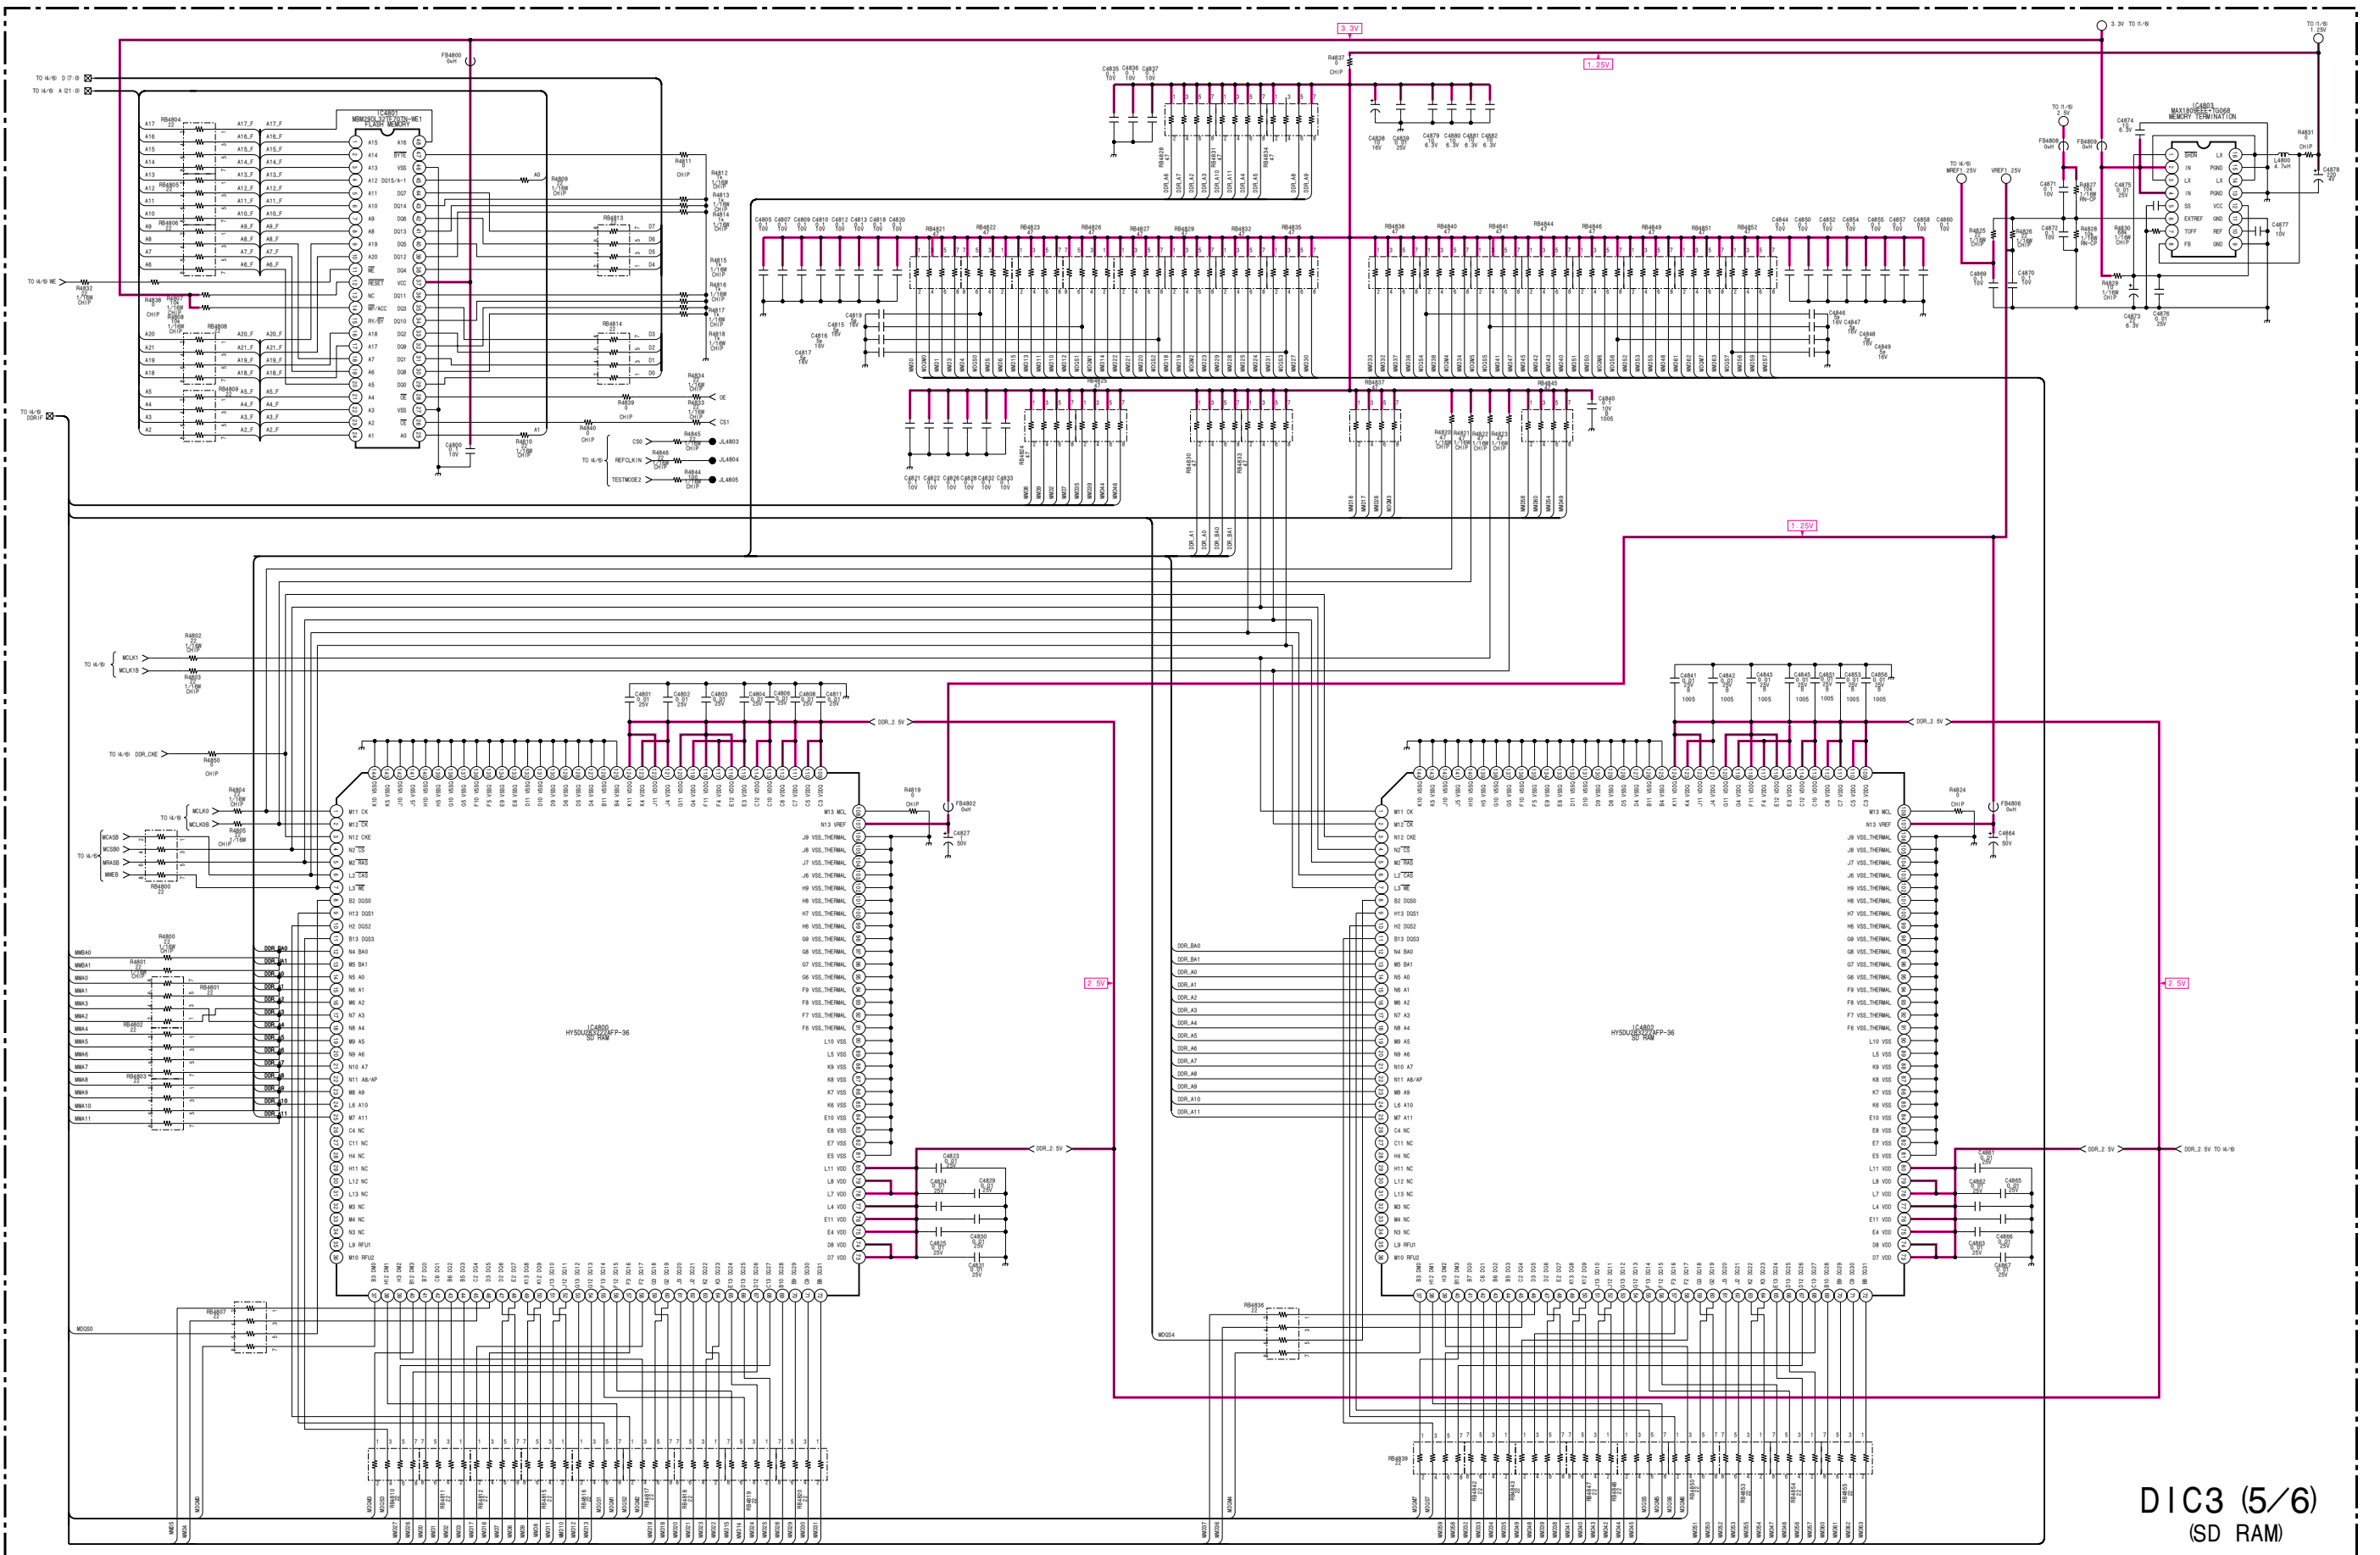


D1C3 (5/6)
(SD RAM)

B-S11275-UC -D1C3-P6

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15



A
B
C
D
E
F
G
H
I
J
K

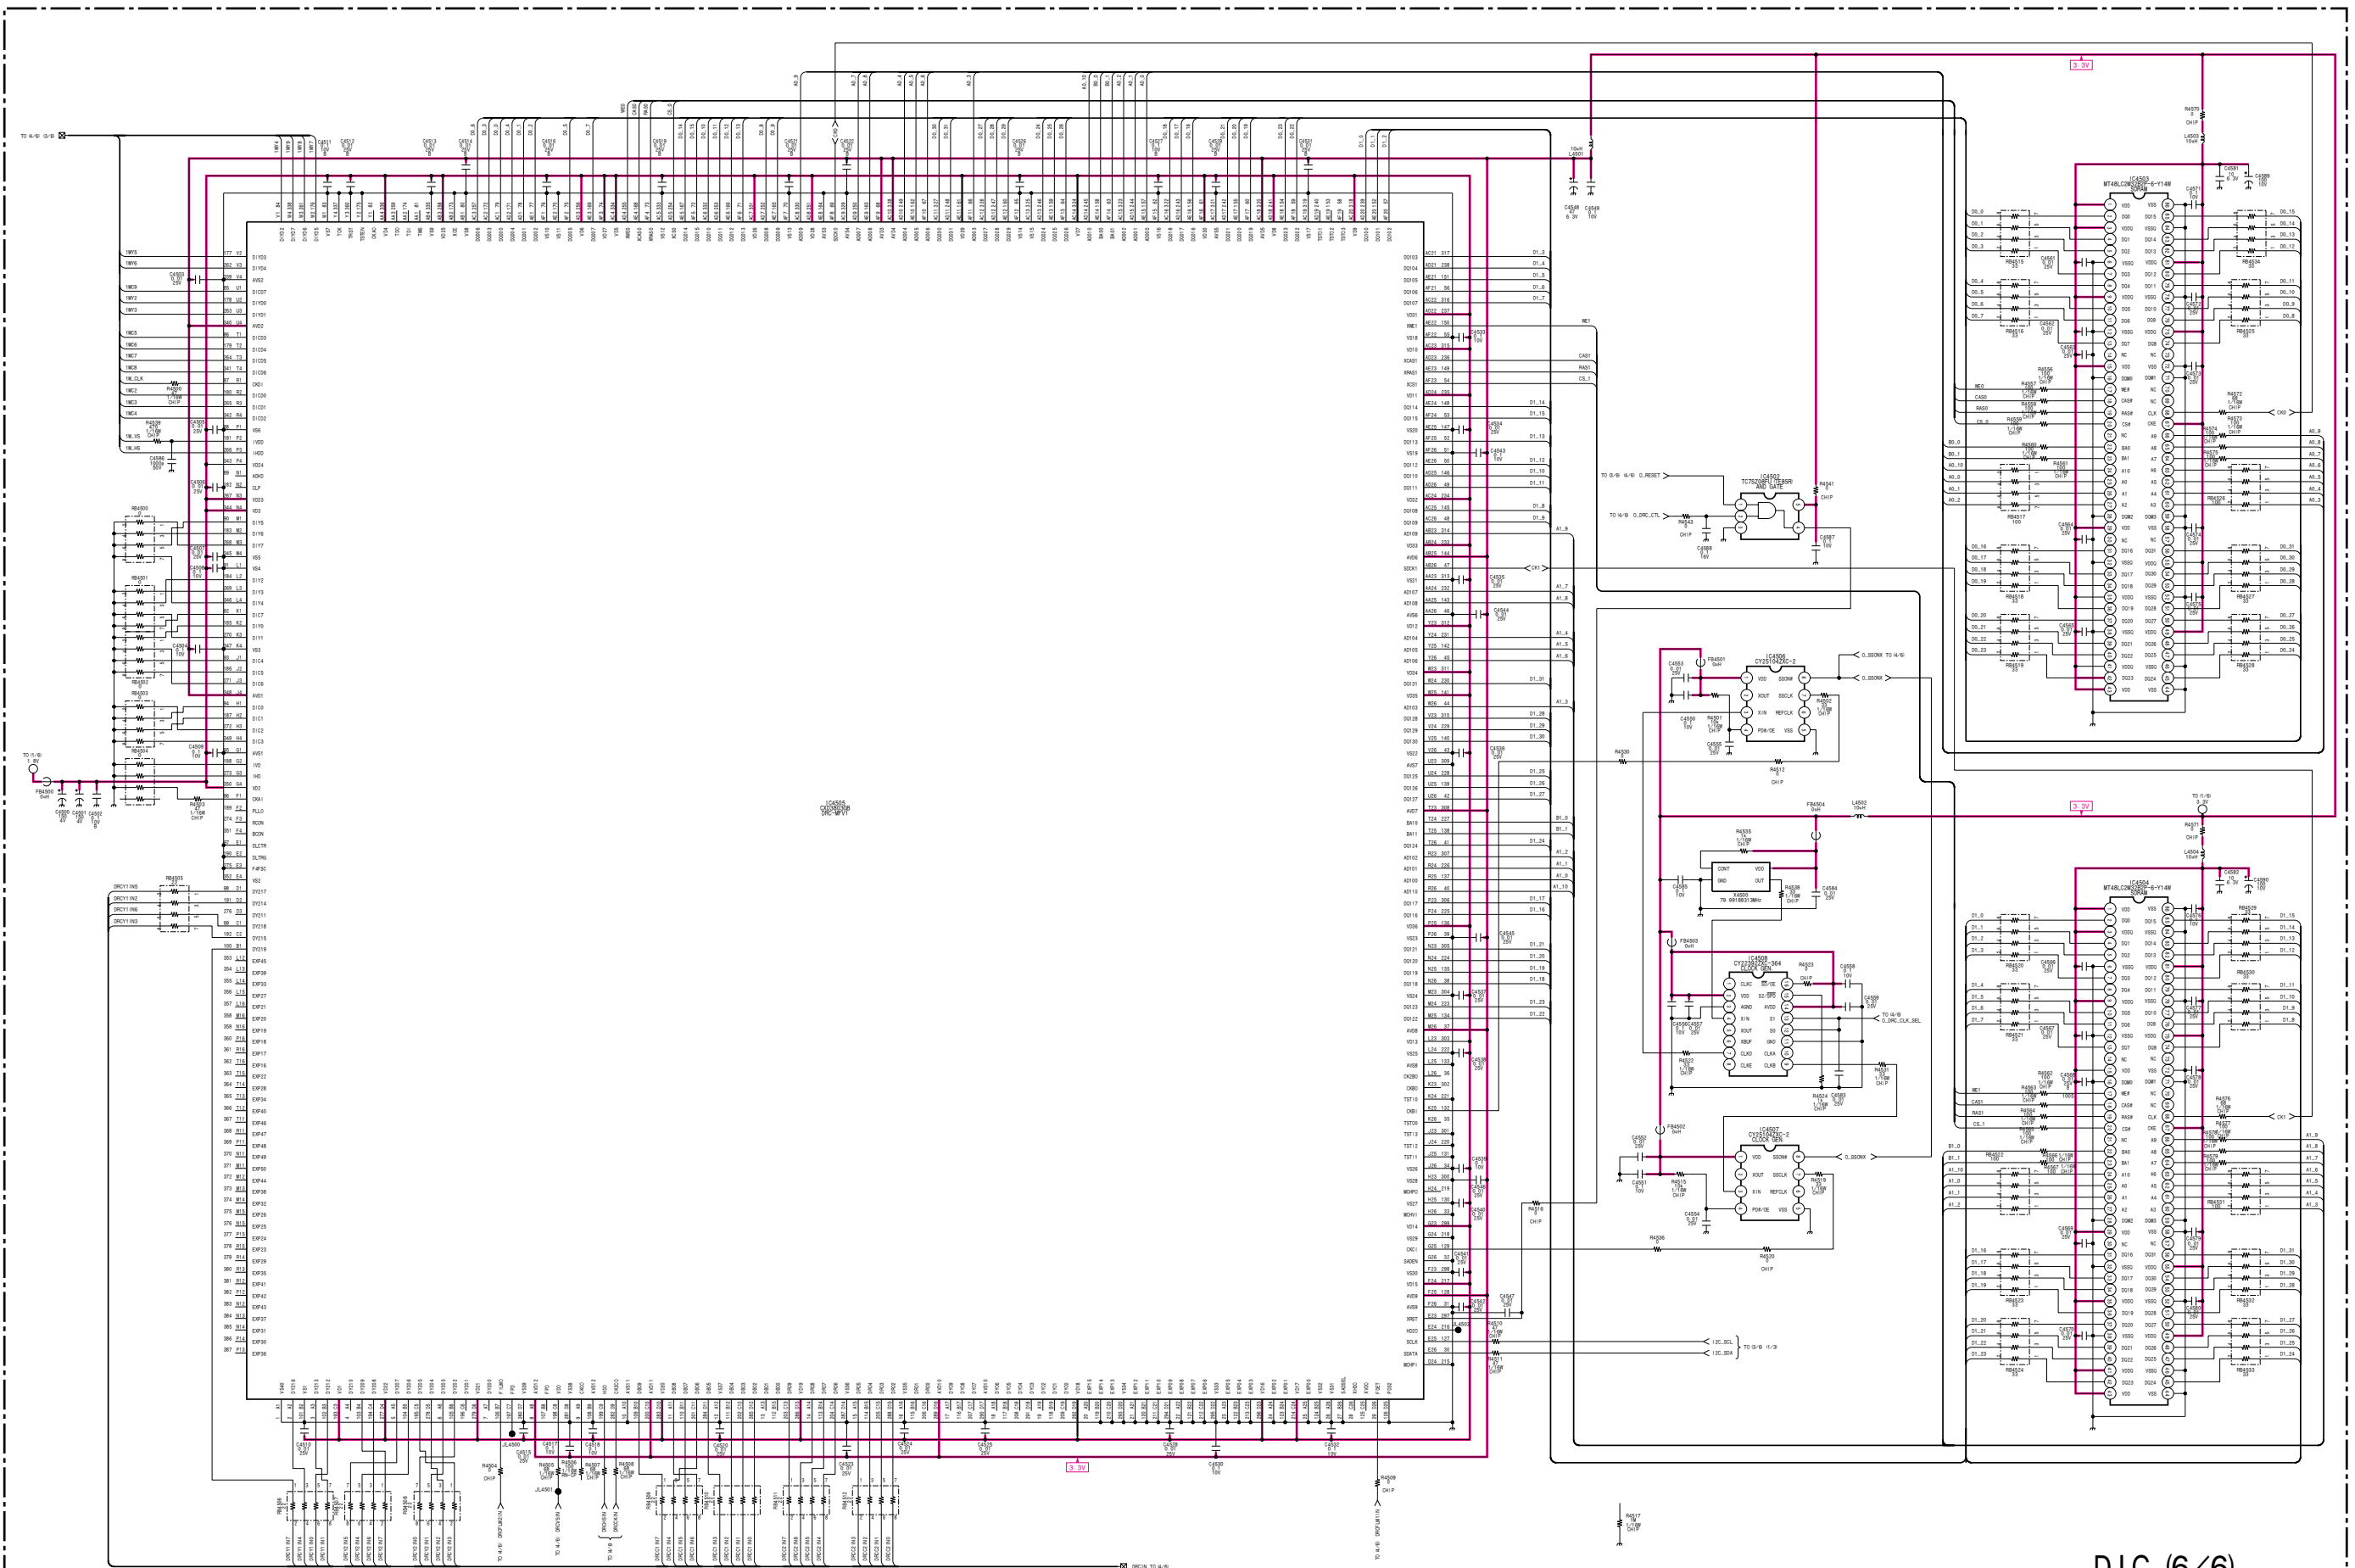

DIC (6/6)

8-98122750UC-3-01C3-P6

— DIC3 BOARD —

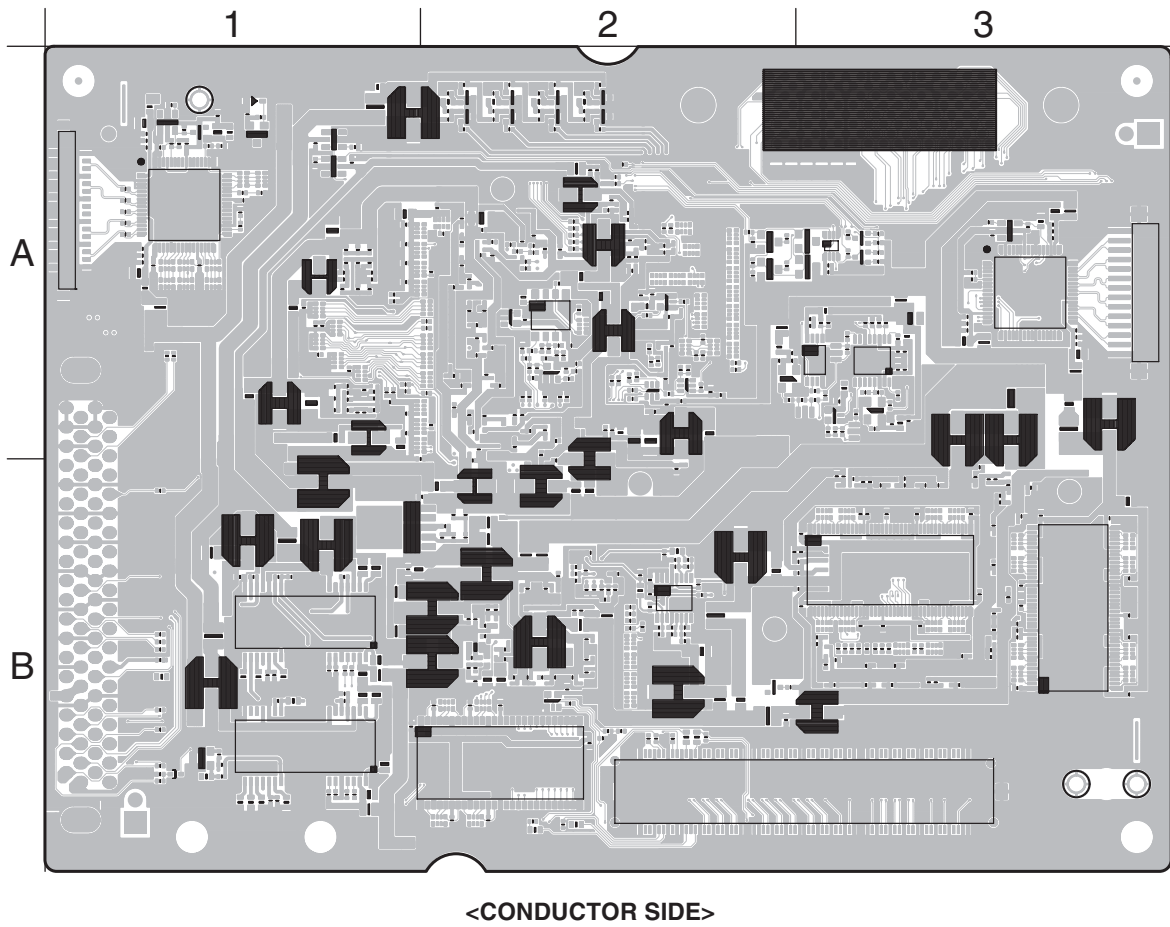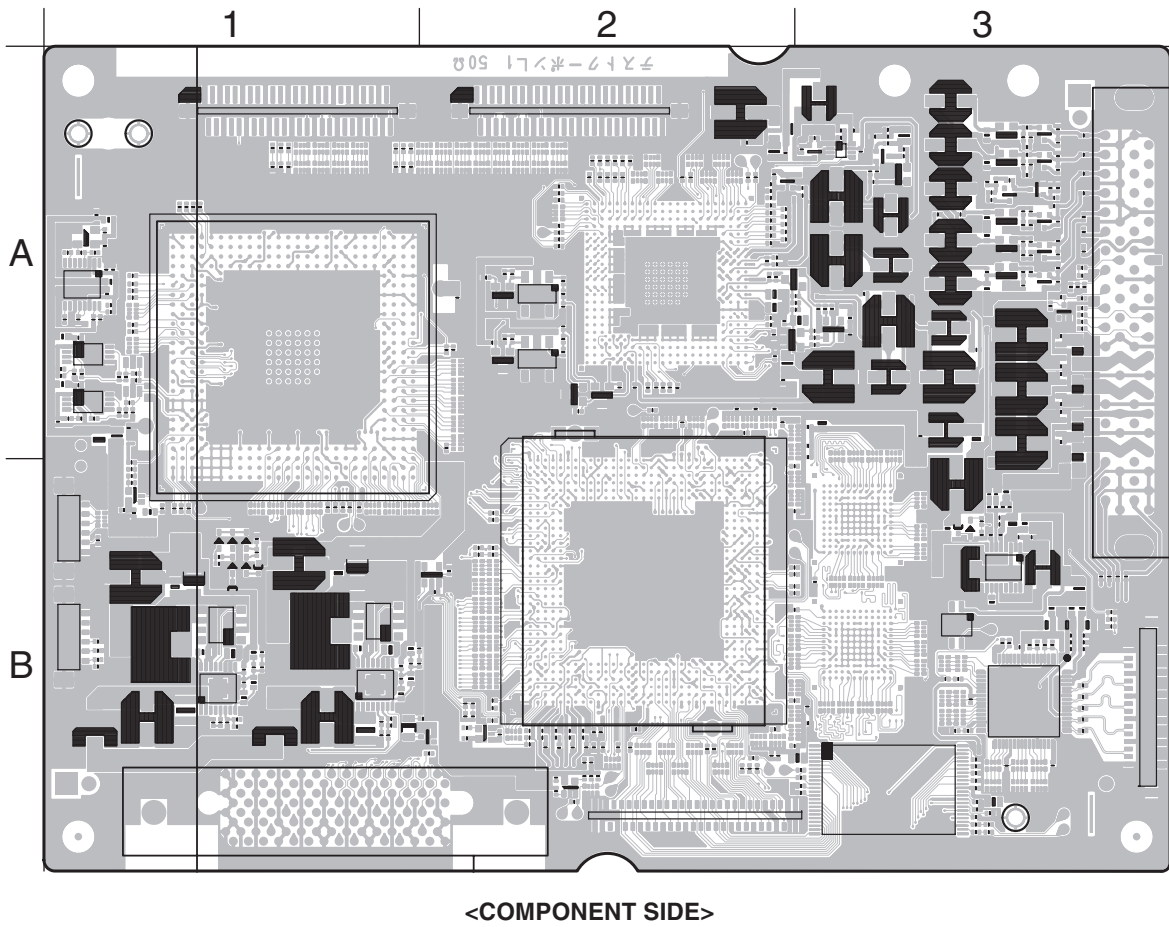

• DIC3 BOARD SEMICONDUCTOR LOCATION

IC							
(Component Side)	(Conductor Side)						
IC2001	A-2	Q2010	A-2	②	D2008	A-3	③
IC2002	A-3	Q2011	A-1	②	D2009	A-2	③
IC2003	B-2	Q2012	B-4	②	D2010	B-2	③
IC2004	B-4	Q2013	B-4	②	D2011	A-3	③
		Q2014	A-3	-	D2012	A-2	③
		Q2015	A-4	②	D2013	A-3	③
		Q2016	B-3	②	D2014	A-2	③
		Q2017	A-2	②	D2015	A-3	③
		Q2018	A-2	②	D2016	B-2	③
					D2017	A-3	③
					D2018	B-4	③
					D2019	B-4	③
					D2020	A-1	③
					D2021	A-1	③
					D2022	A-4	③
					D2023	B-2	③
					D2024	A-3	③
					D2025	A-2	③
					D2026	B-4	③
					D2027	A-4	③


*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-14)

[illegible]

[AC LINE NOISE FILTER]

KDE-50XS955 (UC) 3-34

(6) Schematic Diagrams of G1 Board

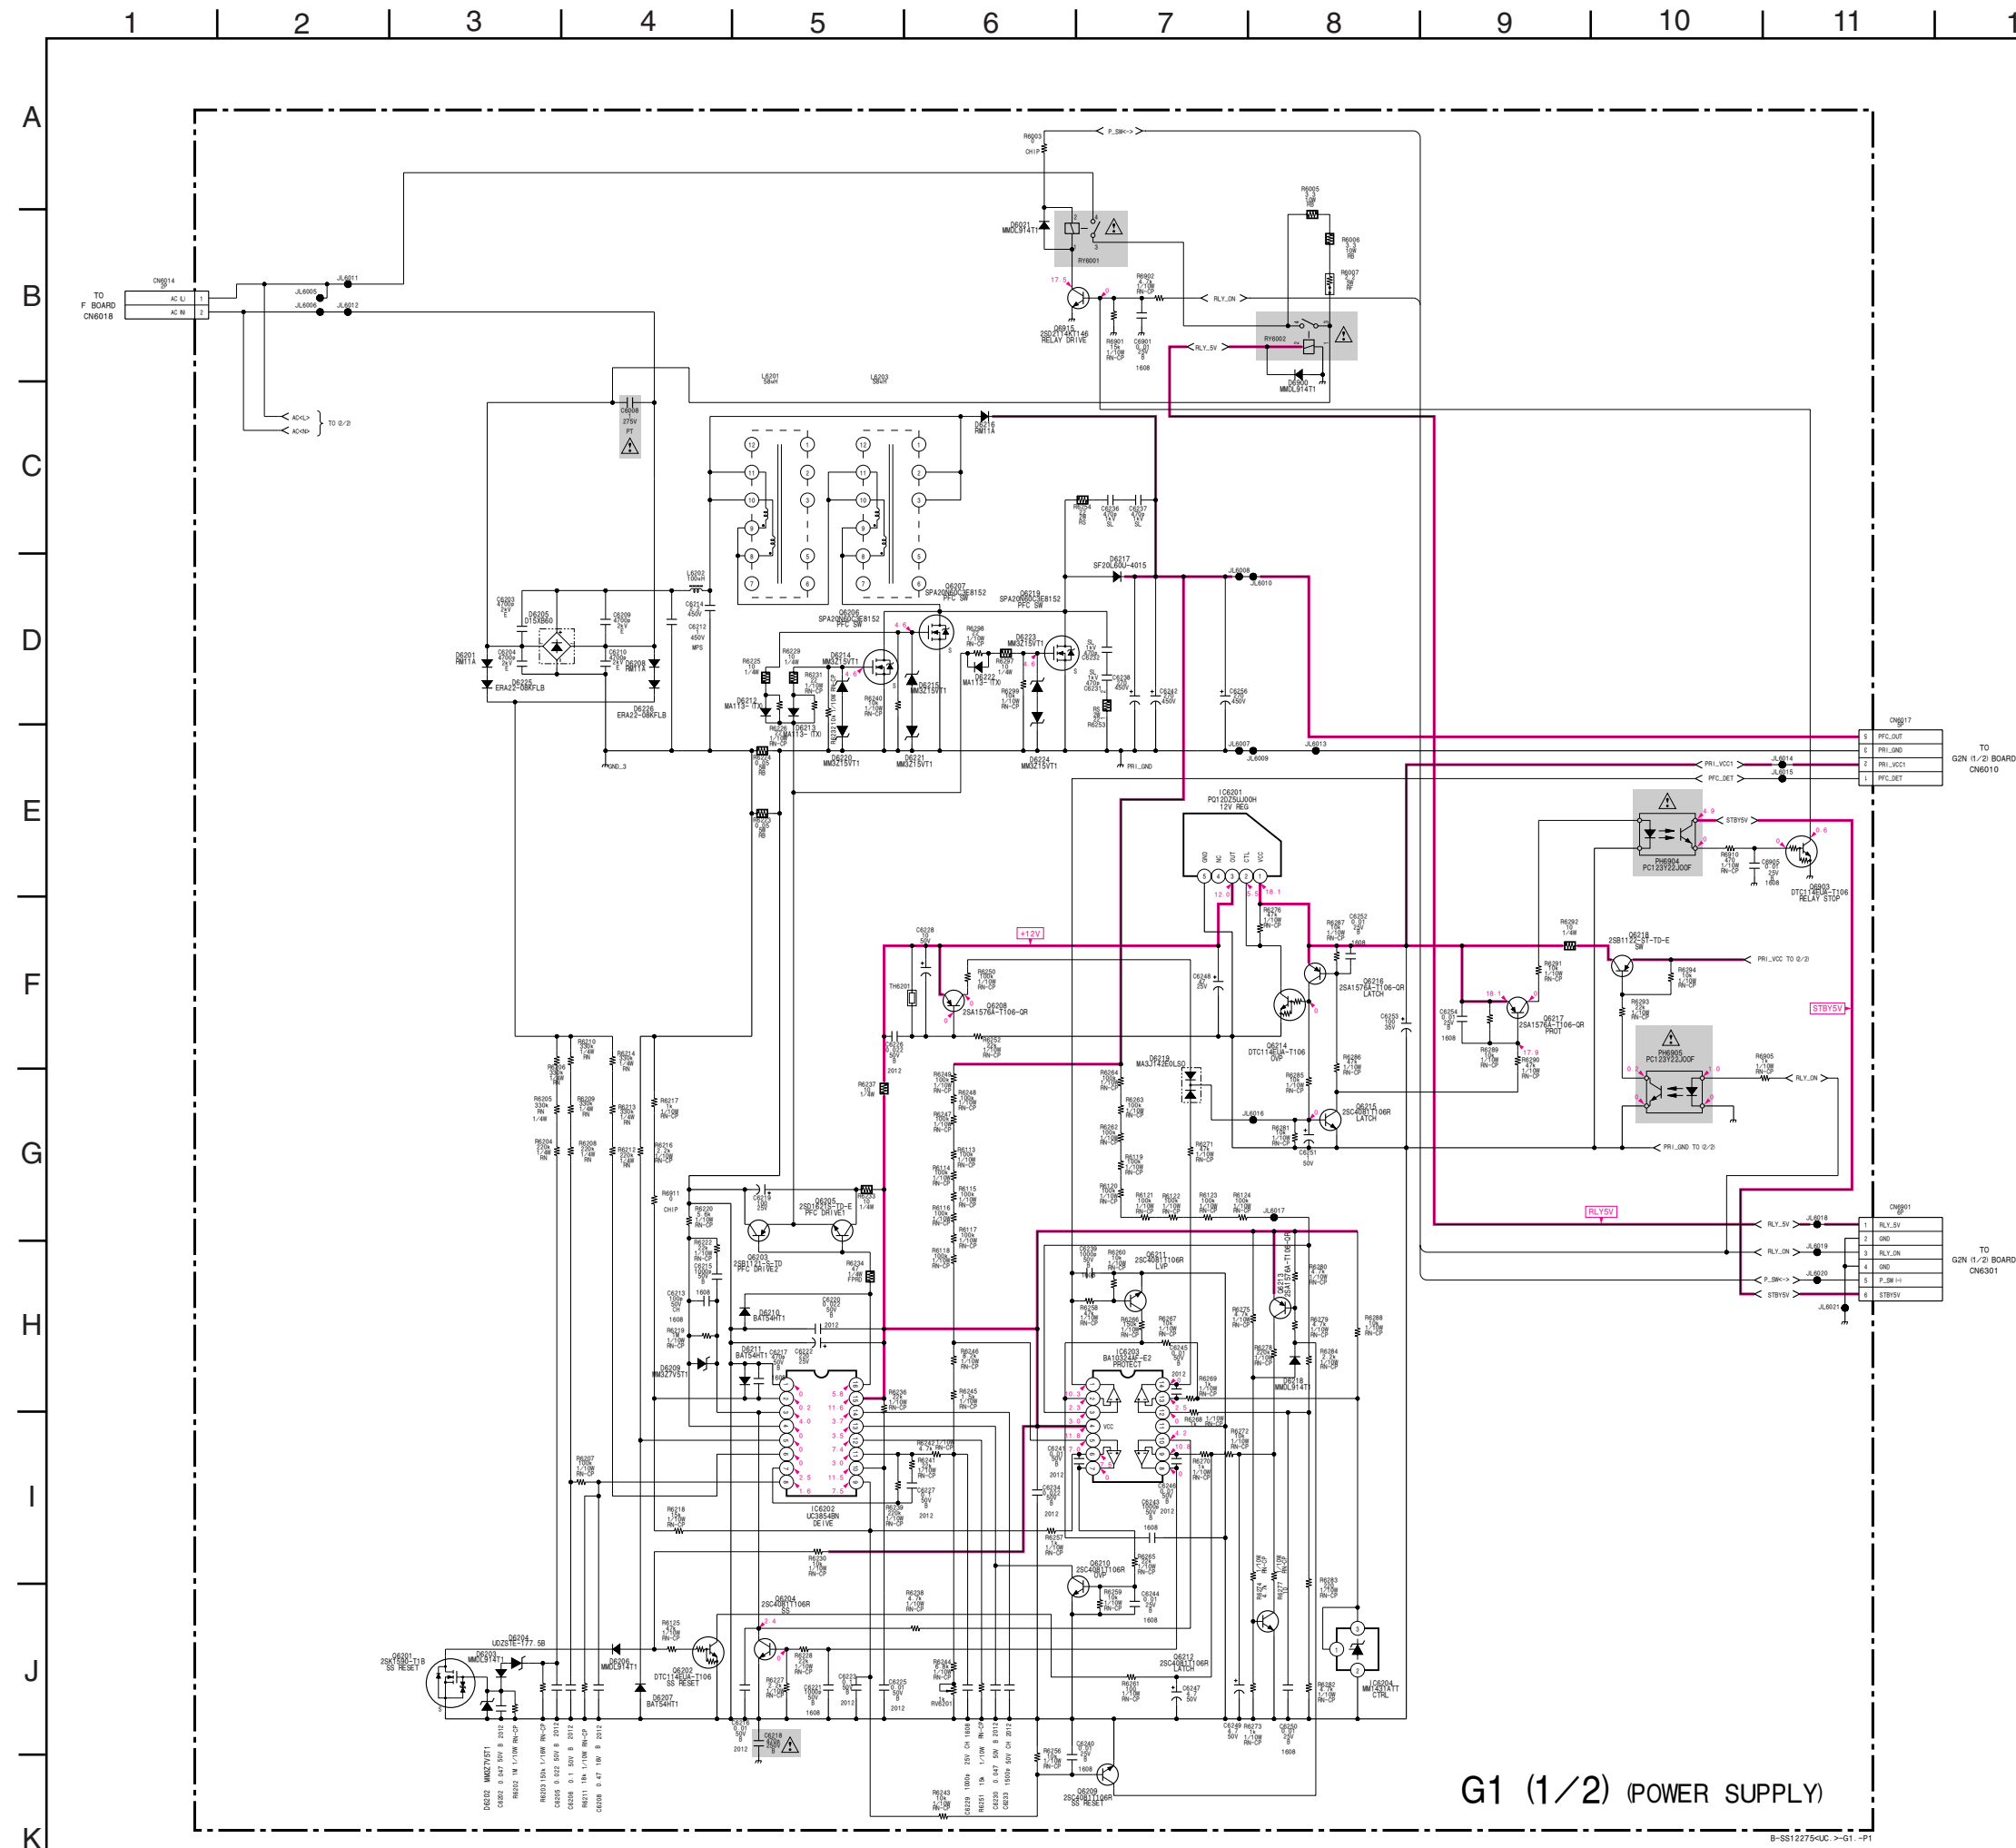







IC			TRANSISTOR			DIODE			IC			TRANSISTOR			DIODE		
(Component Side)		(Conductor Side)	(Component Side)		(Conductor Side)	(Component Side)		(Conductor Side)	(Component Side)		(Conductor Side)	(Component Side)		(Conductor Side)	(Component Side)		(Conductor Side)
IC6101	B-5		Q6201	A-1	⑭	D6021	A-5	③	D6204	B-1		D6218			B-1	③	
IC6102	A-5		Q6202	B-1	①	D6100	C-4	-	D6205	B-4		D6219	A-4		B-1	③	-
IC6201	A-4		Q6203	B-2	②	D6101	B-5	③	D6206			D6220	B-2			③	
IC6202	A-1		Q6204	A-1	②	D6102	B-5	-	D6207			D6221	A-2			③	
IC6203	B-1		Q6205	B-1	②	D6103	A-5	-	D6208	C-4		D6222			B-2	③	-
IC6204	B-1		Q6206	B-2	-	D6104	A-5	-	D6209			D6223	B-2			③	
IC6205	B-1		Q6207	A-2	-	D6105	A-5	-	D6210			D6224	B-2			③	
			Q6208	A-2	②	D6106	B-5	③	D6211			D6225	B-4			-	
			Q6209	B-1	①	D6201	B-4	-	D6212			D6226	B-4			-	
			Q6210	B-1	①	D6202	C-1	③	D6213			D6900			A-5	③	
			Q6211	B-1	①	D6203	B-1	③	D6214	B-2							
									D6215	A-2							
									D6216	B-2							
									D6217	B-2							
									D6218								

KDE-50XS955 (UC) 3-37

(7) Schematic Diagrams of G2N Board

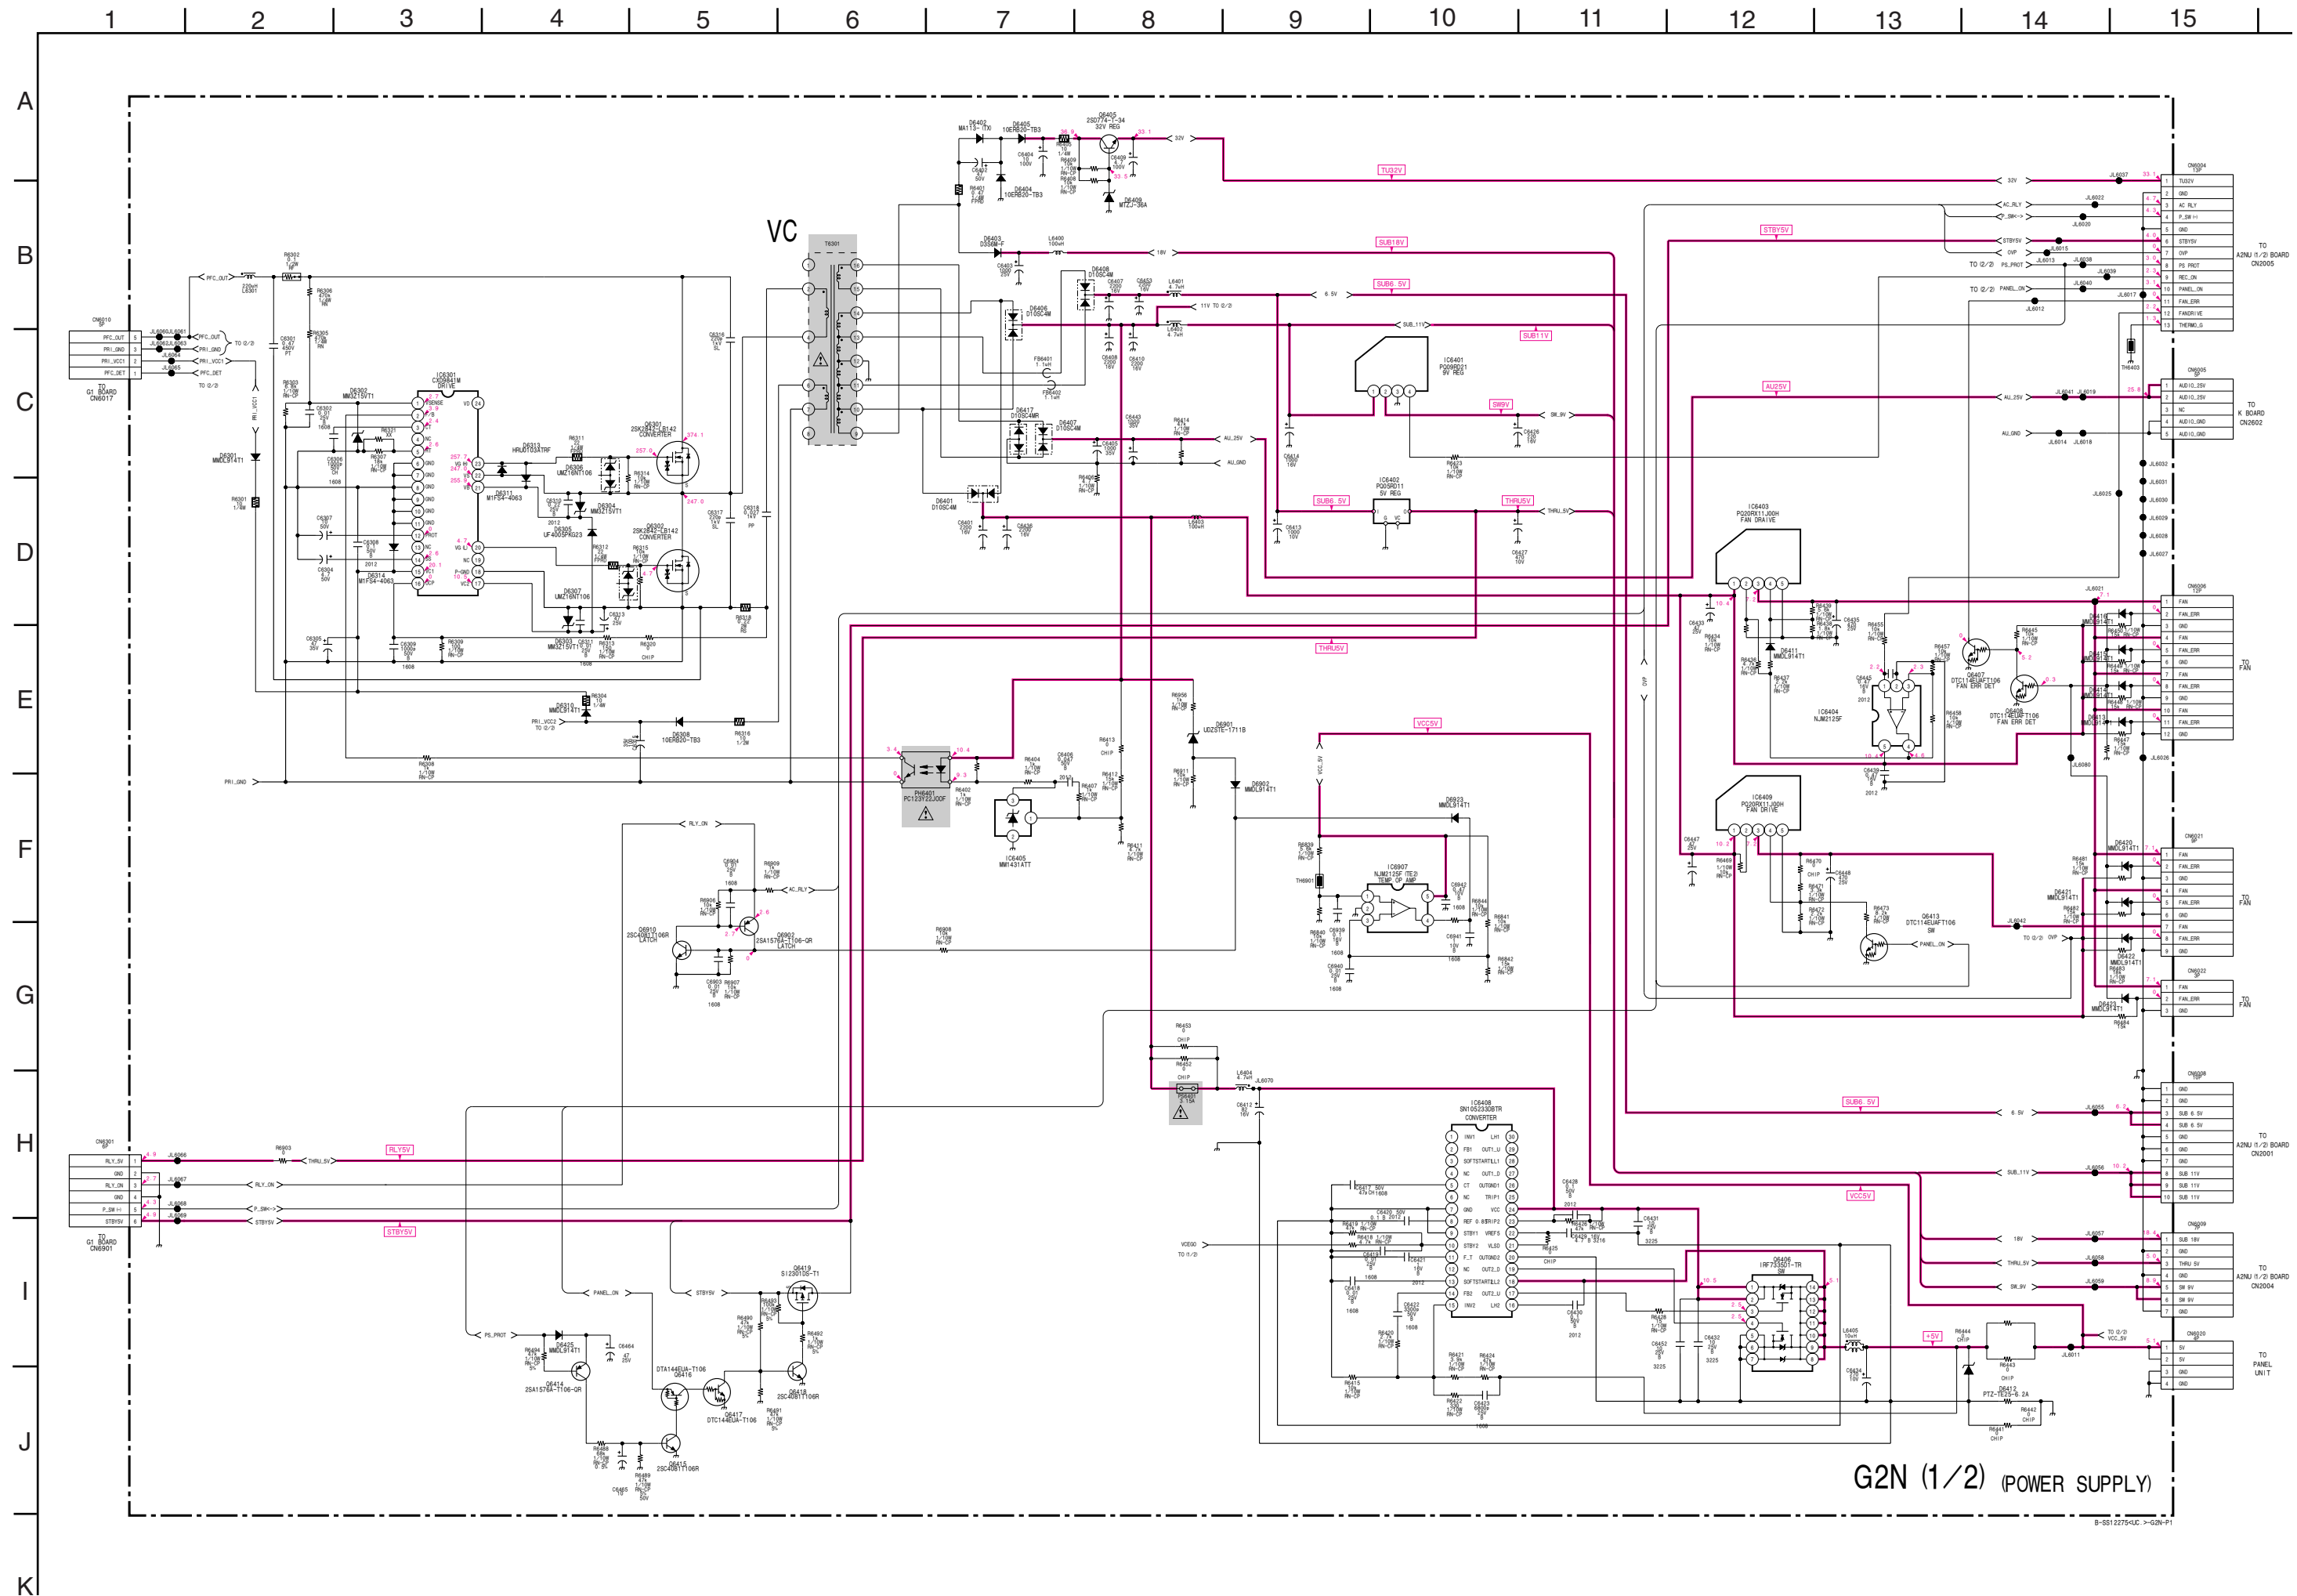




[illegible]

*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-14)

[illegible]

Ref.	*
D1105-D1107, D1109	③

*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-14)

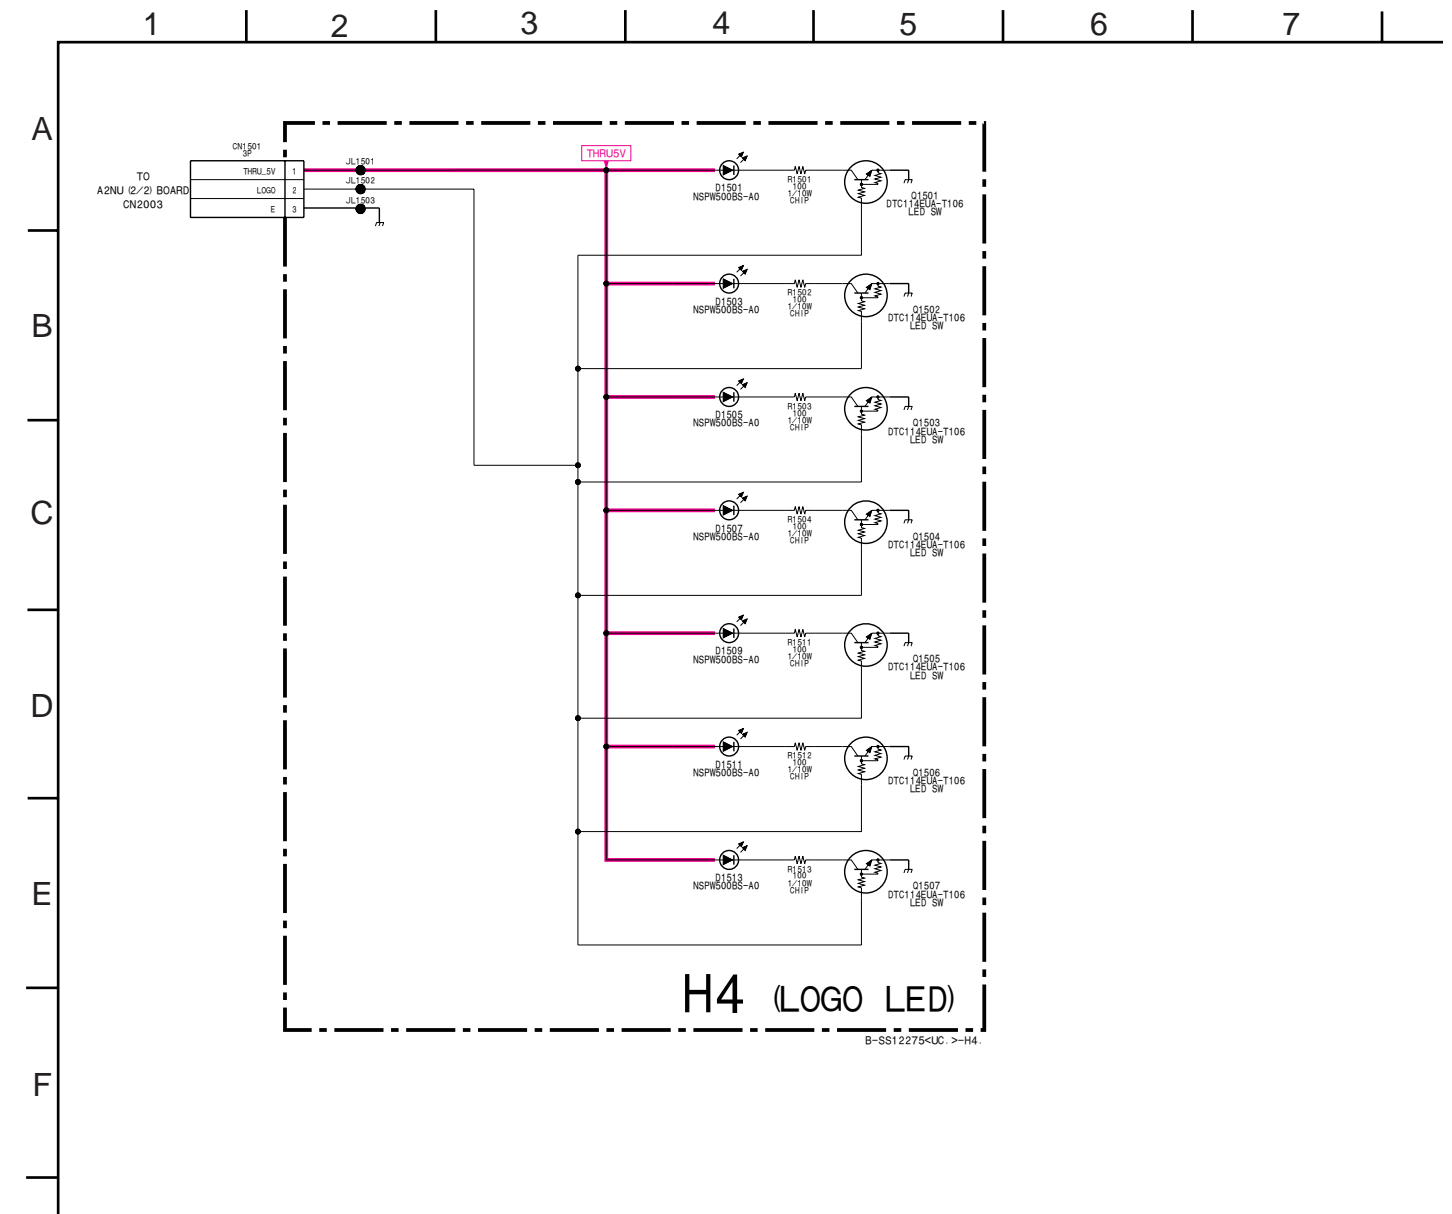

— H3 BOARD —



— H4 BOARD —




Ref.	*
Q1200, Q1201, Q1203, Q1205, Q1206	②
D1200-D1202	③
D1203-D1206	-

Ref.	*
Q1501-Q1507	②
D1501, D1503, D1505, D1507, D1509, D1511, D1513	-


KDE-50XS955 (UC) 3-42

(10) Schematic Diagram of H5 Board

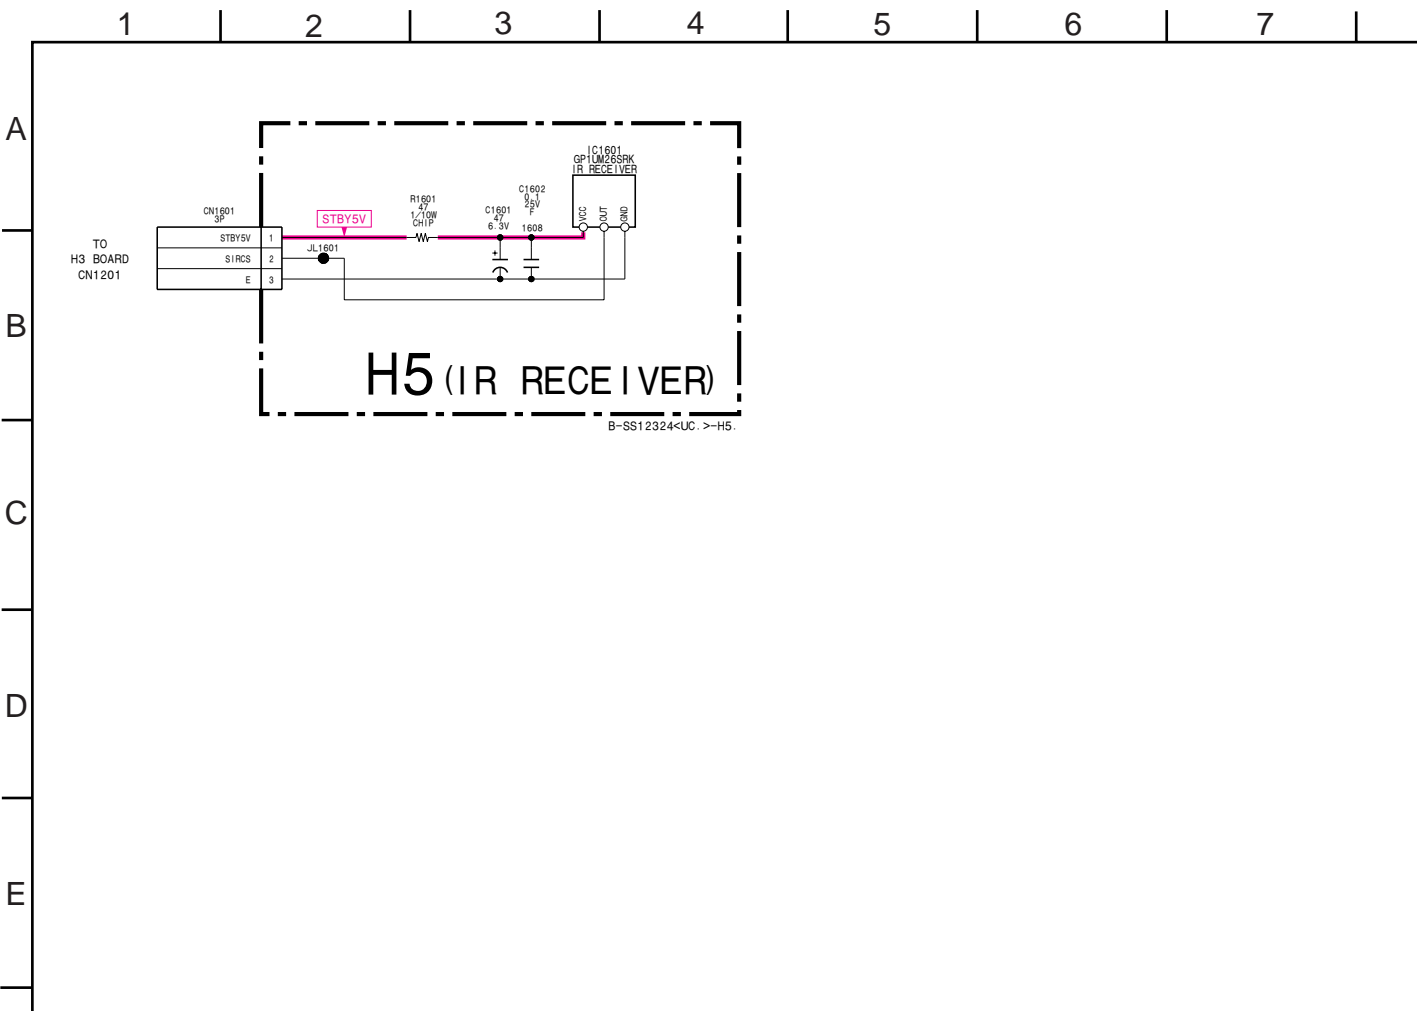


H5 [IR RECELVER]

— H5 BOARD —


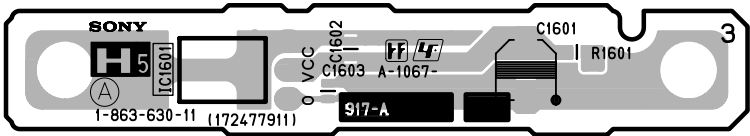


<COMPONENT SIDE>

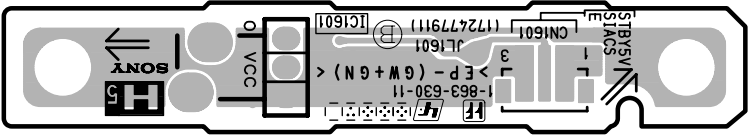


<CONDUCTOR SIDE>

(11) Schematic Diagram of J1NU and J2NU Boards

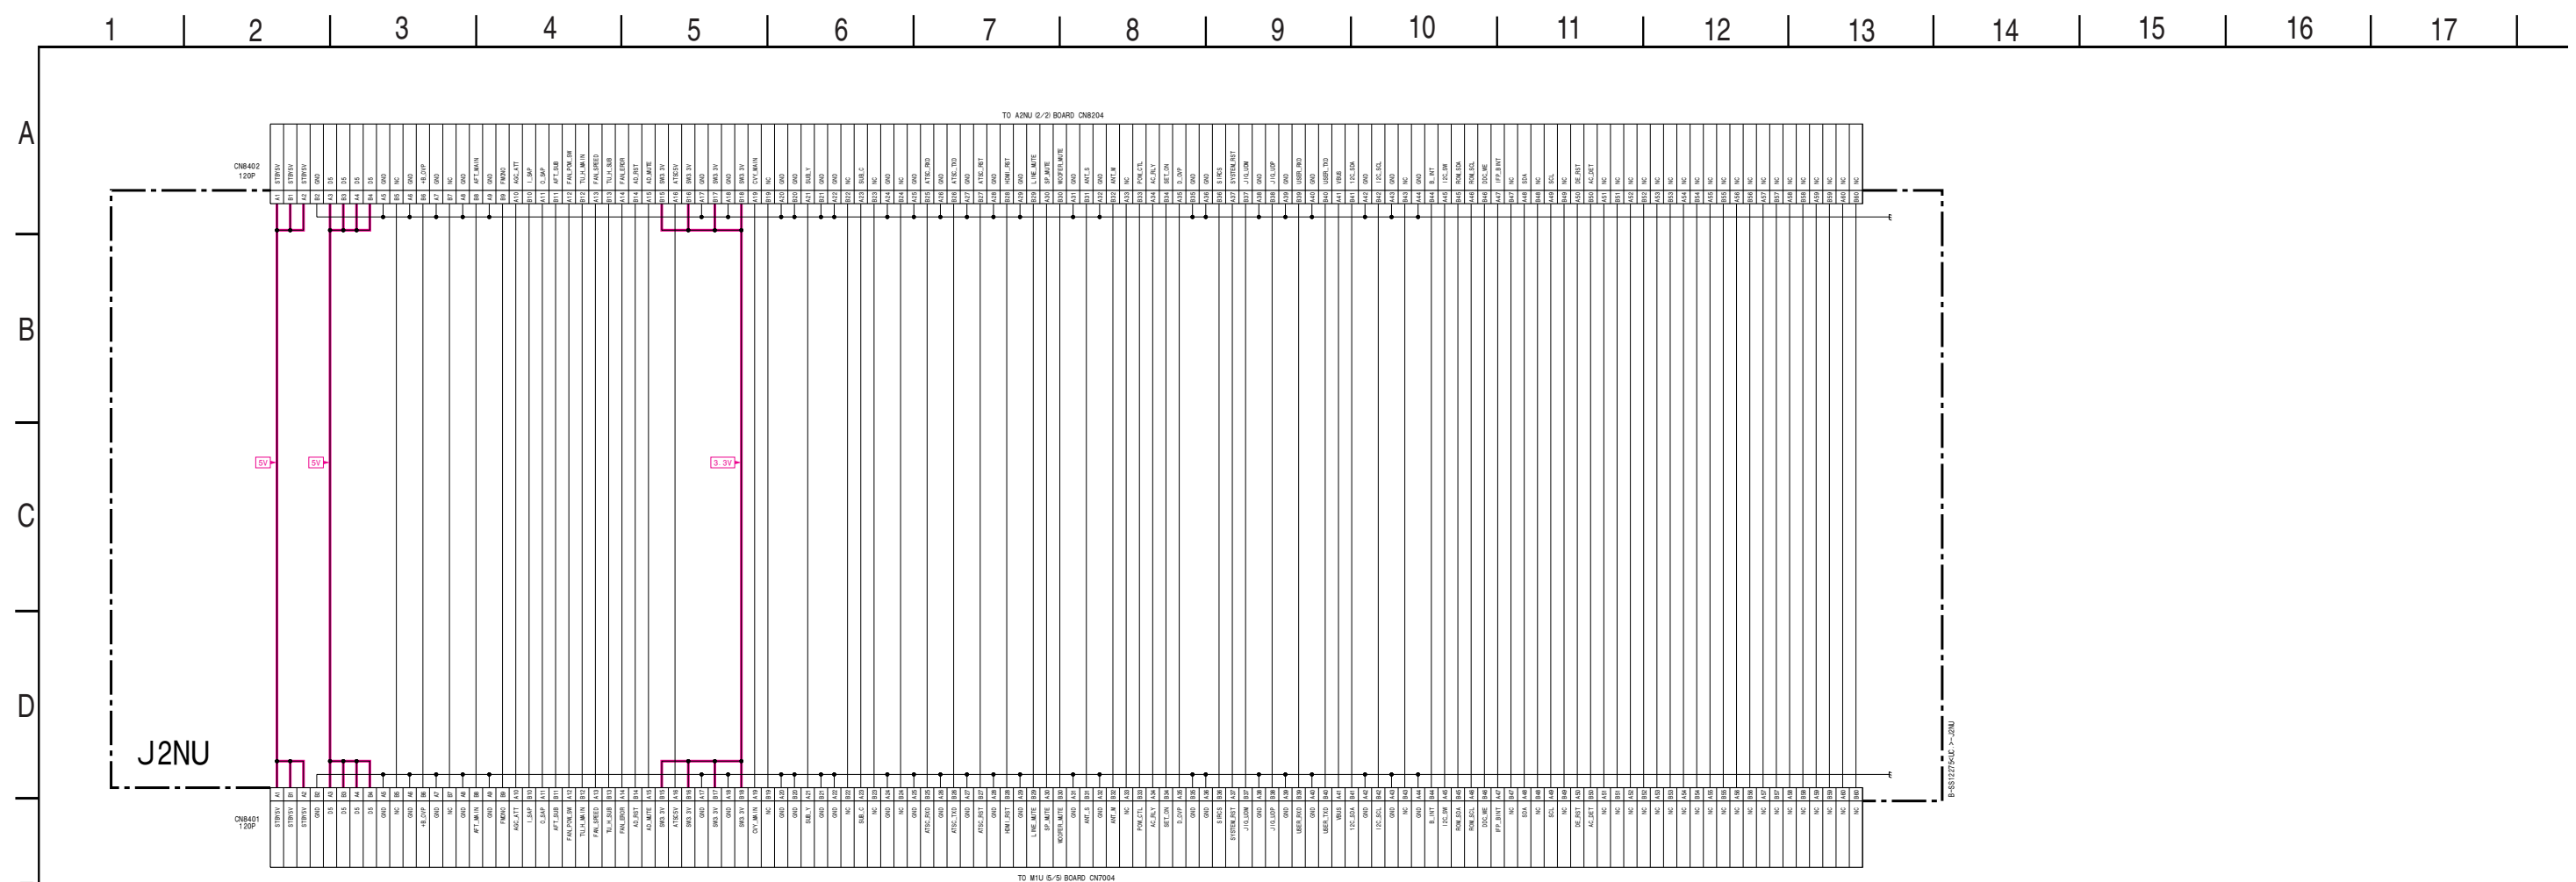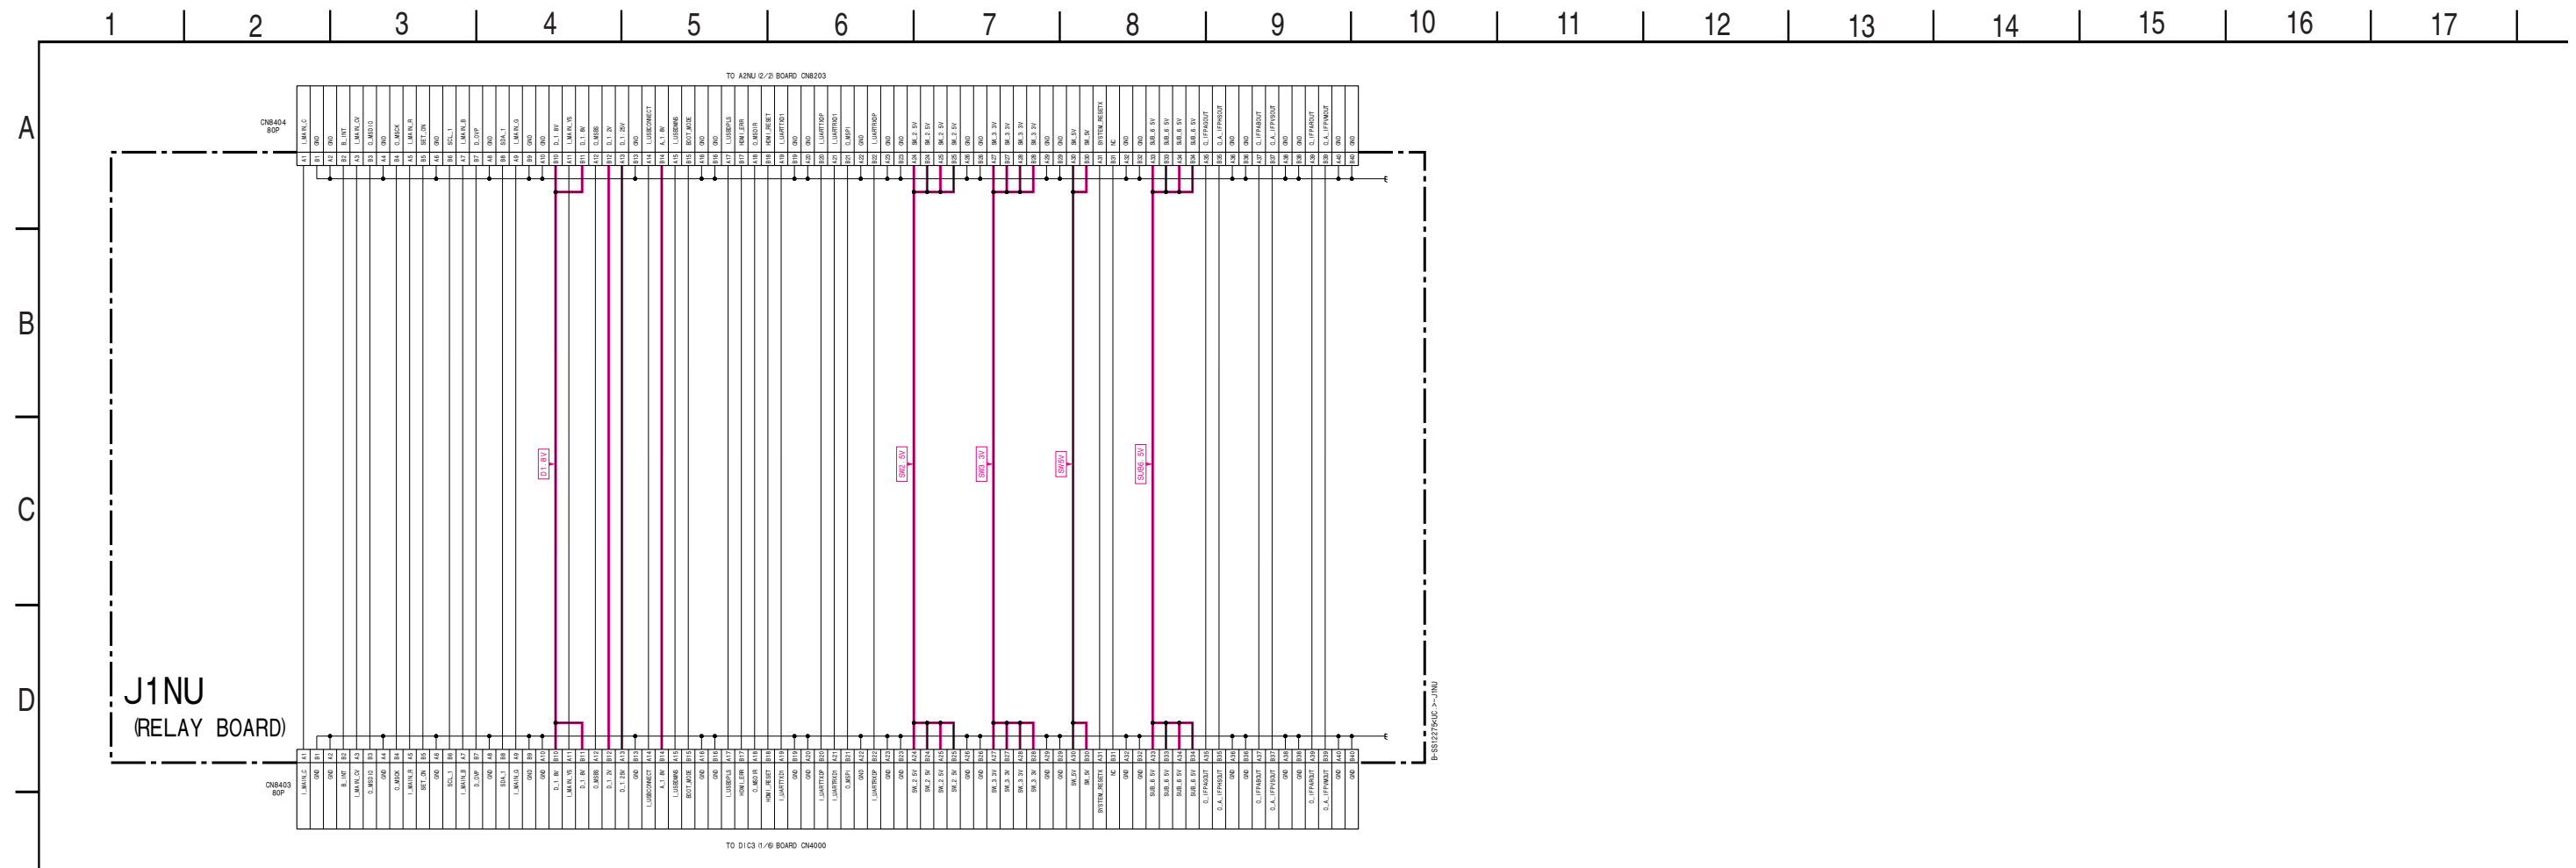


(12) Schematic Diagram of K Board

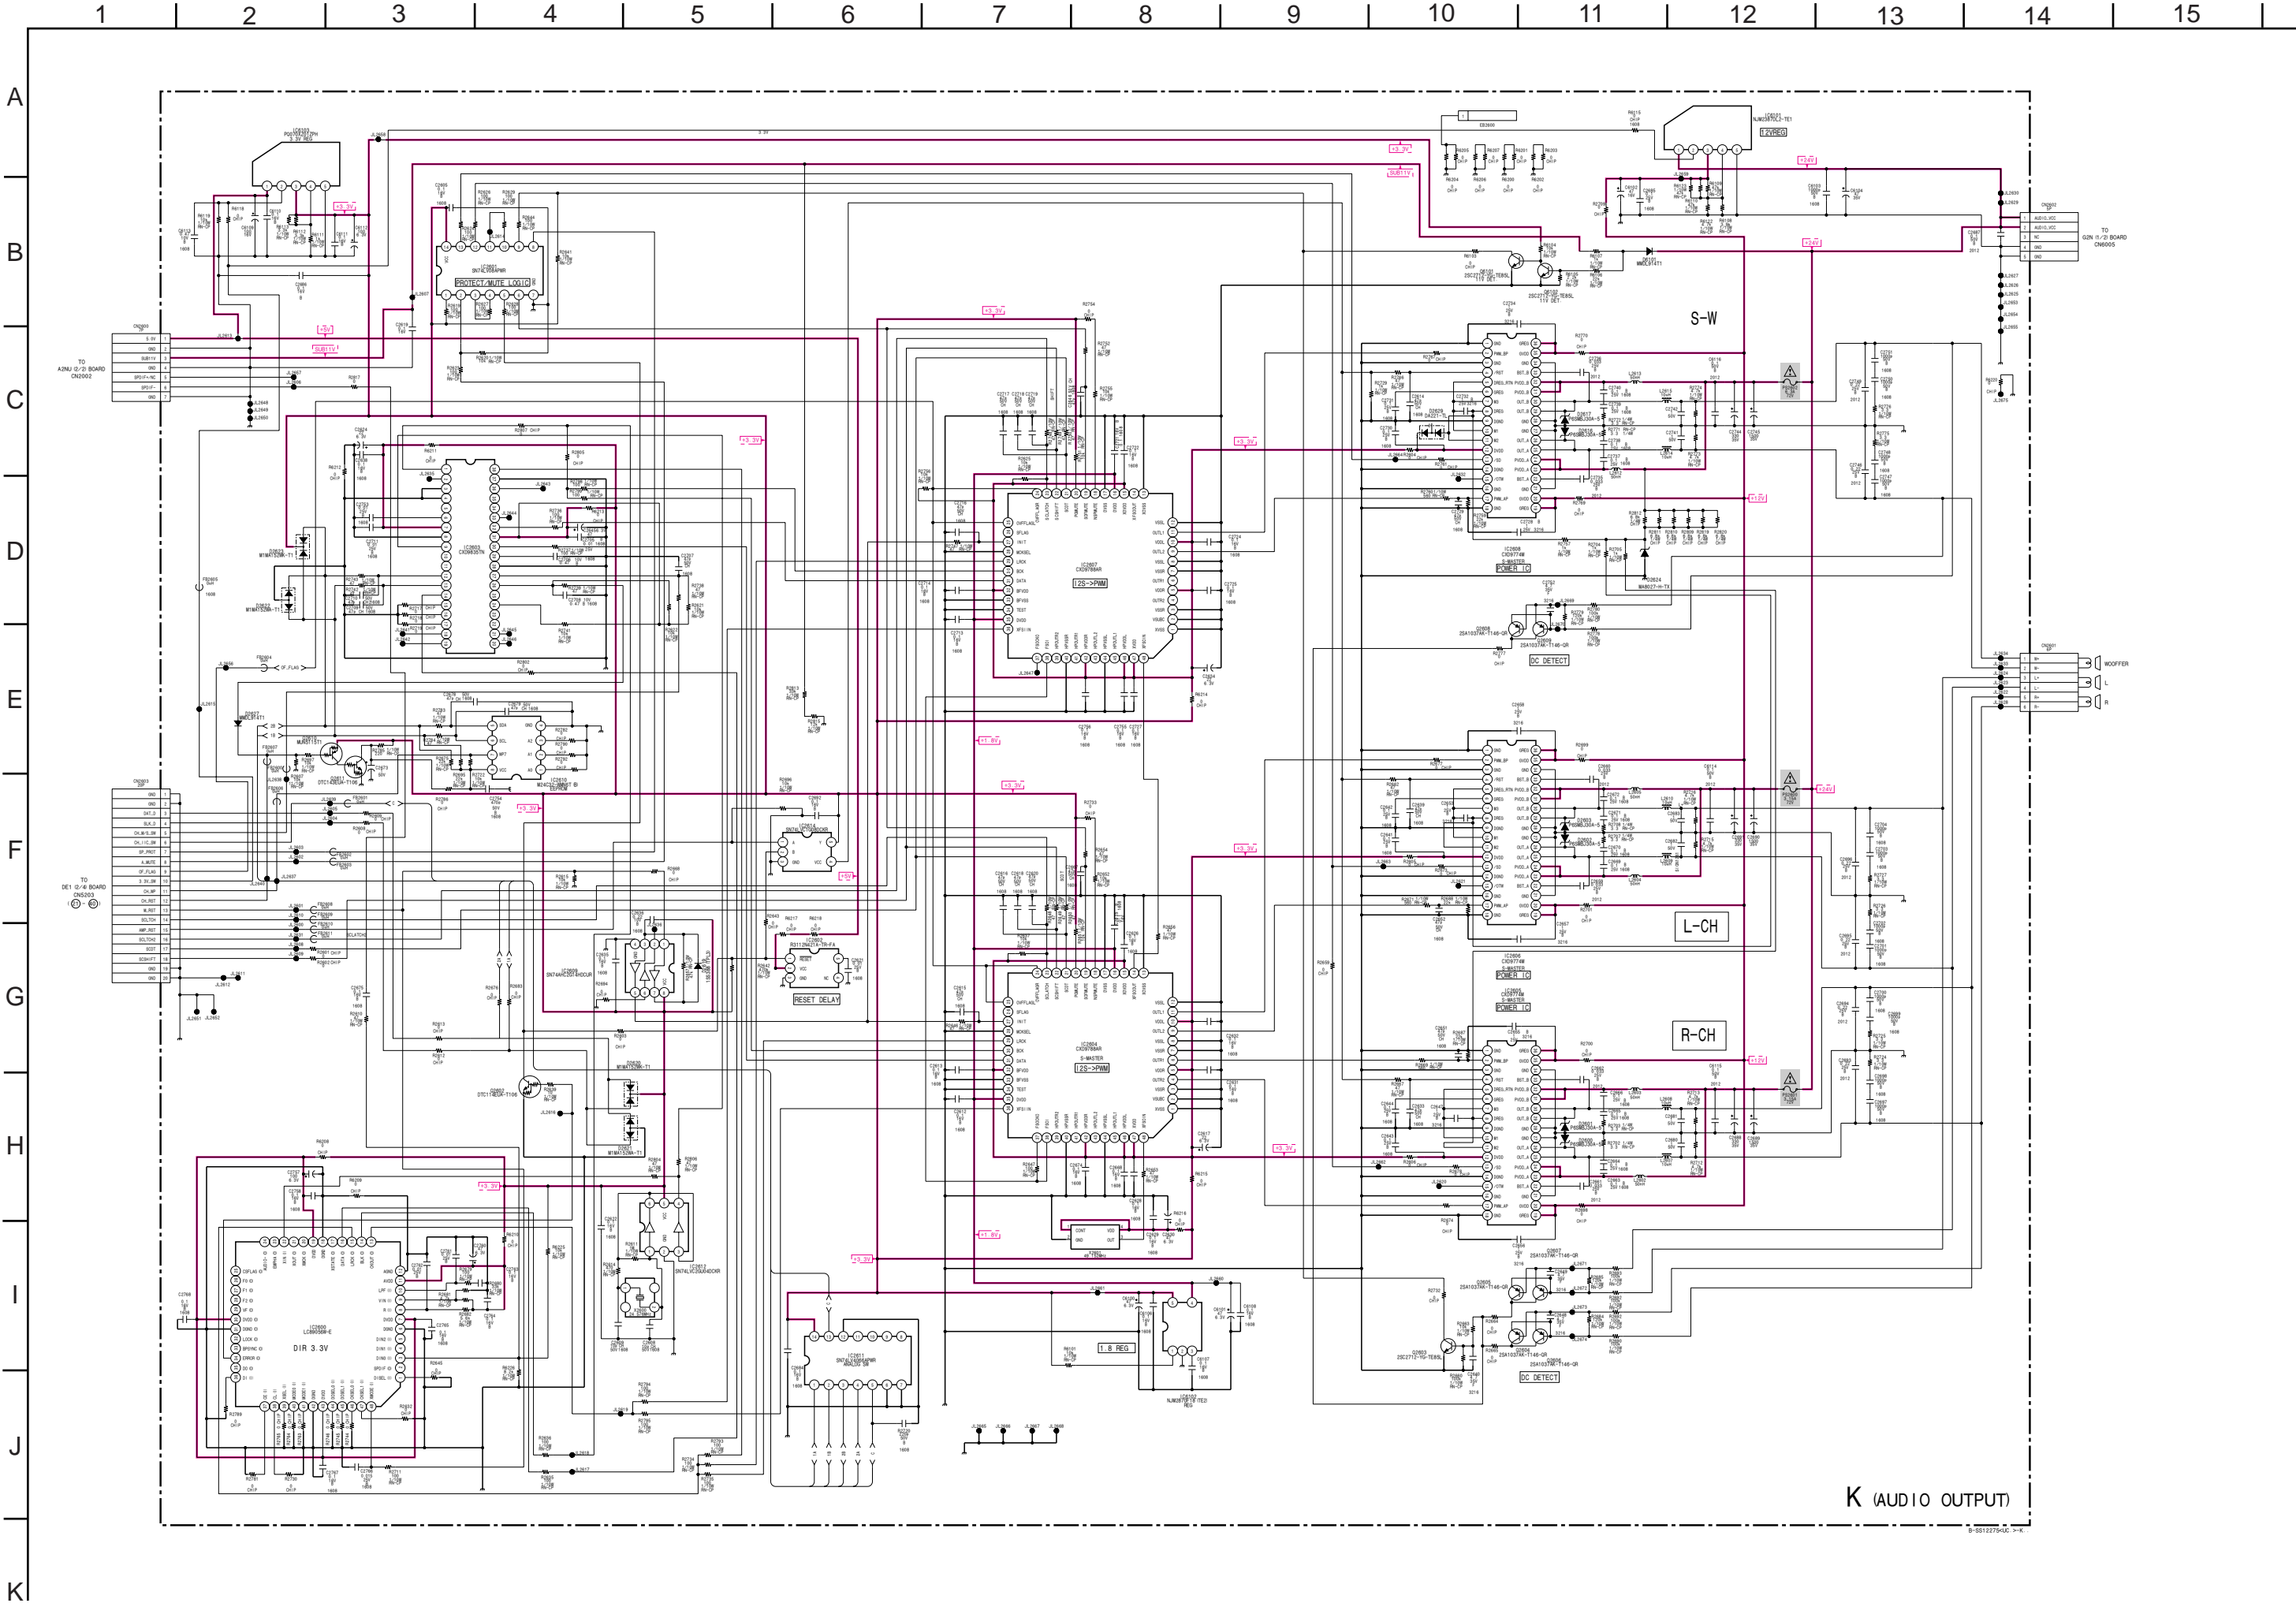


K

— K BOARD —

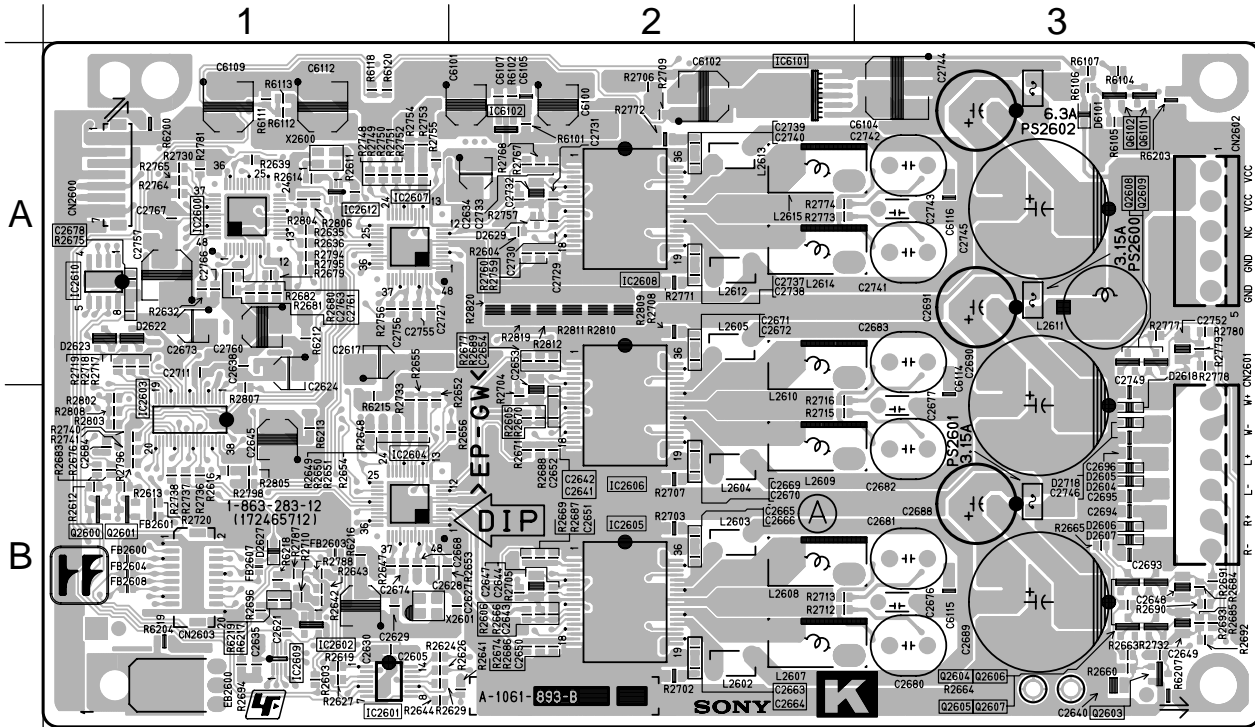

<COMPONENT SIDE>

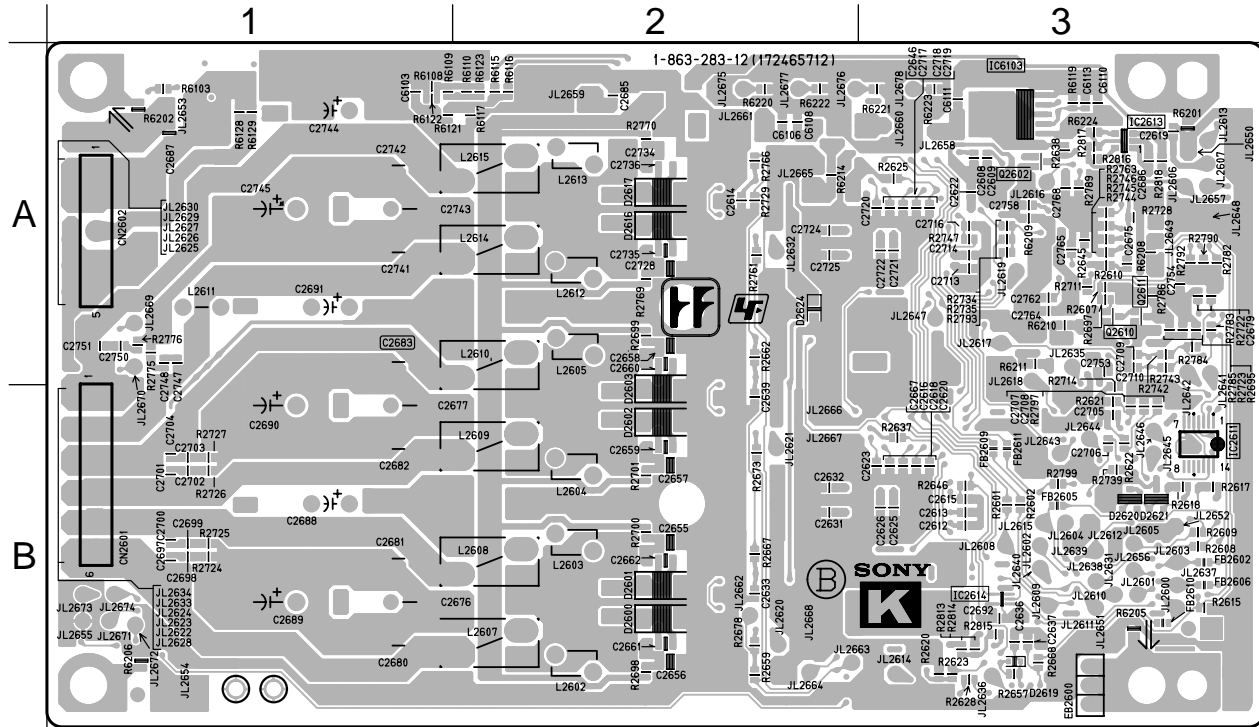


<CONDUCTOR SIDE>


• K BOARD SEMICONDUCTOR LOCATION


IC		TRANSISTOR			DIODE		
(Component Side)	(Conductor Side)	(Component Side)	(Conductor Side)	*	(Component Side)	(Conductor Side)	*
IC2600	A-1	Q2600	B-1	⑬	D2600	B-2	③
IC2601	B-1	Q2601	B-1	⑬	D2601	B-2	③
IC2602	B-1	Q2602	A-3	②	D2602	B-2	③
IC2603	B-1	Q2603	B-3	②	D2603	B-2	③
IC2604	B-1	Q2604	B-3	②	D2604	B-3	③
IC2605	B-2	Q2605	B-3	②	D2605	B-3	③
IC2606	B-2	Q2606	B-3	②	D2606	B-3	③
IC2607	A-1	Q2607	B-3	②	D2607	B-3	③
IC2608	A-2	Q2608	A-3	②	D2616	A-2	③
IC2609	B-1	Q2609	A-3	②	D2617	A-2	③
IC2610	A-1	Q2610	A-3	②	D2618	B-3	③
IC2611	B-3	Q2611	A-3	②	D2619	B-3	③
IC2612	A-1	Q6101	A-3	②	D2620	B-3	③
IC2613	A-3	Q6102	A-3	②	D2621	B-3	③
IC2614	B-3				D2622	A-1	③
IC6101	A-2				D2623	A-1	③
IC6102	A-2				D2624	A-2	③
IC6103	A-3				D2627	B-1	③
					D2718	B-3	③
					D6101	A-3	③

*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-14)

(13) Schematic Diagrams of M1U Board

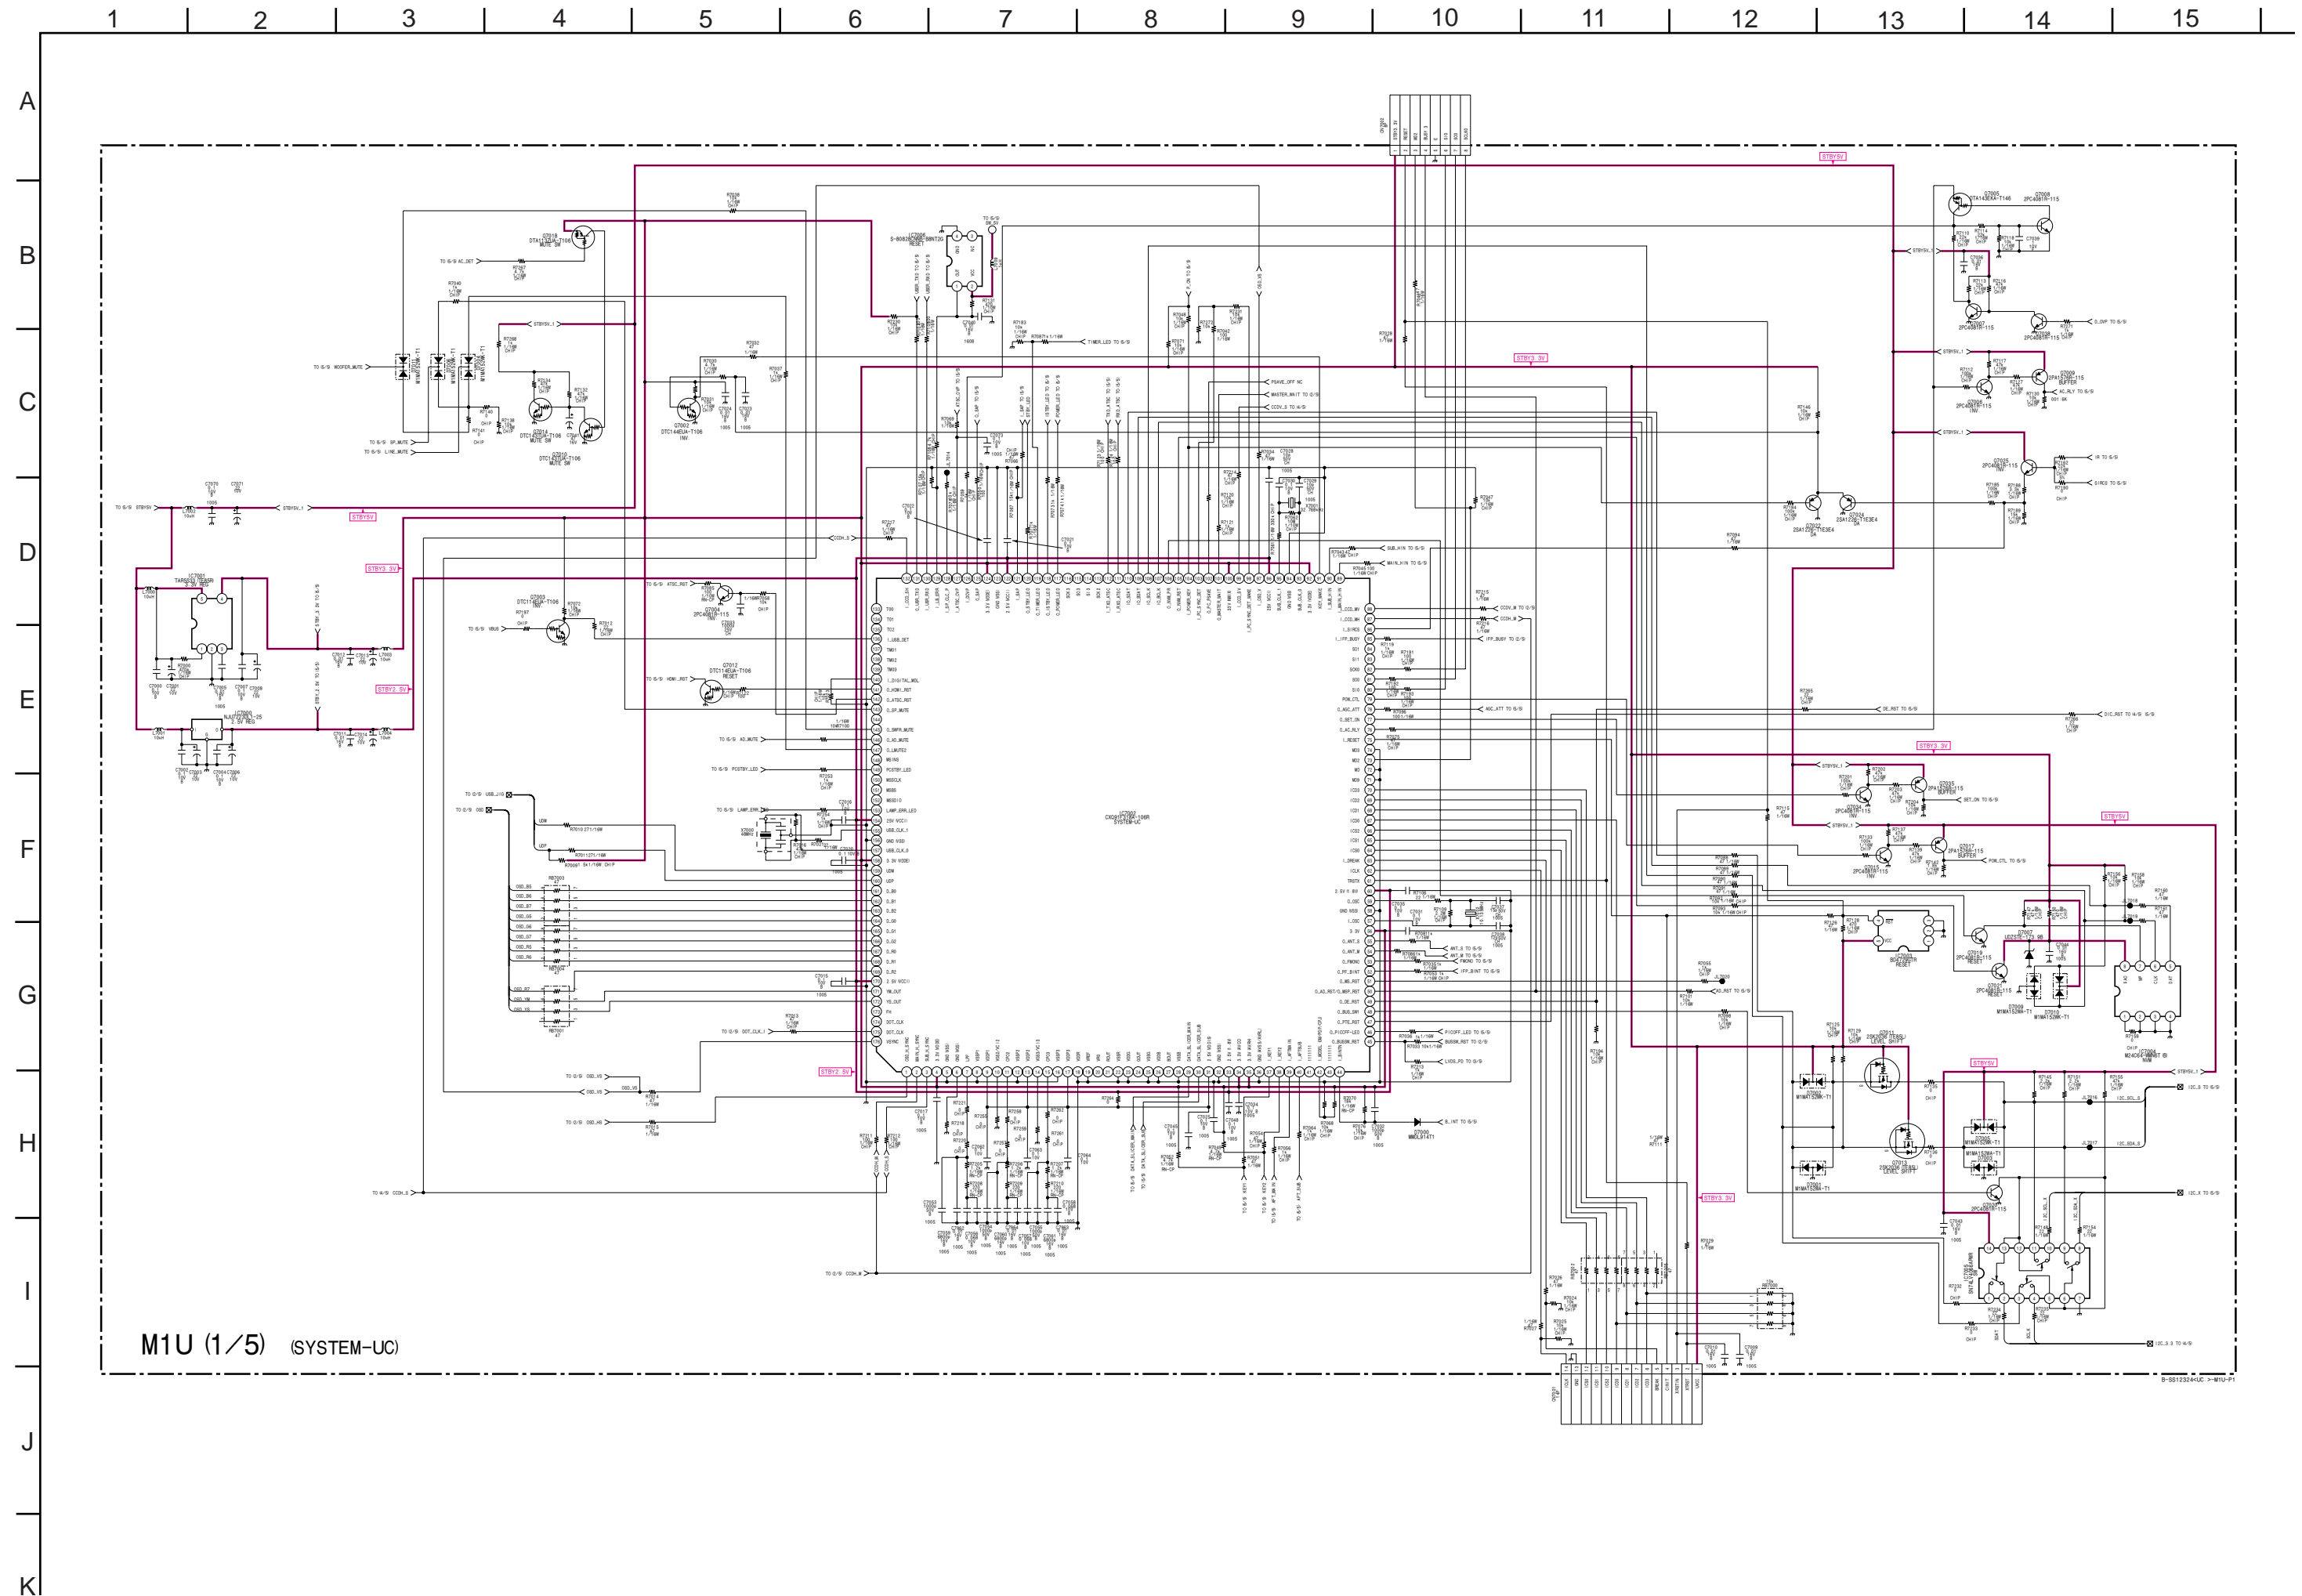


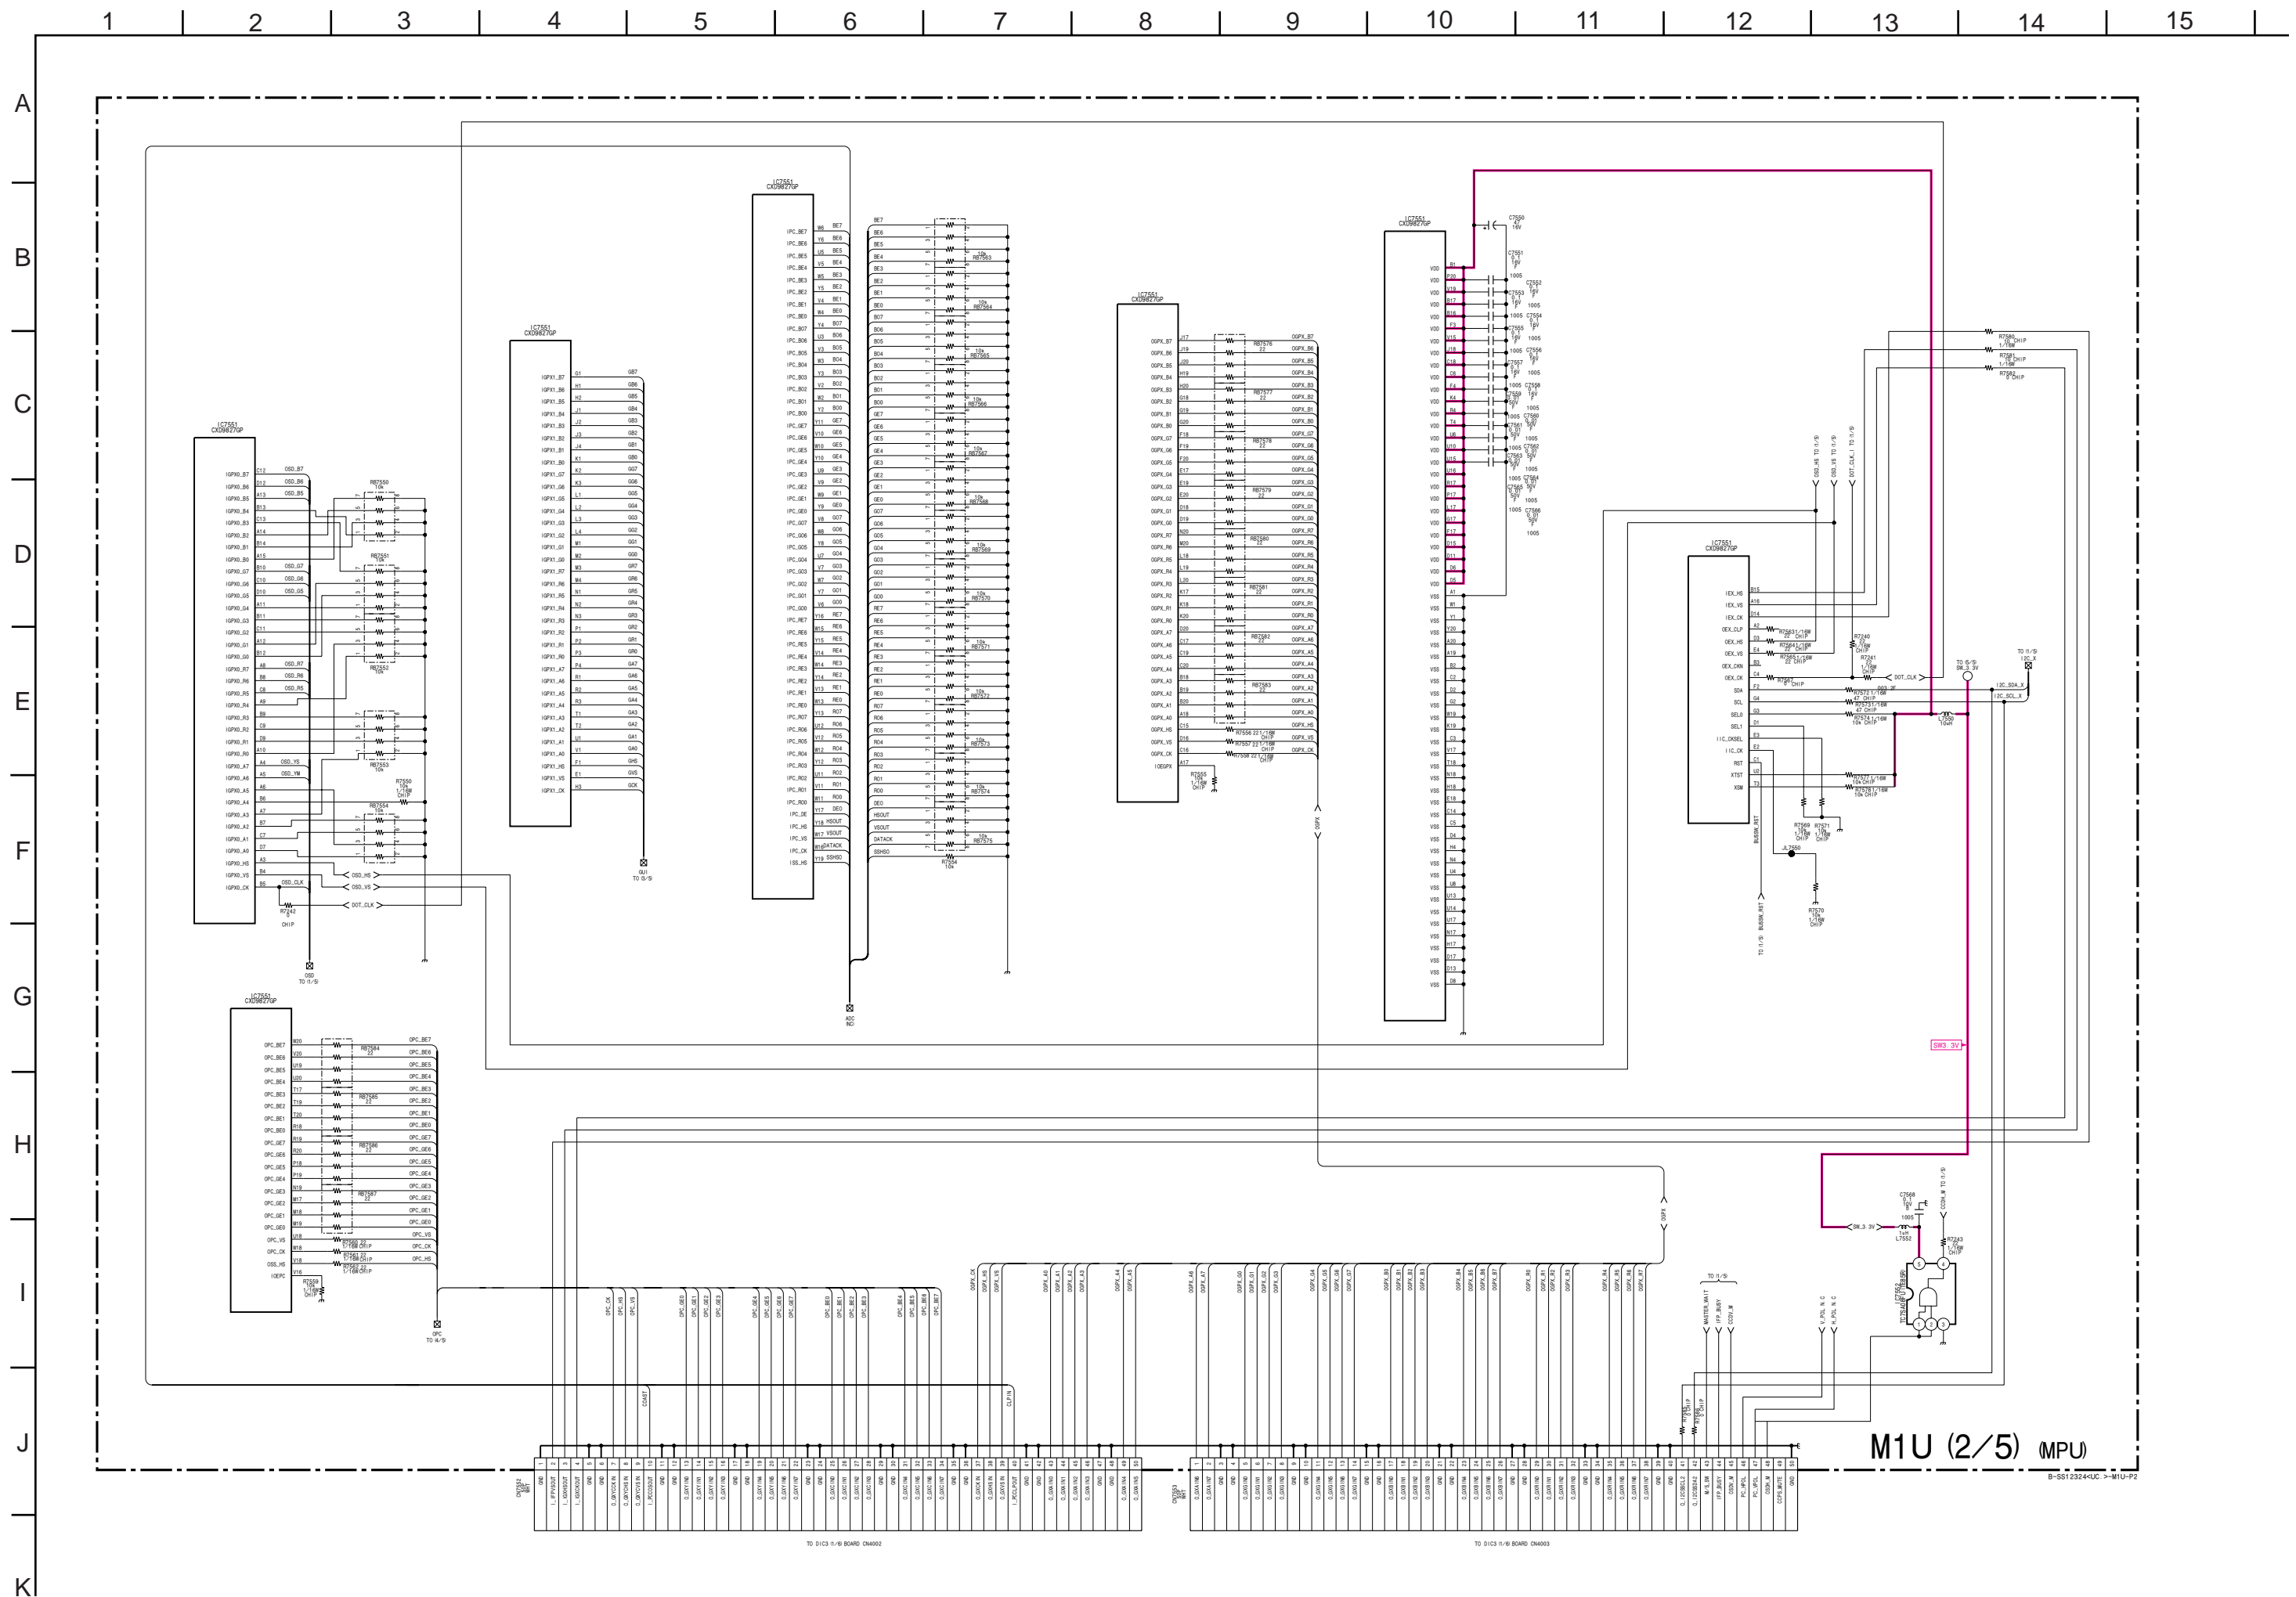




1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

A
B
C
D
E
F
G
H
I
J
K

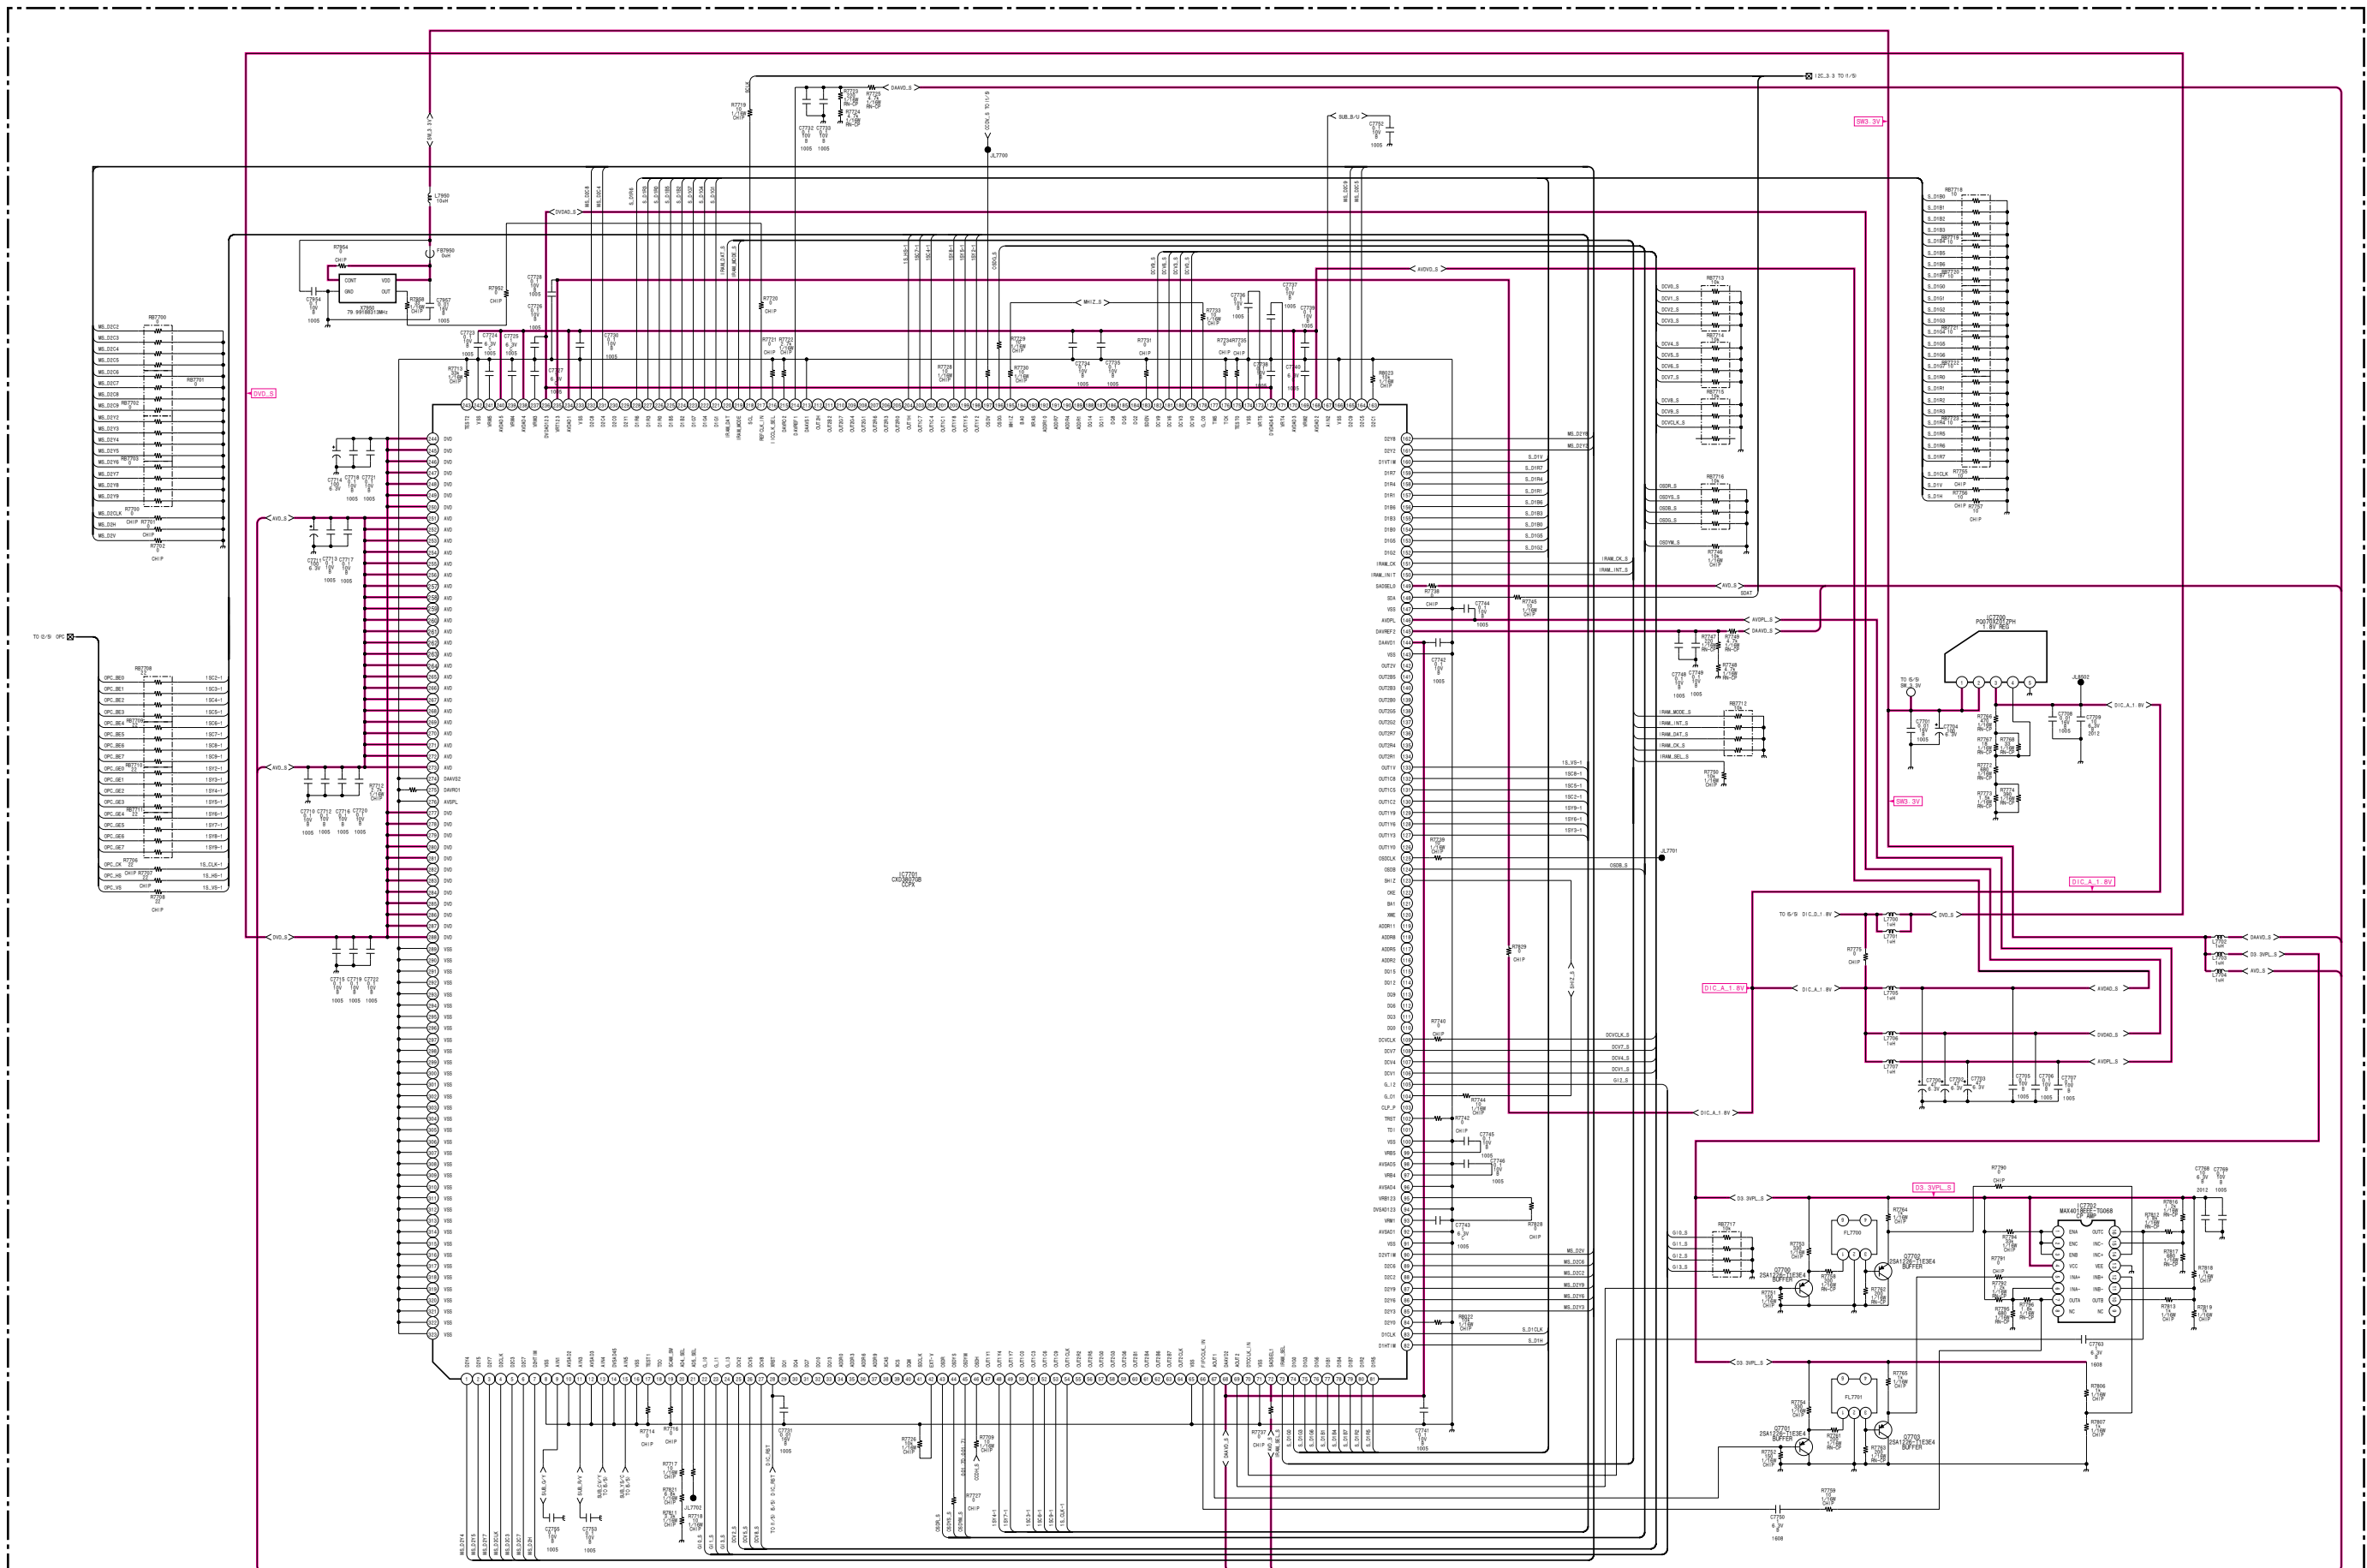


M1U (4/5) (CCPX)

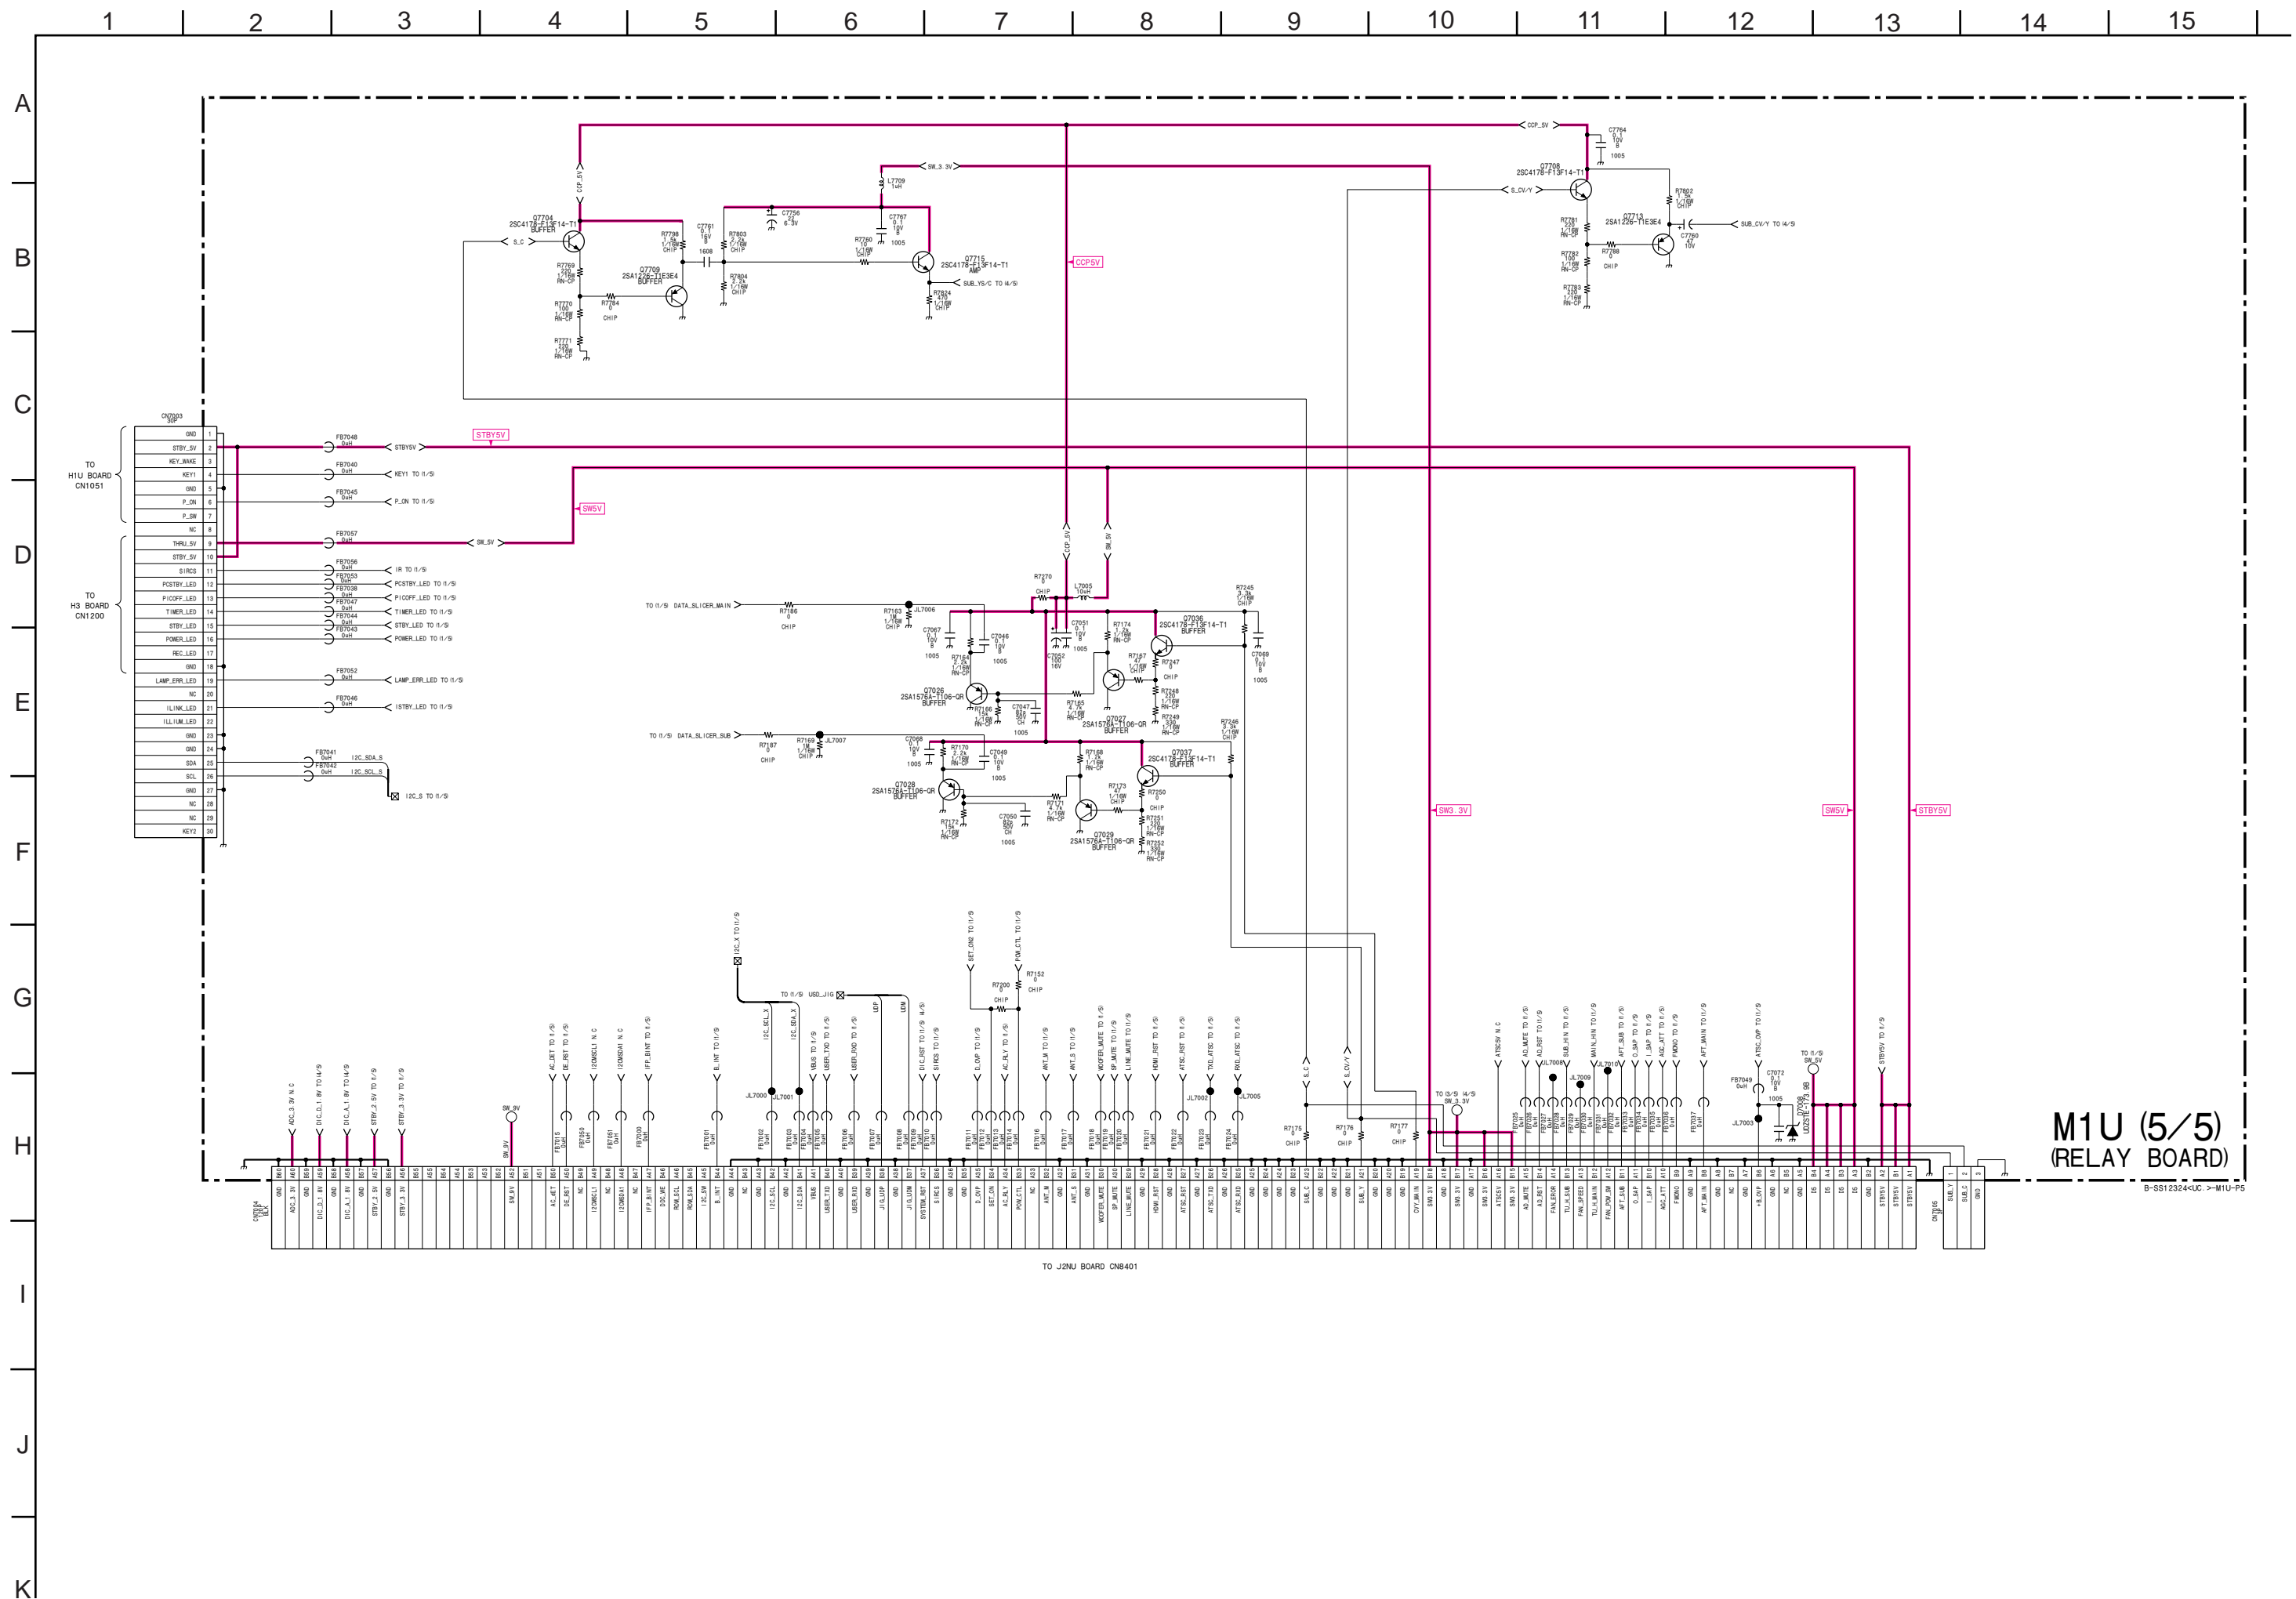


M1U

[CCPX, LVDS RECEIVER, MPU, SYSTEM UC]

— M1U BOARD —

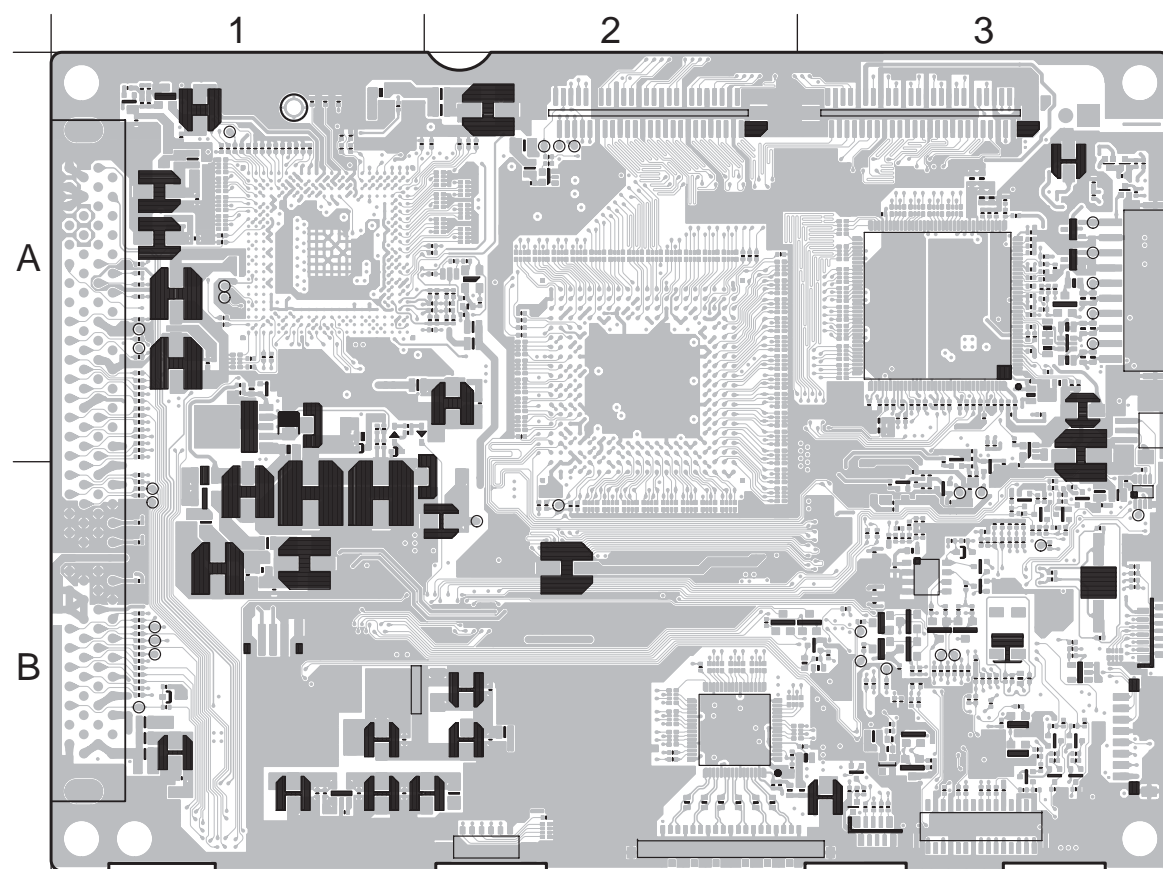


<COMPONENT SIDE>

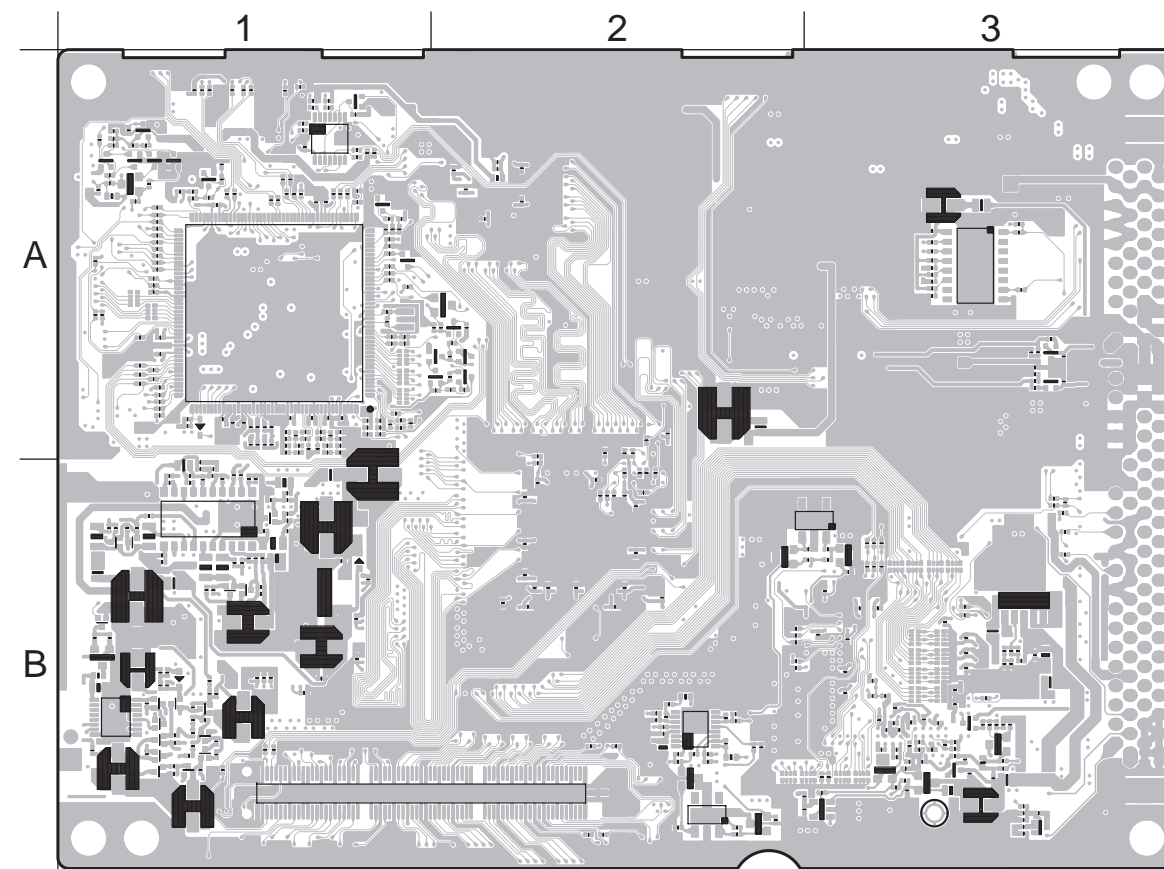


<CONDUCTOR SIDE>

(14) Schematic Diagram of P Board

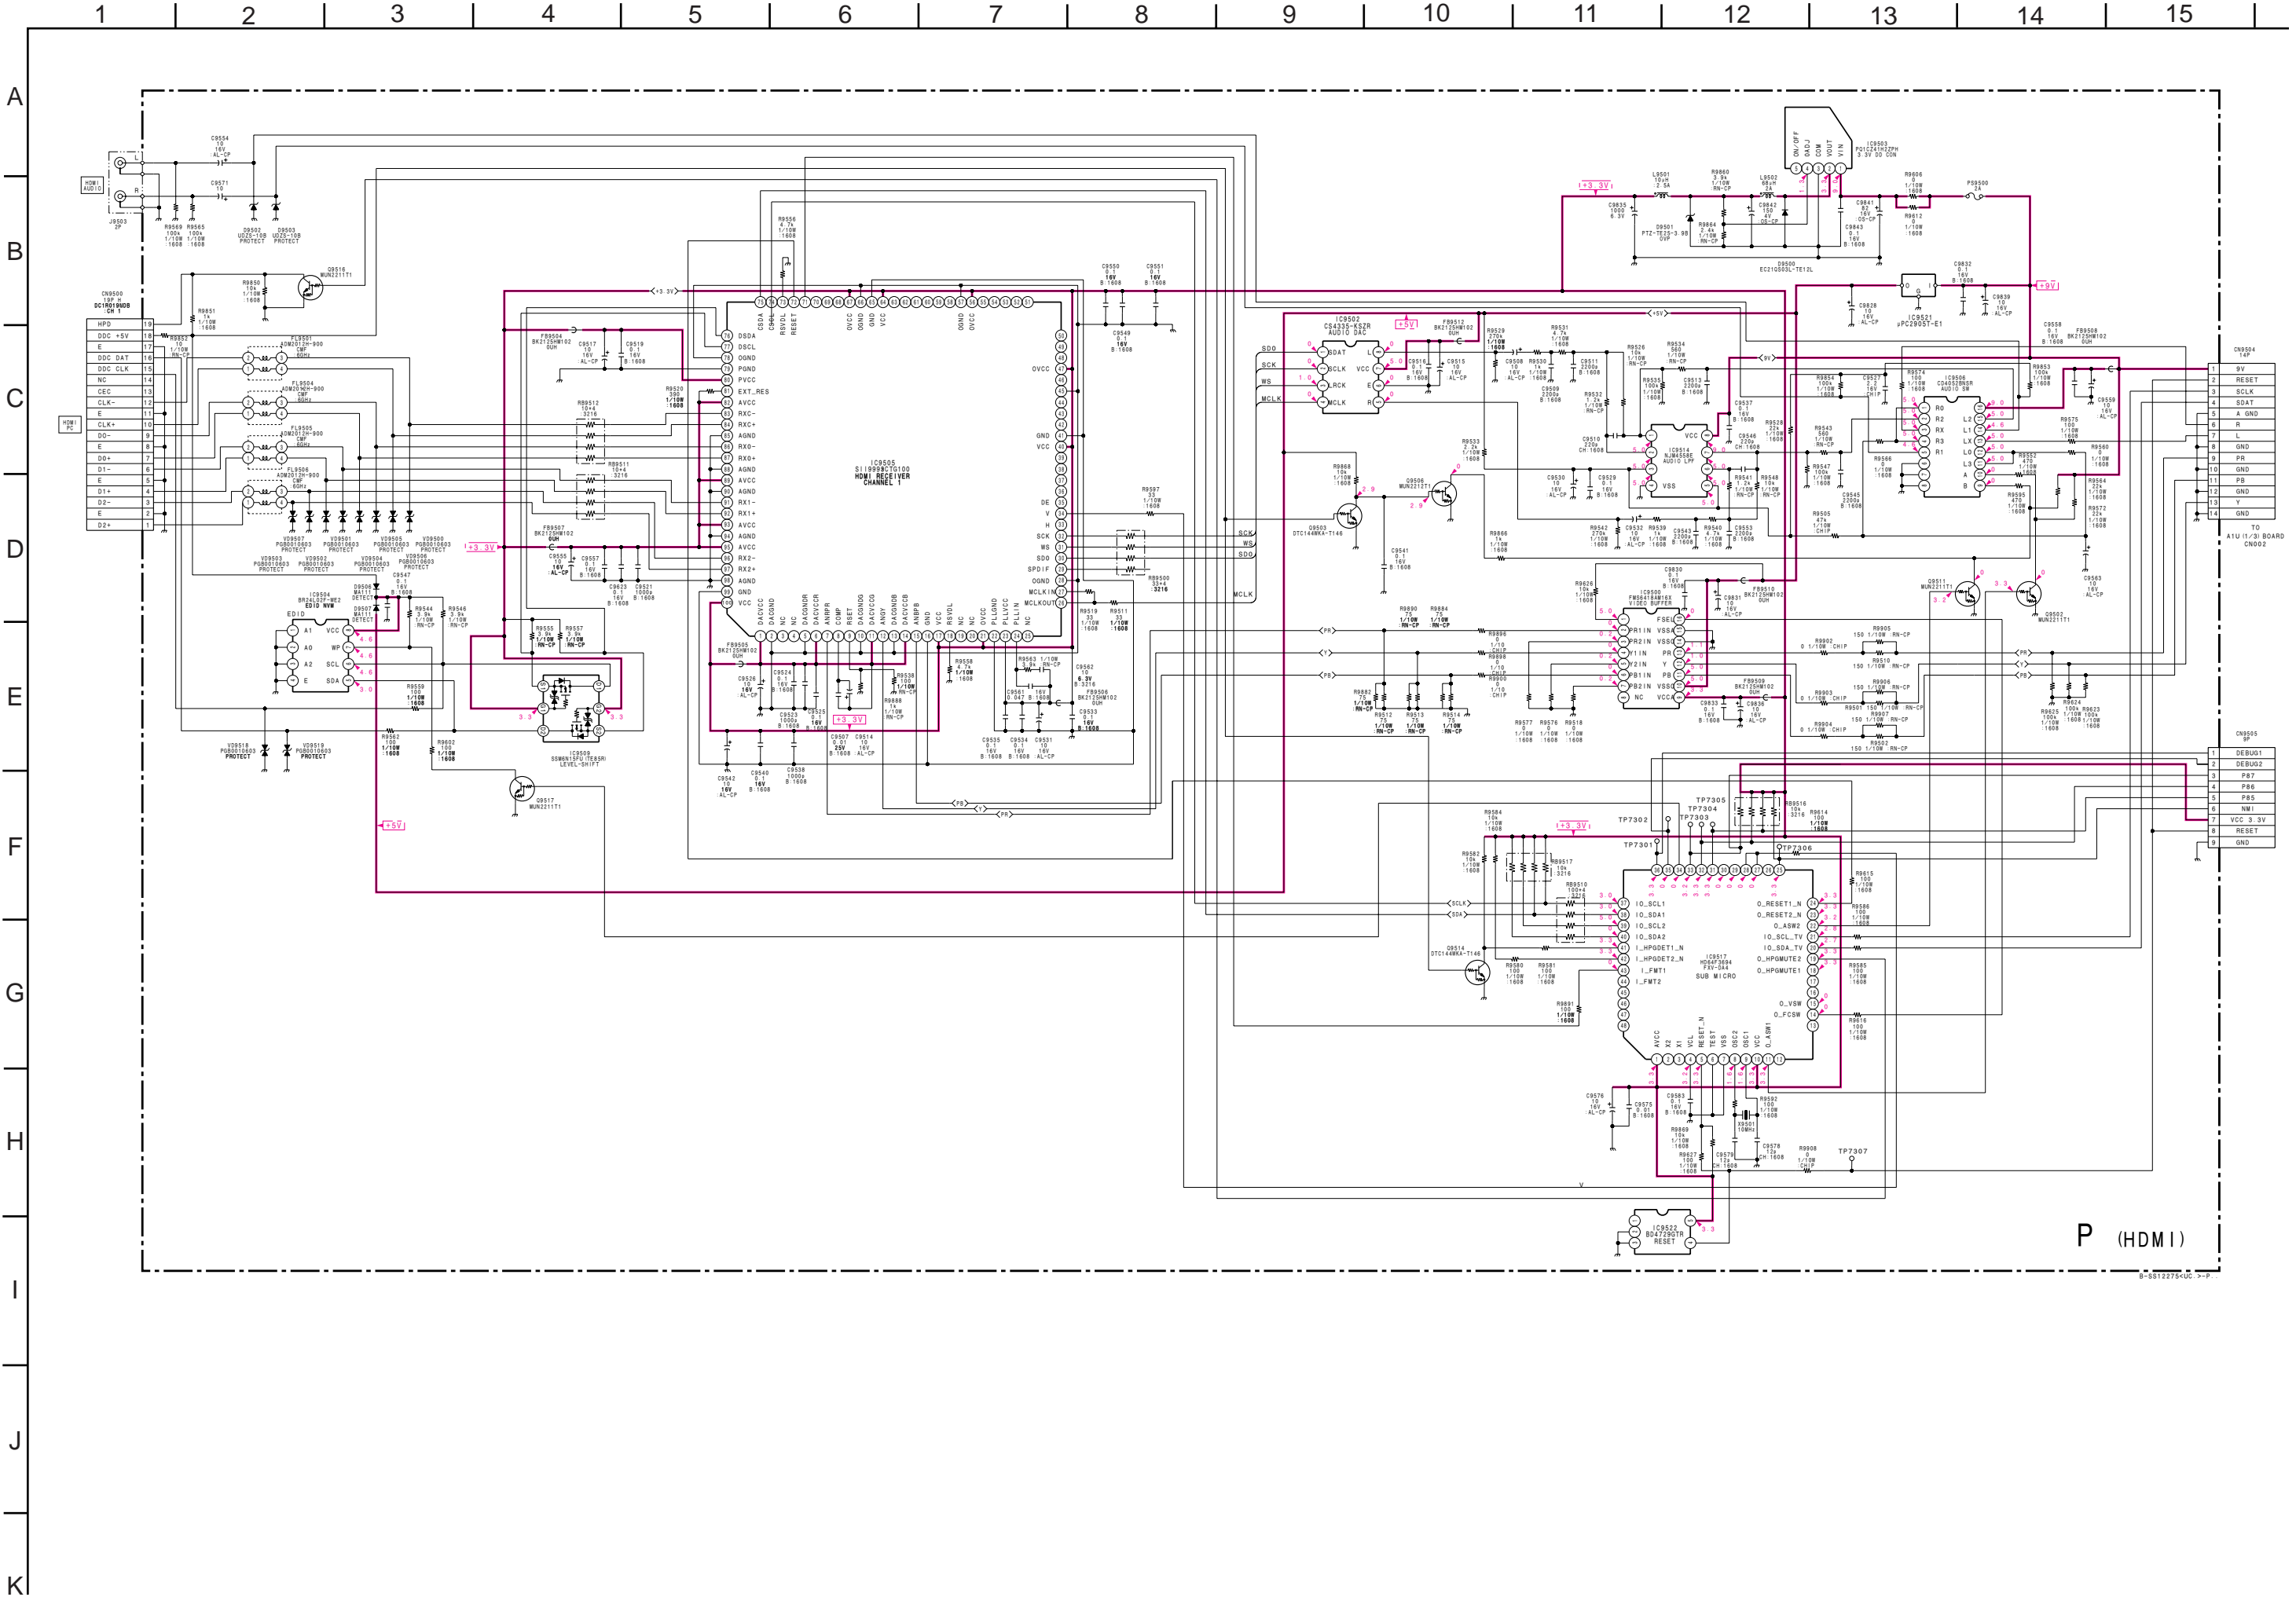


P

— P BOARD —

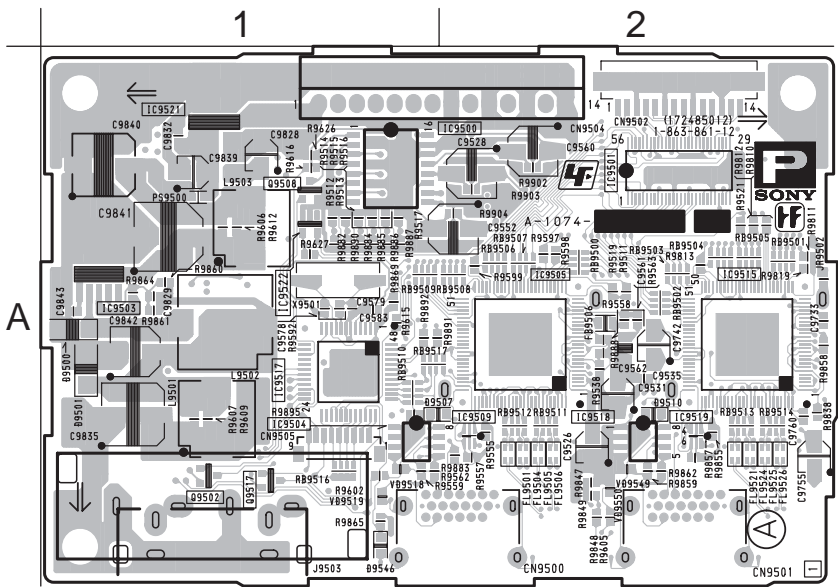

<COMPONENT SIDE>

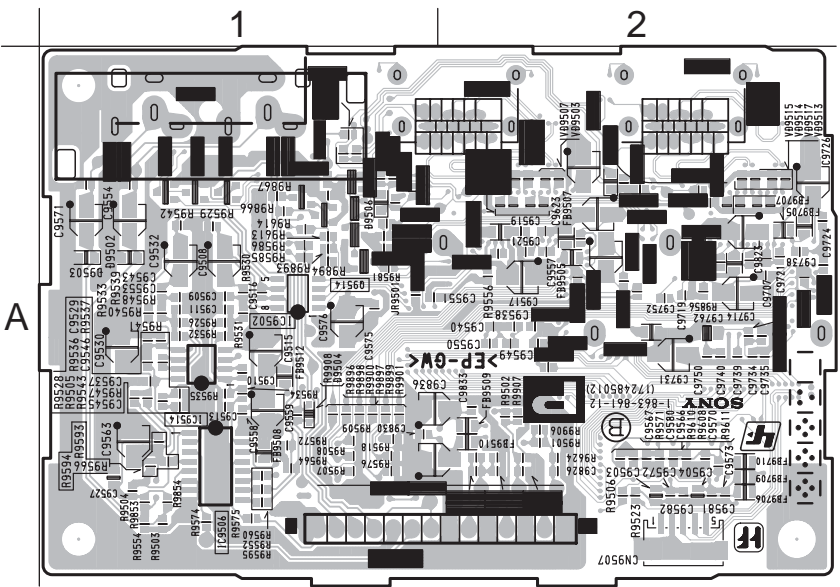


<CONDUCTOR SIDE>

• P BOARD SEMICONDUCTOR LOCATION

IC		TRANSISTOR			DIODE		
(Component Side)	(Conductor Side)	(Component Side)	(Conductor Side)	*	(Component Side)	(Conductor Side)	*
IC9500	A-1	Q9502	A-1	②	D9500	A-1	③
IC9502	A-1	Q9503	A-1	②	D9501	A-1	③
IC9503	A-1	Q9506	A-1	②	D9502	A-1	③
IC9504	A-1	Q9511	A-1	②	D9503	A-1	③
IC9505	A-2	Q9514	A-1	②	D9506	A-1	③
IC9506	A-1	Q9516	A-1	②	D9507	A-1	③
IC9509	A-2	Q9517	A-1	②			
IC9514	A-1						
IC9517	A-1						
IC9521	A-1						
IC9522	A-1						


※: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-14)

(15) Schematic Diagram of QH Board

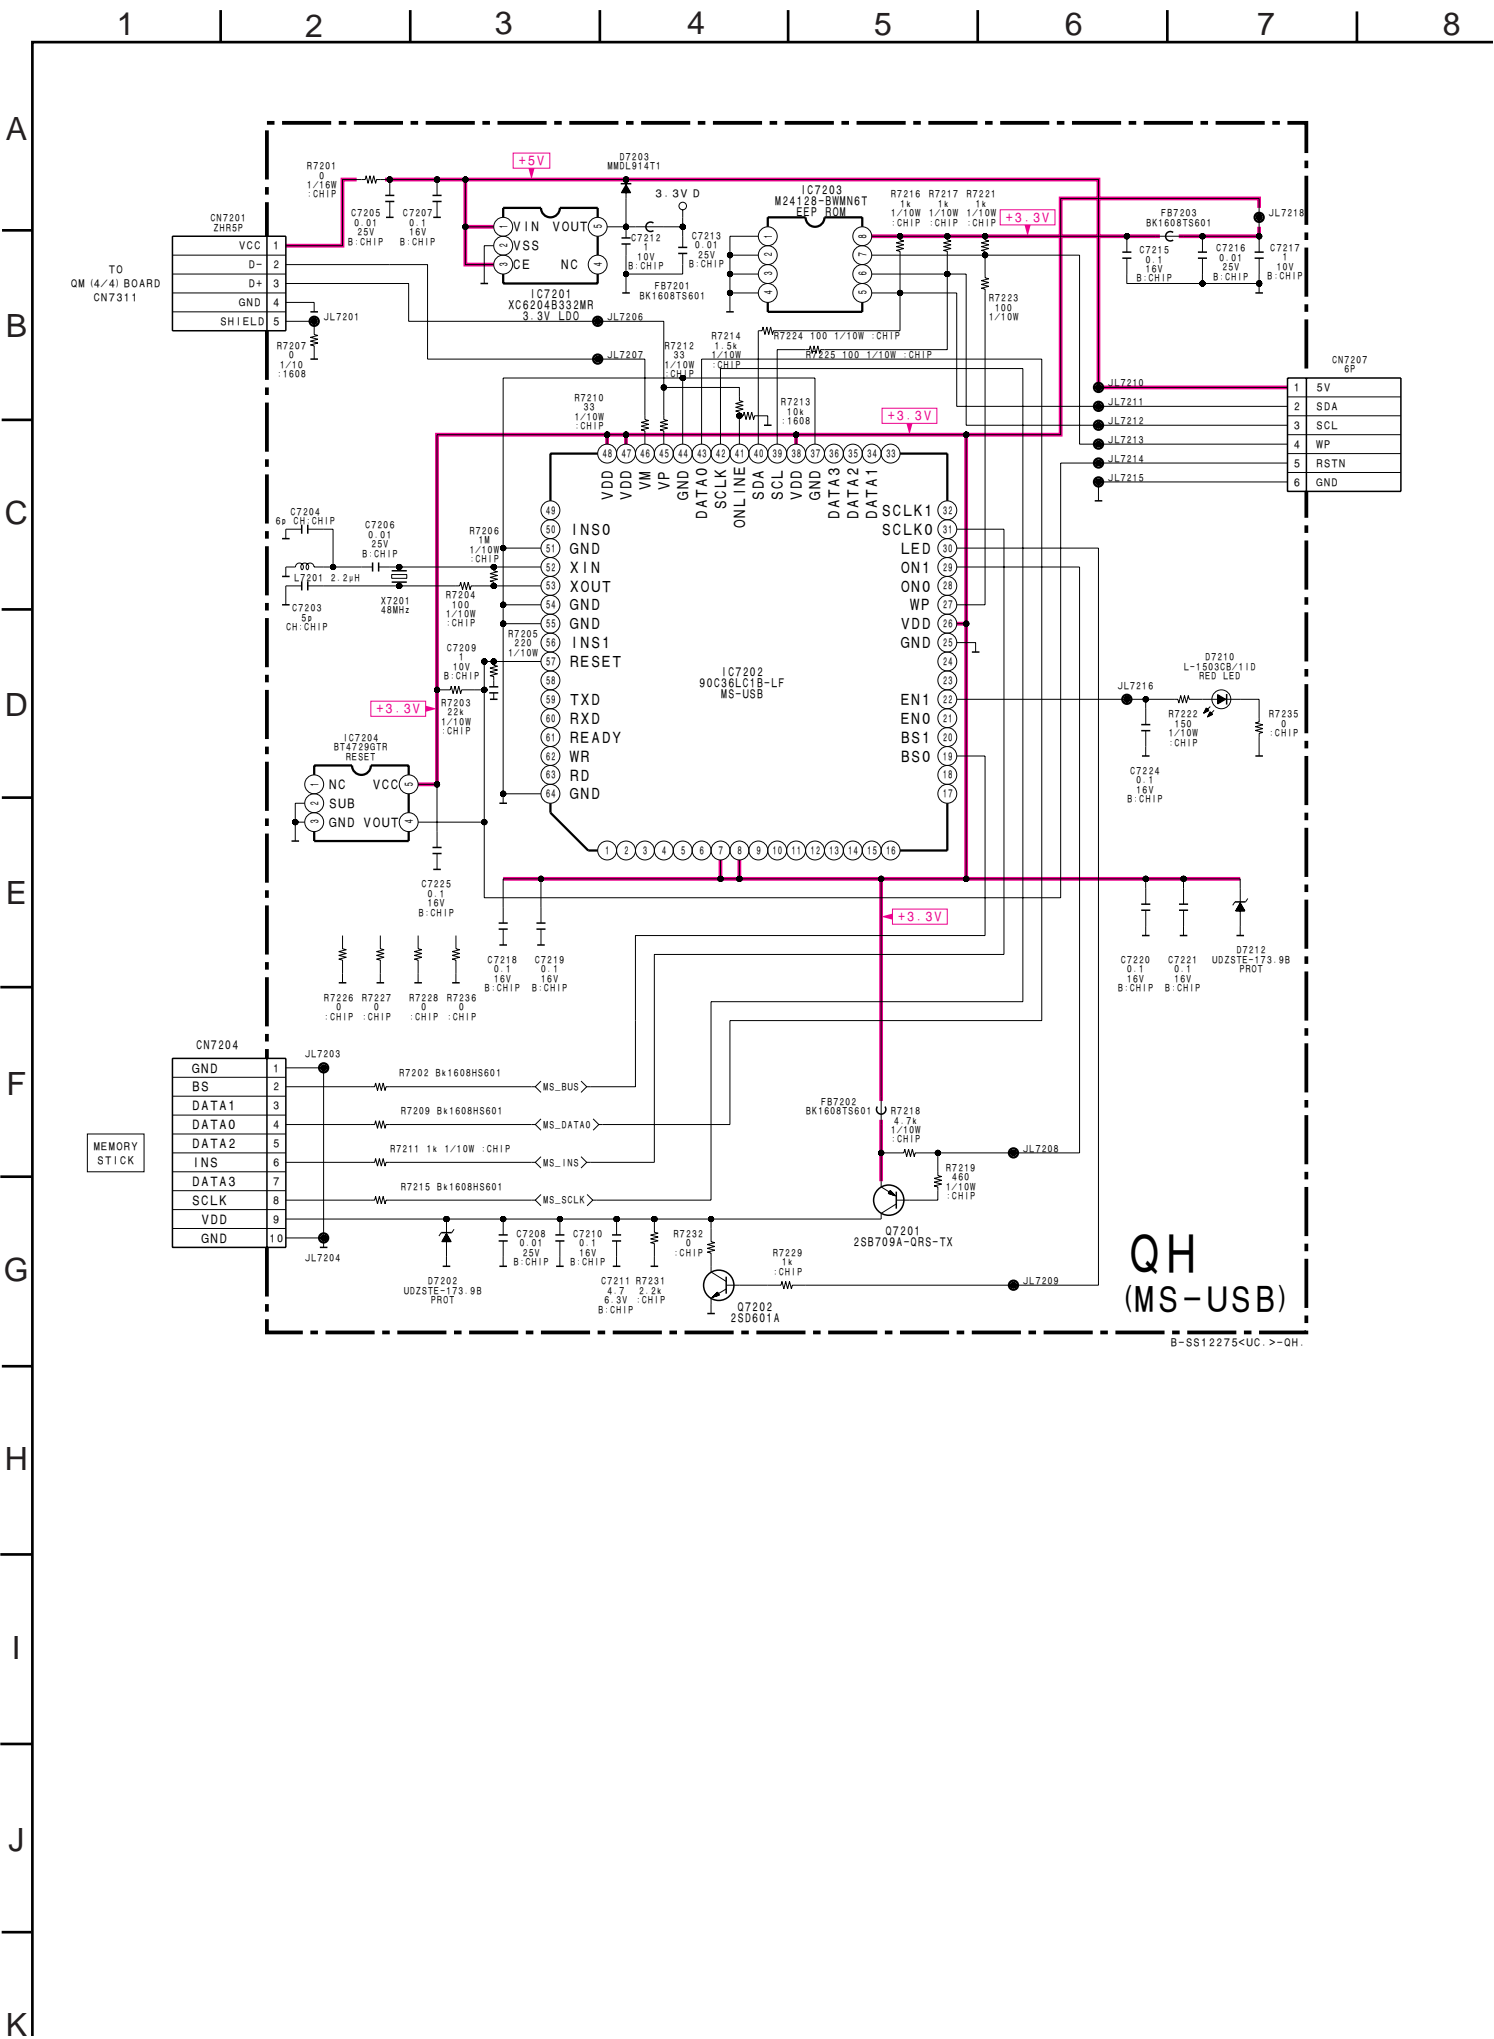


QH [MS-USB]

— QH BOARD —

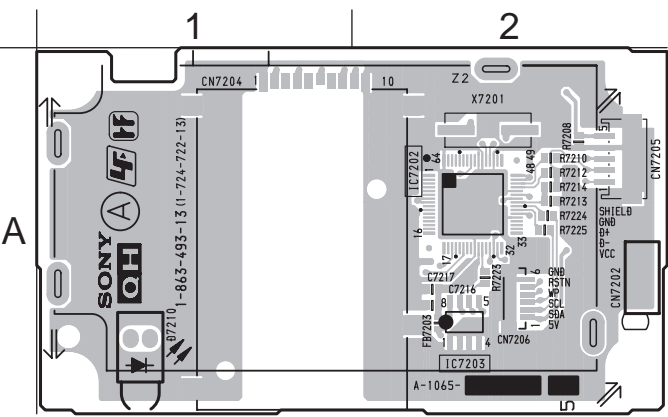

<COMPONENT SIDE>

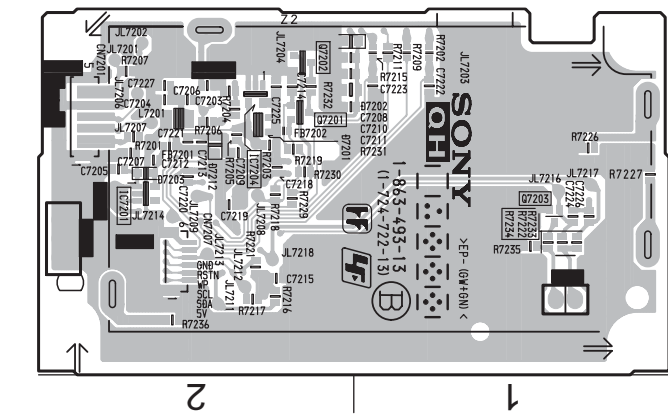


<CONDUCTOR SIDE>


• QH BOARD SEMICONDUCTOR LOCATION


IC	
(Component Side)	(Conductor Side)
IC7201	B-1
IC7202	B-1
IC7203	B-1
IC7204	B-1
TRANSISTOR	
(Component Side)	(Conductor Side) *
Q7201	B-1 2
Q7202	B-1 2
DIODE	
(Component Side)	(Conductor Side) *
D7202	B-1 3
D7203	B-1 3
D7210	A-1 -
D7212	B-1 3


*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-14)

(16) Schematic Diagrams of QM Board

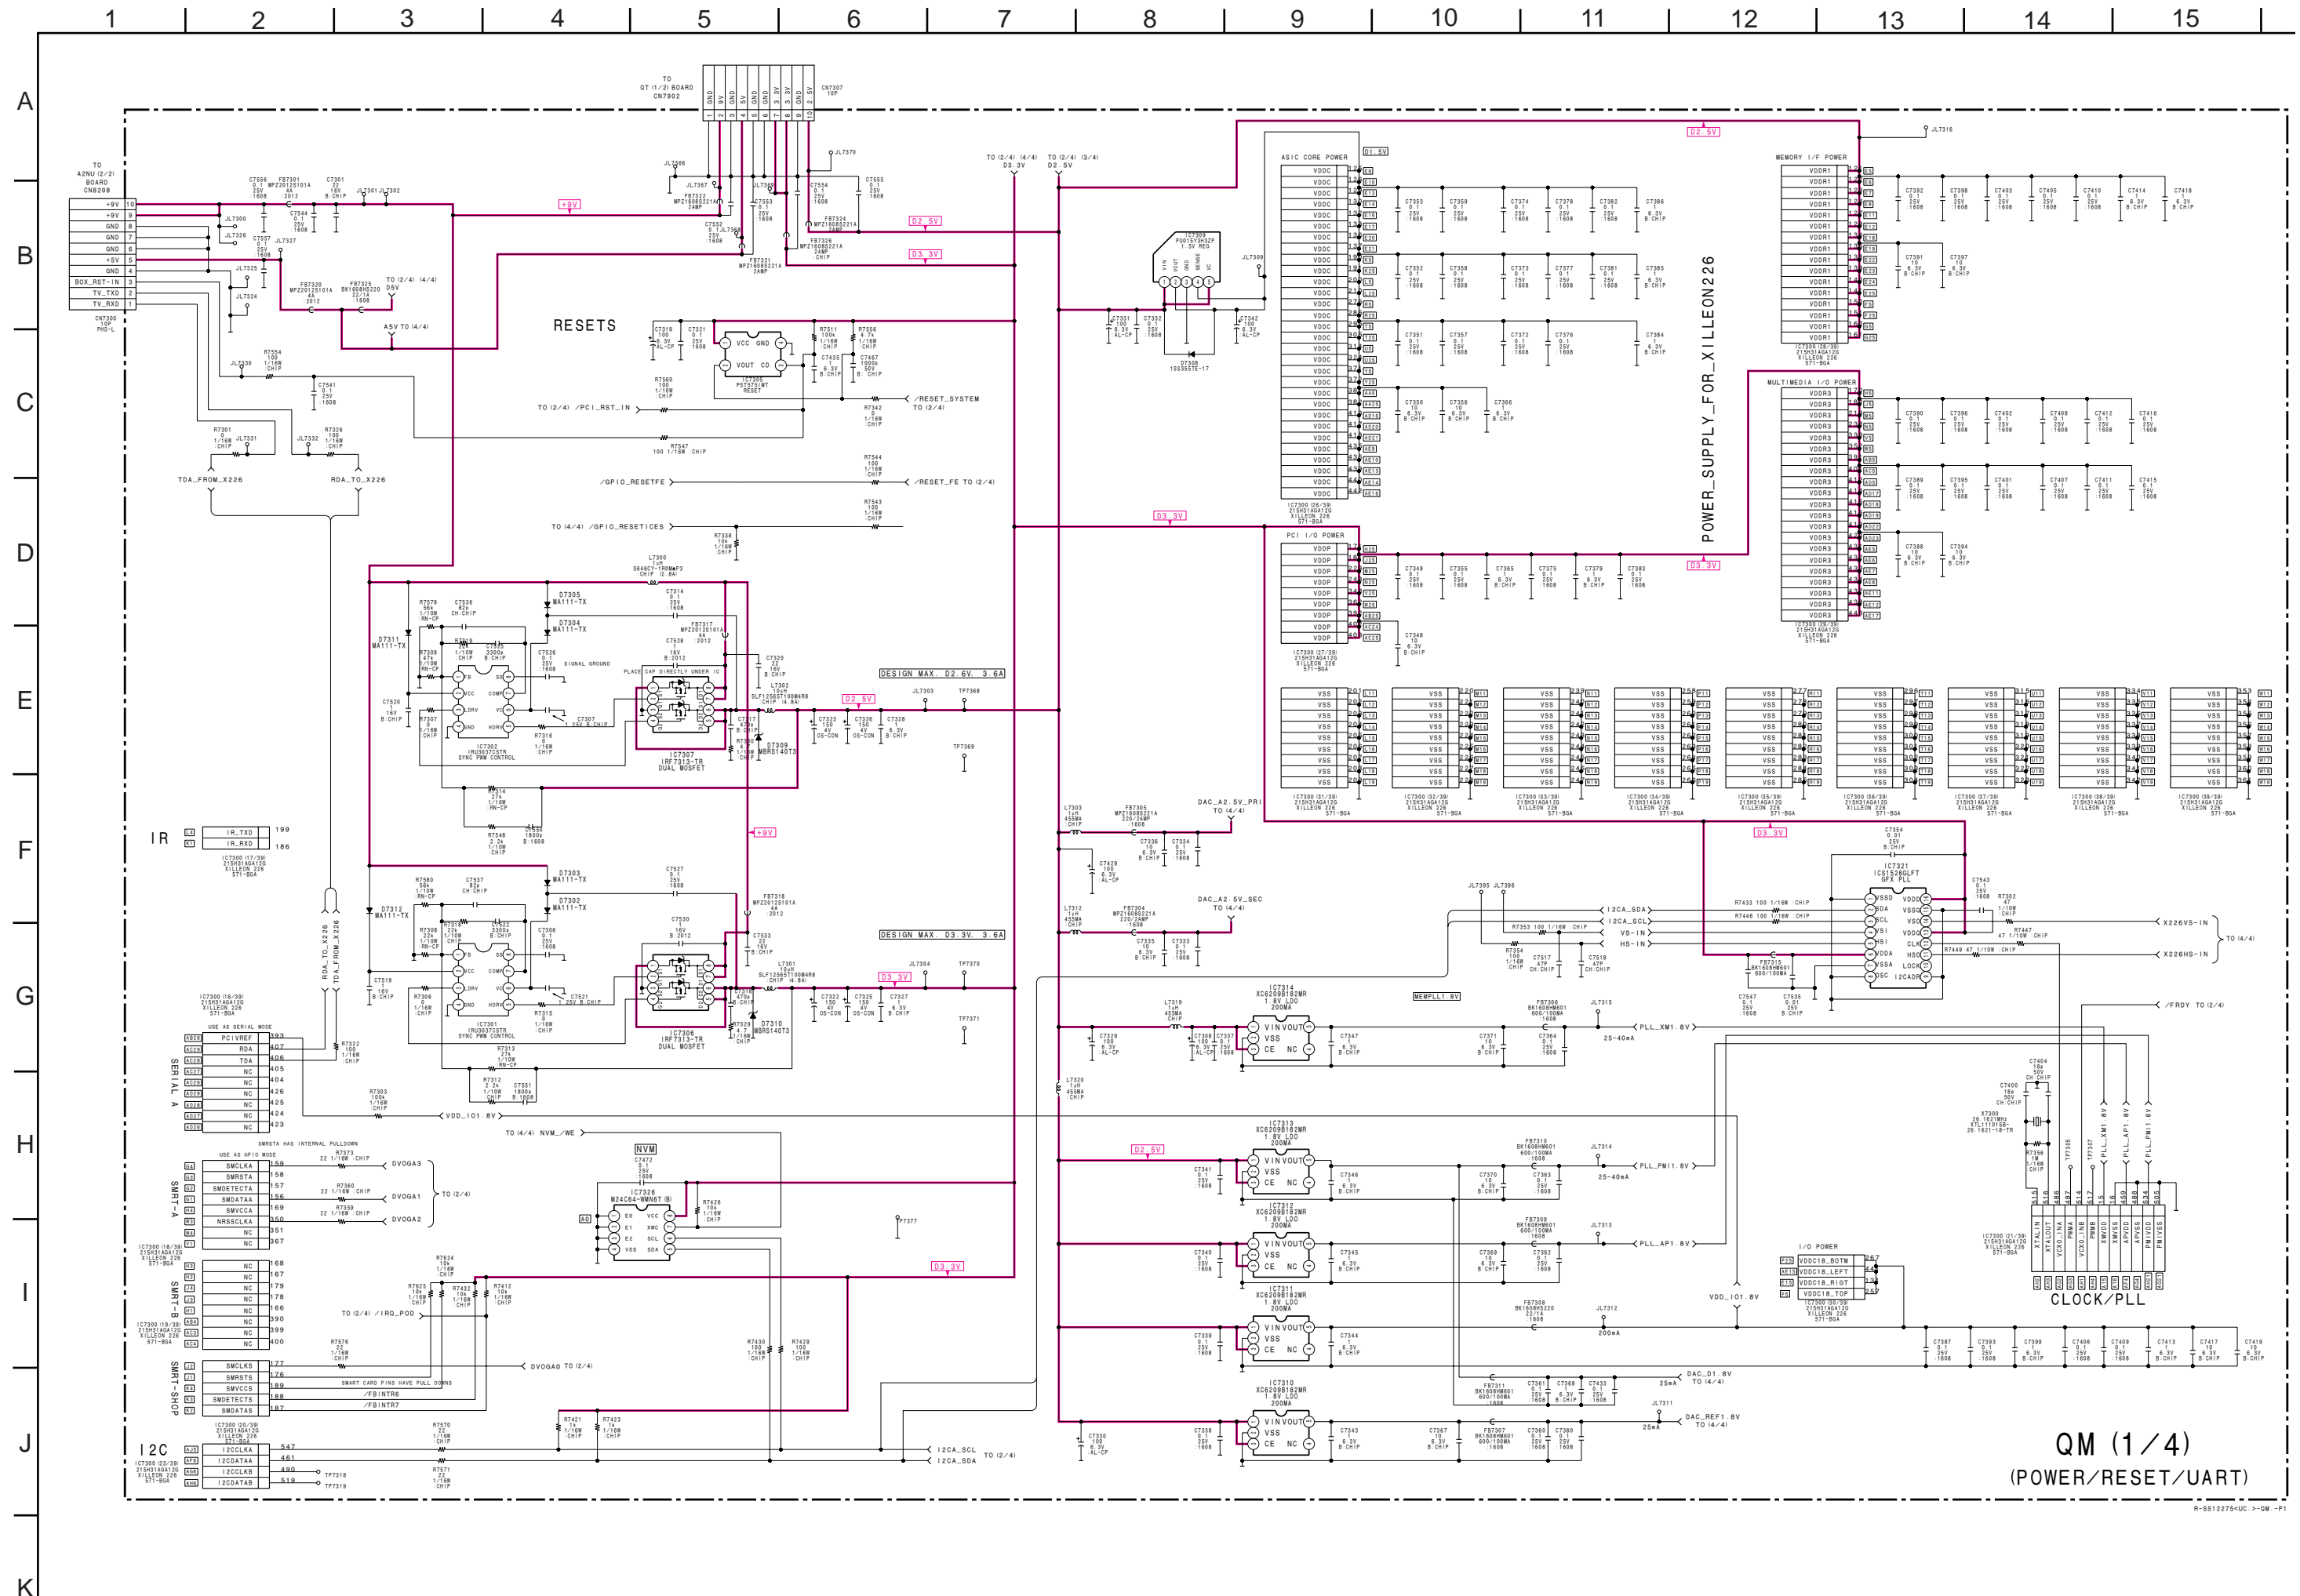


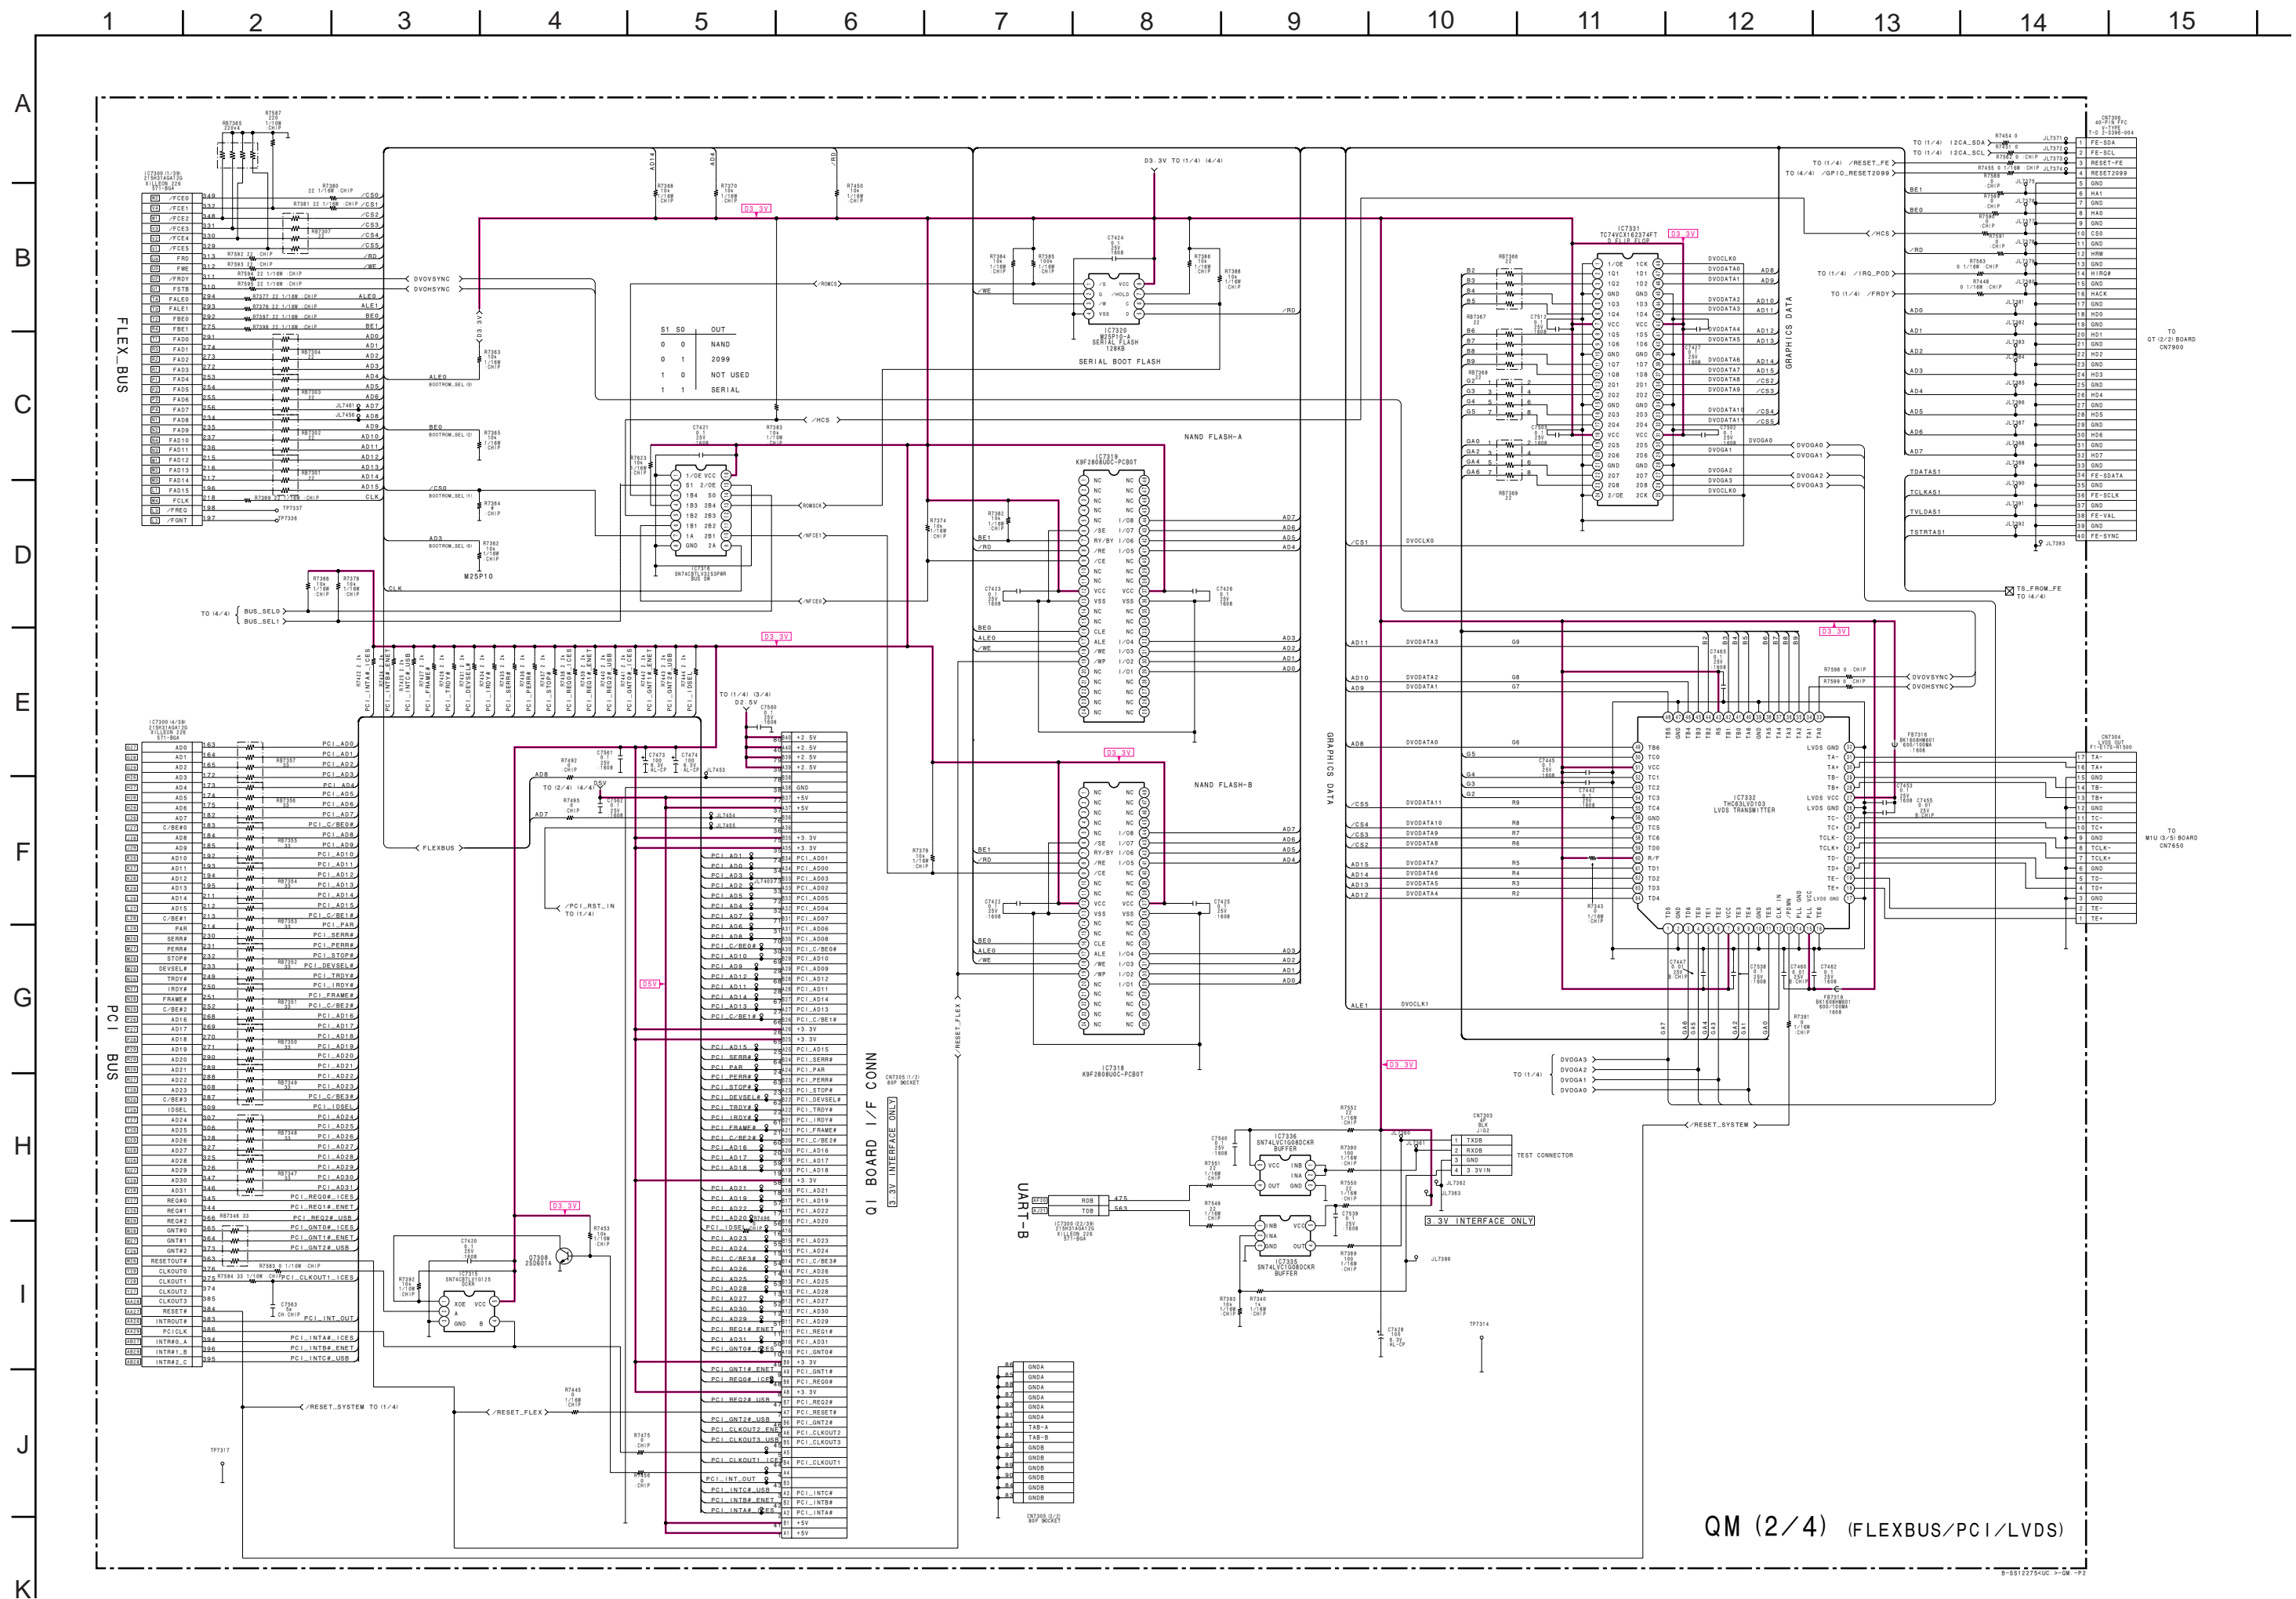

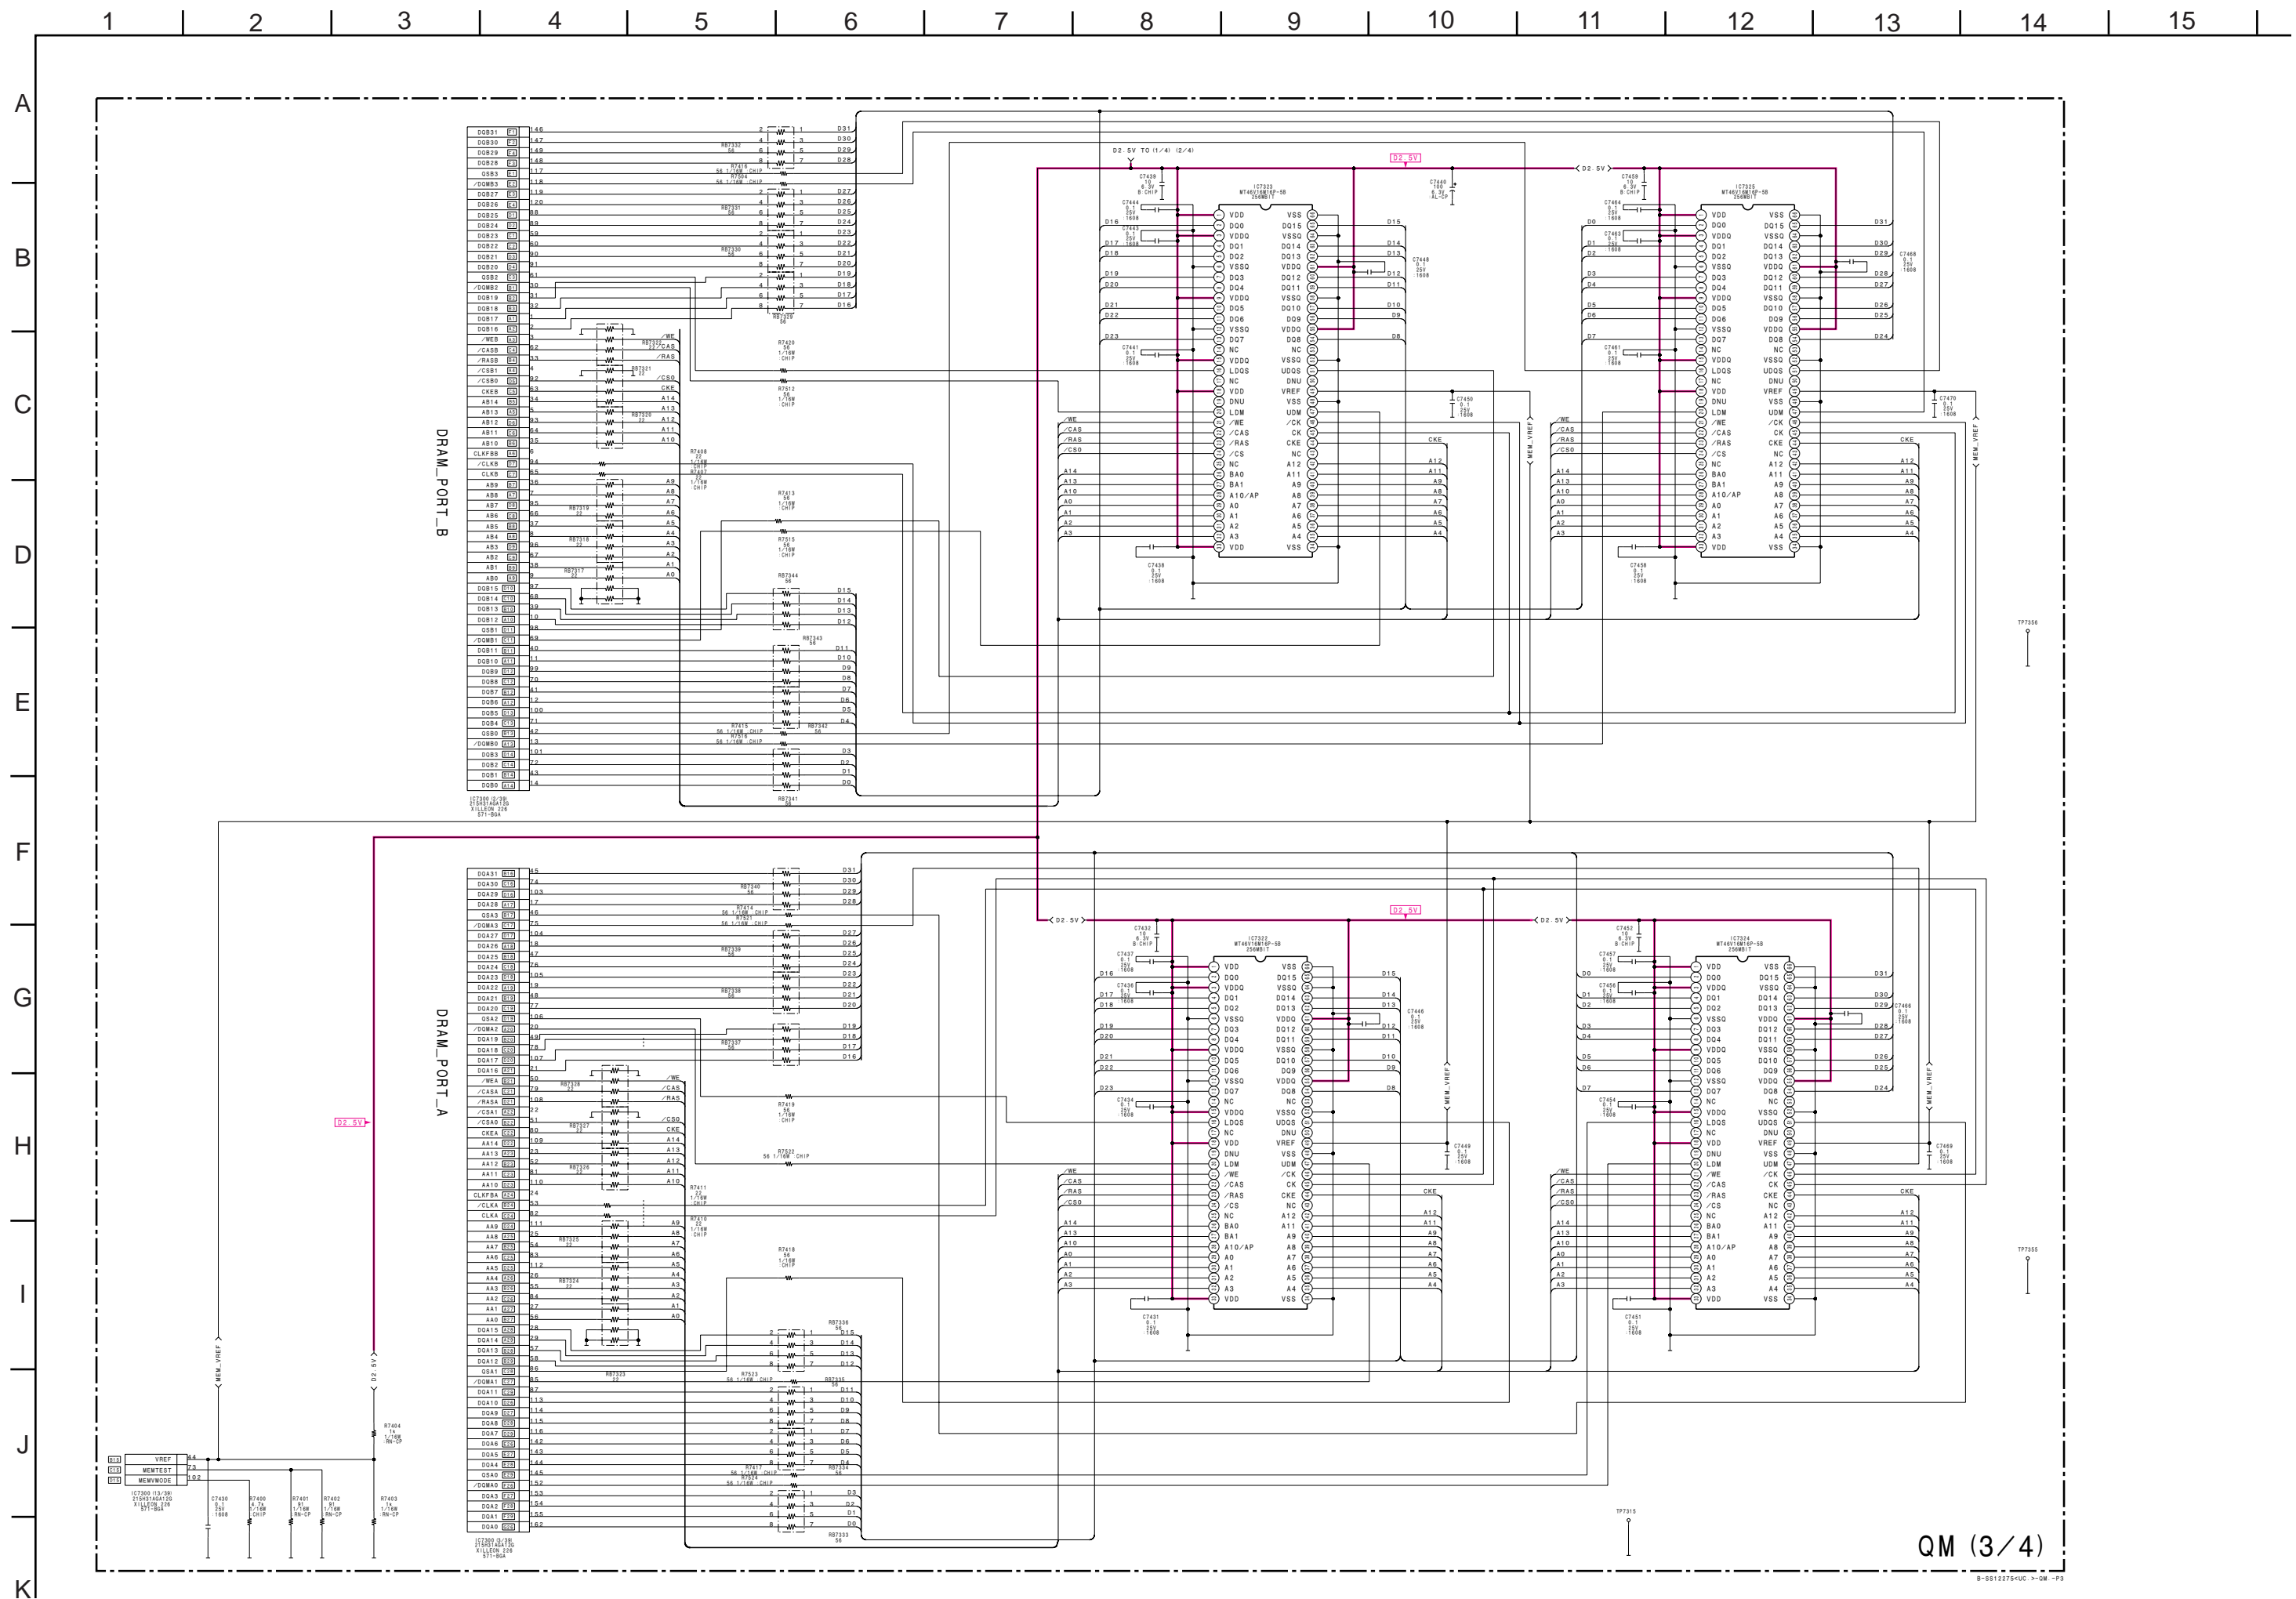




— QM BOARD —

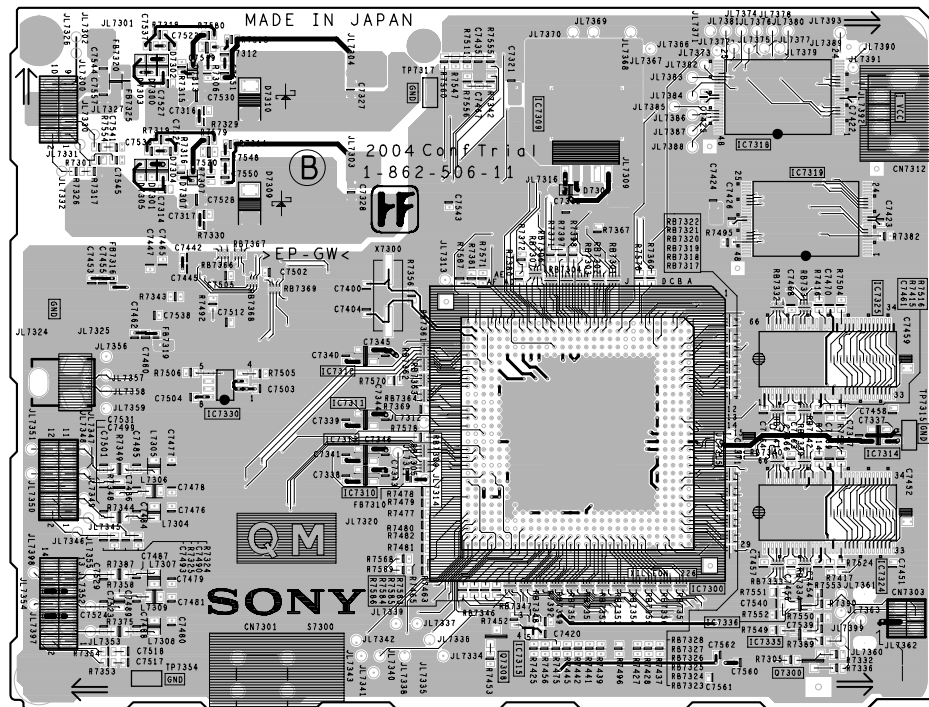

<COMPONENT SIDE>

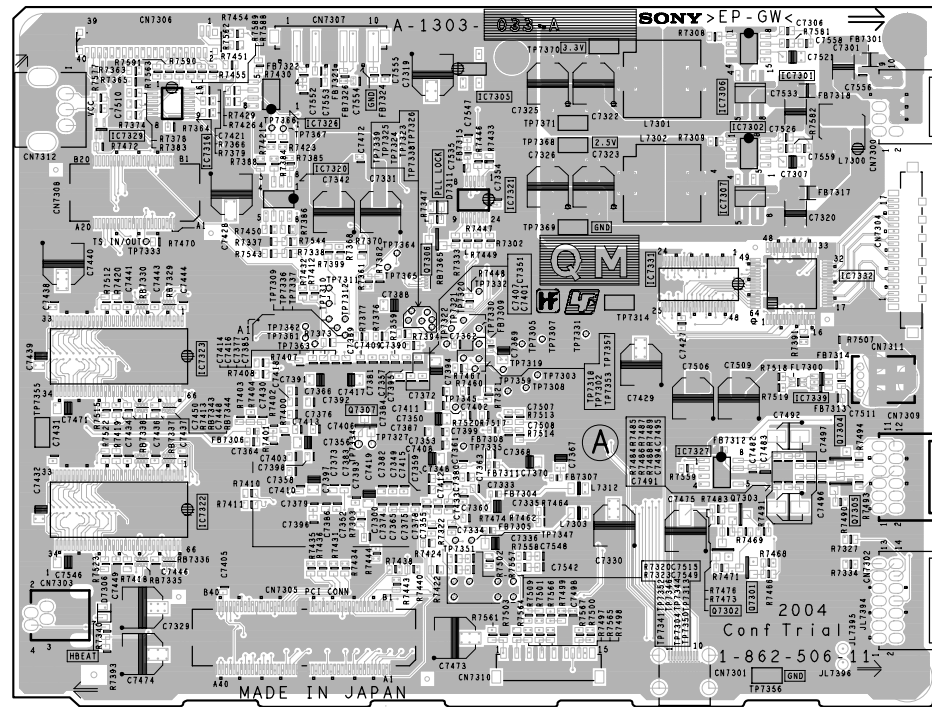


<CONDUCTOR SIDE>


• QM BOARD SEMICONDUCTOR LOCATION

IC			Q6212			B-1			D6204		
(Component Side)		(Conductor Side)	Q6213			B-1			D6205		
IC6101	B-5		Q6214			C-4			D6206		
			Q6215			A-4			D6207		
			Q6216			C-4			D6208		
			Q6217			A-4			D6209		
			Q6218			C-4			D6210		
			Q6219			B-2			D6211		
			Q6903			C-5			D6212		
			Q6915			A-5			D6213		
									D6214		
TRANSISTOR			DIODE								
(Component Side)		(Conductor Side)	*	(Component Side)		(Conductor Side)	*				
Q6201	A-1	⑭	D6021	A-5	③						
Q6202	B-1	①	D6100	C-4	-						
Q6203	B-2	②	D6101	B-5	③						
Q6204	A-1	②	D6102	B-5	-						
Q6205	B-1	②	D6103	A-5	-						
Q6206	B-2	-	D6104	A-5	-						
Q6207	A-2	-	D6105	A-5	-						
Q6208	A-2	②	D6106	B-5	③						
Q6209	B-1	①	D6201	B-4	-						
Q6210	B-1	①	D6202	C-1	③						
Q6211	B-1	①	D6203	B-1	③						

*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-14)

(17) Schematic Diagrams of QT Board

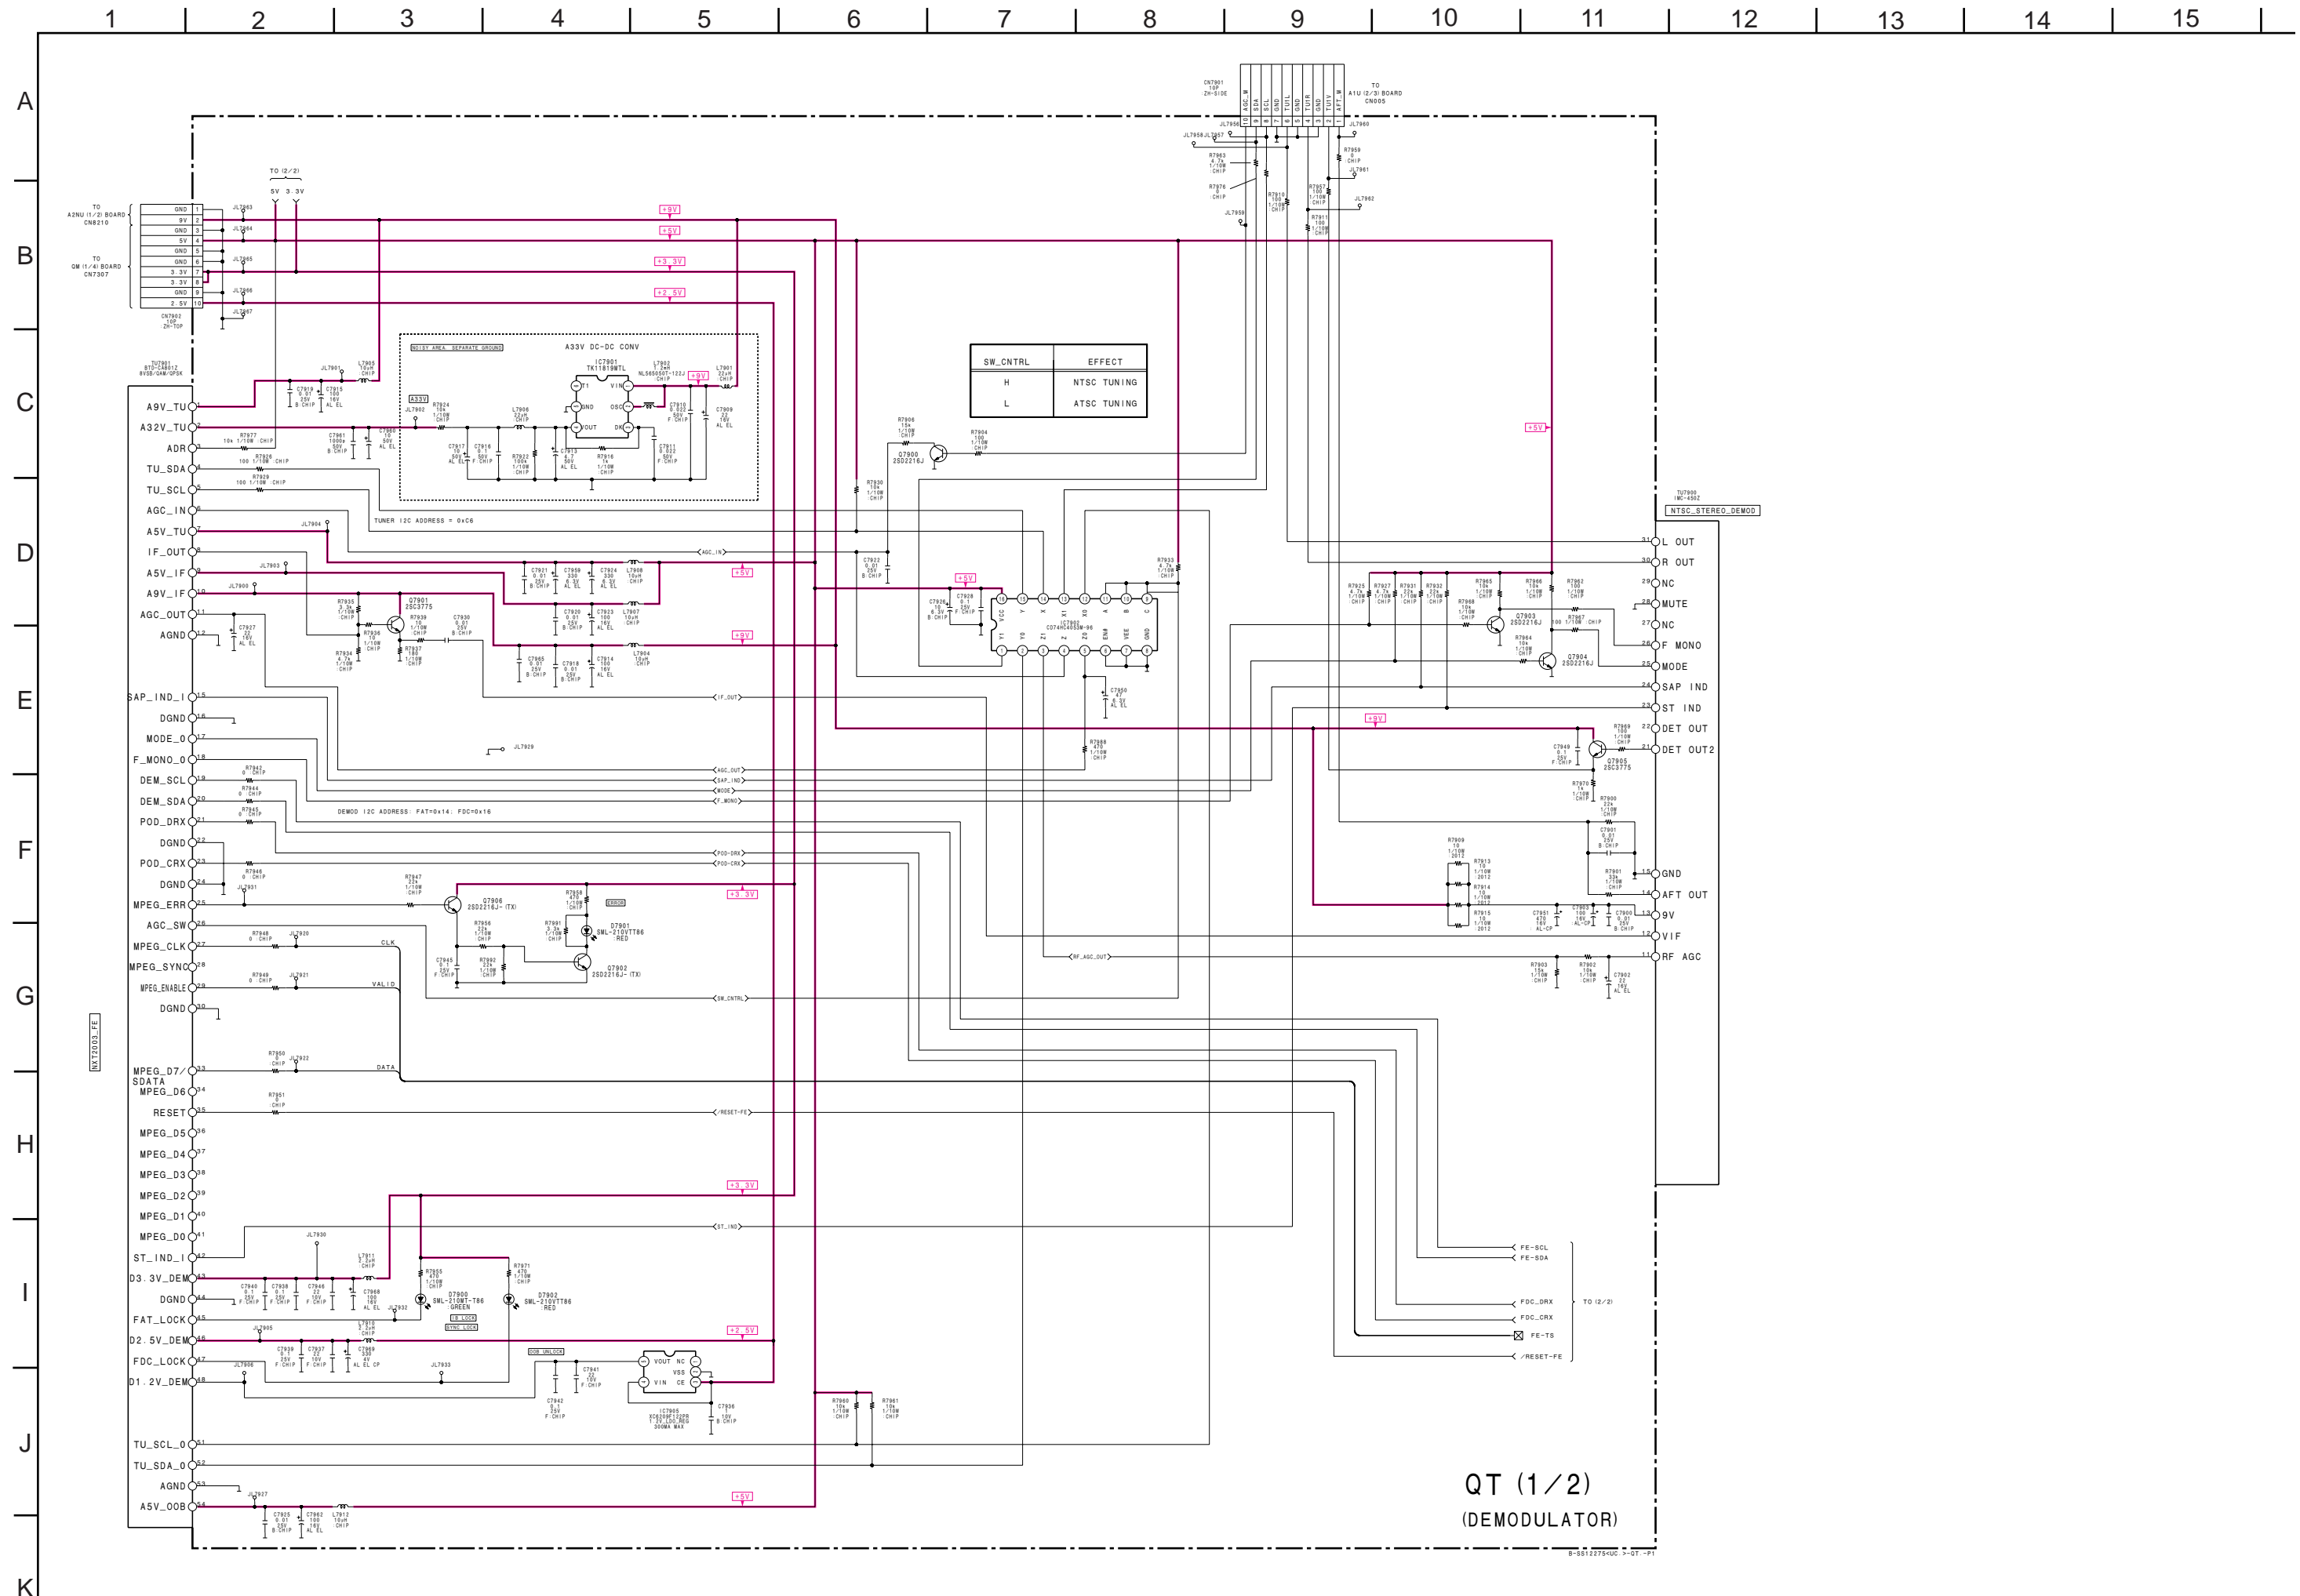


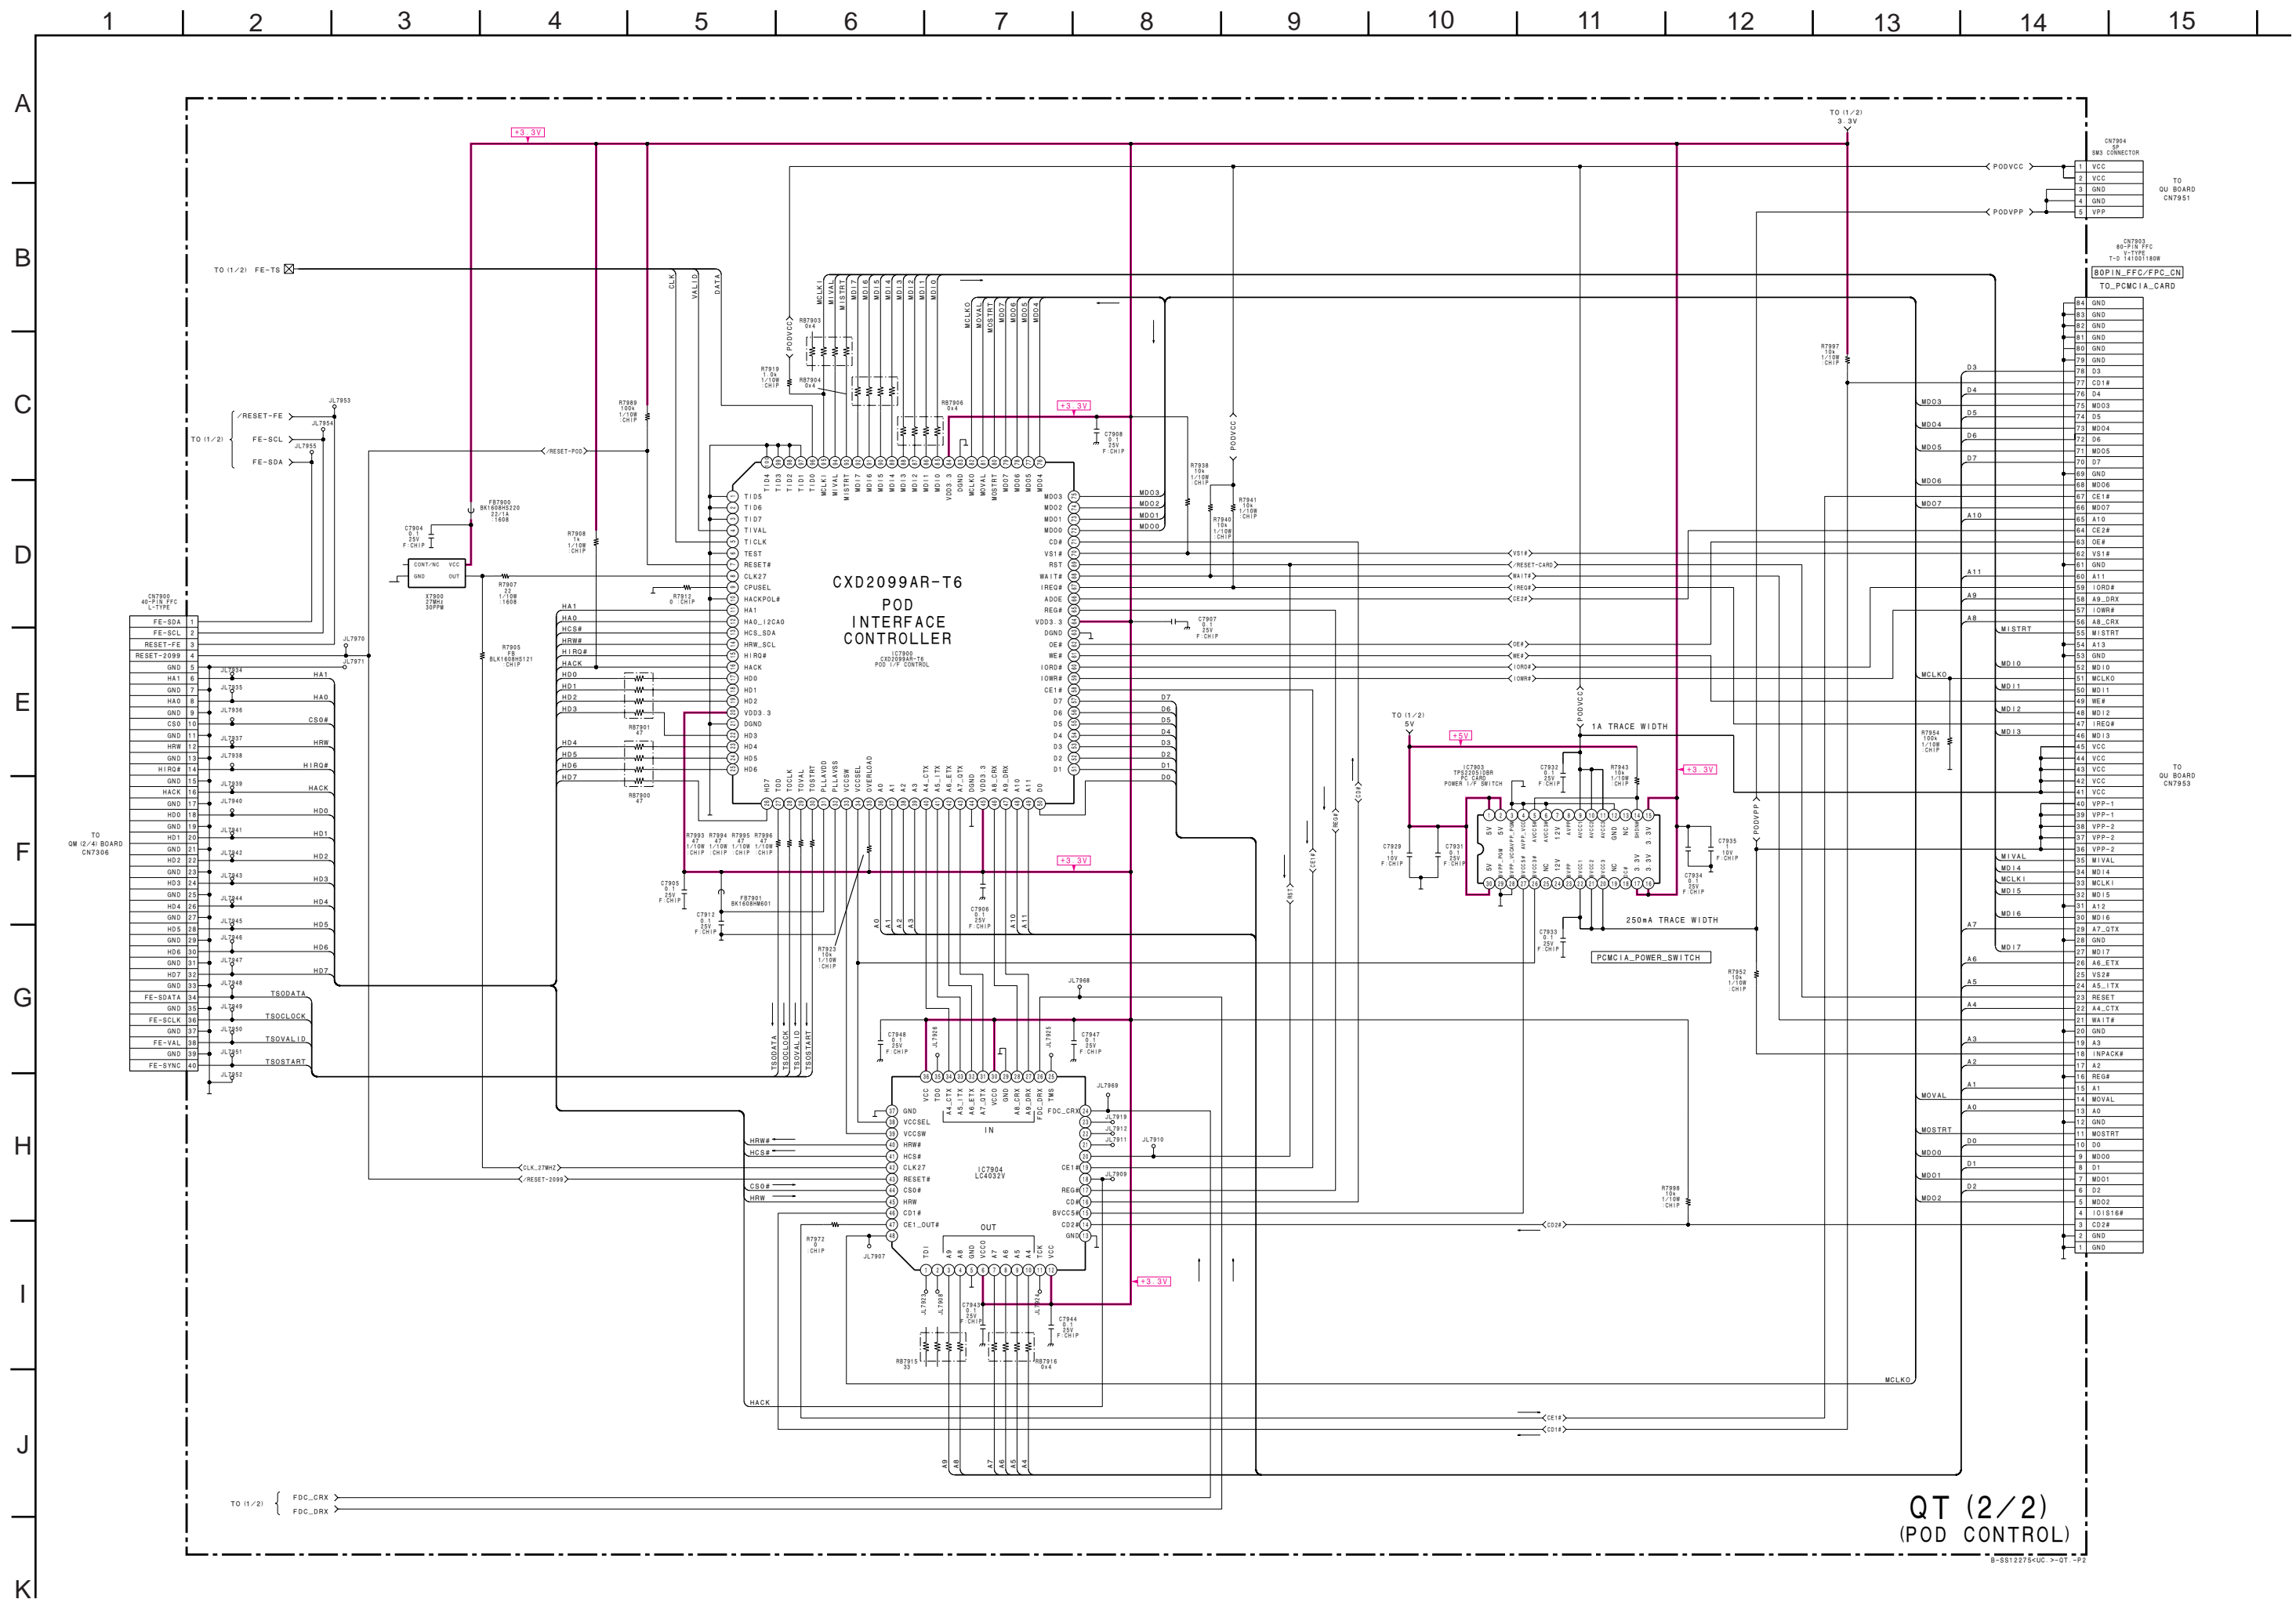


QT

[DEMODULATOR, POD CONTROL]

— QT BOARD —

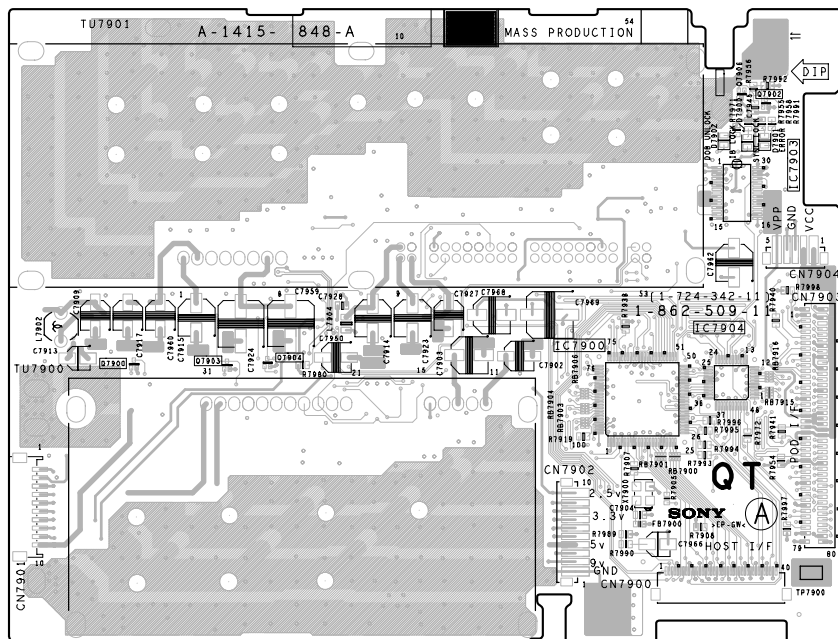


<COMPONENT SIDE>

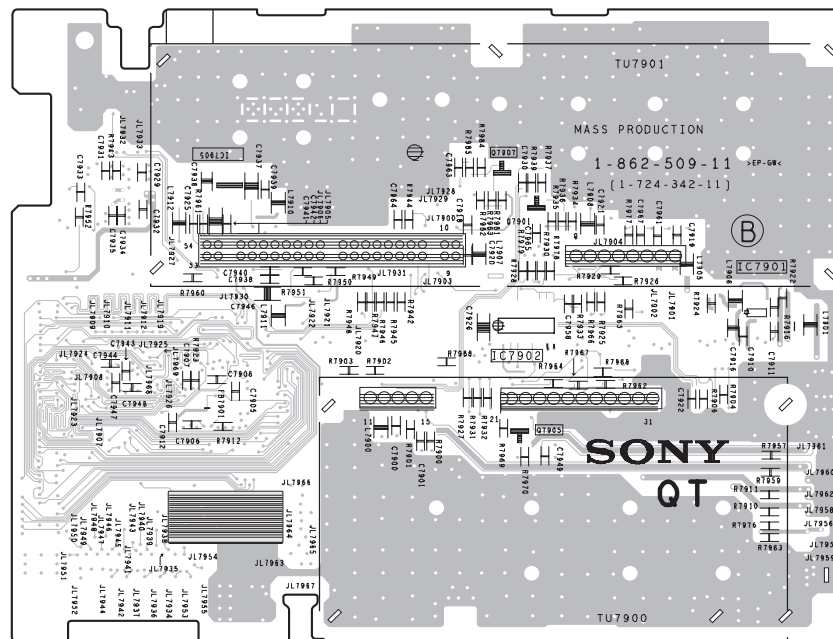


<CONDUCTOR SIDE>

(18) Schematic Diagram of QU Board

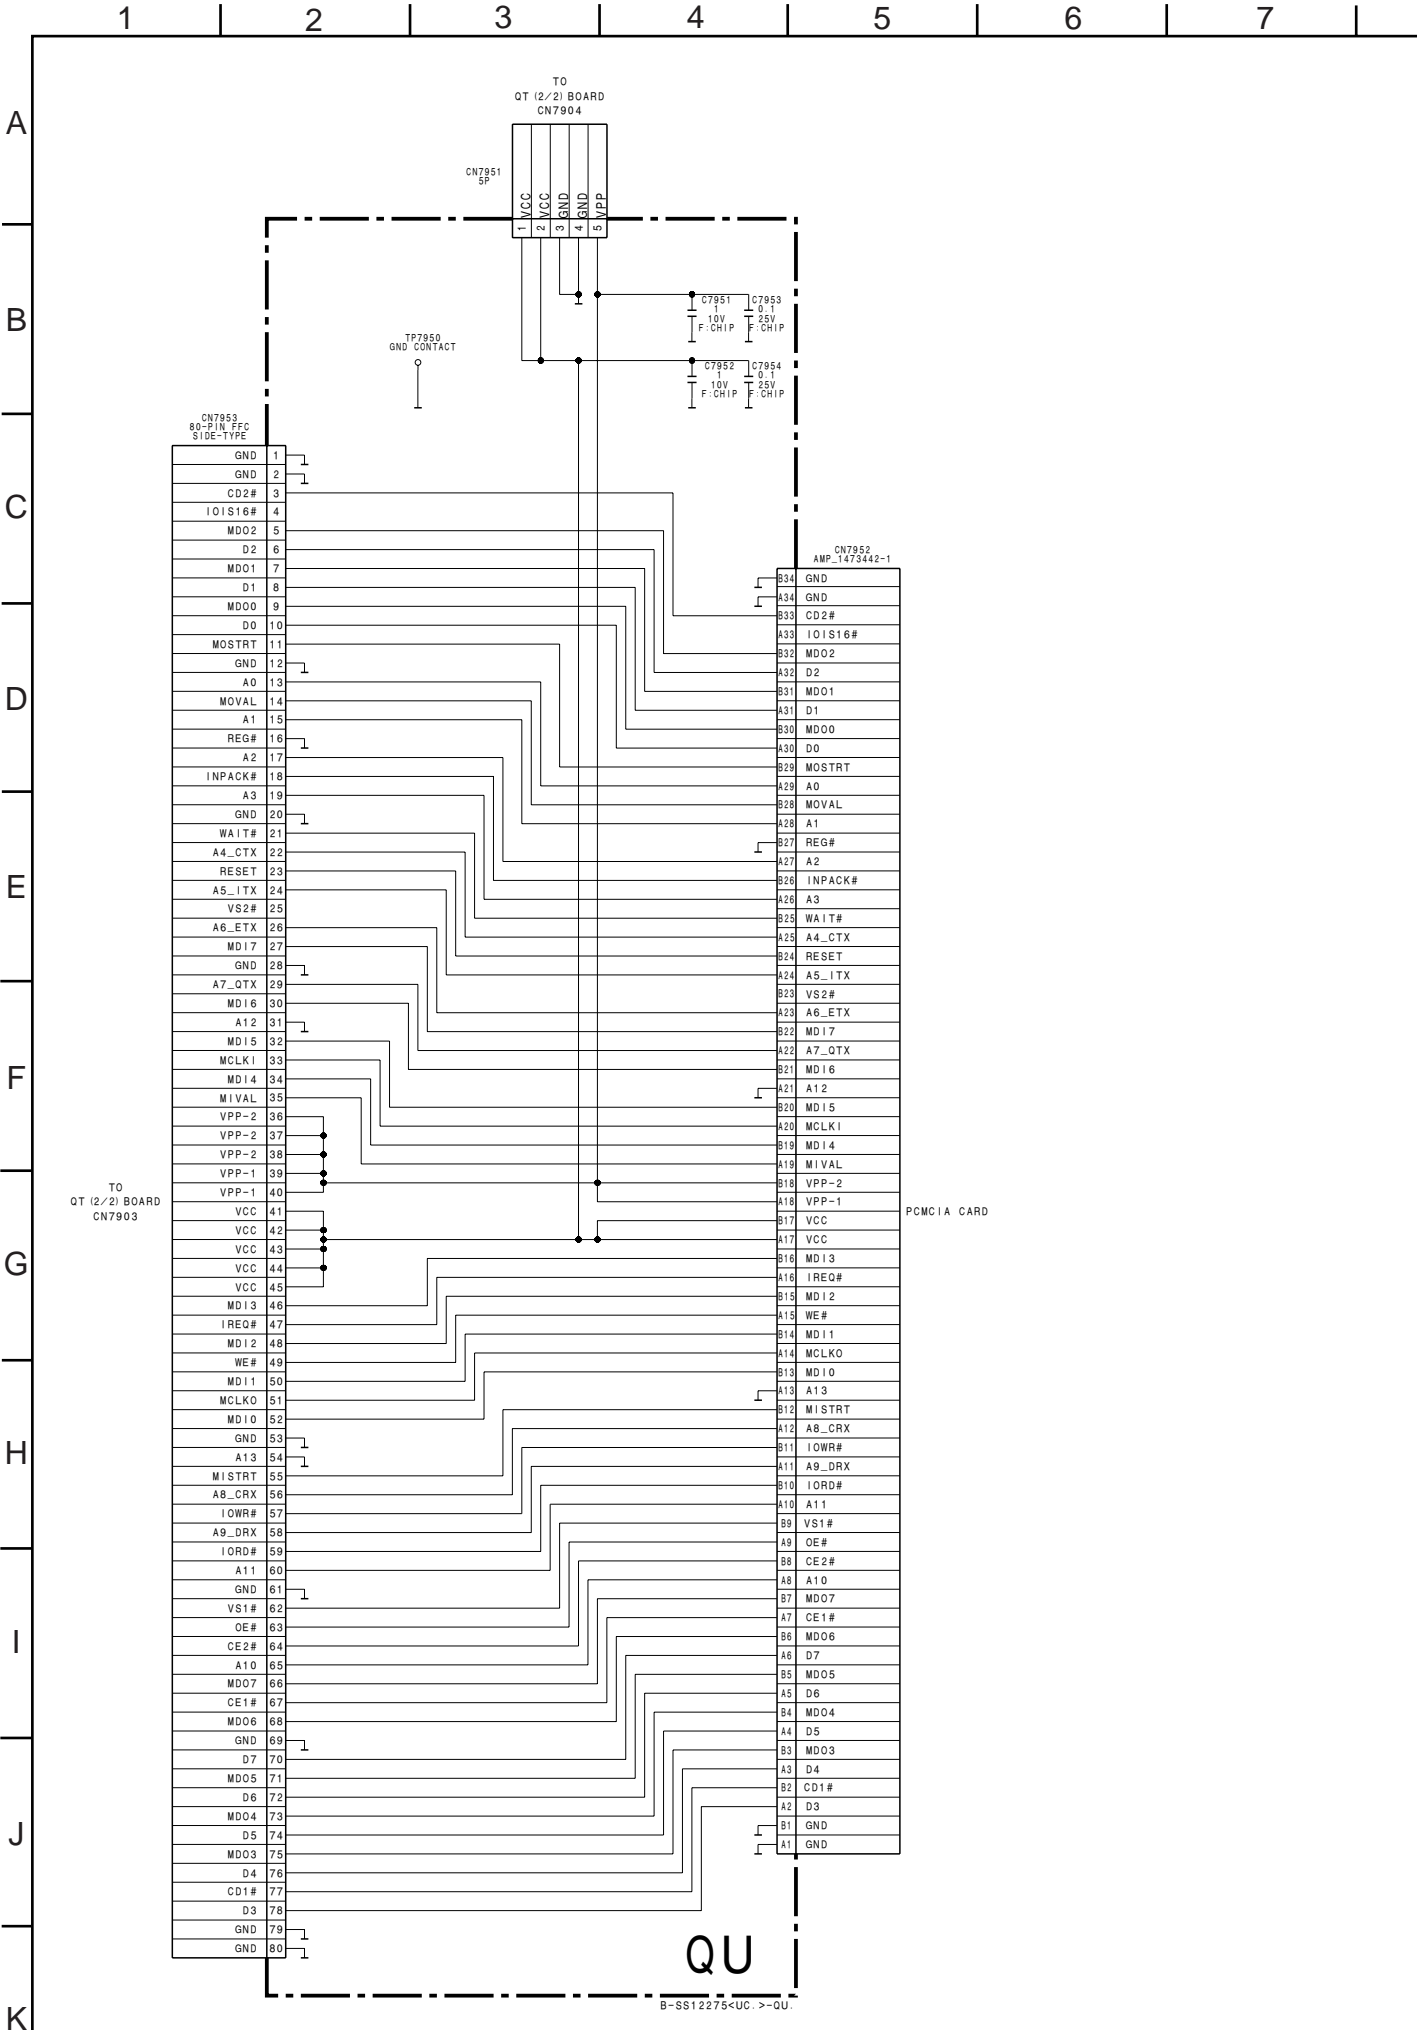

QU

— QU BOARD —

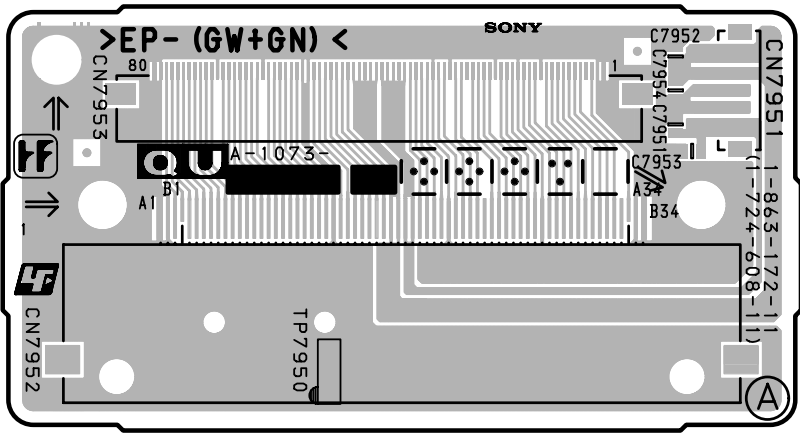


<COMPONENT SIDE>

3-5. SEMICONDUCTORS


IC

AK5357VT-E2
CD4052BNSR
CY22392ZXC-363
CY22392ZXC-364
FMS6418AM16X
M52055FP
MAX1809EEE+TG068
MAX4018EEE-TG068
NJM2123V(TE2)
SN74CBTLV3253PWR
TPS54350PWPR
UC3854BN




16Pin SOP

BA033FP-E2
BD4729GTR
NJM2125F(TE2)
NJM2870F18(TE2)
PST3629NR
R3112N421A-TR-FA
RN5VD21AA-TL-FA
RN5VD42AA-TL-FA
RN5VD53AA-TL
SN74CBTLV1G125DCKR
SN74LVC1G08DCKR
SN74LVC1G125DCKR
SN74LVC1G32DCKR
TAR5S33(TE85R)
TC7SA08FU(TE85R)
TC7SZ08FU(TE85R)
TC7SZU04FU(TE85R)
XC6204B332MR
XC6209B182MR




5Pin CHIP

BA10324AF-E2
CD74HC4053M-96
K4H561638F-UCCCT00
SN74LV08APWR
SN74LV4066APWR
TPS2051ADR
XRA10324AF




14Pin SOP

BA10339F-E2
BR24C02F-WE2
BR24L02F-WE2
BR24L32F-WE2
CS4335-KSZR
CY25104ZXC-1
CY25104ZXC-2
DS90LV018ATMX
IRU3037CS
M24128-BWMN6T(A)
M24C32-WMN6T(B)
M24C64-WMN6T(B)
M25P10-AVMN6T
MM1096AFF
NJM4558E(TE2)
NJM4558V-TE2
SN74AHC2G14HDCU3
SN74AHC2G66HDCU3
SN74LVC2G66DCUR
TC4W53FU
TC4W53FU(TE12R)




8Pin SOP

BD9851EFV-E2




20Pin SOP

CXA2188Q-T4




40Pin QFP

CXA2209Q-T6




80Pin QFP

CXD9774M




36Pin SOP

CXD9788AR
HD64F3694FXV-DA4
LC89056W-E




48Pin QFP

CXD9816GG

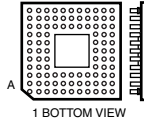


388Pin PGA

CXD9826R
THC63LVD103
THC63LVD104A
90C36LC1B-LF




64Pin QFP

CXD9827GP

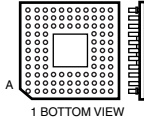


256Pin PGA

CXD9835TNDBTR




38Pin SOP

DS90C387VJDX
SII9993CTG100




100Pin QFP

HYB25D256160CE-5
MT46V16M16P-5BTR




66Pin SOP

IC62C1024AL-70QG
IS62C1024L-70QLT
K6X1008C2D-BF70T




32Pin SOP

IS42S32200B-6TL
IS42S32200B-6TL-TR
MT48LC2M32B2P-6-Y14W




86Pin SOP

K9F2808U0C-PCB0T
K9F2808U0C-PIB0T
MBM29DL32TF70TN-KE1-WE1
TC58DVM72A1TG00
TC74VCX162374(EL,F




48Pin SOP

MB90F334APMC-GE1




120Pin QFP


MM1431ATT

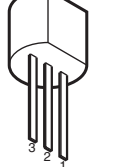

MSP4440K-QA-B2

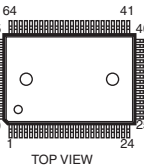


MT48LC4M16A2P-75-Y14W-G




54Pin SOP


NJM2387DL2-TE1
PQ070XZ01ZPH

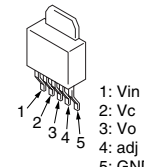


NJU7223DL1-25
UPC2905T-E1




PQ05RD11
PQ09DZ1U
PQ09RD21




PQ12DZ5UJ00H




PQ1CZ41H2ZPH

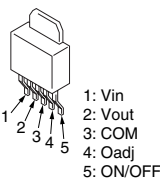

PQ20RX11J00H




PST3627UL
PST575IMT-T1




4Pin CHIP

S-80828CNNB-B8NT2G




SN105233DBTR
TPS2205IDBR




30Pin SOP

SN74LVC2GU04DCKR
TK11819MTL
SN74LVC2G34DCKR




6Pin CHIP

STR-A6169

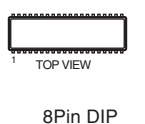


8Pin DIP


TL431CPK-E2

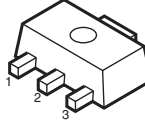

XC6209F122PR

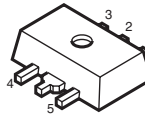


215H31AGA12G

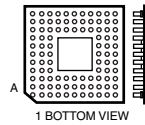


571Pin PGA

TRANSISTOR


DTA113ZUA-T106
DTA114EUAFT106
DTA114EUA-T106
DTA114TUA-T106
DTA143EK
DTA143EKA-T146
DTA144EUA-T106
DTC114EUA-T106
DTC143EUA-T106
DTC143TUA-T106
DTC144EKA
DTC144EKA-T146
DTC144EUA-T106
DTC144WKA-T146
MSB1218A-RT1
MSB709-RT1
MSD1819A-RT1
MSD601-RT1
MUN2211T1
MUN2212T1
MUN2213T1
UN2211
UN2213
UN2213-TX
2PA1576R-115
2PC4081R-115
2SA1037AK-T146-QR
2SA1037AK-T146-R
2SA1162-G
2SA1226-E4
2SA1226-T1E3E4
2SA1576A-T106-QR
2SB1690KT146
2SB624-BV5
2SB624-T1BV5
2SB709A-QRS-TX
2SB709A-R-TX
2SC1623-L5L6
2SC2412K-T-146-QR
2SC2712-YG
2SC2712-YG-TE85L
2SC3624A-T1L15L16
2SC3775
2SC4081-R
2SC4081T106R
2SC4178-F13F14-T1
2SC4178-F14
2SD2114K
2SD2114KT146
2SD2216J-QR(TX).SO
2SD596-DV5
2SD596-T1DV5
2SD601A-Q
2SD601A-QRS-TX
2SD601A-R-TX
2SD601A-S




DTC114EKA-T146
DTC114EU
DTC114EUAFT106
DTC114TUA-T106




FDS4435A




FDS6986S
IRF7313-TR

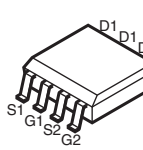


IRFR5305TR




IRFS644BYDTU




IRLI3215-LF33




RT1N141C-TP-1

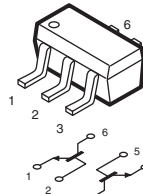


SI2301BDS-T1
SI2301DS-T1
2SK1590-T1B




SPA20N60C3E8152



SSM6N15FU(TE85R)

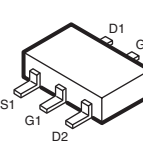


2SB1121-ST
2SB1121-S-TD
2SB1122-S
2SB1122-ST-TD-E
2SD1621-S
2SD1621S-TD-E
2SK2036(TE85L)

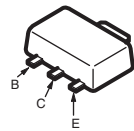

2SD774-34
2SD774-T-34




2SK2842(LBS2SONY)




DIODE


BAS316-115
HZU10BTRF
MM3Z10VT1
MM3Z13VT1
MM3Z15VT1
MM3Z3V9T1
MM3Z4V3ST1
MM3Z6V2ST1
MM3Z7V5T1
MTZJ-T-77-36A
RD2.2SB-T1
02DZ3.9-Z(TPH3)

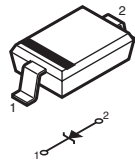


BAT54HT1
DTZ10B
HRU0103ATRF
MA111-TX
MA113-(TX)
MMDL914T1
UDZSTE-1710B
UDZSTE-1711B
UDZSTE-173.9B
UDZSTE-175.1B
UDZSTE-175.6B
UDZSTE-177.5B
UDZSTE-178.2B
UDZ-TE-17-3.9B
UDZ-TE-17-6.2B
UDZ-TE-17-7.5B
UDZ-TE-17-8.2B
1SS355TE-17

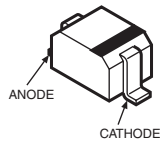


DAN202K
DAN202K-T-146
M1MA152WK-T1



DAN202U
DAN202UT106
1PS184-115




DA221
DA221-TL
1PS181-115




D10SC4M
D8LC40
D8LC40F




D10SC4MR




D15XB60
D2SB60A-F04




D3S6M-F
RM11A



D5LC20U

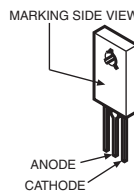


D5LC20U-4012
D8LC20U-4012

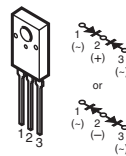


D8LD40-F1



EC21QS03L-TE12L
P6SMBJ30A-5
PTZ-TE25-13A
PTZ-TE25-3.9B
PTZ-TE25-6.2A
RB083L-20TE25

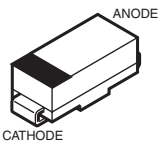


EC31QS03L-TE12L
M1FL20U-4063
RB520S-40TE61
RB521S-30FTE61
RB521S-30-TE61
1SS388(TPL3)

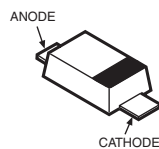


ERA22-08KFLB
UF4005PKG23
10ERB20-TB3




HN1D03FU-TE85L
HN1D03FU-TE85R

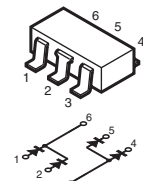


MA3J142D0LSO
MA3J142E0LSO

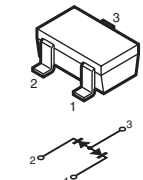


MBRS140T3

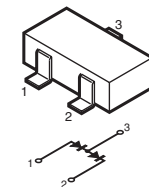


M1FS4-4063
MA8027-H-TX
MA8027-L

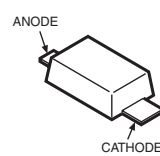


M1MA152WA-T1
UMZ16NT106




RM11C




SF20L60U-4015

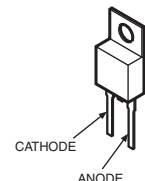


L-1503CB/1ID-F01

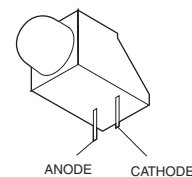


L-53SRD-H-F01

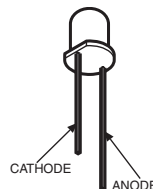


NSPW500BS-A0

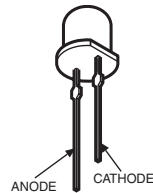


SEC1901C
SML-210MT-T86
SML-210VTT86

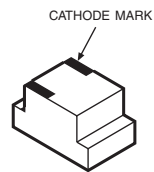

SELU1E50CM

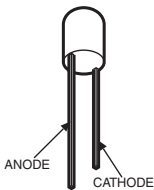

SMLU12D16W

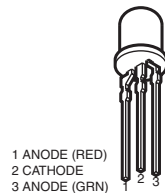

SECTION 4

EXPLODED VIEWS


NOTE:

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


4-1. REAR COVER ASSY AND STAND

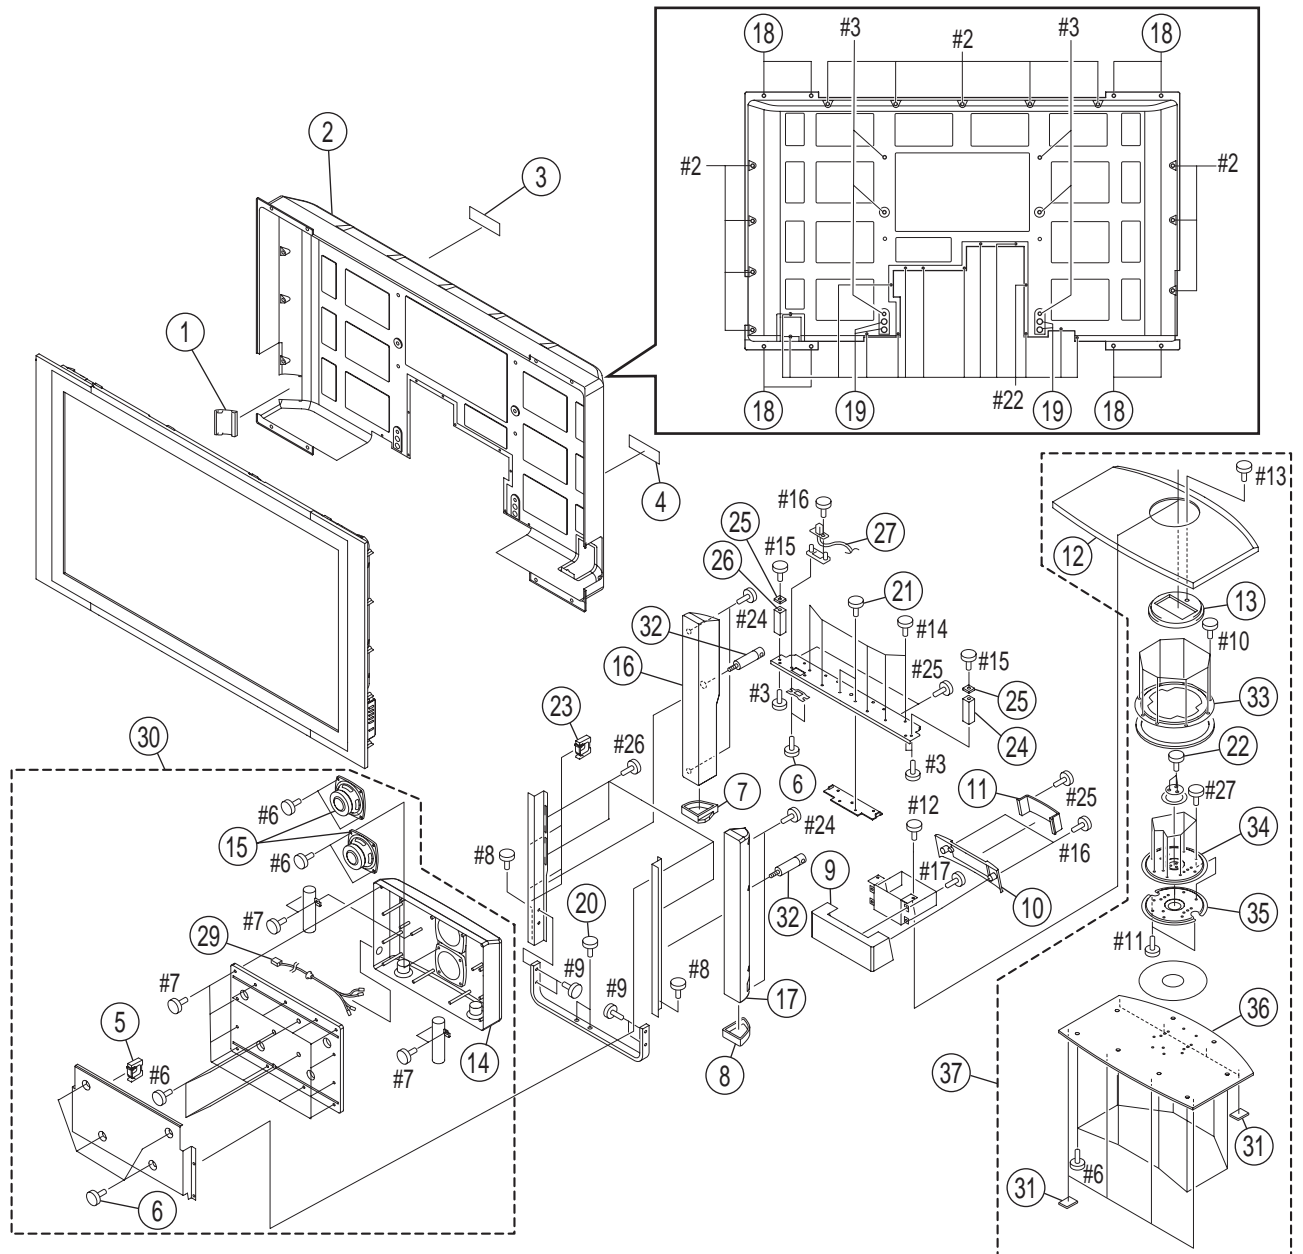

REF. No.	PART No.	DESCRIPTIONRE	MARK
1	2-188-937-01	BLIND LID	
2	X-2022-773-1	REAR COVER (50) ASSY	
3	* 2-189-190-01	LABEL, CAUTION	
4	* 2-177-528-01	LABEL, MODEL NAME	
5	* 3-961-199-01	SADDLE, EDGE	
6	4-302-404-11	SCREW,WASHER HEAD (+P 4X16)	
7	2-179-898-01	CAP (L), BOTTOM	
8	2-179-899-01	CAP (R), BOTTOM	
9	2-179-939-01	NECKFRONT	
10	2-179-940-01	NECKREAR	
11	2-179-941-01	COVER, CABLE	
12	2-179-937-01	COVER, BOTTOM	
13	2-179-938-01	COVER, DISK	
14	2-187-868-01	CABINET, WOOFER-BOX	
15	1-825-944-11	LOUDSPEAKER (10CM)	
16	2-179-911-01	PANEL (L), ORNAMENT	
17	2-179-897-01	PANEL (R), ORNAMENT	
18	2-190-715-01	SCREW +PSW 4X6	
19	2-350-305-11	SCREW +PSW (M5)	
20	2-318-702-02	SCREW 6X40, BUTTON HEAD	
21	2-318-704-01	SCREW 6X20, HEX	
22	2-318-432-01	+BS 5X8	
23	2-318-814-01	SUDDLE (H16.5), ROCKING WIRE	
24	2-179-900-01	HORN (R)	
25	2-179-902-01	HORN CAP	
26	2-318-332-01	HORN (L)	
27	1-910-010-05	CONNECTOR ASSY (51010-4P)	
28	2-179-910-01	HOLDER, CONNECTOR	
29	1-910-004-41	CONNECTOR ASSY (SL4P/LUG)	
30	A-1081-710-B	WOOFER ASSY 5, 6, 14, 15, 29	

REF. No.	PART No.	DESCRIPTIONRE	MARK
31	2-342-751-01	CUSHION (FOOT)	
32	2-318-410-01	HOOK M5, SCREW	
33	2-179-936-01	FLANGE	
34	2-179-935-01	DISK	
35	2-179-943-01	DISK, UNDER	
36	2-179-934-01	PLATE, BASE	
37	A-1087-030-A	BOTTOM BLOCK 12-13, 22, 31, 33-36	
#2	7-685-663-79	SCREW +BVTP 4X16, TYPE2, IT-3	
#3	7-682-973-19	SCREW +PSW 5X10	
#6	7-685-660-19	SCREW +BVTP 4X10, TYPE2, N-S	
#7	7-685-661-79	SCREW +BVTP 4X12, TYPE2, N-S	
#8	7-682-962-01	SCREW +PSW 4X10	
#9	7-682-966-09	SCREW +PSW 4X20	
#10	7-682-973-09	SCREW +PSW 5X8	
#11	7-682-575-04	SCREW +B 5X10	
#12	7-682-973-31	SCREW +PSW 5X14	
#13	7-682-964-09	SCREW +PSW 4X14	
#14	7-682-262-04	SCREW +K 4X10	
#15	7-682-562-09	SCREW +B 4X10	
#16	7-685-648-79	SCREW +BVTP 3X12, TYPE2, IT-3	
#17	7-682-948-01	SCREW +PSW 3X8	
#22	7-682-947-09	SCREW +PSW 3X6	
#24	7-685-880-09	SCREW +BVTT 4X6 (S)	
#25	7-685-660-79	SCREW +BVTP 4X10 TYPE2 IT-3	
#26	7-682-961-09	SCREW +PSW 4X8	
#27	7-682-173-01	SCREW +P 5X6	


4-2. CHASSIS-1

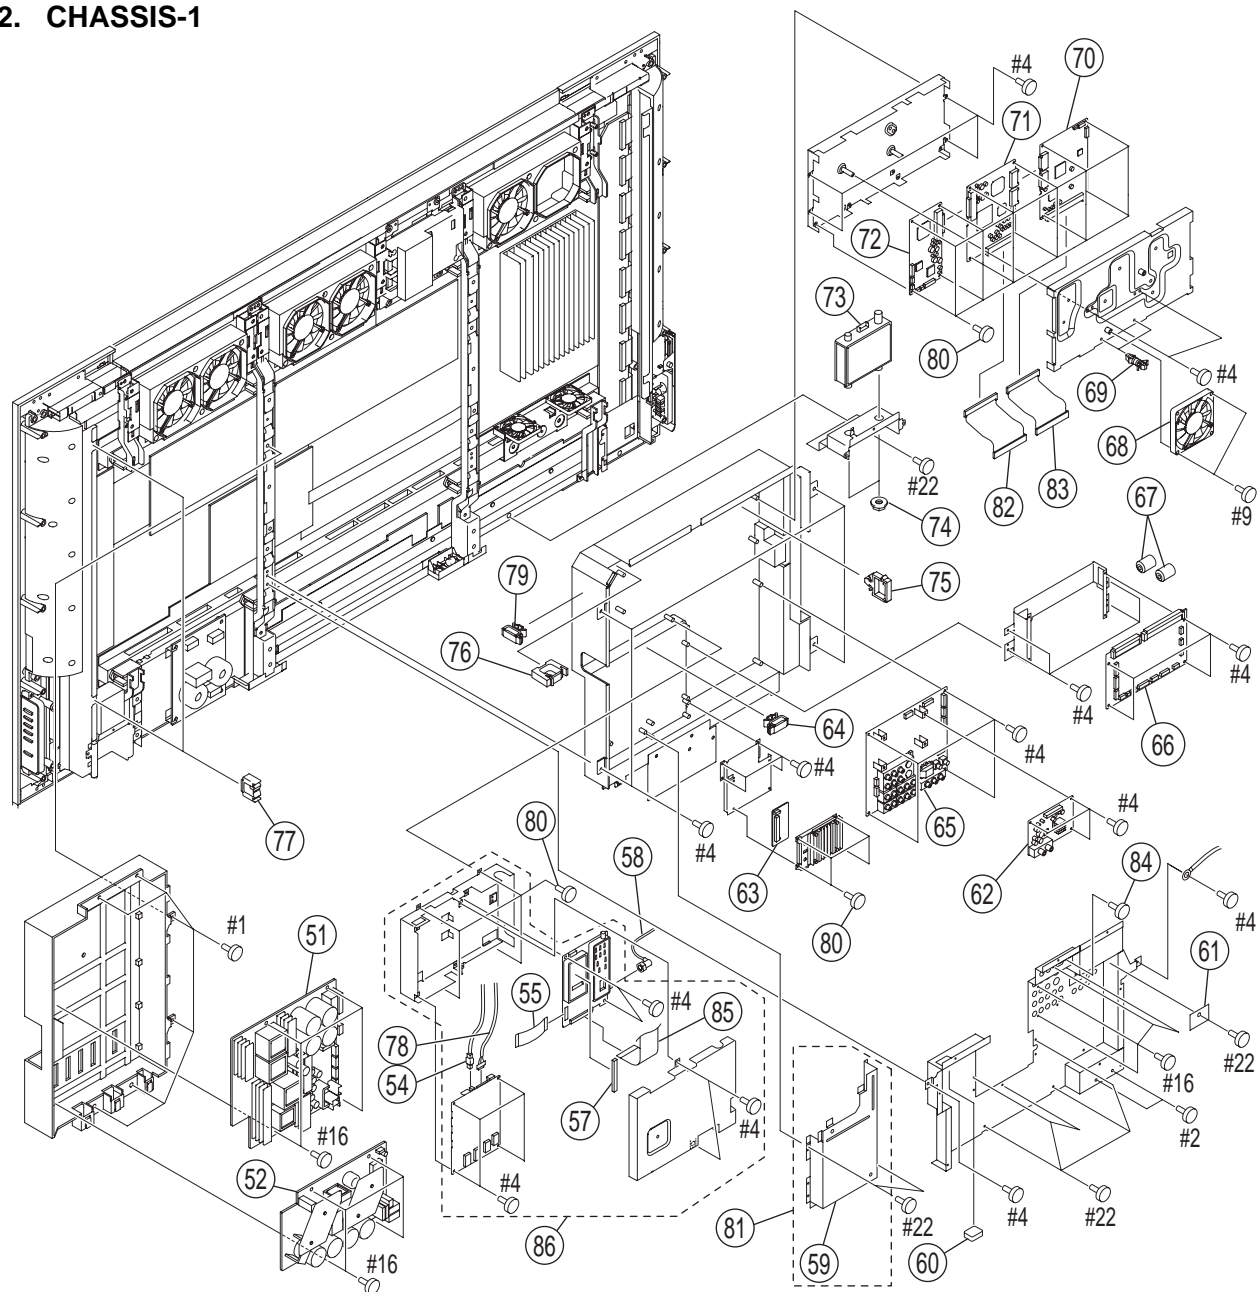

REF. No.	PART No.	DESCRIPTIONRE	MARK
51	* A-1061-620-B	G2N COMPL	
52	* A-1061-618-A	G1 COMPL	
54	* 1-829-590-11	CABLE, USB	
55	1-910-008-68	CONNECTOR ASSY (FFC40P)	
57	* 4-091-096-02	GASKET (D)	
58	* 1-829-361-11	RF CABLE	
59	2-109-804-01	POD COVER(50)	
60	2-176-107-01	CN COVER	
61	4-087-363-01	COVER, CONNECTOR	
62	* A-1074-834-A	P COMPL	
63	* A-1073-391-A	QU MOUNT	
64	* 4-098-147-21	CLAMP	
65	* A-1061-614-A	A1U COMPL	
66	* A-1061-615-B	A2NU COMPL	
67	1-500-051-11	BEAD, FERRITE (WITH CASE)	
68	1-763-659-11	FAN, DC	
69	* 3-952-863-01	SPACER, CIRCUIT BOARD	
70	* A-1118-636-A	DE1 COMPL	
71	* A-1105-160-A	DIC3 COMPL	
72	* A-1088-371-A	M1U COMPL	

REF. No.	PART No.	DESCRIPTIONRE	MARK
73	8-597-906-00	ANTENNA SWITCHE RFD-SA801	
74	3-682-691-00	NUT, WASHER HEXAGON	
75	* 3-919-255-01	HOLDER, PC BOARD	
76	2-187-364-01	EDGE HOLDER	
77	3-383-699-01	CLAMP (EDGE)	
78	1-829-363-11	LEAD WIRE WITH CONNECTOR(LVDS)	
79	* 4-098-147-11	CLAMP	
80	4-623-699-01	SCREW (3X5)	
81	X-2023-974-1	POD COVER(50) ASSY 59	
82	* A-1079-149-A	J1NU MOUNT	
83	* A-1079-150-A	J2NU MOUNT	
84	4-382-854-41	SCREW (M3X8), PSW (+)	
85	1-910-009-18	CONNECTOR ASSY (FFC 80P)	
86	A-1061-657-A	ATSC BLOCK ASSY	55, 57, 85
#1	7-682-961-01	SCREW +PSW 4X8	
#2	7-685-663-79	SCREW +BVTP 4X16, TYPE2, IT-3	
#4	7-682-947-01	SCREW +PSW 3X6	
#9	7-682-966-09	SCREW +PSW 4X20	
#16	7-685-648-79	SCREW +BVTP 3X12, TYPE2, IT-3	
#22	7-682-947-09	SCREW +PSW 3X6	


4-3. CHASSIS-2

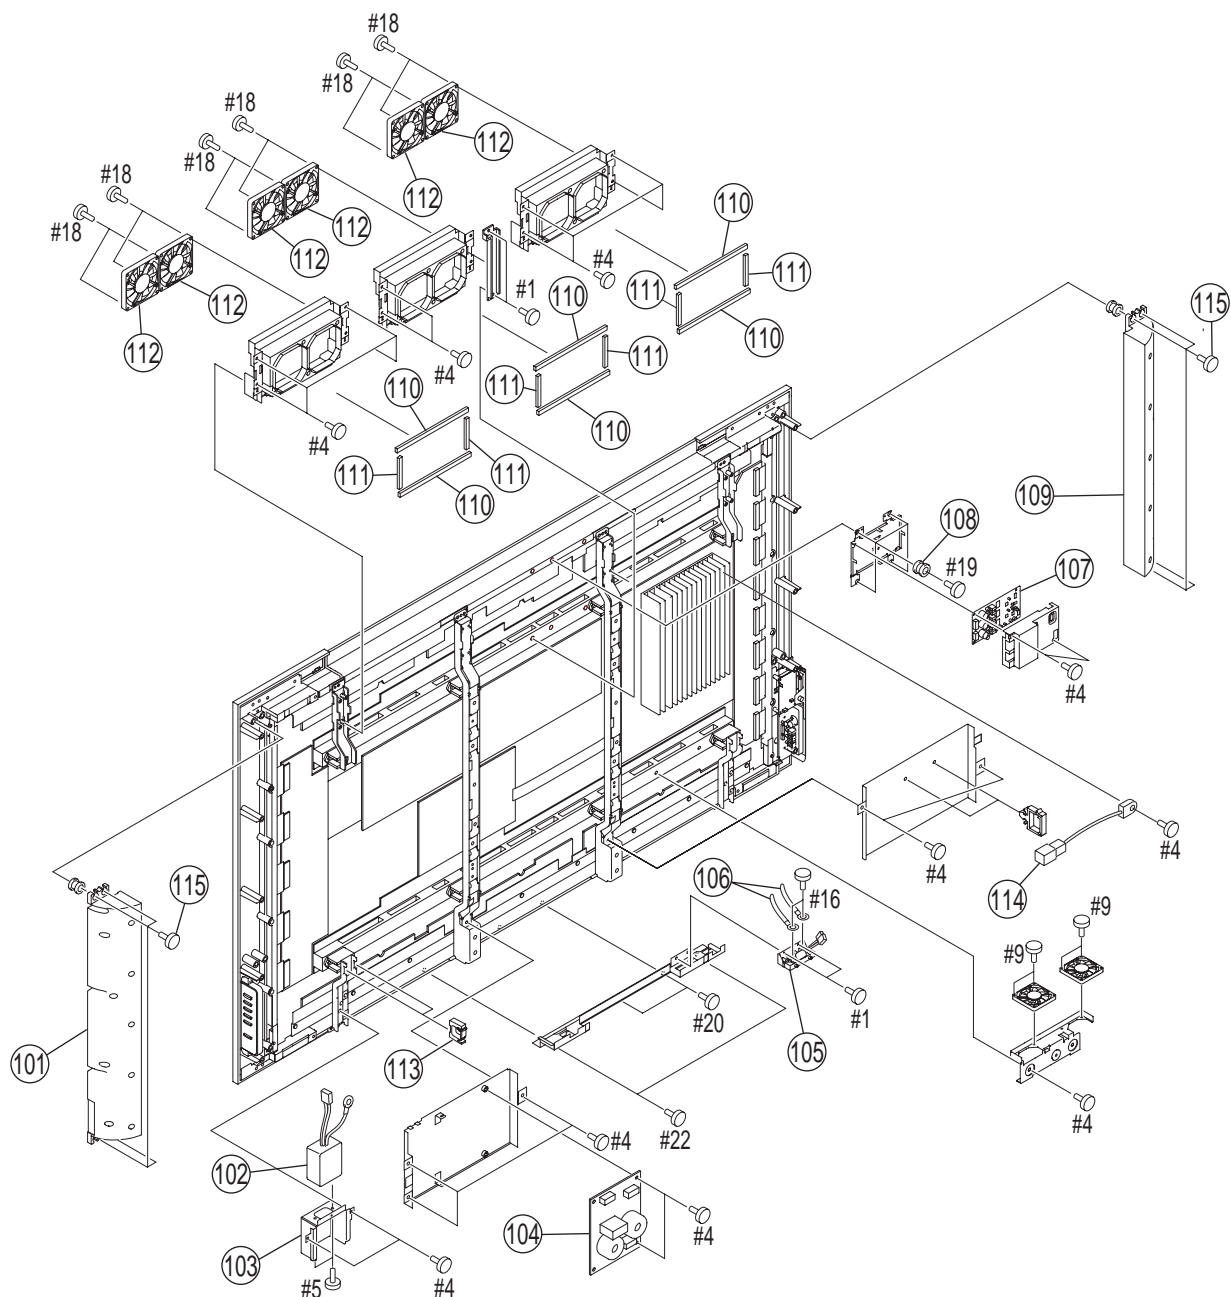

REF. No.	PART No.	DESCRIPTIONRE	MARK
101	1-825-946-21	LOUDSPEAKER (R)	
102	1-818-701-11	AC INLET (WITH NOISE FILTER)	
103	2-990-241-02	HOLDER (A), PLUG	
104	* A-1054-893-A	F MOUNT	
105	2-149-641-01	SP CONNECTOR HOLDER	
106	* 4-662-796-01	CLIP, COACHING	
107	* A-1061-893-A	K COMPL	
108	* 4-888-798-00	BUSHING, RUBBER	
109	1-825-946-11	LOUDSPEAKER (L)	
110	2-177-175-01	CUSHION FAN(A)	
111	2-177-176-01	CUSHION FAN(B)	
112	1-763-963-21	FAN, DC	
113	* 4-091-688-11	HOLDER, EDGE	
114	* 1-477-718-11	SENSOR, TEMPERATURE	
115	4-302-404-11	SCREW,WASHER HEAD (+P4X16)	

REF. No.	PART No.	DESCRIPTIONRE	MARK
#1	7-682-961-01	SCREW +PSW 4X8	
#4	7-682-947-01	SCREW +PSW 3X6	
#5	7-682-949-09	SCREW +PSW 3X10	
#9	7-682-966-09	SCREW +PSW 4X20	
#16	7-685-648-79	SCREW +BVTP 3X12, TYPE2, IT-3	
#18	7-685-665-71	SCREW +BVTP 4X25, TYPE2, IT-3	
#19	7-682-965-01	SCREW +PSW 4X16	
#20	7-685-663-71	SCREW +BVTP 4X16, TYPE2, IT-3	
#22	7-682-947-09	SCREW +PSW 3X6	


4-4. CHASSIS-3

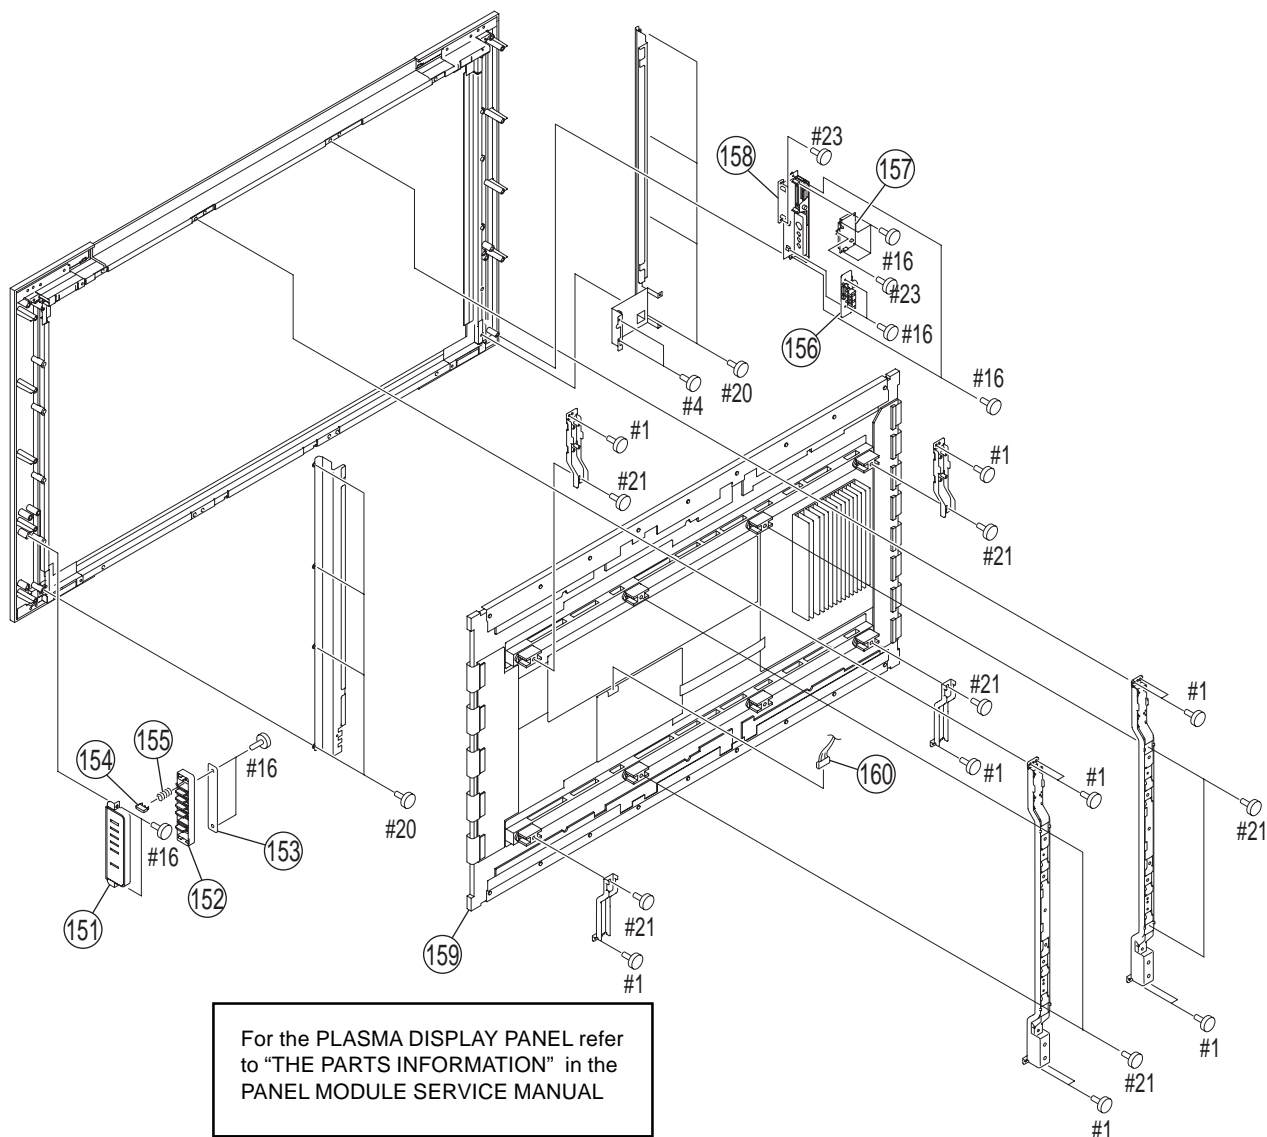

REF. No.	PART No.	DESCRIPTIONRE	MARK
151	2-149-607-01	CONTROL PANEL COVER	
152	2-149-614-01	MULTI BUTTON	
153	* A-1078-739-B	H1U MOUNT	
154	2-149-615-02	POWER BUTTON	
155	* 4-098-112-01	SPRING, COMPRESSION	
156	* A-1058-509-A	H2 MOUNT	
157	* A-1065-916-A	QH COMPL	
158	X-2023-006-2	CONNECTOR PANEL ASSY (XS)	
159	REFER TO PANEL MODULE S. M	PLASMA DISPLAY PANEL	
160	1-910-007-82	CONNECTOR ASSY (FI-W31S)	

REF. No.	PART No.	DESCRIPTIONRE	MARK
#1	7-682-961-01	SCREW +PSW 4X8	
#4	7-682-947-01	SCREW +PSW 3X6	
#16	7-685-648-79	SCREW +BVTP 3X12, TYPE2, IT-3	
#20	7-685-663-71	SCREW +BVTP 4X16, TYPE2, IT-3	
#21	7-682-973-11	SCREW +PSW 5X10	
#23	7-682-949-01	SCREW +PSW 3X10	



4-5. CHASSIS-4

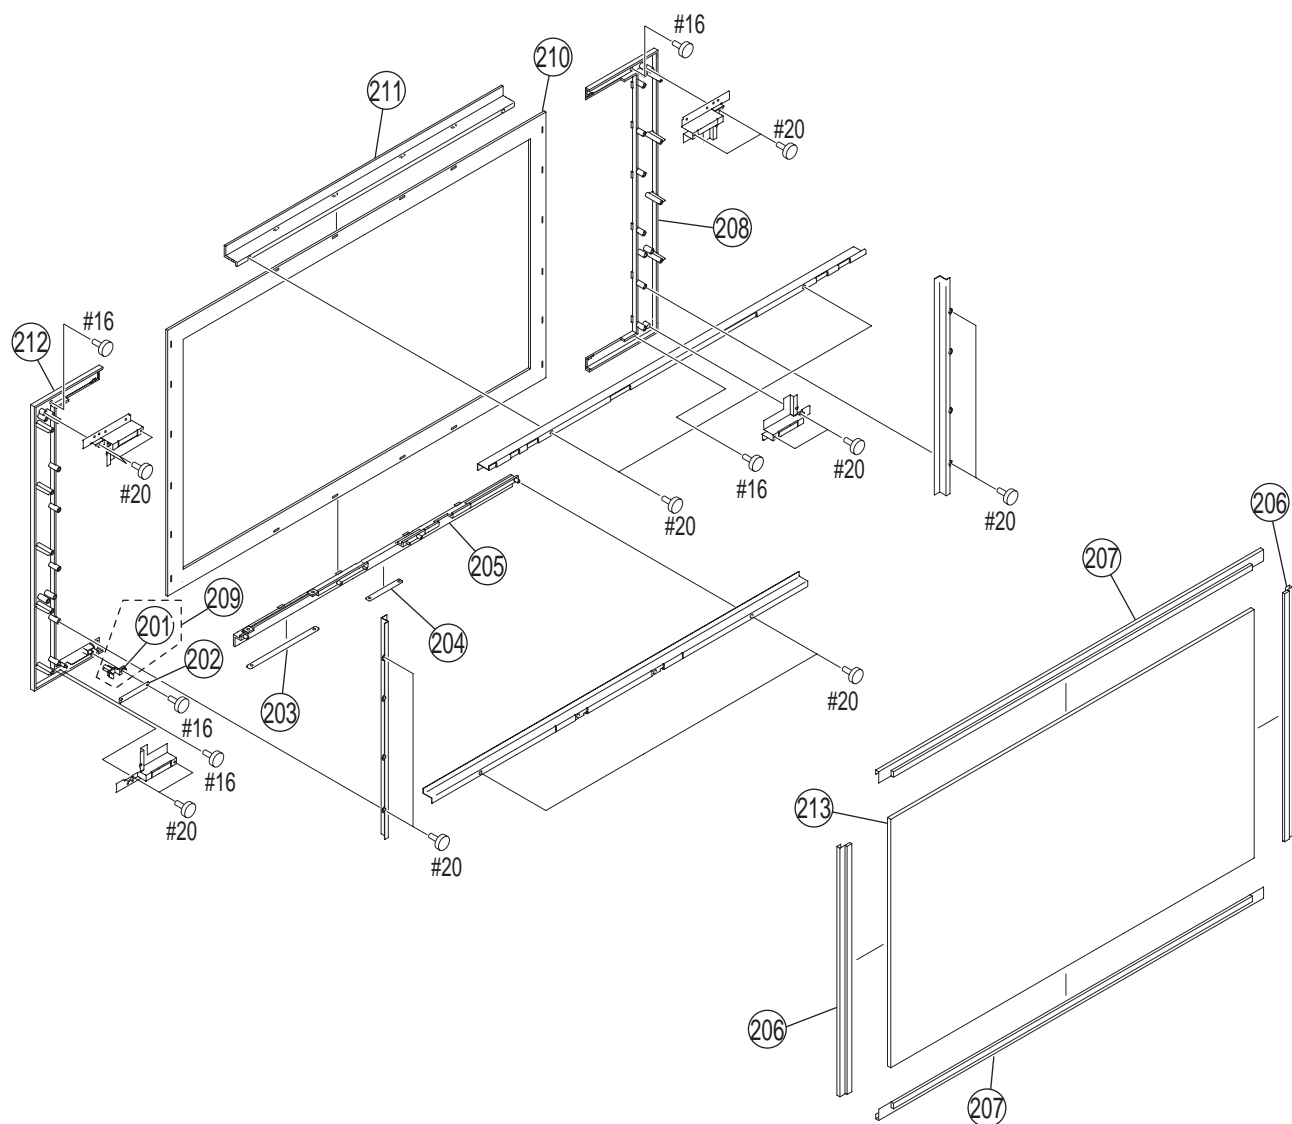

REF. No.	PART No.	DESCRIPTIONRE	MARK
201	2-109-890-02	LIGHT GUIDE (BZ)	
202	* A-1067-917-A	H5 MOUNT	
203	* A-1058-510-A	H3 MOUNT	
204	* A-1058-511-A	H4 MOUNT	
205	X-2022-930-2	PANEL BOTTOM(50XS)ASSY	
206	X-2022-929-2	GASKET FG(50V) ASSY	
207	X-2022-928-2	GASKET FG(50H) ASSY	
208	X-2023-744-1	SPEAKER GRILL(50XSL) ASSY	
209	X-2024-678-2	LIGHT GUIDE (BZ) ASSY 201	
210	2-109-305-01	BEZEL(50)	

REF. No.	PART No.	DESCRIPTIONRE	MARK
211	2-176-091-02	PANEL TOP(50)	
212	X-2023-745-1	SPEAKER GRILL(50XSR) ASSY	
213	A-1116-019-A	OPTICAL FILTER GLASS ASSY	
#2	7-685-663-79	SCREW +BVTP 4X16, TYPE2, IT-3	
#16	7-685-648-79	SCREW +BVTP 3X12, TYPE2, IT-3	
#20	7-685-663-71	SCREW +BVTP 4X16, TYPE2, IT-3	

4-6. PACKING MATERIALS

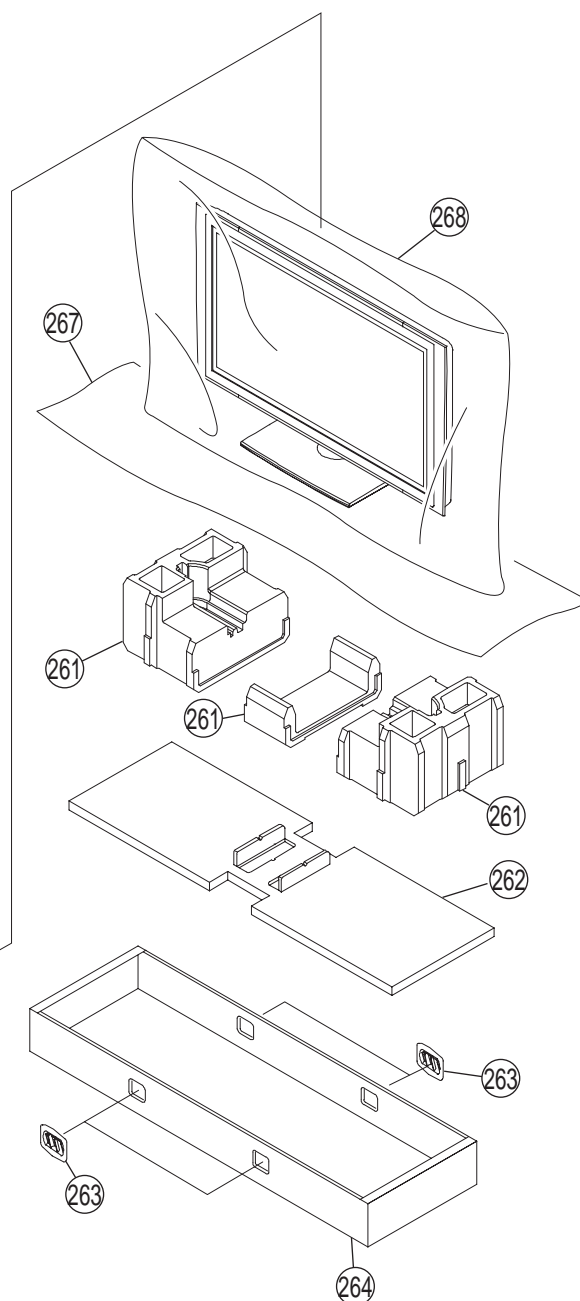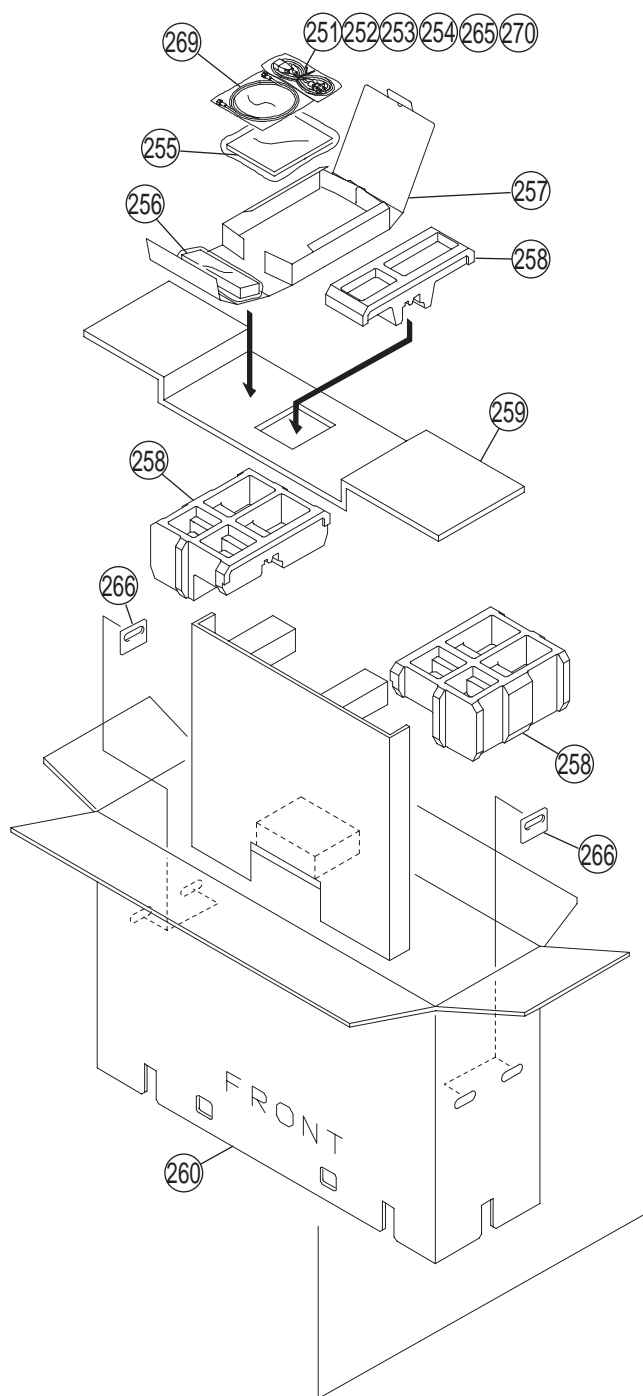

REF. No.	PART No.	DESCRIPTIONRE	MARK
251	2-990-242-01	HOLDER (B), PLUG	
252	4-102-612-01	BELT, CLAMP	
253	4-302-404-11	SCREW, WASHER HEAD (+P 4X16)	
254	* X-2025-305-1	ASSY, CLEANING CLOTH (FOR U/C)	
255	2-148-836-11	MANUAL, INSTRUCTION (UC)	
	2-148-836-21	MANUAL, INSTRUCTION (FR)	
	2-148-836-31	MANUAL, INSTRUCTION (ES)	
256	1-478-825-11	REMOTE COMMANDER (RM-Y1004)	
257	* 4-100-241-02	BOX, ACCESSORY	
258	* 2-348-479-01	CUSHION, UPPER	
259	* 2-348-493-01	BOARD, TOP	
260	* 2-348-491-01	INDIVIDUAL CARTON	

REF. No.	PART No.	DESCRIPTIONRE	MARK
261	* 2-348-480-01	CUSHION, LOWER	
262	* 2-348-494-01	BOARD, BOTTOM	
263	* 4-030-895-01	JOINT	
264	* 2-348-492-01	TRAY	
265	1-830-211-11	CORD, POWER	
266	* 4-067-995-01	HANDLE (E)	
267	* 2-581-047-01	SHEET, PROTECTION	
268	* 2-189-612-01	BAG, PROTECTION	
269	* 1-829-929-11	COAXIAL, CABLE WITH F-PLUG	
270	2-188-888-01	REUSE LOCKING CLAMP	

SECTION 5

ELECTRICAL PARTS LIST

NOTE:

The components identified \triangle marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque \triangle sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

RESISTORS

- All resistors are in ohms
- F : nonflammable

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1		H2	CAPACITOR		C1101	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
2		H2	CAPACITOR		C1102	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
3		H2	CAPACITOR		C1103	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4		H2	CAPACITOR		C1104	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5		H2	CAPACITOR		C1105	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
6		H2	CAPACITOR		C1106	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
7		H2	CONNECTOR		CN1102	1-766-382-91	PIN, CONNECTOR 10P		
8		H2	CONNECTOR		CN1104	1-573-290-91	PIN, CONNECTOR 4P		
9		H2	DIODE		D1105	8-719-977-28	DIODE DTZ10B		
10		H2	DIODE		D1106	8-719-977-28	DIODE DTZ10B		
11		H2	DIODE		D1107	8-719-977-28	DIODE DTZ10B		
12		H2	JACK		J1101	1-784-646-11	TERMINAL, S		
13		H2	JACK		J1102	1-580-443-11	JACK, PIN 3P		
14		H2	RESISTOR		R1101	1-216-811-11	METAL CHIP 150 5% 1/10W		
15		H2	RESISTOR		R1103	1-216-811-11	METAL CHIP 150 5% 1/10W		
16		H2	RESISTOR		R1104	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
17		H2	RESISTOR		R1105	1-216-851-11	METAL CHIP 330K 5% 1/10W		
18		H2	RESISTOR		R1106	1-216-851-11	METAL CHIP 330K 5% 1/10W		
19		H2	RESISTOR		R1114	1-216-864-11	SHORT CHIP 0		
20		H2	RESISTOR		R1115	1-216-811-11	METAL CHIP 150 5% 1/10W		
21		H2	RESISTOR		R1116	1-216-811-11	METAL CHIP 150 5% 1/10W		
22		H2	VARISTOR		VD1101	1-803-974-21	VARISTOR, CHIP (1608)		
23		H2	VARISTOR		VD1102	1-803-974-21	VARISTOR, CHIP (1608)		
24		H2	VARISTOR		VD1103	1-803-974-21	VARISTOR, CHIP (1608)		
25		K	CAPACITOR		C2605	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
26		K	CAPACITOR		C2608	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
27		K	CAPACITOR		C2609	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
28		K	CAPACITOR		C2612	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
29		K	CAPACITOR		C2613	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
30		K	CAPACITOR		C2614	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
31		K	CAPACITOR		C2615	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
32		K	CAPACITOR		C2616	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
33		K	CAPACITOR		C2617	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V		
34		K	CAPACITOR		C2618	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
35		K	CAPACITOR		C2619	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
36		K	CAPACITOR		C2620	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
37		K	CAPACITOR		C2621	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
38		K	CAPACITOR		C2622	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
39		K	CAPACITOR		C2624	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V		
40		K	CAPACITOR		C2625	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
41		K	CAPACITOR		C2626	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
42		K	CAPACITOR		C2628	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
43		K	CAPACITOR		C2629	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
44		K	CAPACITOR		C2630	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
45		K	CAPACITOR		C2631	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
46		K	CAPACITOR		C2632	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
47		K	CAPACITOR		C2633	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
48		K	CAPACITOR		C2634	1-126-390-11	ELECT CHIP 22UF 20.00% 6.3V		
49		K	CAPACITOR		C2635	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
50		K	CAPACITOR		C2636	1-115-467-11	CERAMIC CHIP 0.22UF 10.00% 10V		
51		K	CAPACITOR		C2638	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
52		K	CAPACITOR		C2639	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
53		K	CAPACITOR		C2640	1-128-643-11	CERAMIC CHIP 4.7UF 35V		
54		K	CAPACITOR		C2641	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
55		K	CAPACITOR		C2642	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
56		K	CAPACITOR		C2643	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
57		K	CAPACITOR		C2644	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
58		K	CAPACITOR		C2645	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
59		K	CAPACITOR		C2646	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
60		K	CAPACITOR		C2647	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
61		K	CAPACITOR		C2648	1-128-643-11	CERAMIC CHIP 4.7UF 35V		
62		K	CAPACITOR		C2649	1-128-643-11	CERAMIC CHIP 4.7UF 35V		
63		K	CAPACITOR		C2651	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
64		K	CAPACITOR		C2652	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
65		K	CAPACITOR		C2653	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
66		K	CAPACITOR		C2655	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
67		K	CAPACITOR		C2656	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
68		K	CAPACITOR		C2657	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
69		K	CAPACITOR		C2658	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
70		K	CAPACITOR		C2659	1-163-989-11	CERAMIC CHIP 0.033UF 10.00% 25V		
71		K	CAPACITOR		C2660	1-163-989-11	CERAMIC CHIP 0.033UF 10.00% 25V		
72		K	CAPACITOR		C2661	1-163-989-11	CERAMIC CHIP 0.033UF 10.00% 25V		
73		K	CAPACITOR		C2662	1-163-989-11	CERAMIC CHIP 0.033UF 10.00% 25V		
74		K	CAPACITOR		C2663	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
75		K	CAPACITOR		C2664	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
76		K	CAPACITOR		C2665	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
77		K	CAPACITOR		C2666	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
78		K	CAPACITOR		C2667	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
79		K	CAPACITOR		C2668	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
80		K	CAPACITOR		C2669	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
81		K	CAPACITOR		C2670	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
82		K	CAPACITOR		C2671	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
83		K	CAPACITOR		C2672	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
84		K	CAPACITOR		C2673	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
85		K	CAPACITOR		C2674	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
86		K	CAPACITOR		C2675	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
87		K	CAPACITOR		C2678	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
88		K	CAPACITOR		C2679	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
89		K	CAPACITOR		C2680	1-131-704-11	FILM 1UF 5% 50V		
90		K	CAPACITOR		C2681	1-131-704-11	FILM 1UF 5% 50V		
91		K	CAPACITOR		C2682	1-131-704-11	FILM 1UF 5% 50V		
92		K	CAPACITOR		C2683	1-131-704-11	FILM 1UF 5% 50V		
93		K	CAPACITOR		C2684	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
94		K	CAPACITOR		C2685	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
95		K	CAPACITOR		C2686	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
96		K	CAPACITOR		C2687	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
97		K	CAPACITOR		C2688	1-137-805-31	ELECT 330UF 20% 35V		
98		K	CAPACITOR		C2689	1-112-030-31	CAP,ELECT,ALUMINUM		
99		K	CAPACITOR		C2690	1-112-030-31	CAP,ELECT,ALUMINUM		
100		K	CAPACITOR		C2691	1-137-805-31	ELECT 330UF 20% 35V		
101		K	CAPACITOR		C2692	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
102		K	CAPACITOR		C2693	1-115-340-11	CERAMIC CHIP 0.22UF 10.00% 25V		
103		K	CAPACITOR		C2694	1-115-340-11	CERAMIC CHIP 0.22UF 10.00% 25V		
104		K	CAPACITOR		C2695	1-115-340-11	CERAMIC CHIP 0.22UF 10.00% 25V		
105		K	CAPACITOR		C2696	1-115-340-11	CERAMIC CHIP 0.22UF 10.00% 25V		
106		K	CAPACITOR		C2697	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
107		K	CAPACITOR		C2698	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
108		K	CAPACITOR		C2699	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
109		K	CAPACITOR		C2700	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
110		K	CAPACITOR		C2701	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
111		K	CAPACITOR		C2702	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
112		K	CAPACITOR		C2703	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
113		K	CAPACITOR		C2704	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
114		K	CAPACITOR		C2705	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
115		K	CAPACITOR		C2706	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
116		K	CAPACITOR		C2707	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
117		K	CAPACITOR		C2708	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
118		K	CAPACITOR		C2709	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
119		K	CAPACITOR		C2710	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
120		K	CAPACITOR		C2711	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
121		K	CAPACITOR		C2713	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
122		K	CAPACITOR		C2714	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
123		K	CAPACITOR		C2716	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
124		K	CAPACITOR		C2717	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
125		K	CAPACITOR		C2718	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
126		K	CAPACITOR		C2719	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
127		K	CAPACITOR		C2721	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
128		K	CAPACITOR		C2722	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
129		K	CAPACITOR		C2724	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
130		K	CAPACITOR		C2725	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
131		K	CAPACITOR		C2727	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
132		K	CAPACITOR		C2728	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
133		K	CAPACITOR		C2729	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
134		K	CAPACITOR		C2730	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
135		K	CAPACITOR		C2731	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
136		K	CAPACITOR		C2732	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
137		K	CAPACITOR		C2734	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
138		K	CAPACITOR		C2735	1-163-989-11	CERAMIC CHIP 0.033UF 10.00% 25V		
139		K	CAPACITOR		C2736	1-163-989-11	CERAMIC CHIP 0.033UF 10.00% 25V		
140		K	CAPACITOR		C2737	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
141		K	CAPACITOR		C2738	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
142		K	CAPACITOR		C2739	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
143		K	CAPACITOR		C2740	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
144		K	CAPACITOR		C2741	1-131-704-11	FILM 1UF 5% 50V		
145		K	CAPACITOR		C2742	1-131-704-11	FILM 1UF 5% 50V		
146		K	CAPACITOR		C2744	1-137-805-31	ELECT 330UF 20% 35V		
147		K	CAPACITOR		C2745	1-112-030-31	CAP,ELECT,ALUMINUM		
148		K	CAPACITOR		C2746	1-115-340-11	CERAMIC CHIP 0.22UF 10.00% 25V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
149		K	CAPACITOR		C2747	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
150		K	CAPACITOR		C2748	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
151		K	CAPACITOR		C2749	1-115-340-11	CERAMIC CHIP 0.22UF 10.00% 25V		
152		K	CAPACITOR		C2750	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
153		K	CAPACITOR		C2751	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
154		K	CAPACITOR		C2752	1-128-643-11	CERAMIC CHIP 4.7UF 35V		
155		K	CAPACITOR		C2753	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
156		K	CAPACITOR		C2754	1-162-962-11	CERAMIC CHIP 470PF 10.00% 50V		
157		K	CAPACITOR		C2755	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
158		K	CAPACITOR		C2756	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
159		K	CAPACITOR		C2757	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
160		K	CAPACITOR		C2758	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
161		K	CAPACITOR		C2760	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
162		K	CAPACITOR		C2761	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
163		K	CAPACITOR		C2762	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
164		K	CAPACITOR		C2763	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
165		K	CAPACITOR		C2764	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
166		K	CAPACITOR		C2765	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
167		K	CAPACITOR		C2766	1-164-245-11	CERAMIC CHIP 0.015UF 10.00% 25V		
168		K	CAPACITOR		C2767	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
169		K	CAPACITOR		C2768	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
170		K	CAPACITOR		C6100	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V		
171		K	CAPACITOR		C6101	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V		
172		K	CAPACITOR		C6102	1-126-396-11	ELECT CHIP 47UF 20.00% 16V		
173		K	CAPACITOR		C6103	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
174		K	CAPACITOR		C6104	1-100-633-21	ELECT CHIP 47UF 20% 35V		
175		K	CAPACITOR		C6106	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
176		K	CAPACITOR		C6107	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
177		K	CAPACITOR		C6108	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
178		K	CAPACITOR		C6109	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
179		K	CAPACITOR		C6110	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
180		K	CAPACITOR		C6111	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
181		K	CAPACITOR		C6112	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
182		K	CAPACITOR		C6113	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
183		K	CAPACITOR		C6114	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
184		K	CAPACITOR		C6115	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
185		K	CAPACITOR		C6116	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
186		K	CONNECTOR		CN2600	1-764-177-91	PIN, CONNECTOR 7P		
187		K	CONNECTOR	*	CN2601	1-766-176-11	PIN, CONNECTOR (PC BOARD) 6P		
188		K	CONNECTOR	*	CN2602	1-766-175-11	PIN, CONNECTOR (PC BOARD) 5P		
189		K	DIODE		D2600	6-500-884-01	DIODE P6SMBJ30A-5		
190		K	DIODE		D2601	6-500-884-01	DIODE P6SMBJ30A-5		
191		K	DIODE		D2602	6-500-884-01	DIODE P6SMBJ30A-5		
192		K	DIODE		D2603	6-500-884-01	DIODE P6SMBJ30A-5		
193		K	DIODE		D2616	6-500-884-01	DIODE P6SMBJ30A-5		
194		K	DIODE		D2617	6-500-884-01	DIODE P6SMBJ30A-5		
195		K	DIODE		D2619	8-719-977-28	DIODE DTZ10B		
196		K	DIODE		D2620	8-719-050-38	DIODE M1MA152WK-T1		
197		K	DIODE		D2621	8-719-050-37	DIODE M1MA152WA-T1		
198		K	DIODE		D2622	8-719-050-37	DIODE M1MA152WA-T1		
199		K	DIODE		D2623	8-719-050-38	DIODE M1MA152WK-T1		
200		K	DIODE		D2624	8-719-977-28	DIODE DTZ10B		
201		K	DIODE		D2627	8-719-081-97	DIODE MMDL914T1		
202		K	DIODE		D2629	8-719-989-00	DIODE DA221		
203		K	DIODE		D6101	8-719-081-97	DIODE MMDL914T1		
204		K	TERMINAL BOARD		EB2600	1-537-771-21	TERMINAL BOARD, GROUND		
205		K	FERRITE BEAD		FB2600	1-414-228-11	FERRITE 0UH		
206		K	FERRITE BEAD		FB2601	1-414-228-11	FERRITE 0UH		
207		K	FERRITE BEAD		FB2602	1-414-228-11	FERRITE 0UH		
208		K	FERRITE BEAD		FB2603	1-414-228-11	FERRITE 0UH		
209		K	FERRITE BEAD		FB2604	1-414-228-11	FERRITE 0UH		
210		K	FERRITE BEAD		FB2605	1-414-228-11	FERRITE 0UH		
211		K	FERRITE BEAD		FB2606	1-414-228-11	FERRITE 0UH		
212		K	FERRITE BEAD		FB2607	1-414-228-11	FERRITE 0UH		
213		K	FERRITE BEAD		FB2608	1-414-228-11	FERRITE 0UH		
214		K	FERRITE BEAD		FB2609	1-414-228-11	FERRITE 0UH		
215		K	FERRITE BEAD		FB2610	1-414-228-11	FERRITE 0UH		
216		K	FERRITE BEAD		FB2611	1-414-228-11	FERRITE 0UH		
217		K	IC		IC2600	8-759-825-15	IC LC89056W-E		
218		K	IC		IC2601	8-759-548-99	IC SN74LV08APWR		
219		K	IC		IC2602	6-702-821-01	IC R3112N421A-TR-FA		
220		K	IC		IC2603	6-706-902-01	IC CXD9835TND BTR		
221		K	IC		IC2604	6-705-979-01	IC CXD9788AR		
222		K	IC		IC2605	6-704-802-01	IC CXD9774M		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
223		K	IC		IC2606	6-704-802-01	IC CXD9774M		
224		K	IC		IC2607	6-705-979-01	IC CXD9788AR		
225		K	IC		IC2608	6-704-802-01	IC CXD9774M		
226		K	IC		IC2609	6-704-766-01	IC SN74AHC2G14HDCU3		
227		K	IC		IC2610	6-704-573-01	IC M24C32-WMN6T(B)		
228		K	IC		IC2611	8-759-596-29	IC SN74LV4066APWR		
229		K	IC		IC2612	6-706-056-01	IC SN74LVC2GU04DCKR		
230		K	IC		IC2614	6-703-046-01	IC SN74LVC1G08DCKR		
231		K	IC		IC6101	6-706-862-01	IC NJM2387DL2-TE1		
232		K	IC		IC6102	6-700-263-01	IC NJM2870F18(TE2)		
233		K	IC		IC6103	6-705-403-01	IC PQ070XZ01ZPH		
234		K	COIL		L2602	1-456-813-11	COIL, AIR-CORE		
235		K	COIL		L2603	1-456-813-11	COIL, AIR-CORE		
236		K	COIL		L2604	1-456-813-11	COIL, AIR-CORE		
237		K	COIL		L2605	1-456-813-11	COIL, AIR-CORE		
238		K	COIL		L2607	1-456-857-11	INDUCTOR 10UH		
239		K	COIL		L2608	1-456-857-11	INDUCTOR 10UH		
240		K	COIL		L2609	1-456-857-11	INDUCTOR 10UH		
241		K	COIL		L2610	1-456-857-11	INDUCTOR 10UH		
242		K	COIL		L2612	1-456-813-11	COIL, AIR-CORE		
243		K	COIL		L2613	1-456-813-11	COIL, AIR-CORE		
244		K	COIL		L2614	1-456-857-11	INDUCTOR 10UH		
245		K	COIL		L2615	1-456-857-11	INDUCTOR 10UH		
246		K	IC LINK	△	PS2602	1-576-774-21	FUSE 6.3A 72V		
247		K	TRANSISTOR		Q2602	8-729-907-00	TRANSISTOR DTC114EU		
248		K	TRANSISTOR		Q2603	8-729-230-49	TRANSISTOR 2SC2712-YG		
249		K	TRANSISTOR		Q2604	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		
250		K	TRANSISTOR		Q2605	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		
251		K	TRANSISTOR		Q2606	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		
252		K	TRANSISTOR		Q2607	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		
253		K	TRANSISTOR		Q2608	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		
254		K	TRANSISTOR		Q2609	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		
255		K	TRANSISTOR		Q2610	8-729-028-74	TRANSISTOR DTA114TUA-T106		
256		K	TRANSISTOR		Q2611	8-729-029-09	TRANSISTOR DTC143EUA-T106		
257		K	TRANSISTOR		Q6101	8-729-230-49	TRANSISTOR 2SC2712-YG		
258		K	TRANSISTOR		Q6102	8-729-230-49	TRANSISTOR 2SC2712-YG		
259		K	RESISTOR		R2601	1-216-864-11	SHORT CHIP 0		
260		K	RESISTOR		R2602	1-216-864-11	SHORT CHIP 0		
261		K	RESISTOR		R2603	1-216-864-11	SHORT CHIP 0		
262		K	RESISTOR		R2604	1-216-864-11	SHORT CHIP 0		
263		K	RESISTOR		R2605	1-216-864-11	SHORT CHIP 0		
264		K	RESISTOR		R2606	1-216-864-11	SHORT CHIP 0		
265		K	RESISTOR		R2607	1-216-833-11	METAL CHIP 10K 5% 1/10W		
266		K	RESISTOR		R2608	1-216-864-11	SHORT CHIP 0		
267		K	RESISTOR		R2609	1-216-864-11	SHORT CHIP 0		
268		K	RESISTOR		R2610	1-216-805-11	METAL CHIP 47 5% 1/10W		
269		K	RESISTOR		R2611	1-216-857-11	METAL CHIP 1M 5% 1/10W		
270		K	RESISTOR		R2612	1-216-864-11	SHORT CHIP 0		
271		K	RESISTOR		R2613	1-216-864-11	SHORT CHIP 0		
272		K	RESISTOR		R2614	1-216-817-11	METAL CHIP 470 5% 1/10W		
273		K	RESISTOR		R2615	1-216-833-11	METAL CHIP 10K 5% 1/10W		
274		K	RESISTOR		R2619	1-216-809-11	METAL CHIP 100 5% 1/10W		
275		K	RESISTOR		R2620	1-216-833-11	METAL CHIP 10K 5% 1/10W		
276		K	RESISTOR		R2621	1-216-833-11	METAL CHIP 10K 5% 1/10W		
277		K	RESISTOR		R2622	1-216-833-11	METAL CHIP 10K 5% 1/10W		
278		K	RESISTOR		R2623	1-216-809-11	METAL CHIP 100 5% 1/10W		
279		K	RESISTOR		R2624	1-216-809-11	METAL CHIP 100 5% 1/10W		
280		K	RESISTOR		R2625	1-216-833-11	METAL CHIP 10K 5% 1/10W		
281		K	RESISTOR		R2626	1-216-809-11	METAL CHIP 100 5% 1/10W		
282		K	RESISTOR		R2627	1-216-809-11	METAL CHIP 100 5% 1/10W		
283		K	RESISTOR		R2628	1-216-809-11	METAL CHIP 100 5% 1/10W		
284		K	RESISTOR		R2629	1-216-809-11	METAL CHIP 100 5% 1/10W		
285		K	RESISTOR		R2632	1-216-864-11	SHORT CHIP 0		
286		K	RESISTOR		R2635	1-216-809-11	METAL CHIP 100 5% 1/10W		
287		K	RESISTOR		R2636	1-216-809-11	METAL CHIP 100 5% 1/10W		
288		K	RESISTOR		R2637	1-216-833-11	METAL CHIP 10K 5% 1/10W		
289		K	RESISTOR		R2639	1-216-797-11	METAL CHIP 10 5% 1/10W		
290		K	RESISTOR		R2641	1-216-833-11	METAL CHIP 10K 5% 1/10W		
291		K	RESISTOR		R2642	1-216-853-11	METAL CHIP 470K 5% 1/10W		
292		K	RESISTOR		R2643	1-216-864-11	SHORT CHIP 0		
293		K	RESISTOR		R2644	1-216-809-11	METAL CHIP 100 5% 1/10W		
294		K	RESISTOR		R2645	1-216-864-11	SHORT CHIP 0		
295		K	RESISTOR		R2646	1-216-805-11	METAL CHIP 47 5% 1/10W		
296		K	RESISTOR		R2647	1-216-809-11	METAL CHIP 100 5% 1/10W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
297		K	RESISTOR		R2648	1-216-805-11	METAL CHIP 47 5% 1/10W		
298		K	RESISTOR		R2649	1-216-805-11	METAL CHIP 47 5% 1/10W		
299		K	RESISTOR		R2650	1-216-805-11	METAL CHIP 47 5% 1/10W		
300		K	RESISTOR		R2651	1-216-833-11	METAL CHIP 10K 5% 1/10W		
301		K	RESISTOR		R2652	1-216-833-11	METAL CHIP 10K 5% 1/10W		
302		K	RESISTOR		R2653	1-216-805-11	METAL CHIP 47 5% 1/10W		
303		K	RESISTOR		R2654	1-216-805-11	METAL CHIP 47 5% 1/10W		
304		K	RESISTOR		R2656	1-216-805-11	METAL CHIP 47 5% 1/10W		
305		K	RESISTOR		R2657	1-216-841-11	METAL CHIP 47K 5% 1/10W		
306		K	RESISTOR		R2659	1-216-864-11	SHORT CHIP 0		
307		K	RESISTOR		R2660	1-216-845-11	METAL CHIP 100K 5% 1/10W		
308		K	RESISTOR		R2662	1-216-805-11	METAL CHIP 47 5% 1/10W		
309		K	RESISTOR		R2663	1-216-833-11	METAL CHIP 10K 5% 1/10W		
310		K	RESISTOR		R2664	1-216-864-11	SHORT CHIP 0		
311		K	RESISTOR		R2665	1-216-864-11	SHORT CHIP 0		
312		K	RESISTOR		R2667	1-216-805-11	METAL CHIP 47 5% 1/10W		
313		K	RESISTOR		R2668	1-216-864-11	SHORT CHIP 0		
314		K	RESISTOR		R2669	1-216-818-11	METAL CHIP 560 5% 1/10W		
315		K	RESISTOR		R2671	1-216-818-11	METAL CHIP 560 5% 1/10W		
316		K	RESISTOR		R2673	1-216-864-11	SHORT CHIP 0		
317		K	RESISTOR		R2674	1-216-864-11	SHORT CHIP 0		
318		K	RESISTOR		R2675	1-216-837-11	METAL CHIP 22K 5% 1/10W		
319		K	RESISTOR		R2676	1-216-864-11	SHORT CHIP 0		
320		K	RESISTOR		R2677	1-216-864-11	SHORT CHIP 0		
321		K	RESISTOR		R2678	1-216-864-11	SHORT CHIP 0		
322		K	RESISTOR		R2679	1-216-809-11	METAL CHIP 100 5% 1/10W		
323		K	RESISTOR		R2680	1-216-839-11	METAL CHIP 33K 5% 1/10W		
324		K	RESISTOR		R2681	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
325		K	RESISTOR		R2682	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
326		K	RESISTOR		R2683	1-216-864-11	SHORT CHIP 0		
327		K	RESISTOR		R2684	1-216-846-11	METAL CHIP 120K 5% 1/10W		
328		K	RESISTOR		R2685	1-216-846-11	METAL CHIP 120K 5% 1/10W		
329		K	RESISTOR		R2687	1-216-837-11	METAL CHIP 22K 5% 1/10W		
330		K	RESISTOR		R2688	1-216-837-11	METAL CHIP 22K 5% 1/10W		
331		K	RESISTOR		R2690	1-216-845-11	METAL CHIP 100K 5% 1/10W		
332		K	RESISTOR		R2691	1-216-845-11	METAL CHIP 100K 5% 1/10W		
333		K	RESISTOR		R2692	1-216-845-11	METAL CHIP 100K 5% 1/10W		
334		K	RESISTOR		R2693	1-216-845-11	METAL CHIP 100K 5% 1/10W		
335		K	RESISTOR		R2694	1-216-864-11	SHORT CHIP 0		
336		K	RESISTOR		R2695	1-216-837-11	METAL CHIP 22K 5% 1/10W		
337		K	RESISTOR		R2696	1-216-833-11	METAL CHIP 10K 5% 1/10W		
338		K	RESISTOR		R2697	1-216-833-11	METAL CHIP 10K 5% 1/10W		
339		K	RESISTOR		R2698	1-216-864-11	SHORT CHIP 0		
340		K	RESISTOR		R2699	1-216-864-11	SHORT CHIP 0		
341		K	RESISTOR		R2700	1-216-864-11	SHORT CHIP 0		
342		K	RESISTOR		R2701	1-216-864-11	SHORT CHIP 0		
343		K	RESISTOR		R2702	1-220-942-11	METAL CHIP 3.3 1% 1/4W		
344		K	RESISTOR		R2703	1-220-942-11	METAL CHIP 3.3 1% 1/4W		
345		K	RESISTOR		R2704	1-216-821-11	METAL CHIP 1K 5% 1/10W		
346		K	RESISTOR		R2705	1-216-821-11	METAL CHIP 1K 5% 1/10W		
347		K	RESISTOR		R2707	1-220-942-11	METAL CHIP 3.3 1% 1/4W		
348		K	RESISTOR		R2708	1-220-942-11	METAL CHIP 3.3 1% 1/4W		
349		K	RESISTOR		R2709	1-216-864-11	SHORT CHIP 0		
350		K	RESISTOR		R2711	1-216-809-11	METAL CHIP 100 5% 1/10W		
351		K	RESISTOR		R2712	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
352		K	RESISTOR		R2713	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
353		K	RESISTOR		R2715	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
354		K	RESISTOR		R2716	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
355		K	RESISTOR		R2717	1-216-864-11	SHORT CHIP 0		
356		K	RESISTOR		R2718	1-216-864-11	SHORT CHIP 0		
357		K	RESISTOR		R2719	1-216-864-11	SHORT CHIP 0		
358		K	RESISTOR		R2720	1-216-833-11	METAL CHIP 10K 5% 1/10W		
359		K	RESISTOR		R2722	1-216-833-11	METAL CHIP 10K 5% 1/10W		
360		K	RESISTOR		R2724	1-216-791-11	METAL CHIP 3.3 5% 1/10W		
361		K	RESISTOR		R2725	1-216-791-11	METAL CHIP 3.3 5% 1/10W		
362		K	RESISTOR		R2726	1-216-791-11	METAL CHIP 3.3 5% 1/10W		
363		K	RESISTOR		R2727	1-216-791-11	METAL CHIP 3.3 5% 1/10W		
364		K	RESISTOR		R2729	1-216-821-11	METAL CHIP 1K 5% 1/10W		
365		K	RESISTOR		R2730	1-216-864-11	SHORT CHIP 0		
366		K	RESISTOR		R2732	1-216-864-11	SHORT CHIP 0		
367		K	RESISTOR		R2733	1-216-864-11	SHORT CHIP 0		
368		K	RESISTOR		R2734	1-216-809-11	METAL CHIP 100 5% 1/10W		
369		K	RESISTOR		R2735	1-216-809-11	METAL CHIP 100 5% 1/10W		
370		K	RESISTOR		R2736	1-216-809-11	METAL CHIP 100 5% 1/10W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
371		K	RESISTOR		R2737	1-216-809-11	METAL CHIP 100 5% 1/10W		
372		K	RESISTOR		R2738	1-216-805-11	METAL CHIP 47 5% 1/10W		
373		K	RESISTOR		R2739	1-216-805-11	METAL CHIP 47 5% 1/10W		
374		K	RESISTOR		R2741	1-216-833-11	METAL CHIP 10K 5% 1/10W		
375		K	RESISTOR		R2742	1-216-805-11	METAL CHIP 47 5% 1/10W		
376		K	RESISTOR		R2743	1-216-805-11	METAL CHIP 47 5% 1/10W		
377		K	RESISTOR		R2744	1-216-864-11	SHORT CHIP 0		
378		K	RESISTOR		R2745	1-216-864-11	SHORT CHIP 0		
379		K	RESISTOR		R2746	1-216-864-11	SHORT CHIP 0		
380		K	RESISTOR		R2747	1-216-805-11	METAL CHIP 47 5% 1/10W		
381		K	RESISTOR		R2748	1-216-805-11	METAL CHIP 47 5% 1/10W		
382		K	RESISTOR		R2749	1-216-805-11	METAL CHIP 47 5% 1/10W		
383		K	RESISTOR		R2750	1-216-805-11	METAL CHIP 47 5% 1/10W		
384		K	RESISTOR		R2751	1-216-833-11	METAL CHIP 10K 5% 1/10W		
385		K	RESISTOR		R2752	1-216-805-11	METAL CHIP 47 5% 1/10W		
386		K	RESISTOR		R2754	1-216-864-11	SHORT CHIP 0		
387		K	RESISTOR		R2755	1-216-833-11	METAL CHIP 10K 5% 1/10W		
388		K	RESISTOR		R2756	1-216-833-11	METAL CHIP 10K 5% 1/10W		
389		K	RESISTOR		R2757	1-216-821-11	METAL CHIP 1K 5% 1/10W		
390		K	RESISTOR		R2759	1-216-837-11	METAL CHIP 22K 5% 1/10W		
391		K	RESISTOR		R2760	1-216-818-11	METAL CHIP 560 5% 1/10W		
392		K	RESISTOR		R2761	1-216-864-11	SHORT CHIP 0		
393		K	RESISTOR		R2763	1-216-864-11	SHORT CHIP 0		
394		K	RESISTOR		R2764	1-216-864-11	SHORT CHIP 0		
395		K	RESISTOR		R2765	1-216-864-11	SHORT CHIP 0		
396		K	RESISTOR		R2766	1-216-805-11	METAL CHIP 47 5% 1/10W		
397		K	RESISTOR		R2767	1-216-864-11	SHORT CHIP 0		
398		K	RESISTOR		R2769	1-216-864-11	SHORT CHIP 0		
399		K	RESISTOR		R2770	1-216-864-11	SHORT CHIP 0		
400		K	RESISTOR		R2771	1-220-942-11	METAL CHIP 3.3 1% 1/4W		
401		K	RESISTOR		R2772	1-220-942-11	METAL CHIP 3.3 1% 1/4W		
402		K	RESISTOR		R2773	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
403		K	RESISTOR		R2774	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
404		K	RESISTOR		R2775	1-216-791-11	METAL CHIP 3.3 5% 1/10W		
405		K	RESISTOR		R2776	1-216-791-11	METAL CHIP 3.3 5% 1/10W		
406		K	RESISTOR		R2777	1-216-864-11	SHORT CHIP 0		
407		K	RESISTOR		R2778	1-216-845-11	METAL CHIP 100K 5% 1/10W		
408		K	RESISTOR		R2779	1-216-846-11	METAL CHIP 120K 5% 1/10W		
409		K	RESISTOR		R2780	1-216-845-11	METAL CHIP 100K 5% 1/10W		
410		K	RESISTOR		R2781	1-216-864-11	SHORT CHIP 0		
411		K	RESISTOR		R2782	1-216-864-11	SHORT CHIP 0		
412		K	RESISTOR		R2783	1-216-805-11	METAL CHIP 47 5% 1/10W		
413		K	RESISTOR		R2784	1-216-805-11	METAL CHIP 47 5% 1/10W		
414		K	RESISTOR		R2785	1-216-813-11	METAL CHIP 220 5% 1/10W		
415		K	RESISTOR		R2786	1-216-864-11	SHORT CHIP 0		
416		K	RESISTOR		R2789	1-216-864-11	SHORT CHIP 0		
417		K	RESISTOR		R2790	1-216-864-11	SHORT CHIP 0		
418		K	RESISTOR		R2792	1-216-864-11	SHORT CHIP 0		
419		K	RESISTOR		R2793	1-216-809-11	METAL CHIP 100 5% 1/10W		
420		K	RESISTOR		R2794	1-216-809-11	METAL CHIP 100 5% 1/10W		
421		K	RESISTOR		R2795	1-216-809-11	METAL CHIP 100 5% 1/10W		
422		K	RESISTOR		R2798	1-216-809-11	METAL CHIP 100 5% 1/10W		
423		K	RESISTOR		R2799	1-216-809-11	METAL CHIP 100 5% 1/10W		
424		K	RESISTOR		R2802	1-216-864-11	SHORT CHIP 0		
425		K	RESISTOR		R2804	1-216-805-11	METAL CHIP 47 5% 1/10W		
426		K	RESISTOR		R2805	1-216-864-11	SHORT CHIP 0		
427		K	RESISTOR		R2806	1-216-805-11	METAL CHIP 47 5% 1/10W		
428		K	RESISTOR		R2807	1-216-864-11	SHORT CHIP 0		
429		K	RESISTOR		R2809	1-220-283-91	RES-CHIP 6.8K 5% 1/4W		
430		K	RESISTOR		R2810	1-220-283-91	RES-CHIP 6.8K 5% 1/4W		
431		K	RESISTOR		R2811	1-220-283-91	RES-CHIP 6.8K 5% 1/4W		
432		K	RESISTOR		R2812	1-220-283-91	RES-CHIP 6.8K 5% 1/4W		
433		K	RESISTOR		R2813	1-216-839-11	METAL CHIP 33K 5% 1/10W		
434		K	RESISTOR		R2815	1-216-834-11	METAL CHIP 12K 5% 1/10W		
435		K	RESISTOR		R2817	1-216-864-11	SHORT CHIP 0		
436		K	RESISTOR		R2819	1-220-283-91	RES-CHIP 6.8K 5% 1/4W		
437		K	RESISTOR		R2820	1-220-283-91	RES-CHIP 6.8K 5% 1/4W		
438		K	RESISTOR		R6101	1-216-833-11	METAL CHIP 10K 5% 1/10W		
439		K	RESISTOR		R6103	1-216-864-11	SHORT CHIP 0		
440		K	RESISTOR		R6104	1-216-833-11	METAL CHIP 10K 5% 1/10W		
441		K	RESISTOR		R6105	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
442		K	RESISTOR		R6106	1-216-837-11	METAL CHIP 22K 5% 1/10W		
443		K	RESISTOR		R6107	1-216-821-11	METAL CHIP 1K 5% 1/10W		
444		K	RESISTOR		R6108	1-218-706-11	METAL CHIP 3.9K 0.5% 1/10W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
445		K	RESISTOR		R6109	1-218-732-11	METAL CHIP 47K 0.5% 1/10W		
446		K	RESISTOR		R6110	1-218-732-11	METAL CHIP 47K 0.5% 1/10W		
447		K	RESISTOR		R6111	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
448		K	RESISTOR		R6112	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W		
449		K	RESISTOR		R6113	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W		
450		K	RESISTOR		R6115	1-216-864-11	SHORT CHIP 0		
451		K	RESISTOR		R6118	1-216-864-11	SHORT CHIP 0		
452		K	RESISTOR		R6119	1-216-833-11	METAL CHIP 10K 5% 1/10W		
453		K	RESISTOR		R6122	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
454		K	RESISTOR		R6123	1-218-732-11	METAL CHIP 47K 0.5% 1/10W		
455		K	RESISTOR		R6200	1-216-295-91	SHORT CHIP 0		
456		K	RESISTOR		R6201	1-216-295-91	SHORT CHIP 0		
457		K	RESISTOR		R6202	1-216-295-91	SHORT CHIP 0		
458		K	RESISTOR		R6203	1-216-295-91	SHORT CHIP 0		
459		K	RESISTOR		R6204	1-216-295-91	SHORT CHIP 0		
460		K	RESISTOR		R6205	1-216-295-91	SHORT CHIP 0		
461		K	RESISTOR		R6206	1-216-295-91	SHORT CHIP 0		
462		K	RESISTOR		R6207	1-216-295-91	SHORT CHIP 0		
463		K	RESISTOR		R6208	1-216-864-11	SHORT CHIP 0		
464		K	RESISTOR		R6209	1-216-864-11	SHORT CHIP 0		
465		K	RESISTOR		R6210	1-216-864-11	SHORT CHIP 0		
466		K	RESISTOR		R6211	1-216-864-11	SHORT CHIP 0		
467		K	RESISTOR		R6212	1-216-864-11	SHORT CHIP 0		
468		K	RESISTOR		R6213	1-216-864-11	SHORT CHIP 0		
469		K	RESISTOR		R6214	1-216-864-11	SHORT CHIP 0		
470		K	RESISTOR		R6215	1-216-864-11	SHORT CHIP 0		
471		K	RESISTOR		R6216	1-216-864-11	SHORT CHIP 0		
472		K	RESISTOR		R6217	1-216-864-11	SHORT CHIP 0		
473		K	RESISTOR		R6218	1-216-864-11	SHORT CHIP 0		
474		K	RESISTOR		R6220	1-216-864-11	SHORT CHIP 0		
475		K	CRYSTAL		X2600	1-813-049-21	VIBRATOR, CRYSTAL		
476		K	CRYSTAL		X2601	1-813-388-11	OSCILLATOR, CRYSTAL		
477		A1U	CAPACITOR		C301	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
478		A1U	CAPACITOR		C302	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
479		A1U	CAPACITOR		C303	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
480		A1U	CAPACITOR		C304	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
481		A1U	CAPACITOR		C306	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
482		A1U	CAPACITOR		C307	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
483		A1U	CAPACITOR		C308	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
484		A1U	CAPACITOR		C310	1-100-743-91	CERAMIC CHIP 2.2UF 20% 16V		
485		A1U	CAPACITOR		C311	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
486		A1U	CAPACITOR		C312	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
487		A1U	CAPACITOR		C313	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
488		A1U	CAPACITOR		C314	1-100-743-91	CERAMIC CHIP 2.2UF 20% 16V		
489		A1U	CAPACITOR		C315	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
490		A1U	CAPACITOR		C316	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
491		A1U	CAPACITOR		C318	1-104-607-11	ELECT CHIP 47UF 20.00% 16V		
492		A1U	CAPACITOR		C319	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
493		A1U	CAPACITOR		C324	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
494		A1U	CAPACITOR		C325	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
495		A1U	CAPACITOR		C326	1-115-467-11	CERAMIC CHIP 0.22UF 10.00% 10V		
496		A1U	CAPACITOR		C327	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
497		A1U	CAPACITOR		C328	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
498		A1U	CAPACITOR		C329	1-100-743-91	CERAMIC CHIP 2.2UF 20% 16V		
499		A1U	CAPACITOR		C330	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
500		A1U	CAPACITOR		C331	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
501		A1U	CAPACITOR		C332	1-100-743-91	CERAMIC CHIP 2.2UF 20% 16V		
502		A1U	CAPACITOR		C333	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
503		A1U	CAPACITOR		C334	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
504		A1U	CAPACITOR		C335	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
505		A1U	CAPACITOR		C336	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
506		A1U	CAPACITOR		C337	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
507		A1U	CAPACITOR		C338	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
508		A1U	CAPACITOR		C339	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
509		A1U	CAPACITOR		C340	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
510		A1U	CAPACITOR		C341	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
511		A1U	CAPACITOR		C342	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
512		A1U	CAPACITOR		C343	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
513		A1U	CAPACITOR		C344	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
514		A1U	CAPACITOR		C345	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
515		A1U	CAPACITOR		C346	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
516		A1U	CAPACITOR		C352	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
517		A1U	CAPACITOR		C357	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
518		A1U	CAPACITOR		C358	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
519		A1U	CAPACITOR		C359	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
520		A1U	CAPACITOR		C363	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
521		A1U	CAPACITOR		C364	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
522		A1U	CAPACITOR		C365	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
523		A1U	CAPACITOR		C366	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
524		A1U	CAPACITOR		C367	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
525		A1U	CAPACITOR		C368	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
526		A1U	CAPACITOR		C369	1-165-874-21	ELECT CHIP 120UF 20% 6.3V		
527		A1U	CAPACITOR		C370	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
528		A1U	CAPACITOR		C371	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
529		A1U	CAPACITOR		C380	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
530		A1U	CAPACITOR		C382	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
531		A1U	CAPACITOR		C383	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
532		A1U	CAPACITOR		C386	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
533		A1U	CAPACITOR		C387	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
534		A1U	CAPACITOR		C401	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
535		A1U	CAPACITOR		C402	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
536		A1U	CAPACITOR		C404	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
537		A1U	CAPACITOR		C405	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
538		A1U	CAPACITOR		C406	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
539		A1U	CAPACITOR		C407	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
540		A1U	CAPACITOR		C430	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
541		A1U	CAPACITOR		C431	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
542		A1U	CAPACITOR		C432	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
543		A1U	CAPACITOR		C433	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
544		A1U	CAPACITOR		C434	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
545		A1U	CAPACITOR		C435	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
546		A1U	CAPACITOR		C436	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
547		A1U	CAPACITOR		C437	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
548		A1U	CAPACITOR		C438	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
549		A1U	CAPACITOR		C501	1-163-084-00	CERAMIC CHIP 1.5PF 0.25PF 50V		
550		A1U	CAPACITOR		C502	1-163-084-00	CERAMIC CHIP 1.5PF 0.25PF 50V		
551		A1U	CAPACITOR		C503	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
552		A1U	CAPACITOR		C505	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
553		A1U	CAPACITOR		C506	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
554		A1U	CAPACITOR		C507	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
555		A1U	CAPACITOR		C508	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
556		A1U	CAPACITOR		C512	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
557		A1U	CAPACITOR		C513	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
558		A1U	CAPACITOR		C514	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
559		A1U	CAPACITOR		C515	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
560		A1U	CAPACITOR		C516	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
561		A1U	CAPACITOR		C517	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
562		A1U	CAPACITOR		C518	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
563		A1U	CAPACITOR		C519	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
564		A1U	CAPACITOR		C521	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
565		A1U	CAPACITOR		C522	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
566		A1U	CAPACITOR		C523	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
567		A1U	CAPACITOR		C524	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
568		A1U	CAPACITOR		C525	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
569		A1U	CAPACITOR		C526	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
570		A1U	CAPACITOR		C527	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
571		A1U	CAPACITOR		C528	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
572		A1U	CAPACITOR		C529	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
573		A1U	CAPACITOR		C530	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
574		A1U	CAPACITOR		C531	1-162-960-11	CERAMIC CHIP 220PF 10.00% 50V		
575		A1U	CAPACITOR		C532	1-162-960-11	CERAMIC CHIP 220PF 10.00% 50V		
576		A1U	CAPACITOR		C533	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
577		A1U	CAPACITOR		C536	1-165-874-21	ELECT CHIP 120UF 20% 6.3V		
578		A1U	CAPACITOR		C537	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
579		A1U	CAPACITOR		C538	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
580		A1U	CAPACITOR		C539	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
581		A1U	CAPACITOR		C540	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
582		A1U	CAPACITOR		C541	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
583		A1U	CAPACITOR		C542	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
584		A1U	CAPACITOR		C543	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
585		A1U	CAPACITOR		C544	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
586		A1U	CAPACITOR		C545	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
587		A1U	CAPACITOR		C546	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
588		A1U	CAPACITOR		C547	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
589		A1U	CAPACITOR		C548	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
590		A1U	CAPACITOR		C549	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
591		A1U	CAPACITOR		C551	1-162-960-11	CERAMIC CHIP 220PF 10.00% 50V		
592		A1U	CAPACITOR		C552	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
593		A1U	CAPACITOR		C553	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
594		A1U	CAPACITOR		C554	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
595		A1U	CAPACITOR		C555	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
596		A1U	CAPACITOR		C556	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
597		A1U	CAPACITOR		C557	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
598		A1U	CAPACITOR		C559	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
599		A1U	CAPACITOR		C561	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
600		A1U	CAPACITOR		C562	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
601		A1U	CAPACITOR		C572	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
602		A1U	CAPACITOR		C573	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
603		A1U	CAPACITOR		C578	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
604		A1U	CAPACITOR		C579	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
605		A1U	CAPACITOR		C583	1-162-960-11	CERAMIC CHIP 220PF 10.00% 50V		
606		A1U	CAPACITOR		C584	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
607		A1U	CAPACITOR		C585	1-137-764-21	ELECT 22UF 20% 16V		
608		A1U	CAPACITOR		C586	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
609		A1U	CAPACITOR		C587	1-165-874-21	ELECT CHIP 120UF 20% 6.3V		
610		A1U	CAPACITOR		C588	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
611		A1U	CAPACITOR		C589	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
612		A1U	CAPACITOR		C601	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
613		A1U	CAPACITOR		C602	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
614		A1U	CAPACITOR		C603	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
615		A1U	CAPACITOR		C604	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
616		A1U	CAPACITOR		C605	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
617		A1U	CAPACITOR		C606	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V		
618		A1U	CAPACITOR		C607	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
619		A1U	CAPACITOR		C608	1-162-960-11	CERAMIC CHIP 220PF 10.00% 50V		
620		A1U	CAPACITOR		C609	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
621		A1U	CAPACITOR		C610	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
622		A1U	CAPACITOR		C611	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
623		A1U	CAPACITOR		C612	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
624		A1U	CAPACITOR		C613	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
625		A1U	CAPACITOR		C614	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
626		A1U	CAPACITOR		C615	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
627		A1U	CAPACITOR		C617	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
628		A1U	CAPACITOR		C618	1-162-960-11	CERAMIC CHIP 220PF 10.00% 50V		
629		A1U	CAPACITOR		C619	1-162-960-11	CERAMIC CHIP 220PF 10.00% 50V		
630		A1U	CAPACITOR		C620	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
631		A1U	CAPACITOR		C621	1-162-960-11	CERAMIC CHIP 220PF 10.00% 50V		
632		A1U	CAPACITOR		C622	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
633		A1U	CAPACITOR		C648	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
634		A1U	CAPACITOR		C649	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
635		A1U	CAPACITOR		C650	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
636		A1U	CAPACITOR		C651	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
637		A1U	CAPACITOR		C653	1-126-601-11	ELECT CHIP 2.2UF 20.00% 50V		
638		A1U	CAPACITOR		C654	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
639		A1U	CAPACITOR		C656	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
640		A1U	CAPACITOR		C657	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
641		A1U	CAPACITOR		C658	1-126-397-11	ELECT CHIP 33UF 20.00% 25V		
642		A1U	CAPACITOR		C659	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
643		A1U	CONNECTOR		CN002	1-764-087-21	PIN, CONNECTOR (PC BOARD) 14P		
644		A1U	CONNECTOR		CN005	1-766-382-21	PIN, CONNECTOR (1.5MM)(SMD)10P		
645		A1U	CONNECTOR	*	CN006	1-785-531-11	PIN, CONNECTOR (PC BOARD) 12P		
646		A1U	CONNECTOR		CN304	1-774-771-11	CONNECTOR, FFC/FPC 14P		
647		A1U	CONNECTOR		CN306	1-770-161-21	PIN, CONNECTOR (PC BOARD) 6P		
648		A1U	LEAD PIN	*	CP001	4-042-408-02	PIN(45), WIRE		
649		A1U	LEAD PIN	*	CP002	4-042-408-02	PIN(45), WIRE		
650		A1U	LEAD PIN	*	CP003	4-042-408-02	PIN(45), WIRE		
651		A1U	LEAD PIN	*	CP004	4-042-408-02	PIN(45), WIRE		
652		A1U	DIODE		D301	8-719-977-28	DIODE DTZ10B		
653		A1U	DIODE		D302	8-719-977-28	DIODE DTZ10B		
654		A1U	DIODE		D303	8-719-977-28	DIODE DTZ10B		
655		A1U	DIODE		D304	8-719-977-28	DIODE DTZ10B		
656		A1U	DIODE		D311	8-719-977-28	DIODE DTZ10B		
657		A1U	DIODE		D312	8-719-977-28	DIODE DTZ10B		
658		A1U	DIODE		D313	8-719-977-28	DIODE DTZ10B		
659		A1U	DIODE		D314	8-719-977-28	DIODE DTZ10B		
660		A1U	DIODE		D315	8-719-977-28	DIODE DTZ10B		
661		A1U	DIODE		D316	8-719-977-28	DIODE DTZ10B		
662		A1U	DIODE		D317	8-719-977-28	DIODE DTZ10B		
663		A1U	DIODE		D318	8-719-977-28	DIODE DTZ10B		
664		A1U	DIODE		D319	8-719-977-28	DIODE DTZ10B		
665		A1U	DIODE		D320	8-719-977-28	DIODE DTZ10B		
666		A1U	DIODE		D322	8-719-941-86	DIODE DAN202U		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
667		A1U	DIODE		D323	8-719-024-77	DIODE HN1D03FU-TE85L		
668		A1U	DIODE		D407	8-719-977-28	DIODE DTZ10B		
669		A1U	DIODE		D408	8-719-977-28	DIODE DTZ10B		
670		A1U	DIODE		D409	8-719-977-28	DIODE DTZ10B		
671		A1U	DIODE		D410	8-719-977-28	DIODE DTZ10B		
672		A1U	DIODE		D501	8-719-977-28	DIODE DTZ10B		
673		A1U	DIODE		D502	8-719-977-28	DIODE DTZ10B		
674		A1U	DIODE		D505	8-719-050-37	DIODE M1MA152WA-T1		
675		A1U	DIODE		D506	8-719-988-61	DIODE 1SS355TE-17		
676		A1U	DIODE		D508	8-719-988-61	DIODE 1SS355TE-17		
677		A1U	DIODE		D509	8-719-081-97	DIODE MMDL914T1		
678		A1U	DIODE		D510	8-719-081-97	DIODE MMDL914T1		
679		A1U	DIODE		D601	8-719-056-85	DIODE UDZ-TE-17-8.2B		
680		A1U	DIODE		D602	8-719-056-85	DIODE UDZ-TE-17-8.2B		
681		A1U	DIODE		D607	8-719-988-61	DIODE 1SS355TE-17		
682		A1U	DIODE		D608	8-719-081-97	DIODE MMDL914T1		
683		A1U	DIODE		D609	8-719-081-97	DIODE MMDL914T1		
684		A1U	FERRITE BEAD		FB401	1-216-295-91	SHORT CHIP 0		
685		A1U	FERRITE BEAD		FB501	1-414-921-11	FERRITE 0UH		
686		A1U	FERRITE BEAD		FB502	1-414-921-11	FERRITE 0UH		
687		A1U	FERRITE BEAD		FB503	1-414-921-11	FERRITE 0UH		
688		A1U	FERRITE BEAD		FB504	1-414-760-21	FERRITE 0UH		
689		A1U	FERRITE BEAD		FB505	1-414-760-21	FERRITE 0UH		
690		A1U	FERRITE BEAD		FB506	1-414-760-21	FERRITE 0UH		
691		A1U	FERRITE BEAD		FB507	1-414-760-21	FERRITE 0UH		
692		A1U	IC		IC303	8-753-204-12	IC CXA2209Q-T6		
693		A1U	IC		IC404	8-759-548-56	IC M52055FP		
694		A1U	IC		IC500	8-759-661-88	IC NJM2123V(TE2)		
695		A1U	IC		IC501	8-759-278-58	IC NJM4558V-TE2		
696		A1U	IC		IC502	8-759-082-61	IC TC4W53FU		
697		A1U	IC		IC504	8-759-278-58	IC NJM4558V-TE2		
698		A1U	IC		IC507	8-752-107-98	IC CXA2188Q-T4		
699		A1U	IC		IC510	8-759-278-58	IC NJM4558V-TE2		
700		A1U	IC		IC512	8-759-592-45	IC TC7SZU04FU(TE85R)		
701		A1U	IC		IC514	8-759-183-53	IC TL431CPK-E2		
702		A1U	IC		IC521	6-706-903-01	IC AK5357VT-E2		
703		A1U	IC		IC522	6-706-897-01	IC MSP4440K-QA-B2		
704		A1U	IC		IC523	6-706-536-01	IC CXD9826R		
705		A1U	IC		IC524	6-705-030-01	IC IC62C1024AL-70QG		
706		A1U	IC		IC526	8-759-278-58	IC NJM4558V-TE2		
707		A1U	JACK		J300	1-565-838-11	JACK BLOCK, PIN 2P		
708		A1U	JACK		J301	1-507-792-31	JACK		
709		A1U	JACK		J302	1-565-838-11	JACK BLOCK, PIN 2P		
710		A1U	JACK		J303	1-507-792-31	JACK		
711		A1U	JACK		J304	1-816-393-11	JACK BLOCK, PIN 3P		
712		A1U	JACK		J305	1-537-712-11	TERMINAL, PUSH		
713		A1U	JACK		J307	1-817-098-11	PIN JACK BLOCK 3P		
714		A1U	JACK		J309	1-780-051-11	TERMINAL BLOCK, (S)		
715		A1U	JACK		J310	1-816-393-11	JACK BLOCK, PIN 3P		
716		A1U	SHORT CHIP		JR001	1-216-857-11	METAL CHIP 1M 5% 1/10W		
717		A1U	SHORT CHIP		JR002	1-216-857-11	METAL CHIP 1M 5% 1/10W		
718		A1U	SHORT CHIP		JR003	1-216-857-11	METAL CHIP 1M 5% 1/10W		
719		A1U	COIL		L306	1-412-058-11	INDUCTOR 10UH		
720		A1U	COIL		L307	1-216-295-91	SHORT CHIP 0		
721		A1U	COIL		L308	1-412-058-11	INDUCTOR 10UH		
722		A1U	COIL		L309	1-412-064-11	INDUCTOR 100UH		
723		A1U	COIL		L310	1-412-064-11	INDUCTOR 100UH		
724		A1U	COIL		L313	1-412-058-11	INDUCTOR 10UH		
725		A1U	COIL		L401	1-412-064-11	INDUCTOR 100UH		
726		A1U	COIL		L501	1-469-549-21	INDUCTOR 1UH		
727		A1U	COIL		L502	1-469-549-21	INDUCTOR 1UH		
728		A1U	COIL		L503	1-412-058-11	INDUCTOR 10UH		
729		A1U	COIL		L504	1-412-058-11	INDUCTOR 10UH		
730		A1U	COIL		L505	1-469-549-21	INDUCTOR 1UH		
731		A1U	COIL		L514	1-412-058-11	INDUCTOR 10UH		
732		A1U	COIL		L516	1-412-058-11	INDUCTOR 10UH		
733		A1U	TRANSISTOR		Q301	8-729-010-25	TRANSISTOR MSD601-RT1		
734		A1U	TRANSISTOR		Q302	8-729-010-05	TRANSISTOR MSB709-RT1		
735		A1U	TRANSISTOR		Q303	8-729-010-05	TRANSISTOR MSB709-RT1		
736		A1U	TRANSISTOR		Q304	8-729-010-25	TRANSISTOR MSD601-RT1		
737		A1U	TRANSISTOR		Q305	8-729-216-22	TRANSISTOR 2SA1162-G		
738		A1U	TRANSISTOR		Q306	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		
739		A1U	TRANSISTOR		Q307	8-729-120-28	TRANSISTOR 2SC1623-L5L6		
740		A1U	TRANSISTOR		Q308	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
741		A1U	TRANSISTOR		Q309	8-729-120-28	TRANSISTOR 2SC1623-L5L6		
742		A1U	TRANSISTOR		Q310	8-729-120-28	TRANSISTOR 2SC1623-L5L6		
743		A1U	TRANSISTOR		Q311	8-729-120-28	TRANSISTOR 2SC1623-L5L6		
744		A1U	TRANSISTOR		Q312	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		
745		A1U	TRANSISTOR		Q313	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
746		A1U	TRANSISTOR		Q314	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
747		A1U	TRANSISTOR		Q315	8-729-216-22	TRANSISTOR 2SA1162-G		
748		A1U	TRANSISTOR		Q316	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
749		A1U	TRANSISTOR		Q317	8-729-422-29	TRANSISTOR 2SD601A-S		
750		A1U	TRANSISTOR		Q318	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
751		A1U	TRANSISTOR		Q320	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
752		A1U	TRANSISTOR		Q321	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
753		A1U	TRANSISTOR		Q324	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
754		A1U	TRANSISTOR		Q410	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
755		A1U	TRANSISTOR		Q411	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
756		A1U	TRANSISTOR		Q412	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
757		A1U	TRANSISTOR		Q501	8-729-422-29	TRANSISTOR 2SD601A-S		
758		A1U	TRANSISTOR		Q502	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16		
759		A1U	TRANSISTOR		Q503	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16		
760		A1U	TRANSISTOR		Q504	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16		
761		A1U	TRANSISTOR		Q505	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
762		A1U	TRANSISTOR		Q508	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
763		A1U	TRANSISTOR		Q509	8-729-421-19	TRANSISTOR UN2213		
764		A1U	TRANSISTOR		Q510	8-729-421-19	TRANSISTOR UN2213		
765		A1U	TRANSISTOR		Q512	8-729-422-29	TRANSISTOR 2SD601A-S		
766		A1U	TRANSISTOR		Q513	8-729-422-29	TRANSISTOR 2SD601A-S		
767		A1U	TRANSISTOR		Q514	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
768		A1U	TRANSISTOR		Q515	8-729-421-19	TRANSISTOR UN2213		
769		A1U	RESISTOR		R001	1-216-864-11	SHORT CHIP 0		
770		A1U	RESISTOR		R002	1-216-864-11	SHORT CHIP 0		
771		A1U	RESISTOR		R003	1-216-805-11	METAL CHIP 47 5% 1/10W		
772		A1U	RESISTOR		R004	1-216-864-11	SHORT CHIP 0		
773		A1U	RESISTOR		R005	1-216-864-11	SHORT CHIP 0		
774		A1U	RESISTOR		R006	1-216-864-11	SHORT CHIP 0		
775		A1U	RESISTOR		R013	1-218-827-11	METAL CHIP 150 0.5% 1/10W		
776		A1U	RESISTOR		R014	1-218-827-11	METAL CHIP 150 0.5% 1/10W		
777		A1U	RESISTOR		R015	1-218-855-11	METAL CHIP 2.2K 0.5% 1/10W		
778		A1U	RESISTOR		R016	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
779		A1U	RESISTOR		R017	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
780		A1U	RESISTOR		R018	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
781		A1U	RESISTOR		R019	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
782		A1U	RESISTOR		R020	1-216-809-11	METAL CHIP 100 5% 1/10W		
783		A1U	RESISTOR		R021	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
784		A1U	RESISTOR		R022	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
785		A1U	RESISTOR		R023	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
786		A1U	RESISTOR		R024	1-216-809-11	METAL CHIP 100 5% 1/10W		
787		A1U	RESISTOR		R074	1-216-864-11	SHORT CHIP 0		
788		A1U	RESISTOR		R076	1-216-864-11	SHORT CHIP 0		
789		A1U	RESISTOR		R086	1-216-824-11	METAL CHIP 1.8K 5% 1/10W		
790		A1U	RESISTOR		R087	1-216-824-11	METAL CHIP 1.8K 5% 1/10W		
791		A1U	RESISTOR		R088	1-216-864-11	SHORT CHIP 0		
792		A1U	RESISTOR		R090	1-216-818-11	METAL CHIP 560 5% 1/10W		
793		A1U	RESISTOR		R301	1-216-864-11	SHORT CHIP 0		
794		A1U	RESISTOR		R302	1-216-821-11	METAL CHIP 1K 5% 1/10W		
795		A1U	RESISTOR		R303	1-216-849-11	METAL CHIP 220K 5% 1/10W		
796		A1U	RESISTOR		R304	1-216-809-11	METAL CHIP 100 5% 1/10W		
797		A1U	RESISTOR		R305	1-216-845-11	METAL CHIP 100K 5% 1/10W		
798		A1U	RESISTOR		R306	1-216-821-11	METAL CHIP 1K 5% 1/10W		
799		A1U	RESISTOR		R307	1-216-833-11	METAL CHIP 10K 5% 1/10W		
800		A1U	RESISTOR		R308	1-216-833-11	METAL CHIP 10K 5% 1/10W		
801		A1U	RESISTOR		R309	1-218-734-11	METAL CHIP 56K 0.5% 1/10W		
802		A1U	RESISTOR		R310	1-216-857-11	METAL CHIP 1M 5% 1/10W		
803		A1U	RESISTOR		R311	1-216-809-11	METAL CHIP 100 5% 1/10W		
804		A1U	RESISTOR		R312	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
805		A1U	RESISTOR		R313	1-216-809-11	METAL CHIP 100 5% 1/10W		
806		A1U	RESISTOR		R314	1-216-809-11	METAL CHIP 100 5% 1/10W		
807		A1U	RESISTOR		R315	1-216-805-11	METAL CHIP 47 5% 1/10W		
808		A1U	RESISTOR		R316	1-216-805-11	METAL CHIP 47 5% 1/10W		
809		A1U	RESISTOR		R321	1-216-809-11	METAL CHIP 100 5% 1/10W		
810		A1U	RESISTOR		R322	1-216-809-11	METAL CHIP 100 5% 1/10W		
811		A1U	RESISTOR		R323	1-216-809-11	METAL CHIP 100 5% 1/10W		
812		A1U	RESISTOR		R324	1-216-809-11	METAL CHIP 100 5% 1/10W		
813		A1U	RESISTOR		R325	1-216-809-11	METAL CHIP 100 5% 1/10W		
814		A1U	RESISTOR		R326	1-216-809-11	METAL CHIP 100 5% 1/10W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
815		A1U	RESISTOR		R327	1-216-809-11	METAL CHIP 100 5% 1/10W		
816		A1U	RESISTOR		R328	1-216-864-11	SHORT CHIP 0		
817		A1U	RESISTOR		R329	1-216-811-11	METAL CHIP 150 5% 1/10W		
818		A1U	RESISTOR		R330	1-216-809-11	METAL CHIP 100 5% 1/10W		
819		A1U	RESISTOR		R331	1-216-809-11	METAL CHIP 100 5% 1/10W		
820		A1U	RESISTOR		R332	1-216-809-11	METAL CHIP 100 5% 1/10W		
821		A1U	RESISTOR		R333	1-216-813-11	METAL CHIP 220 5% 1/10W		
822		A1U	RESISTOR		R334	1-216-821-11	METAL CHIP 1K 5% 1/10W		
823		A1U	RESISTOR		R335	1-216-797-11	METAL CHIP 10 5% 1/10W		
824		A1U	RESISTOR		R336	1-216-797-11	METAL CHIP 10 5% 1/10W		
825		A1U	RESISTOR		R337	1-216-797-11	METAL CHIP 10 5% 1/10W		
826		A1U	RESISTOR		R338	1-216-797-11	METAL CHIP 10 5% 1/10W		
827		A1U	RESISTOR		R339	1-216-797-11	METAL CHIP 10 5% 1/10W		
828		A1U	RESISTOR		R340	1-216-833-11	METAL CHIP 10K 5% 1/10W		
829		A1U	RESISTOR		R341	1-216-809-11	METAL CHIP 100 5% 1/10W		
830		A1U	RESISTOR		R342	1-216-811-11	METAL CHIP 150 5% 1/10W		
831		A1U	RESISTOR		R343	1-216-811-11	METAL CHIP 150 5% 1/10W		
832		A1U	RESISTOR		R344	1-218-285-11	METAL CHIP 75 5% 1/10W		
833		A1U	RESISTOR		R345	1-218-285-11	METAL CHIP 75 5% 1/10W		
834		A1U	RESISTOR		R346	1-218-285-11	METAL CHIP 75 5% 1/10W		
835		A1U	RESISTOR		R347	1-216-864-11	SHORT CHIP 0		
836		A1U	RESISTOR		R348	1-216-809-11	METAL CHIP 100 5% 1/10W		
837		A1U	RESISTOR		R349	1-216-864-11	SHORT CHIP 0		
838		A1U	RESISTOR		R350	1-216-864-11	SHORT CHIP 0		
839		A1U	RESISTOR		R351	1-216-864-11	SHORT CHIP 0		
840		A1U	RESISTOR		R352	1-216-864-11	SHORT CHIP 0		
841		A1U	RESISTOR		R353	1-216-809-11	METAL CHIP 100 5% 1/10W		
842		A1U	RESISTOR		R354	1-216-821-11	METAL CHIP 1K 5% 1/10W		
843		A1U	RESISTOR		R355	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
844		A1U	RESISTOR		R356	1-218-855-11	METAL CHIP 2.2K 0.5% 1/10W		
845		A1U	RESISTOR		R357	1-216-864-11	SHORT CHIP 0		
846		A1U	RESISTOR		R358	1-216-849-11	METAL CHIP 220K 5% 1/10W		
847		A1U	RESISTOR		R359	1-216-864-11	SHORT CHIP 0		
848		A1U	RESISTOR		R360	1-216-864-11	SHORT CHIP 0		
849		A1U	RESISTOR		R362	1-216-811-11	METAL CHIP 150 5% 1/10W		
850		A1U	RESISTOR		R363	1-216-811-11	METAL CHIP 150 5% 1/10W		
851		A1U	RESISTOR		R364	1-216-864-11	SHORT CHIP 0		
852		A1U	RESISTOR		R365	1-216-864-11	SHORT CHIP 0		
853		A1U	RESISTOR		R366	1-216-811-11	METAL CHIP 150 5% 1/10W		
854		A1U	RESISTOR		R367	1-216-811-11	METAL CHIP 150 5% 1/10W		
855		A1U	RESISTOR		R368	1-216-849-11	METAL CHIP 220K 5% 1/10W		
856		A1U	RESISTOR		R369	1-216-849-11	METAL CHIP 220K 5% 1/10W		
857		A1U	RESISTOR		R370	1-216-815-11	METAL CHIP 330 5% 1/10W		
858		A1U	RESISTOR		R371	1-216-809-11	METAL CHIP 100 5% 1/10W		
859		A1U	RESISTOR		R372	1-216-864-11	SHORT CHIP 0		
860		A1U	RESISTOR		R373	1-216-815-11	METAL CHIP 330 5% 1/10W		
861		A1U	RESISTOR		R374	1-216-809-11	METAL CHIP 100 5% 1/10W		
862		A1U	RESISTOR		R375	1-216-811-11	METAL CHIP 150 5% 1/10W		
863		A1U	RESISTOR		R376	1-216-864-11	SHORT CHIP 0		
864		A1U	RESISTOR		R377	1-216-815-11	METAL CHIP 330 5% 1/10W		
865		A1U	RESISTOR		R378	1-216-811-11	METAL CHIP 150 5% 1/10W		
866		A1U	RESISTOR		R379	1-216-811-11	METAL CHIP 150 5% 1/10W		
867		A1U	RESISTOR		R380	1-216-809-11	METAL CHIP 100 5% 1/10W		
868		A1U	RESISTOR		R381	1-216-864-11	SHORT CHIP 0		
869		A1U	RESISTOR		R382	1-216-864-11	SHORT CHIP 0		
870		A1U	RESISTOR		R383	1-216-864-11	SHORT CHIP 0		
871		A1U	RESISTOR		R384	1-216-811-11	METAL CHIP 150 5% 1/10W		
872		A1U	RESISTOR		R385	1-216-821-11	METAL CHIP 1K 5% 1/10W		
873		A1U	RESISTOR		R386	1-216-821-11	METAL CHIP 1K 5% 1/10W		
874		A1U	RESISTOR		R388	1-216-811-11	METAL CHIP 150 5% 1/10W		
875		A1U	RESISTOR		R389	1-216-815-11	METAL CHIP 330 5% 1/10W		
876		A1U	RESISTOR		R392	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
877		A1U	RESISTOR		R393	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
878		A1U	RESISTOR		R394	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
879		A1U	RESISTOR		R395	1-216-833-11	METAL CHIP 10K 5% 1/10W		
880		A1U	RESISTOR		R396	1-216-841-11	METAL CHIP 47K 5% 1/10W		
881		A1U	RESISTOR		R397	1-216-849-11	METAL CHIP 220K 5% 1/10W		
882		A1U	RESISTOR		R398	1-216-809-11	METAL CHIP 100 5% 1/10W		
883		A1U	RESISTOR		R401	1-216-809-11	METAL CHIP 100 5% 1/10W		
884		A1U	RESISTOR		R402	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
885		A1U	RESISTOR		R403	1-216-809-11	METAL CHIP 100 5% 1/10W		
886		A1U	RESISTOR		R404	1-216-833-11	METAL CHIP 10K 5% 1/10W		
887		A1U	RESISTOR		R405	1-216-833-11	METAL CHIP 10K 5% 1/10W		
888		A1U	RESISTOR		R406	1-216-847-11	METAL CHIP 150K 5% 1/10W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
889		A1U	RESISTOR		R407	1-216-857-11	METAL CHIP 1M 5% 1/10W		
890		A1U	RESISTOR		R408	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
891		A1U	RESISTOR		R409	1-216-809-11	METAL CHIP 100 5% 1/10W		
892		A1U	RESISTOR		R410	1-216-809-11	METAL CHIP 100 5% 1/10W		
893		A1U	RESISTOR		R411	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
894		A1U	RESISTOR		R412	1-216-849-11	METAL CHIP 220K 5% 1/10W		
895		A1U	RESISTOR		R413	1-216-849-11	METAL CHIP 220K 5% 1/10W		
896		A1U	RESISTOR		R414	1-216-811-11	METAL CHIP 150 5% 1/10W		
897		A1U	RESISTOR		R415	1-216-811-11	METAL CHIP 150 5% 1/10W		
898		A1U	RESISTOR		R416	1-216-811-11	METAL CHIP 150 5% 1/10W		
899		A1U	RESISTOR		R417	1-216-849-11	METAL CHIP 220K 5% 1/10W		
900		A1U	RESISTOR		R418	1-216-849-11	METAL CHIP 220K 5% 1/10W		
901		A1U	RESISTOR		R419	1-216-811-11	METAL CHIP 150 5% 1/10W		
902		A1U	RESISTOR		R420	1-216-811-11	METAL CHIP 150 5% 1/10W		
903		A1U	RESISTOR		R421	1-216-811-11	METAL CHIP 150 5% 1/10W		
904		A1U	RESISTOR		R422	1-216-801-11	METAL CHIP 22 5% 1/10W		
905		A1U	RESISTOR		R423	1-216-801-11	METAL CHIP 22 5% 1/10W		
906		A1U	RESISTOR		R424	1-216-801-11	METAL CHIP 22 5% 1/10W		
907		A1U	RESISTOR		R425	1-216-801-11	METAL CHIP 22 5% 1/10W		
908		A1U	RESISTOR		R426	1-216-801-11	METAL CHIP 22 5% 1/10W		
909		A1U	RESISTOR		R427	1-216-801-11	METAL CHIP 22 5% 1/10W		
910		A1U	RESISTOR		R428	1-216-811-11	METAL CHIP 150 5% 1/10W		
911		A1U	RESISTOR		R429	1-216-811-11	METAL CHIP 150 5% 1/10W		
912		A1U	RESISTOR		R430	1-216-811-11	METAL CHIP 150 5% 1/10W		
913		A1U	RESISTOR		R431	1-216-811-11	METAL CHIP 150 5% 1/10W		
914		A1U	RESISTOR		R432	1-216-811-11	METAL CHIP 150 5% 1/10W		
915		A1U	RESISTOR		R433	1-216-811-11	METAL CHIP 150 5% 1/10W		
916		A1U	RESISTOR		R435	1-216-849-11	METAL CHIP 220K 5% 1/10W		
917		A1U	RESISTOR		R436	1-216-845-11	METAL CHIP 100K 5% 1/10W		
918		A1U	RESISTOR		R437	1-216-809-11	METAL CHIP 100 5% 1/10W		
919		A1U	RESISTOR		R438	1-216-864-11	SHORT CHIP 0		
920		A1U	RESISTOR		R439	1-216-864-11	SHORT CHIP 0		
921		A1U	RESISTOR		R440	1-216-864-11	SHORT CHIP 0		
922		A1U	RESISTOR		R441	1-216-864-11	SHORT CHIP 0		
923		A1U	RESISTOR		R442	1-216-841-11	METAL CHIP 47K 5% 1/10W		
924		A1U	RESISTOR		R443	1-216-845-11	METAL CHIP 100K 5% 1/10W		
925		A1U	RESISTOR		R444	1-216-845-11	METAL CHIP 100K 5% 1/10W		
926		A1U	RESISTOR		R446	1-216-821-11	METAL CHIP 1K 5% 1/10W		
927		A1U	RESISTOR		R447	1-216-821-11	METAL CHIP 1K 5% 1/10W		
928		A1U	RESISTOR		R448	1-216-821-11	METAL CHIP 1K 5% 1/10W		
929		A1U	RESISTOR		R449	1-216-833-11	METAL CHIP 10K 5% 1/10W		
930		A1U	RESISTOR		R450	1-216-809-11	METAL CHIP 100 5% 1/10W		
931		A1U	RESISTOR		R451	1-216-809-11	METAL CHIP 100 5% 1/10W		
932		A1U	RESISTOR		R452	1-216-809-11	METAL CHIP 100 5% 1/10W		
933		A1U	RESISTOR		R453	1-216-845-11	METAL CHIP 100K 5% 1/10W		
934		A1U	RESISTOR		R454	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
935		A1U	RESISTOR		R455	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
936		A1U	RESISTOR		R456	1-216-041-00	RES-CHIP 470 5% 1/10W		
937		A1U	RESISTOR		R457	1-216-806-11	METAL CHIP 56 5% 1/10W		
938		A1U	RESISTOR		R458	1-216-806-11	METAL CHIP 56 5% 1/10W		
939		A1U	RESISTOR		R459	1-216-806-11	METAL CHIP 56 5% 1/10W		
940		A1U	RESISTOR		R460	1-216-861-11	METAL CHIP 2.2M 5% 1/10W		
941		A1U	RESISTOR		R461	1-216-861-11	METAL CHIP 2.2M 5% 1/10W		
942		A1U	RESISTOR		R462	1-216-809-11	METAL CHIP 100 5% 1/10W		
943		A1U	RESISTOR		R463	1-216-809-11	METAL CHIP 100 5% 1/10W		
944		A1U	RESISTOR		R464	1-216-809-11	METAL CHIP 100 5% 1/10W		
945		A1U	RESISTOR		R465	1-216-809-11	METAL CHIP 100 5% 1/10W		
946		A1U	RESISTOR		R466	1-216-809-11	METAL CHIP 100 5% 1/10W		
947		A1U	RESISTOR		R468	1-216-833-11	METAL CHIP 10K 5% 1/10W		
948		A1U	RESISTOR		R469	1-216-857-11	METAL CHIP 1M 5% 1/10W		
949		A1U	RESISTOR		R471	1-216-857-11	METAL CHIP 1M 5% 1/10W		
950		A1U	RESISTOR		R472	1-216-815-11	METAL CHIP 330 5% 1/10W		
951		A1U	RESISTOR		R473	1-216-809-11	METAL CHIP 100 5% 1/10W		
952		A1U	RESISTOR		R475	1-216-809-11	METAL CHIP 100 5% 1/10W		
953		A1U	RESISTOR		R479	1-216-864-11	SHORT CHIP 0		
954		A1U	RESISTOR		R486	1-216-861-11	METAL CHIP 2.2M 5% 1/10W		
955		A1U	RESISTOR		R490	1-216-864-11	SHORT CHIP 0		
956		A1U	RESISTOR		R491	1-216-809-11	METAL CHIP 100 5% 1/10W		
957		A1U	RESISTOR		R492	1-216-821-11	METAL CHIP 1K 5% 1/10W		
958		A1U	RESISTOR		R493	1-216-809-11	METAL CHIP 100 5% 1/10W		
959		A1U	RESISTOR		R501	1-216-833-11	METAL CHIP 10K 5% 1/10W		
960		A1U	RESISTOR		R502	1-216-833-11	METAL CHIP 10K 5% 1/10W		
961		A1U	RESISTOR		R503	1-216-837-11	METAL CHIP 22K 5% 1/10W		
962		A1U	RESISTOR		R504	1-216-837-11	METAL CHIP 22K 5% 1/10W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
963		A1U	RESISTOR		R505	1-216-837-11	METAL CHIP 22K 5% 1/10W		
964		A1U	RESISTOR		R506	1-216-837-11	METAL CHIP 22K 5% 1/10W		
965		A1U	RESISTOR		R509	1-216-809-11	METAL CHIP 100 5% 1/10W		
966		A1U	RESISTOR		R510	1-216-833-11	METAL CHIP 10K 5% 1/10W		
967		A1U	RESISTOR		R511	1-216-841-11	METAL CHIP 47K 5% 1/10W		
968		A1U	RESISTOR		R512	1-216-841-11	METAL CHIP 47K 5% 1/10W		
969		A1U	RESISTOR		R513	1-216-833-11	METAL CHIP 10K 5% 1/10W		
970		A1U	RESISTOR		R514	1-216-833-11	METAL CHIP 10K 5% 1/10W		
971		A1U	RESISTOR		R515	1-216-833-11	METAL CHIP 10K 5% 1/10W		
972		A1U	RESISTOR		R522	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
973		A1U	RESISTOR		R523	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
974		A1U	RESISTOR		R524	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
975		A1U	RESISTOR		R527	1-216-805-11	METAL CHIP 47 5% 1/10W		
976		A1U	RESISTOR		R528	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
977		A1U	RESISTOR		R529	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
978		A1U	RESISTOR		R533	1-216-833-11	METAL CHIP 10K 5% 1/10W		
979		A1U	RESISTOR		R534	1-216-821-11	METAL CHIP 1K 5% 1/10W		
980		A1U	RESISTOR		R535	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
981		A1U	RESISTOR		R536	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
982		A1U	RESISTOR		R537	1-216-821-11	METAL CHIP 1K 5% 1/10W		
983		A1U	RESISTOR		R538	1-216-864-11	SHORT CHIP 0		
984		A1U	RESISTOR		R539	1-216-821-11	METAL CHIP 1K 5% 1/10W		
985		A1U	RESISTOR		R540	1-216-853-11	METAL CHIP 470K 5% 1/10W		
986		A1U	RESISTOR		R541	1-216-833-11	METAL CHIP 10K 5% 1/10W		
987		A1U	RESISTOR		R542	1-216-833-11	METAL CHIP 10K 5% 1/10W		
988		A1U	RESISTOR		R543	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
989		A1U	RESISTOR		R544	1-216-853-11	METAL CHIP 470K 5% 1/10W		
990		A1U	RESISTOR		R545	1-216-853-11	METAL CHIP 470K 5% 1/10W		
991		A1U	RESISTOR		R547	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
992		A1U	RESISTOR		R548	1-216-821-11	METAL CHIP 1K 5% 1/10W		
993		A1U	RESISTOR		R549	1-216-849-11	METAL CHIP 220K 5% 1/10W		
994		A1U	RESISTOR		R550	1-216-849-11	METAL CHIP 220K 5% 1/10W		
995		A1U	RESISTOR		R553	1-216-841-11	METAL CHIP 47K 5% 1/10W		
996		A1U	RESISTOR		R556	1-216-836-11	METAL CHIP 18K 5% 1/10W		
997		A1U	RESISTOR		R558	1-216-805-11	METAL CHIP 47 5% 1/10W		
998		A1U	RESISTOR		R559	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
999		A1U	RESISTOR		R562	1-220-397-11	METAL CHIP 4.7M 5% 1/10W		
1000		A1U	RESISTOR		R563	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1001		A1U	RESISTOR		R564	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1002		A1U	RESISTOR		R565	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1003		A1U	RESISTOR		R566	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
1004		A1U	RESISTOR		R567	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1005		A1U	RESISTOR		R568	1-216-849-11	METAL CHIP 220K 5% 1/10W		
1006		A1U	RESISTOR		R569	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
1007		A1U	RESISTOR		R570	1-216-849-11	METAL CHIP 220K 5% 1/10W		
1008		A1U	RESISTOR		R571	1-218-827-11	METAL CHIP 150 0.5% 1/10W		
1009		A1U	RESISTOR		R572	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
1010		A1U	RESISTOR		R573	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1011		A1U	RESISTOR		R574	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
1012		A1U	RESISTOR		R575	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1013		A1U	RESISTOR		R576	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
1014		A1U	RESISTOR		R577	1-218-827-11	METAL CHIP 150 0.5% 1/10W		
1015		A1U	RESISTOR		R578	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
1016		A1U	RESISTOR		R579	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
1017		A1U	RESISTOR		R580	1-216-805-11	METAL CHIP 47 5% 1/10W		
1018		A1U	RESISTOR		R581	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1019		A1U	RESISTOR		R582	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
1020		A1U	RESISTOR		R583	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
1021		A1U	RESISTOR		R584	1-220-397-11	METAL CHIP 4.7M 5% 1/10W		
1022		A1U	RESISTOR		R585	1-216-805-11	METAL CHIP 47 5% 1/10W		
1023		A1U	RESISTOR		R586	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
1024		A1U	RESISTOR		R587	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1025		A1U	RESISTOR		R588	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1026		A1U	RESISTOR		R589	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1027		A1U	RESISTOR		R590	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1028		A1U	RESISTOR		R591	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1029		A1U	RESISTOR		R592	1-216-805-11	METAL CHIP 47 5% 1/10W		
1030		A1U	RESISTOR		R593	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1031		A1U	RESISTOR		R594	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1032		A1U	RESISTOR		R595	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1033		A1U	RESISTOR		R596	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1034		A1U	RESISTOR		R597	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1035		A1U	RESISTOR		R598	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1036		A1U	RESISTOR		R599	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		

No.	#	Board	Type	Δ/\ast	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1037		A1U	RESISTOR		R601	1-216-809-11	METAL CHIP 100 5% 1/10W		
1038		A1U	RESISTOR		R603	1-216-805-11	METAL CHIP 47 5% 1/10W		
1039		A1U	RESISTOR		R604	1-216-857-11	METAL CHIP 1M 5% 1/10W		
1040		A1U	RESISTOR		R605	1-216-809-11	METAL CHIP 100 5% 1/10W		
1041		A1U	RESISTOR		R606	1-216-809-11	METAL CHIP 100 5% 1/10W		
1042		A1U	RESISTOR		R607	1-216-809-11	METAL CHIP 100 5% 1/10W		
1043		A1U	RESISTOR		R608	1-216-809-11	METAL CHIP 100 5% 1/10W		
1044		A1U	RESISTOR		R609	1-216-813-11	METAL CHIP 220 5% 1/10W		
1045		A1U	RESISTOR		R610	1-216-805-11	METAL CHIP 47 5% 1/10W		
1046		A1U	RESISTOR		R612	1-216-813-11	METAL CHIP 220 5% 1/10W		
1047		A1U	RESISTOR		R613	1-216-864-11	SHORT CHIP 0		
1048		A1U	RESISTOR		R614	1-216-864-11	SHORT CHIP 0		
1049		A1U	RESISTOR		R615	1-414-760-21	FERRITE 0UH		
1050		A1U	RESISTOR		R616	1-216-864-11	SHORT CHIP 0		
1051		A1U	RESISTOR		R617	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1052		A1U	RESISTOR		R618	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1053		A1U	RESISTOR		R619	1-216-864-11	SHORT CHIP 0		
1054		A1U	RESISTOR		R621	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1055		A1U	RESISTOR		R622	1-216-864-11	SHORT CHIP 0		
1056		A1U	RESISTOR		R623	1-216-805-11	METAL CHIP 47 5% 1/10W		
1057		A1U	RESISTOR		R624	1-216-809-11	METAL CHIP 100 5% 1/10W		
1058		A1U	RESISTOR		R625	1-216-809-11	METAL CHIP 100 5% 1/10W		
1059		A1U	RESISTOR		R626	1-216-809-11	METAL CHIP 100 5% 1/10W		
1060		A1U	RESISTOR		R628	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1061		A1U	RESISTOR		R630	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
1062		A1U	RESISTOR		R631	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
1063		A1U	RESISTOR		R632	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
1064		A1U	RESISTOR		R637	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1065		A1U	RESISTOR		R638	1-216-835-11	METAL CHIP 15K 5% 1/10W		
1066		A1U	RESISTOR		R639	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1067		A1U	RESISTOR		R640	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1068		A1U	RESISTOR		R641	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1069		A1U	RESISTOR		R642	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1070		A1U	RESISTOR		R646	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1071		A1U	RESISTOR		R647	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1072		A1U	RESISTOR		R649	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1073		A1U	RESISTOR		R651	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1074		A1U	RESISTOR		R652	1-216-809-11	METAL CHIP 100 5% 1/10W		
1075		A1U	RESISTOR		R654	1-216-838-11	METAL CHIP 27K 5% 1/10W		
1076		A1U	RESISTOR		R656	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1077		A1U	RESISTOR		R659	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1078		A1U	RESISTOR		R662	1-216-809-11	METAL CHIP 100 5% 1/10W		
1079		A1U	RESISTOR		R664	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1080		A1U	RESISTOR		R666	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1081		A1U	RESISTOR		R667	1-216-805-11	METAL CHIP 47 5% 1/10W		
1082		A1U	RESISTOR		R668	1-216-805-11	METAL CHIP 47 5% 1/10W		
1083		A1U	RESISTOR		R669	1-216-805-11	METAL CHIP 47 5% 1/10W		
1084		A1U	RESISTOR		R670	1-216-805-11	METAL CHIP 47 5% 1/10W		
1085		A1U	RESISTOR		R671	1-216-805-11	METAL CHIP 47 5% 1/10W		
1086		A1U	RESISTOR		R672	1-216-805-11	METAL CHIP 47 5% 1/10W		
1087		A1U	RESISTOR		R673	1-216-805-11	METAL CHIP 47 5% 1/10W		
1088		A1U	RESISTOR		R674	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1089		A1U	RESISTOR		R679	1-414-760-21	FERRITE 0UH		
1090		A1U	RESISTOR		R680	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1091		A1U	RESISTOR		R681	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1092		A1U	RESISTOR		R682	1-216-805-11	METAL CHIP 47 5% 1/10W		
1093		A1U	RESISTOR		R683	1-216-805-11	METAL CHIP 47 5% 1/10W		
1094		A1U	RESISTOR		R684	1-216-807-11	METAL CHIP 68 5% 1/10W		
1095		A1U	RESISTOR		R685	1-216-807-11	METAL CHIP 68 5% 1/10W		
1096		A1U	RESISTOR		R686	1-216-809-11	METAL CHIP 100 5% 1/10W		
1097		A1U	RESISTOR		R687	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1098		A1U	RESISTOR		R688	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1099		A1U	RESISTOR		R689	1-216-817-11	METAL CHIP 470 5% 1/10W		
1100		A1U	RESISTOR		R694	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1101		A1U	NETWORK		RB501	1-234-372-21	RES, NETWORK 100X4 (1005)		
1102		A1U	NETWORK		RB502	1-234-372-21	RES, NETWORK 100X4 (1005)		
1103		A1U	NETWORK		RB503	1-234-372-21	RES, NETWORK 100X4 (1005)		
1104		A1U	NETWORK		RB504	1-234-372-21	RES, NETWORK 100X4 (1005)		
1105		A1U	NETWORK		RB505	1-234-372-21	RES, NETWORK 100X4 (1005)		
1106		A1U	NETWORK		RB506	1-234-372-21	RES, NETWORK 100X4 (1005)		
1107		A1U	TRANSFORMER		T501	1-437-982-11	SOUND INPUT TRANSFORMER		
1108		A1U	CHIP CHCKER		TP001	1-535-877-22	CHIP, CHECKER		
1109		A1U	CHIP CHCKER		TP002	1-535-877-22	CHIP, CHECKER		
1110		A1U	CHIP CHCKER		TP003	1-535-877-22	CHIP, CHECKER		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1111		A1U	CHIP CHCKER		TP301	1-535-757-11	CHIP, CHECKER		
1112		A1U	CHIP CHCKER		TP302	1-535-757-11	CHIP, CHECKER		
1113		A1U	CHIP CHCKER		TP303	1-535-757-11	CHIP, CHECKER		
1114		A1U	CHIP CHCKER		TP304	1-535-757-11	CHIP, CHECKER		
1115		A1U	CHIP CHCKER		TP305	1-535-757-11	CHIP, CHECKER		
1116		A1U	CHIP CHCKER		TP308	1-535-757-11	CHIP, CHECKER		
1117		A1U	CHIP CHCKER		TP501	1-535-757-11	CHIP, CHECKER		
1118		A1U	CHIP CHCKER		TP502	1-535-757-11	CHIP, CHECKER		
1119		A1U	CHIP CHCKER		TP503	1-535-757-11	CHIP, CHECKER		
1120		A1U	CHIP CHCKER		TP504	1-535-757-11	CHIP, CHECKER		
1121		A1U	CHIP CHCKER		TP505	1-535-757-11	CHIP, CHECKER		
1122		A1U	CHIP CHCKER		TP506	1-535-757-11	CHIP, CHECKER		
1123		A1U	CHIP CHCKER		TP507	1-535-757-11	CHIP, CHECKER		
1124		A1U	VARISTOR		VD301	1-803-974-21	VARISTOR, CHIP (1608)		
1125		A1U	VARISTOR		VD302	1-803-974-21	VARISTOR, CHIP (1608)		
1126		A1U	VARISTOR		VD303	1-803-974-21	VARISTOR, CHIP (1608)		
1127		A1U	VARISTOR		VD332	1-803-974-21	VARISTOR, CHIP (1608)		
1128		A1U	VARISTOR		VD333	1-803-974-21	VARISTOR, CHIP (1608)		
1129		A1U	VARISTOR		VD334	1-803-974-21	VARISTOR, CHIP (1608)		
1130		A1U	VARISTOR		VD335	1-803-974-21	VARISTOR, CHIP (1608)		
1131		A1U	VARISTOR		VD336	1-803-974-21	VARISTOR, CHIP (1608)		
1132		A1U	VARISTOR		VD337	1-803-974-21	VARISTOR, CHIP (1608)		
1133		A1U	VARISTOR		VD338	1-803-974-21	VARISTOR, CHIP (1608)		
1134		A1U	VARISTOR		VD339	1-803-974-21	VARISTOR, CHIP (1608)		
1135		A1U	VARISTOR		VD340	1-803-974-21	VARISTOR, CHIP (1608)		
1136		A1U	VARISTOR		VD403	1-803-974-21	VARISTOR, CHIP (1608)		
1137		A1U	VARISTOR		VD404	1-803-974-21	VARISTOR, CHIP (1608)		
1138		A1U	VARISTOR		VD405	1-803-974-21	VARISTOR, CHIP (1608)		
1139		A1U	VARISTOR		VD406	1-803-974-21	VARISTOR, CHIP (1608)		
1140		A1U	VARISTOR		VD407	1-803-974-21	VARISTOR, CHIP (1608)		
1141		A1U	VARISTOR		VD408	1-803-974-21	VARISTOR, CHIP (1608)		
1142		A1U	VARISTOR		VD409	1-803-974-21	VARISTOR, CHIP (1608)		
1143		A1U	VARISTOR		VD410	1-803-974-21	VARISTOR, CHIP (1608)		
1144		A1U	VARISTOR		VD411	1-803-974-21	VARISTOR, CHIP (1608)		
1145		A1U	VARISTOR		VD412	1-803-974-21	VARISTOR, CHIP (1608)		
1146		A1U	VARISTOR		VD413	1-803-974-21	VARISTOR, CHIP (1608)		
1147		A1U	VARISTOR		VD414	1-803-974-21	VARISTOR, CHIP (1608)		
1148		A1U	VARISTOR		VD415	1-803-974-21	VARISTOR, CHIP (1608)		
1149		A1U	VARISTOR		VD416	1-803-974-21	VARISTOR, CHIP (1608)		
1150		A1U	VARISTOR		VD417	1-803-974-21	VARISTOR, CHIP (1608)		
1151		A1U	VARISTOR		VD418	1-803-974-21	VARISTOR, CHIP (1608)		
1152		A1U	VARISTOR		VD419	1-803-974-21	VARISTOR, CHIP (1608)		
1153		A1U	VARISTOR		VD420	1-803-974-21	VARISTOR, CHIP (1608)		
1154		A1U	VARISTOR		VD421	1-803-974-21	VARISTOR, CHIP (1608)		
1155		A1U	VARISTOR		VD422	1-803-974-21	VARISTOR, CHIP (1608)		
1156		A1U	VARISTOR		VD423	1-803-974-21	VARISTOR, CHIP (1608)		
1157		A1U	VARISTOR		VD424	1-803-974-21	VARISTOR, CHIP (1608)		
1158		A1U	VARISTOR		VD425	1-803-974-21	VARISTOR, CHIP (1608)		
1159		A1U	VARISTOR		VD426	1-803-974-21	VARISTOR, CHIP (1608)		
1160		A1U	VARISTOR		VD512	1-803-974-21	VARISTOR, CHIP (1608)		
1161		A1U	VARISTOR		VD513	1-803-974-21	VARISTOR, CHIP (1608)		
1162		A1U	VARISTOR		VD514	1-803-974-21	VARISTOR, CHIP (1608)		
1163		A1U	VARISTOR		VD515	1-803-974-21	VARISTOR, CHIP (1608)		
1164		A1U	CRYSTAL		X302	1-781-922-21	VIBRATOR, CERAMIC		
1165		A1U	CRYSTAL		X501	1-795-980-21	VIBRATOR, CRYSTAL		
1166		A2NU	CAPACITOR		C2001	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1167		A2NU	CAPACITOR		C2002	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1168		A2NU	CAPACITOR		C2003	1-135-960-91	CERAMIC CHIP 10UF 10% 25V		
1169		A2NU	CAPACITOR		C2004	1-135-960-91	CERAMIC CHIP 10UF 10% 25V		
1170		A2NU	CAPACITOR		C2005	1-135-960-91	CERAMIC CHIP 10UF 10% 25V		
1171		A2NU	CAPACITOR		C2006	1-135-960-91	CERAMIC CHIP 10UF 10% 25V		
1172		A2NU	CAPACITOR		C2007	1-135-960-91	CERAMIC CHIP 10UF 10% 25V		
1173		A2NU	CAPACITOR		C2008	1-135-960-91	CERAMIC CHIP 10UF 10% 25V		
1174		A2NU	CAPACITOR		C2011	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V		
1175		A2NU	CAPACITOR		C2012	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V		
1176		A2NU	CAPACITOR		C2013	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
1177		A2NU	CAPACITOR		C2014	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1178		A2NU	CAPACITOR		C2015	1-164-315-11	CERAMIC CHIP 470PF 5.00% 50V		
1179		A2NU	CAPACITOR		C2016	1-164-217-11	CERAMIC CHIP 150PF 5.00% 50V		
1180		A2NU	CAPACITOR		C2017	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
1181		A2NU	CAPACITOR		C2018	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
1182		A2NU	CAPACITOR		C2019	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
1183		A2NU	CAPACITOR		C2020	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
1184		A2NU	CAPACITOR		C2021	1-135-960-91	CERAMIC CHIP 10UF 10% 25V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1185		A2NU	CAPACITOR		C2022	1-135-960-91	CERAMIC CHIP 10UF 10% 25V		
1186		A2NU	CAPACITOR		C2023	1-165-875-11	CERAMIC CHIP 10UF 10% 10V		
1187		A2NU	CAPACITOR		C2024	1-165-875-11	CERAMIC CHIP 10UF 10% 10V		
1188		A2NU	CAPACITOR		C2025	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
1189		A2NU	CAPACITOR		C2026	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
1190		A2NU	CAPACITOR		C2027	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
1191		A2NU	CAPACITOR		C2028	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
1192		A2NU	CAPACITOR		C2029	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1193		A2NU	CAPACITOR		C2030	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1194		A2NU	CAPACITOR		C2031	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1195		A2NU	CAPACITOR		C2032	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1196		A2NU	CAPACITOR		C2033	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
1197		A2NU	CAPACITOR		C2034	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
1198		A2NU	CAPACITOR		C2035	1-164-315-11	CERAMIC CHIP 470PF 5.00% 50V		
1199		A2NU	CAPACITOR		C2036	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V		
1200		A2NU	CAPACITOR		C2037	1-164-315-11	CERAMIC CHIP 470PF 5.00% 50V		
1201		A2NU	CAPACITOR		C2038	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V		
1202		A2NU	CAPACITOR		C2041	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1203		A2NU	CAPACITOR		C2042	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1204		A2NU	CAPACITOR		C2043	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1205		A2NU	CAPACITOR		C2044	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1206		A2NU	CAPACITOR		C2054	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1207		A2NU	CAPACITOR		C2055	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1208		A2NU	CAPACITOR		C2056	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1209		A2NU	CAPACITOR		C2059	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1210		A2NU	CAPACITOR		C2060	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1211		A2NU	CAPACITOR		C2061	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1212		A2NU	CAPACITOR		C2062	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1213		A2NU	CAPACITOR		C2065	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1214		A2NU	CAPACITOR		C2066	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1215		A2NU	CAPACITOR		C2100	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1216		A2NU	CAPACITOR		C2103	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V		
1217		A2NU	CAPACITOR		C2104	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
1218		A2NU	CAPACITOR		C2105	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1219		A2NU	CONNECTOR		CN2001	1-774-729-21	PIN, CONNECTOR (PC BOARD) 10P		
1220		A2NU	CONNECTOR		CN2002	1-580-756-21	PIN, CONNECTOR (SMD) 7P		
1221		A2NU	CONNECTOR		CN2003	1-580-056-21	PIN, CONNECTOR (SMD) 3P		
1222		A2NU	CONNECTOR		CN2004	1-774-297-21	PIN, CONNECTOR (PC BOARD) 7P		
1223		A2NU	CONNECTOR		CN2005	1-817-194-21	PIN, CONNECTOR (SMD) 13P		
1224		A2NU	CONNECTOR		CN8208	1-815-468-11	PIN, CONNECTOR (PC BOARD)		
1225		A2NU	CONNECTOR		CN8209	1-770-161-21	PIN, CONNECTOR (PC BOARD) 6P		
1226		A2NU	CONNECTOR	*	CN8210	1-580-055-21	PIN, CONNECTOR (SMD) 2P		
1227		A2NU	CONNECTOR	*	CN8211	1-569-775-21	PIN, CONNECTOR (SMD) 5P		
1228		A2NU	LEAD PIN	*	CP2001	4-042-408-02	PIN(45), WIRE		
1229		A2NU	LEAD PIN	*	CP2002	4-042-408-02	PIN(45), WIRE		
1230		A2NU	LEAD PIN	*	CP2003	4-042-408-02	PIN(45), WIRE		
1231		A2NU	LEAD PIN	*	CP2004	4-042-408-02	PIN(45), WIRE		
1232		A2NU	LEAD PIN	*	CP2005	4-042-408-02	PIN(45), WIRE		
1233		A2NU	DIODE		D2001	8-719-071-34	DIODE RB521S-30-TE61		
1234		A2NU	DIODE		D2002	8-719-071-34	DIODE RB521S-30-TE61		
1235		A2NU	DIODE		D2003	8-719-078-04	DIODE EC31QS03L-TE12L		
1236		A2NU	DIODE		D2004	8-719-078-04	DIODE EC31QS03L-TE12L		
1237		A2NU	DIODE		D2005	8-719-078-04	DIODE EC31QS03L-TE12L		
1238		A2NU	DIODE		D2006	8-719-078-04	DIODE EC31QS03L-TE12L		
1239		A2NU	DIODE		D2007	8-719-068-71	DIODE PTZ-TE25-13A		
1240		A2NU	DIODE		D2008	8-719-073-69	DIODE PTZ-TE25-6.2A		
1241		A2NU	DIODE		D2009	6-500-294-01	DIODE PTZ-TE25-3.9B		
1242		A2NU	DIODE		D2010	6-500-294-01	DIODE PTZ-TE25-3.9B		
1243		A2NU	DIODE		D2011	8-719-081-99	DIODE MM3Z13VT1		
1244		A2NU	DIODE		D2012	8-719-071-34	DIODE RB521S-30-TE61		
1245		A2NU	DIODE		D2013	8-719-056-82	DIODE UDZ-TE-17-6.2B		
1246		A2NU	DIODE		D2014	6-500-020-01	DIODE MM3Z4V3ST1		
1247		A2NU	DIODE		D2015	8-719-071-34	DIODE RB521S-30-TE61		
1248		A2NU	DIODE		D2016	8-719-056-82	DIODE UDZ-TE-17-6.2B		
1249		A2NU	DIODE		D2017	8-719-081-97	DIODE MMDL914T1		
1250		A2NU	DIODE		D2018	8-719-041-97	DIODE MA113-(TX)		
1251		A2NU	DIODE		D2019	6-500-540-01	DIODE RB521S-30FTE61		
1252		A2NU	DIODE		D2020	8-719-050-38	DIODE M1MA152WK-T1		
1253		A2NU	DIODE		D2021	8-719-050-38	DIODE M1MA152WK-T1		
1254		A2NU	DIODE		D2023	8-719-081-97	DIODE MMDL914T1		
1255		A2NU	DIODE		D2024	8-719-081-97	DIODE MMDL914T1		
1256		A2NU	DIODE		D2025	8-719-081-97	DIODE MMDL914T1		
1257		A2NU	DIODE		D2026	8-719-056-82	DIODE UDZ-TE-17-6.2B		
1258		A2NU	DIODE		D2027	8-719-056-84	DIODE UDZ-TE-17-7.5B		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1259		A2NU	FERRITE BEAD		FB2001	1-469-324-21	FERRITE 0UH		
1260		A2NU	FERRITE BEAD		FB2002	1-469-324-21	FERRITE 0UH		
1261		A2NU	FILTER		FL001	1-234-494-21	FILTER, EMI REMOVAL (SMD)		
1262		A2NU	FILTER		FL002	1-234-494-21	FILTER, EMI REMOVAL (SMD)		
1263		A2NU	FILTER		FL003	1-234-494-21	FILTER, EMI REMOVAL (SMD)		
1264		A2NU	FILTER		FL004	1-234-494-21	FILTER, EMI REMOVAL (SMD)		
1265		A2NU	FILTER		FL005	1-234-494-21	FILTER, EMI REMOVAL (SMD)		
1266		A2NU	FILTER		FL006	1-234-494-21	FILTER, EMI REMOVAL (SMD)		
1267		A2NU	IC		IC2001	6-706-884-01	IC BD9851EFV-E2		
1268		A2NU	IC		IC2002	6-706-884-01	IC BD9851EFV-E2		
1269		A2NU	IC		IC2004	8-759-668-14	IC PQ09DZ1U		
1270		A2NU	COIL		L2001	1-457-041-21	INDUCTOR 10UH		
1271		A2NU	COIL		L2002	1-457-041-21	INDUCTOR 10UH		
1272		A2NU	COIL		L2003	1-424-918-21	INDUCTOR 10UH		
1273		A2NU	COIL		L2004	1-424-918-21	INDUCTOR 10UH		
1274		A2NU	COIL		L2005	1-424-918-21	INDUCTOR 10UH		
1275		A2NU	COIL		L2006	1-424-918-21	INDUCTOR 10UH		
1276		A2NU	COIL		L2007	1-424-918-21	INDUCTOR 10UH		
1277		A2NU	COIL		L2008	1-424-918-21	INDUCTOR 10UH		
1278		A2NU	COIL		L2009	1-424-918-21	INDUCTOR 10UH		
1279		A2NU	COIL		L2010	1-424-918-21	INDUCTOR 10UH		
1280		A2NU	COIL		L2012	1-457-040-21	INDUCTOR 100UH		
1281		A2NU	COIL		L2013	1-457-040-21	INDUCTOR 100UH		
1282		A2NU	COIL		L2015	1-412-058-11	INDUCTOR 10UH		
1283		A2NU	IC LINK	△	PS2001	1-576-736-21	IC LINK 3.15A 24V		
1284		A2NU	IC LINK	△	PS2002	1-576-736-21	IC LINK 3.15A 24V		
1285		A2NU	TRANSISTOR		Q2001	6-550-585-01	TRANSISTOR 2PC4081R-115		
1286		A2NU	TRANSISTOR		Q2002	6-550-585-01	TRANSISTOR 2PC4081R-115		
1287		A2NU	TRANSISTOR		Q2003	6-550-652-01	TRANSISTOR FDS4435A		
1288		A2NU	TRANSISTOR		Q2004	6-550-652-01	TRANSISTOR FDS4435A		
1289		A2NU	TRANSISTOR		Q2005	8-729-422-29	TRANSISTOR 2SD601A-S		
1290		A2NU	TRANSISTOR		Q2006	6-550-652-01	TRANSISTOR FDS4435A		
1291		A2NU	TRANSISTOR		Q2008	6-550-380-01	TRANSISTOR IRFR5305TR		
1292		A2NU	TRANSISTOR		Q2009	6-550-585-01	TRANSISTOR 2PC4081R-115		
1293		A2NU	TRANSISTOR		Q2010	8-729-422-29	TRANSISTOR 2SD601A-S		
1294		A2NU	TRANSISTOR		Q2012	8-729-422-29	TRANSISTOR 2SD601A-S		
1295		A2NU	TRANSISTOR		Q2013	8-729-422-29	TRANSISTOR 2SD601A-S		
1296		A2NU	TRANSISTOR		Q2014	6-550-652-01	TRANSISTOR FDS4435A		
1297		A2NU	TRANSISTOR		Q2015	6-550-586-01	TRANSISTOR 2PA1576R-115		
1298		A2NU	TRANSISTOR		Q2016	8-729-117-73	TRANSISTOR 2SC4178-F14		
1299		A2NU	TRANSISTOR		Q2017	6-550-586-01	TRANSISTOR 2PA1576R-115		
1300		A2NU	TRANSISTOR		Q2018	6-550-586-01	TRANSISTOR 2PA1576R-115		
1301		A2NU	RESISTOR		R2001	1-216-864-11	SHORT CHIP 0		
1302		A2NU	RESISTOR		R2002	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1303		A2NU	RESISTOR		R2003	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1304		A2NU	RESISTOR		R2004	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1305		A2NU	RESISTOR		R2005	1-216-864-11	SHORT CHIP 0		
1306		A2NU	RESISTOR		R2006	1-216-864-11	SHORT CHIP 0		
1307		A2NU	RESISTOR		R2007	1-216-853-11	METAL CHIP 470K 5% 1/10W		
1308		A2NU	RESISTOR		R2009	1-216-853-11	METAL CHIP 470K 5% 1/10W		
1309		A2NU	RESISTOR		R2011	1-216-824-11	METAL CHIP 1.8K 5% 1/10W		
1310		A2NU	RESISTOR		R2012	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1311		A2NU	RESISTOR		R2013	1-216-864-11	SHORT CHIP 0		
1312		A2NU	RESISTOR		R2014	1-216-864-11	SHORT CHIP 0		
1313		A2NU	RESISTOR		R2015	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1314		A2NU	RESISTOR		R2016	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1315		A2NU	RESISTOR		R2017	1-216-819-11	METAL CHIP 680 5% 1/10W		
1316		A2NU	RESISTOR		R2018	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1317		A2NU	RESISTOR		R2019	1-218-881-11	METAL CHIP 27K 0.5% 1/10W		
1318		A2NU	RESISTOR		R2020	1-218-861-11	METAL CHIP 3.9K 0.5% 1/10W		
1319		A2NU	RESISTOR		R2021	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
1320		A2NU	RESISTOR		R2022	1-218-899-11	METAL CHIP 150K 0.5% 1/16W		
1321		A2NU	RESISTOR		R2023	1-218-859-11	METAL CHIP 3.3K 0.5% 1/10W		
1322		A2NU	RESISTOR		R2024	1-218-887-11	METAL CHIP 47K 0.5% 1/10W		
1323		A2NU	RESISTOR		R2025	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
1324		A2NU	RESISTOR		R2026	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
1325		A2NU	RESISTOR		R2027	1-218-875-11	METAL CHIP 15K 0.5% 1/10W		
1326		A2NU	RESISTOR		R2028	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
1327		A2NU	RESISTOR		R2029	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
1328		A2NU	RESISTOR		R2030	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
1329		A2NU	RESISTOR		R2031	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1330		A2NU	RESISTOR		R2033	1-218-875-11	METAL CHIP 15K 0.5% 1/10W		
1331		A2NU	RESISTOR		R2034	1-218-891-11	METAL CHIP 68K 0.5% 1/10W		
1332		A2NU	RESISTOR		R2035	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		

No.	#	Board	Type	Δ/\ast	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1333		A2NU	RESISTOR		R2036	1-218-877-11	METAL CHIP 18K 0.5% 1/10W		
1334		A2NU	RESISTOR		R2037	1-218-895-11	METAL CHIP 100K 0.5% 1/10W		
1335		A2NU	RESISTOR		R2038	1-218-887-11	METAL CHIP 47K 0.5% 1/10W		
1336		A2NU	RESISTOR		R2039	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
1337		A2NU	RESISTOR		R2040	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
1338		A2NU	RESISTOR		R2041	1-216-853-11	METAL CHIP 470K 5% 1/10W		
1339		A2NU	RESISTOR		R2042	1-216-864-11	SHORT CHIP 0		
1340		A2NU	RESISTOR		R2043	1-216-853-11	METAL CHIP 470K 5% 1/10W		
1341		A2NU	RESISTOR		R2045	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1342		A2NU	RESISTOR		R2046	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1343		A2NU	RESISTOR		R2047	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
1344		A2NU	RESISTOR		R2048	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1345		A2NU	RESISTOR		R2049	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1346		A2NU	RESISTOR		R2050	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1347		A2NU	RESISTOR		R2069	1-216-809-11	METAL CHIP 100 5% 1/10W		
1348		A2NU	RESISTOR		R2072	1-216-864-11	SHORT CHIP 0		
1349		A2NU	RESISTOR		R2074	1-216-864-11	SHORT CHIP 0		
1350		A2NU	RESISTOR		R2075	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1351		A2NU	RESISTOR		R2076	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1352		A2NU	RESISTOR		R2077	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1353		A2NU	RESISTOR		R2078	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1354		A2NU	RESISTOR		R2081	1-216-864-11	SHORT CHIP 0		
1355		A2NU	RESISTOR		R2082	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1356		A2NU	RESISTOR		R2084	1-216-839-11	METAL CHIP 33K 5% 1/10W		
1357		A2NU	RESISTOR		R2085	1-216-834-11	METAL CHIP 12K 5% 1/10W		
1358		A2NU	RESISTOR		R2086	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1359		A2NU	RESISTOR		R2090	1-216-834-11	METAL CHIP 12K 5% 1/10W		
1360		A2NU	RESISTOR		R2091	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1361		A2NU	RESISTOR		R2092	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1362		A2NU	RESISTOR		R2093	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1363		A2NU	RESISTOR		R2094	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1364		A2NU	RESISTOR		R2097	1-216-809-11	METAL CHIP 100 5% 1/10W		
1365		A2NU	RESISTOR		R2098	1-216-815-11	METAL CHIP 330 5% 1/10W		
1366		A2NU	RESISTOR		R2099	1-216-864-11	SHORT CHIP 0		
1367		A2NU	RESISTOR		R2102	1-218-859-11	METAL CHIP 3.3K 0.5% 1/10W		
1368		A2NU	RESISTOR		R2103	1-218-899-11	METAL CHIP 150K 0.5% 1/16W		
1369		A2NU	RESISTOR		R2105	1-216-815-11	METAL CHIP 330 5% 1/10W		
1370		A2NU	RESISTOR		R2106	1-216-864-11	SHORT CHIP 0		
1371		A2NU	RESISTOR		R2107	1-216-797-11	METAL CHIP 10 5% 1/10W		
1372		A2NU	RESISTOR		R2109	1-216-815-11	METAL CHIP 330 5% 1/10W		
1373		A2NU	RESISTOR		R2110	1-216-807-11	METAL CHIP 68 5% 1/10W		
1374		A2NU	RESISTOR		R2111	1-216-815-11	METAL CHIP 330 5% 1/10W		
1375		A2NU	RESISTOR		R2112	1-216-864-11	SHORT CHIP 0		
1376		A2NU	RESISTOR		R2114	1-216-797-11	METAL CHIP 10 5% 1/10W		
1377		A2NU	RESISTOR		R2115	1-216-809-11	METAL CHIP 100 5% 1/10W		
1378		A2NU	RESISTOR		R2116	1-216-864-11	SHORT CHIP 0		
1379		A2NU	RESISTOR		R2118	1-216-815-11	METAL CHIP 330 5% 1/10W		
1380		A2NU	RESISTOR		R2119	1-216-797-11	METAL CHIP 10 5% 1/10W		
1381		A2NU	RESISTOR		R2120	1-216-834-11	METAL CHIP 12K 5% 1/10W		
1382		A2NU	RESISTOR		R2121	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
1383		A2NU	RESISTOR		R2125	1-216-864-11	SHORT CHIP 0		
1384		QM	CAPACITOR		C7301	1-100-055-11	CERAMIC CHIP 22UF 20% 16V		
1385		QM	CAPACITOR		C7306	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1386		QM	CAPACITOR		C7307	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
1387		QM	CAPACITOR		C7314	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1388		QM	CAPACITOR		C7316	1-162-962-11	CERAMIC CHIP 470PF 10.00% 50V		
1389		QM	CAPACITOR		C7317	1-162-962-11	CERAMIC CHIP 470PF 10.00% 50V		
1390		QM	CAPACITOR		C7319	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
1391		QM	CAPACITOR		C7320	1-100-055-11	CERAMIC CHIP 22UF 20% 16V		
1392		QM	CAPACITOR		C7321	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1393		QM	CAPACITOR		C7322	1-137-897-21	ELECT CHIP 150UF 20% 4V		
1394		QM	CAPACITOR		C7323	1-137-897-21	ELECT CHIP 150UF 20% 4V		
1395		QM	CAPACITOR		C7325	1-137-897-21	ELECT CHIP 150UF 20% 4V		
1396		QM	CAPACITOR		C7326	1-137-897-21	ELECT CHIP 150UF 20% 4V		
1397		QM	CAPACITOR		C7327	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1398		QM	CAPACITOR		C7328	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1399		QM	CAPACITOR		C7329	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
1400		QM	CAPACITOR		C7330	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
1401		QM	CAPACITOR		C7331	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
1402		QM	CAPACITOR		C7332	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1403		QM	CAPACITOR		C7333	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1404		QM	CAPACITOR		C7334	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1405		QM	CAPACITOR		C7335	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1406		QM	CAPACITOR		C7336	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1407		QM	CAPACITOR		C7337	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1408		QM	CAPACITOR		C7338	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1409		QM	CAPACITOR		C7339	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1410		QM	CAPACITOR		C7340	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1411		QM	CAPACITOR		C7341	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1412		QM	CAPACITOR		C7342	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
1413		QM	CAPACITOR		C7343	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1414		QM	CAPACITOR		C7344	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1415		QM	CAPACITOR		C7345	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1416		QM	CAPACITOR		C7346	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1417		QM	CAPACITOR		C7347	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1418		QM	CAPACITOR		C7348	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1419		QM	CAPACITOR		C7349	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1420		QM	CAPACITOR		C7350	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1421		QM	CAPACITOR		C7351	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1422		QM	CAPACITOR		C7352	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1423		QM	CAPACITOR		C7353	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1424		QM	CAPACITOR		C7354	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1425		QM	CAPACITOR		C7355	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1426		QM	CAPACITOR		C7356	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1427		QM	CAPACITOR		C7357	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1428		QM	CAPACITOR		C7358	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1429		QM	CAPACITOR		C7359	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1430		QM	CAPACITOR		C7360	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1431		QM	CAPACITOR		C7361	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1432		QM	CAPACITOR		C7362	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1433		QM	CAPACITOR		C7363	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1434		QM	CAPACITOR		C7364	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1435		QM	CAPACITOR		C7365	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1436		QM	CAPACITOR		C7366	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1437		QM	CAPACITOR		C7367	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1438		QM	CAPACITOR		C7368	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1439		QM	CAPACITOR		C7369	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1440		QM	CAPACITOR		C7370	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1441		QM	CAPACITOR		C7371	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1442		QM	CAPACITOR		C7372	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1443		QM	CAPACITOR		C7373	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1444		QM	CAPACITOR		C7374	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1445		QM	CAPACITOR		C7375	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1446		QM	CAPACITOR		C7376	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1447		QM	CAPACITOR		C7377	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1448		QM	CAPACITOR		C7378	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1449		QM	CAPACITOR		C7379	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1450		QM	CAPACITOR		C7380	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1451		QM	CAPACITOR		C7381	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1452		QM	CAPACITOR		C7382	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1453		QM	CAPACITOR		C7383	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1454		QM	CAPACITOR		C7384	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1455		QM	CAPACITOR		C7385	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1456		QM	CAPACITOR		C7386	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1457		QM	CAPACITOR		C7387	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1458		QM	CAPACITOR		C7388	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1459		QM	CAPACITOR		C7389	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1460		QM	CAPACITOR		C7390	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1461		QM	CAPACITOR		C7391	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1462		QM	CAPACITOR		C7392	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1463		QM	CAPACITOR		C7393	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1464		QM	CAPACITOR		C7394	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1465		QM	CAPACITOR		C7395	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1466		QM	CAPACITOR		C7396	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1467		QM	CAPACITOR		C7397	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1468		QM	CAPACITOR		C7398	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1469		QM	CAPACITOR		C7399	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1470		QM	CAPACITOR		C7400	1-162-918-11	CERAMIC CHIP 18PF 5.00% 50V		
1471		QM	CAPACITOR		C7401	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1472		QM	CAPACITOR		C7402	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1473		QM	CAPACITOR		C7403	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1474		QM	CAPACITOR		C7404	1-162-918-11	CERAMIC CHIP 18PF 5.00% 50V		
1475		QM	CAPACITOR		C7405	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1476		QM	CAPACITOR		C7406	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1477		QM	CAPACITOR		C7407	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1478		QM	CAPACITOR		C7408	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1479		QM	CAPACITOR		C7409	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1480		QM	CAPACITOR		C7410	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1481		QM	CAPACITOR		C7411	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1482		QM	CAPACITOR		C7412	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1483		QM	CAPACITOR		C7413	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1484		QM	CAPACITOR		C7414	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1485		QM	CAPACITOR		C7415	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1486		QM	CAPACITOR		C7416	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1487		QM	CAPACITOR		C7417	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1488		QM	CAPACITOR		C7418	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1489		QM	CAPACITOR		C7419	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1490		QM	CAPACITOR		C7420	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1491		QM	CAPACITOR		C7421	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1492		QM	CAPACITOR		C7422	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1493		QM	CAPACITOR		C7423	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1494		QM	CAPACITOR		C7424	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1495		QM	CAPACITOR		C7425	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1496		QM	CAPACITOR		C7426	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1497		QM	CAPACITOR		C7427	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1498		QM	CAPACITOR		C7428	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
1499		QM	CAPACITOR		C7429	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
1500		QM	CAPACITOR		C7430	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1501		QM	CAPACITOR		C7431	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1502		QM	CAPACITOR		C7432	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1503		QM	CAPACITOR		C7433	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1504		QM	CAPACITOR		C7434	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1505		QM	CAPACITOR		C7435	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1506		QM	CAPACITOR		C7436	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1507		QM	CAPACITOR		C7437	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1508		QM	CAPACITOR		C7438	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1509		QM	CAPACITOR		C7439	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1510		QM	CAPACITOR		C7440	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
1511		QM	CAPACITOR		C7441	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1512		QM	CAPACITOR		C7442	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1513		QM	CAPACITOR		C7443	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1514		QM	CAPACITOR		C7444	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1515		QM	CAPACITOR		C7445	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1516		QM	CAPACITOR		C7446	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1517		QM	CAPACITOR		C7447	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1518		QM	CAPACITOR		C7448	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1519		QM	CAPACITOR		C7449	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1520		QM	CAPACITOR		C7450	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1521		QM	CAPACITOR		C7451	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1522		QM	CAPACITOR		C7452	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1523		QM	CAPACITOR		C7453	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1524		QM	CAPACITOR		C7454	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1525		QM	CAPACITOR		C7455	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1526		QM	CAPACITOR		C7456	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1527		QM	CAPACITOR		C7457	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1528		QM	CAPACITOR		C7458	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1529		QM	CAPACITOR		C7459	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1530		QM	CAPACITOR		C7460	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1531		QM	CAPACITOR		C7461	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1532		QM	CAPACITOR		C7462	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1533		QM	CAPACITOR		C7463	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1534		QM	CAPACITOR		C7464	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1535		QM	CAPACITOR		C7465	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1536		QM	CAPACITOR		C7466	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1537		QM	CAPACITOR		C7467	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1538		QM	CAPACITOR		C7468	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1539		QM	CAPACITOR		C7469	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1540		QM	CAPACITOR		C7470	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1541		QM	CAPACITOR		C7472	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1542		QM	CAPACITOR		C7473	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
1543		QM	CAPACITOR		C7474	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
1544		QM	CAPACITOR		C7475	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
1545		QM	CAPACITOR		C7476	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
1546		QM	CAPACITOR		C7477	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
1547		QM	CAPACITOR		C7478	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
1548		QM	CAPACITOR		C7482	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
1549		QM	CAPACITOR		C7483	1-164-346-11	CERAMIC CHIP 1UF 16V		
1550		QM	CAPACITOR		C7484	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
1551		QM	CAPACITOR		C7485	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
1552		QM	CAPACITOR		C7486	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
1553		QM	CAPACITOR		C7491	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1554		QM	CAPACITOR		C7492	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1555		QM	CAPACITOR		C7494	1-162-965-11	CERAMIC CHIP 0.0015UF 10.00% 50V		
1556		QM	CAPACITOR		C7495	1-162-965-11	CERAMIC CHIP 0.0015UF 10.00% 50V		
1557		QM	CAPACITOR		C7496	1-162-965-11	CERAMIC CHIP 0.0015UF 10.00% 50V		
1558		QM	CAPACITOR		C7497	1-162-965-11	CERAMIC CHIP 0.0015UF 10.00% 50V		
1559		QM	CAPACITOR		C7499	1-162-921-11	CERAMIC CHIP 33PF 5.00% 50V		
1560		QM	CAPACITOR		C7501	1-162-921-11	CERAMIC CHIP 33PF 5.00% 50V		
1561		QM	CAPACITOR		C7502	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1562		QM	CAPACITOR		C7503	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1563		QM	CAPACITOR		C7504	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1564		QM	CAPACITOR		C7505	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1565		QM	CAPACITOR		C7506	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1566		QM	CAPACITOR		C7509	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1567		QM	CAPACITOR		C7510	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1568		QM	CAPACITOR		C7511	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
1569		QM	CAPACITOR		C7512	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1570		QM	CAPACITOR		C7515	1-162-926-11	CERAMIC CHIP 82PF 5.00% 50V		
1571		QM	CAPACITOR		C7517	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
1572		QM	CAPACITOR		C7518	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
1573		QM	CAPACITOR		C7519	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
1574		QM	CAPACITOR		C7520	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
1575		QM	CAPACITOR		C7521	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
1576		QM	CAPACITOR		C7522	1-162-967-11	CERAMIC CHIP 0.0033UF 10.00% 50V		
1577		QM	CAPACITOR		C7525	1-162-967-11	CERAMIC CHIP 0.0033UF 10.00% 50V		
1578		QM	CAPACITOR		C7526	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1579		QM	CAPACITOR		C7527	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1580		QM	CAPACITOR		C7528	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
1581		QM	CAPACITOR		C7530	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
1582		QM	CAPACITOR		C7531	1-162-921-11	CERAMIC CHIP 33PF 5.00% 50V		
1583		QM	CAPACITOR		C7533	1-100-055-11	CERAMIC CHIP 22UF 20% 16V		
1584		QM	CAPACITOR		C7535	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1585		QM	CAPACITOR		C7536	1-162-926-11	CERAMIC CHIP 82PF 5.00% 50V		
1586		QM	CAPACITOR		C7537	1-162-926-11	CERAMIC CHIP 82PF 5.00% 50V		
1587		QM	CAPACITOR		C7538	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1588		QM	CAPACITOR		C7539	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1589		QM	CAPACITOR		C7540	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1590		QM	CAPACITOR		C7541	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1591		QM	CAPACITOR		C7543	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1592		QM	CAPACITOR		C7544	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1593		QM	CAPACITOR		C7547	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1594		QM	CAPACITOR		C7549	1-162-926-11	CERAMIC CHIP 82PF 5.00% 50V		
1595		QM	CAPACITOR		C7550	1-162-977-11	CERAMIC CHIP 0.0018UF 10.00% 50V		
1596		QM	CAPACITOR		C7551	1-162-977-11	CERAMIC CHIP 0.0018UF 10.00% 50V		
1597		QM	CAPACITOR		C7552	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1598		QM	CAPACITOR		C7553	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1599		QM	CAPACITOR		C7554	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1600		QM	CAPACITOR		C7555	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1601		QM	CAPACITOR		C7556	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1602		QM	CAPACITOR		C7557	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1603		QM	CAPACITOR		C7560	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1604		QM	CAPACITOR		C7561	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1605		QM	CAPACITOR		C7562	1-100-597-91	CERAMIC CHIP 0.1UF 10% 25V		
1606		QM	CAPACITOR		C7563	1-162-910-11	CERAMIC CHIP 5PF 0.25PF 50V		
1607		QM	CONNECTOR		CN7300	1-815-468-11	PIN, CONNECTOR (PC BOARD)		
1608		QM	CONNECTOR	*	CN7303	1-817-702-11	CONNECTOR, BOARD TO BOARD 4P		
1609		QM	CONNECTOR	*	CN7304	1-818-562-21	CONNECTOR (RECEPTACLE) 17P		
1610		QM	CONNECTOR	*	CN7305	1-817-717-11	CONNECTOR, BOARD TO BOARD 80P		
1611		QM	CONNECTOR		CN7307	1-766-382-21	PIN, CONNECTOR (1.5MM)(SMD)10P		
1612		QM	CONNECTOR	*	CN7309	1-816-598-11	PIN, CONNECTOR 12P		
1613		QM	CONNECTOR		CN7311	1-785-842-11	CONNECTOR, USB (VERTICAL TYPE)		
1614		QM	CONNECTOR		CN7312	6-600-272-01	IC GP1FM313TZ0F		
1615		QM	DIODE		D7302	8-719-404-50	DIODE MA111-TX		
1616		QM	DIODE		D7303	8-719-404-50	DIODE MA111-TX		
1617		QM	DIODE		D7304	8-719-404-50	DIODE MA111-TX		
1618		QM	DIODE		D7305	8-719-404-50	DIODE MA111-TX		
1619		QM	DIODE		D7306	8-719-060-99	DIODE SML-210MT-T86		
1620		QM	DIODE		D7308	8-719-988-61	DIODE 1SS355TE-17		
1621		QM	DIODE		D7309	8-719-048-40	DIODE MBRS140T3		
1622		QM	DIODE		D7310	8-719-048-40	DIODE MBRS140T3		
1623		QM	FERRITE BEAD		FB7301	1-400-089-21	FERRITE 0UH		
1624		QM	FERRITE BEAD		FB7304	1-400-180-21	INDUCTOR 0UH		
1625		QM	FERRITE BEAD		FB7305	1-400-180-21	INDUCTOR 0UH		
1626		QM	FERRITE BEAD		FB7306	1-414-229-11	FERRITE 0UH		
1627		QM	FERRITE BEAD		FB7307	1-414-229-11	FERRITE 0UH		
1628		QM	FERRITE BEAD		FB7308	1-469-835-21	FERRITE 0UH		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1629		QM	FERRITE BEAD		FB7309	1-414-229-11	FERRITE 0UH		
1630		QM	FERRITE BEAD		FB7310	1-414-229-11	FERRITE 0UH		
1631		QM	FERRITE BEAD		FB7311	1-414-229-11	FERRITE 0UH		
1632		QM	FERRITE BEAD		FB7312	1-414-229-11	FERRITE 0UH		
1633		QM	FERRITE BEAD		FB7313	1-400-180-21	INDUCTOR 0UH		
1634		QM	FERRITE BEAD		FB7314	1-400-180-21	INDUCTOR 0UH		
1635		QM	FERRITE BEAD		FB7315	1-414-229-11	FERRITE 0UH		
1636		QM	FERRITE BEAD		FB7316	1-414-229-11	FERRITE 0UH		
1637		QM	FERRITE BEAD		FB7317	1-400-089-21	FERRITE 0UH		
1638		QM	FERRITE BEAD		FB7318	1-400-089-21	FERRITE 0UH		
1639		QM	FERRITE BEAD		FB7319	1-414-229-11	FERRITE 0UH		
1640		QM	FERRITE BEAD		FB7320	1-400-089-21	FERRITE 0UH		
1641		QM	FERRITE BEAD		FB7321	1-400-180-21	INDUCTOR 0UH		
1642		QM	FERRITE BEAD		FB7322	1-400-180-21	INDUCTOR 0UH		
1643		QM	FERRITE BEAD		FB7324	1-400-180-21	INDUCTOR 0UH		
1644		QM	FERRITE BEAD		FB7325	1-469-835-21	FERRITE 0UH		
1645		QM	FERRITE BEAD		FB7326	1-400-180-21	INDUCTOR 0UH		
1646		QM	FILTER		FL7300	1-781-667-22	INDUCTOR 0UH		
1647		QM	IC		IC7300	6-706-447-01	IC 215H31AGA12G		
1648		QM	IC		IC7301	6-703-182-01	IC IRU3037CS		
1649		QM	IC		IC7302	6-703-182-01	IC IRU3037CS		
1650		QM	IC		IC7305	8-759-159-44	IC PST575IMT-T1		
1651		QM	IC		IC7306	8-729-044-83	TRANSISTOR IRF7313-TR		
1652		QM	IC		IC7307	8-729-044-83	TRANSISTOR IRF7313-TR		
1653		QM	IC		IC7309	6-704-622-01	IC PQ015Y3H3ZP		
1654		QM	IC		IC7310	6-703-048-01	IC XC6209B182MR		
1655		QM	IC		IC7311	6-703-048-01	IC XC6209B182MR		
1656		QM	IC		IC7312	6-703-048-01	IC XC6209B182MR		
1657		QM	IC		IC7313	6-703-048-01	IC XC6209B182MR		
1658		QM	IC		IC7314	6-703-048-01	IC XC6209B182MR		
1659		QM	IC		IC7315	8-759-698-08	IC SN74CBTLV1G125DCKR		
1660		QM	IC		IC7316	6-700-352-01	IC SN74CBTLV3253PWR		
1661		QM	IC		IC7318	6-705-336-01	IC K9F2808U0C-PCB0T		
1662		QM	IC		IC7319	6-705-336-01	IC K9F2808U0C-PCB0T		
1663		QM	IC		IC7320	6-703-866-01	IC M25P10-AVMN6T		
1664		QM	IC		IC7321	6-706-353-01	IC ICS1526GLFT		
1665		QM	IC		IC7322	6-706-901-01	IC K4H561638F-UCCCT00		
1666		QM	IC		IC7323	6-706-901-01	IC K4H561638F-UCCCT00		
1667		QM	IC		IC7324	6-706-901-01	IC K4H561638F-UCCCT00		
1668		QM	IC		IC7325	6-706-901-01	IC K4H561638F-UCCCT00		
1669		QM	IC		IC7326	6-702-688-01	IC M24C64-WMN6T(B)		
1670		QM	IC		IC7327	6-704-819-01	IC CS4335-KSZR		
1671		QM	IC		IC7330	6-700-631-01	IC TPS2051ADR		
1672		QM	IC		IC7331	6-706-334-01	IC TC74VCX162374(EL,F		
1673		QM	IC		IC7332	6-704-519-01	IC THC63LVD103		
1674		QM	IC		IC7335	6-703-046-01	IC SN74LVC1G08DCKR		
1675		QM	IC		IC7336	6-703-046-01	IC SN74LVC1G08DCKR		
1676		QM	COIL		L7300	1-469-349-11	INDUCTOR 1UH		
1677		QM	COIL		L7301	1-419-491-21	INDUCTOR 10UH		
1678		QM	COIL		L7302	1-419-491-21	INDUCTOR 10UH		
1679		QM	COIL		L7303	1-414-751-11	INDUCTOR 1UH		
1680		QM	COIL		L7304	1-410-989-11	INDUCTOR 0.47UH		
1681		QM	COIL		L7305	1-410-989-11	INDUCTOR 0.47UH		
1682		QM	COIL		L7306	1-410-989-11	INDUCTOR 0.47UH		
1683		QM	COIL		L7312	1-414-751-11	INDUCTOR 1UH		
1684		QM	COIL		L7316	1-410-988-42	INDUCTOR 0.39UH		
1685		QM	COIL		L7317	1-410-988-42	INDUCTOR 0.39UH		
1686		QM	COIL		L7318	1-410-988-42	INDUCTOR 0.39UH		
1687		QM	TRANSISTOR		Q7300	8-729-422-27	TRANSISTOR 2SD601A-Q		
1688		QM	TRANSISTOR		Q7301	8-729-422-27	TRANSISTOR 2SD601A-Q		
1689		QM	TRANSISTOR		Q7302	8-729-422-27	TRANSISTOR 2SD601A-Q		
1690		QM	TRANSISTOR		Q7303	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
1691		QM	TRANSISTOR		Q7304	8-729-422-27	TRANSISTOR 2SD601A-Q		
1692		QM	TRANSISTOR		Q7305	8-729-422-27	TRANSISTOR 2SD601A-Q		
1693		QM	TRANSISTOR		Q7308	8-729-422-27	TRANSISTOR 2SD601A-Q		
1694		QM	RESISTOR		R7301	1-216-864-11	SHORT CHIP 0		
1695		QM	RESISTOR		R7302	1-216-805-11	METAL CHIP 47 5% 1/10W		
1696		QM	RESISTOR		R7303	1-216-845-11	METAL CHIP 100K 5% 1/10W		
1697		QM	RESISTOR		R7305	1-216-809-11	METAL CHIP 100 5% 1/10W		
1698		QM	RESISTOR		R7306	1-216-864-11	SHORT CHIP 0		
1699		QM	RESISTOR		R7307	1-216-864-11	SHORT CHIP 0		
1700		QM	RESISTOR		R7308	1-218-724-11	METAL CHIP 22K 0.5% 1/10W		
1701		QM	RESISTOR		R7309	1-218-732-11	METAL CHIP 47K 0.5% 1/10W		
1702		QM	RESISTOR		R7312	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1703		QM	RESISTOR		R7313	1-218-726-11	METAL CHIP 27K 0.5% 1/10W		
1704		QM	RESISTOR		R7314	1-218-726-11	METAL CHIP 27K 0.5% 1/10W		
1705		QM	RESISTOR		R7315	1-216-864-11	SHORT CHIP 0		
1706		QM	RESISTOR		R7316	1-216-864-11	SHORT CHIP 0		
1707		QM	RESISTOR		R7318	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1708		QM	RESISTOR		R7319	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1709		QM	RESISTOR		R7320	1-216-803-11	METAL CHIP 33 5% 1/10W		
1710		QM	RESISTOR		R7321	1-216-809-11	METAL CHIP 100 5% 1/10W		
1711		QM	RESISTOR		R7322	1-216-809-11	METAL CHIP 100 5% 1/10W		
1712		QM	RESISTOR		R7323	1-216-803-11	METAL CHIP 33 5% 1/10W		
1713		QM	RESISTOR		R7324	1-216-797-11	METAL CHIP 10 5% 1/10W		
1714		QM	RESISTOR		R7325	1-216-797-11	METAL CHIP 10 5% 1/10W		
1715		QM	RESISTOR		R7326	1-216-809-11	METAL CHIP 100 5% 1/10W		
1716		QM	RESISTOR		R7327	1-216-809-11	METAL CHIP 100 5% 1/10W		
1717		QM	RESISTOR		R7329	1-216-793-11	METAL CHIP 4.7 5% 1/10W		
1718		QM	RESISTOR		R7330	1-216-793-11	METAL CHIP 4.7 5% 1/10W		
1719		QM	RESISTOR		R7332	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1720		QM	RESISTOR		R7334	1-216-809-11	METAL CHIP 100 5% 1/10W		
1721		QM	RESISTOR		R7336	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1722		QM	RESISTOR		R7338	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1723		QM	RESISTOR		R7340	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1724		QM	RESISTOR		R7342	1-216-864-11	SHORT CHIP 0		
1725		QM	RESISTOR		R7343	1-216-864-11	SHORT CHIP 0		
1726		QM	RESISTOR		R7353	1-216-809-11	METAL CHIP 100 5% 1/10W		
1727		QM	RESISTOR		R7354	1-216-809-11	METAL CHIP 100 5% 1/10W		
1728		QM	RESISTOR		R7356	1-216-857-11	METAL CHIP 1M 5% 1/10W		
1729		QM	RESISTOR		R7359	1-216-801-11	METAL CHIP 22 5% 1/10W		
1730		QM	RESISTOR		R7360	1-216-801-11	METAL CHIP 22 5% 1/10W		
1731		QM	RESISTOR		R7362	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1732		QM	RESISTOR		R7363	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1733		QM	RESISTOR		R7365	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1734		QM	RESISTOR		R7366	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1735		QM	RESISTOR		R7368	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1736		QM	RESISTOR		R7370	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1737		QM	RESISTOR		R7373	1-216-801-11	METAL CHIP 22 5% 1/10W		
1738		QM	RESISTOR		R7374	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1739		QM	RESISTOR		R7376	1-216-801-11	METAL CHIP 22 5% 1/10W		
1740		QM	RESISTOR		R7377	1-216-801-11	METAL CHIP 22 5% 1/10W		
1741		QM	RESISTOR		R7378	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1742		QM	RESISTOR		R7379	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1743		QM	RESISTOR		R7380	1-216-801-11	METAL CHIP 22 5% 1/10W		
1744		QM	RESISTOR		R7381	1-216-801-11	METAL CHIP 22 5% 1/10W		
1745		QM	RESISTOR		R7382	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1746		QM	RESISTOR		R7383	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1747		QM	RESISTOR		R7384	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1748		QM	RESISTOR		R7385	1-216-845-11	METAL CHIP 100K 5% 1/10W		
1749		QM	RESISTOR		R7386	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1750		QM	RESISTOR		R7388	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1751		QM	RESISTOR		R7389	1-216-809-11	METAL CHIP 100 5% 1/10W		
1752		QM	RESISTOR		R7390	1-216-809-11	METAL CHIP 100 5% 1/10W		
1753		QM	RESISTOR		R7391	1-216-864-11	SHORT CHIP 0		
1754		QM	RESISTOR		R7392	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1755		QM	RESISTOR		R7393	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1756		QM	RESISTOR		R7394	1-216-809-11	METAL CHIP 100 5% 1/10W		
1757		QM	RESISTOR		R7397	1-216-801-11	METAL CHIP 22 5% 1/10W		
1758		QM	RESISTOR		R7398	1-216-801-11	METAL CHIP 22 5% 1/10W		
1759		QM	RESISTOR		R7399	1-216-801-11	METAL CHIP 22 5% 1/10W		
1760		QM	RESISTOR		R7400	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1761		QM	RESISTOR		R7401	1-218-667-11	METAL CHIP 91 0.5% 1/10W		
1762		QM	RESISTOR		R7402	1-218-667-11	METAL CHIP 91 0.5% 1/10W		
1763		QM	RESISTOR		R7403	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
1764		QM	RESISTOR		R7404	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
1765		QM	RESISTOR		R7407	1-216-801-11	METAL CHIP 22 5% 1/10W		
1766		QM	RESISTOR		R7408	1-216-801-11	METAL CHIP 22 5% 1/10W		
1767		QM	RESISTOR		R7410	1-216-801-11	METAL CHIP 22 5% 1/10W		
1768		QM	RESISTOR		R7411	1-216-801-11	METAL CHIP 22 5% 1/10W		
1769		QM	RESISTOR		R7412	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1770		QM	RESISTOR		R7413	1-216-806-11	METAL CHIP 56 5% 1/10W		
1771		QM	RESISTOR		R7414	1-216-806-11	METAL CHIP 56 5% 1/10W		
1772		QM	RESISTOR		R7415	1-216-806-11	METAL CHIP 56 5% 1/10W		
1773		QM	RESISTOR		R7416	1-216-806-11	METAL CHIP 56 5% 1/10W		
1774		QM	RESISTOR		R7417	1-216-806-11	METAL CHIP 56 5% 1/10W		
1775		QM	RESISTOR		R7418	1-216-806-11	METAL CHIP 56 5% 1/10W		
1776		QM	RESISTOR		R7419	1-216-806-11	METAL CHIP 56 5% 1/10W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1777		QM	RESISTOR		R7420	1-216-806-11	METAL CHIP 56 5% 1/10W		
1778		QM	RESISTOR		R7421	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1779		QM	RESISTOR		R7422	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1780		QM	RESISTOR		R7423	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1781		QM	RESISTOR		R7424	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1782		QM	RESISTOR		R7425	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1783		QM	RESISTOR		R7426	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1784		QM	RESISTOR		R7427	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1785		QM	RESISTOR		R7428	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1786		QM	RESISTOR		R7429	1-216-809-11	METAL CHIP 100 5% 1/10W		
1787		QM	RESISTOR		R7430	1-216-809-11	METAL CHIP 100 5% 1/10W		
1788		QM	RESISTOR		R7431	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1789		QM	RESISTOR		R7432	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1790		QM	RESISTOR		R7433	1-216-809-11	METAL CHIP 100 5% 1/10W		
1791		QM	RESISTOR		R7434	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1792		QM	RESISTOR		R7435	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1793		QM	RESISTOR		R7436	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1794		QM	RESISTOR		R7437	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1795		QM	RESISTOR		R7438	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1796		QM	RESISTOR		R7439	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1797		QM	RESISTOR		R7440	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1798		QM	RESISTOR		R7441	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1799		QM	RESISTOR		R7442	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1800		QM	RESISTOR		R7443	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1801		QM	RESISTOR		R7444	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1802		QM	RESISTOR		R7445	1-216-864-11	SHORT CHIP 0		
1803		QM	RESISTOR		R7446	1-216-809-11	METAL CHIP 100 5% 1/10W		
1804		QM	RESISTOR		R7447	1-216-805-11	METAL CHIP 47 5% 1/10W		
1805		QM	RESISTOR		R7448	1-216-864-11	SHORT CHIP 0		
1806		QM	RESISTOR		R7449	1-216-805-11	METAL CHIP 47 5% 1/10W		
1807		QM	RESISTOR		R7450	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1808		QM	RESISTOR		R7451	1-216-864-11	SHORT CHIP 0		
1809		QM	RESISTOR		R7453	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1810		QM	RESISTOR		R7454	1-216-864-11	SHORT CHIP 0		
1811		QM	RESISTOR		R7455	1-216-864-11	SHORT CHIP 0		
1812		QM	RESISTOR		R7456	1-216-864-11	SHORT CHIP 0		
1813		QM	RESISTOR		R7460	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1814		QM	RESISTOR		R7462	1-218-690-11	METAL CHIP 820 0.5% 1/10W		
1815		QM	RESISTOR		R7463	1-218-690-11	METAL CHIP 820 0.5% 1/10W		
1816		QM	RESISTOR		R7464	1-218-710-11	METAL CHIP 5.6K 0.5% 1/10W		
1817		QM	RESISTOR		R7465	1-218-710-11	METAL CHIP 5.6K 0.5% 1/10W		
1818		QM	RESISTOR		R7466	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1819		QM	RESISTOR		R7468	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1820		QM	RESISTOR		R7469	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1821		QM	RESISTOR		R7470	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1822		QM	RESISTOR		R7471	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1823		QM	RESISTOR		R7473	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1824		QM	RESISTOR		R7474	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
1825		QM	RESISTOR		R7475	1-216-864-11	SHORT CHIP 0		
1826		QM	RESISTOR		R7476	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1827		QM	RESISTOR		R7477	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
1828		QM	RESISTOR		R7478	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
1829		QM	RESISTOR		R7479	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
1830		QM	RESISTOR		R7480	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
1831		QM	RESISTOR		R7481	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
1832		QM	RESISTOR		R7482	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
1833		QM	RESISTOR		R7483	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1834		QM	RESISTOR		R7484	1-216-850-11	METAL CHIP 270K 5% 1/10W		
1835		QM	RESISTOR		R7485	1-216-850-11	METAL CHIP 270K 5% 1/10W		
1836		QM	RESISTOR		R7486	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1837		QM	RESISTOR		R7487	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1838		QM	RESISTOR		R7488	1-216-818-11	METAL CHIP 560 5% 1/10W		
1839		QM	RESISTOR		R7489	1-216-818-11	METAL CHIP 560 5% 1/10W		
1840		QM	RESISTOR		R7490	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1841		QM	RESISTOR		R7491	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1842		QM	RESISTOR		R7492	1-216-864-11	SHORT CHIP 0		
1843		QM	RESISTOR		R7493	1-216-809-11	METAL CHIP 100 5% 1/10W		
1844		QM	RESISTOR		R7494	1-216-809-11	METAL CHIP 100 5% 1/10W		
1845		QM	RESISTOR		R7495	1-216-864-11	SHORT CHIP 0		
1846		QM	RESISTOR		R7496	1-216-864-11	SHORT CHIP 0		
1847		QM	RESISTOR		R7502	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1848		QM	RESISTOR		R7504	1-216-806-11	METAL CHIP 56 5% 1/10W		
1849		QM	RESISTOR		R7505	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1850		QM	RESISTOR		R7506	1-216-845-11	METAL CHIP 100K 5% 1/10W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1851		QM	RESISTOR		R7511	1-216-845-11	METAL CHIP 100K 5% 1/10W		
1852		QM	RESISTOR		R7512	1-216-806-11	METAL CHIP 56 5% 1/10W		
1853		QM	RESISTOR		R7513	1-216-864-11	SHORT CHIP 0		
1854		QM	RESISTOR		R7514	1-216-864-11	SHORT CHIP 0		
1855		QM	RESISTOR		R7515	1-216-806-11	METAL CHIP 56 5% 1/10W		
1856		QM	RESISTOR		R7516	1-216-806-11	METAL CHIP 56 5% 1/10W		
1857		QM	RESISTOR		R7517	1-216-835-11	METAL CHIP 15K 5% 1/10W		
1858		QM	RESISTOR		R7518	1-216-835-11	METAL CHIP 15K 5% 1/10W		
1859		QM	RESISTOR		R7519	1-216-835-11	METAL CHIP 15K 5% 1/10W		
1860		QM	RESISTOR		R7520	1-216-835-11	METAL CHIP 15K 5% 1/10W		
1861		QM	RESISTOR		R7521	1-216-806-11	METAL CHIP 56 5% 1/10W		
1862		QM	RESISTOR		R7522	1-216-806-11	METAL CHIP 56 5% 1/10W		
1863		QM	RESISTOR		R7523	1-216-806-11	METAL CHIP 56 5% 1/10W		
1864		QM	RESISTOR		R7524	1-216-806-11	METAL CHIP 56 5% 1/10W		
1865		QM	RESISTOR		R7543	1-216-809-11	METAL CHIP 100 5% 1/10W		
1866		QM	RESISTOR		R7544	1-216-809-11	METAL CHIP 100 5% 1/10W		
1867		QM	RESISTOR		R7547	1-216-809-11	METAL CHIP 100 5% 1/10W		
1868		QM	RESISTOR		R7548	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1869		QM	RESISTOR		R7549	1-216-801-11	METAL CHIP 22 5% 1/10W		
1870		QM	RESISTOR		R7550	1-216-801-11	METAL CHIP 22 5% 1/10W		
1871		QM	RESISTOR		R7551	1-216-801-11	METAL CHIP 22 5% 1/10W		
1872		QM	RESISTOR		R7552	1-216-801-11	METAL CHIP 22 5% 1/10W		
1873		QM	RESISTOR		R7554	1-216-809-11	METAL CHIP 100 5% 1/10W		
1874		QM	RESISTOR		R7556	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1875		QM	RESISTOR		R7559	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1876		QM	RESISTOR		R7560	1-216-809-11	METAL CHIP 100 5% 1/10W		
1877		QM	RESISTOR		R7562	1-216-864-11	SHORT CHIP 0		
1878		QM	RESISTOR		R7563	1-216-864-11	SHORT CHIP 0		
1879		QM	RESISTOR		R7570	1-216-801-11	METAL CHIP 22 5% 1/10W		
1880		QM	RESISTOR		R7571	1-216-801-11	METAL CHIP 22 5% 1/10W		
1881		QM	RESISTOR		R7576	1-216-801-11	METAL CHIP 22 5% 1/10W		
1882		QM	RESISTOR		R7579	1-218-734-11	METAL CHIP 56K 0.5% 1/10W		
1883		QM	RESISTOR		R7580	1-218-734-11	METAL CHIP 56K 0.5% 1/10W		
1884		QM	RESISTOR		R7583	1-216-864-11	SHORT CHIP 0		
1885		QM	RESISTOR		R7584	1-216-803-11	METAL CHIP 33 5% 1/10W		
1886		QM	RESISTOR		R7587	1-216-813-11	METAL CHIP 220 5% 1/10W		
1887		QM	RESISTOR		R7588	1-216-864-11	SHORT CHIP 0		
1888		QM	RESISTOR		R7589	1-216-864-11	SHORT CHIP 0		
1889		QM	RESISTOR		R7590	1-216-864-11	SHORT CHIP 0		
1890		QM	RESISTOR		R7591	1-216-864-11	SHORT CHIP 0		
1891		QM	RESISTOR		R7592	1-216-801-11	METAL CHIP 22 5% 1/10W		
1892		QM	RESISTOR		R7593	1-216-801-11	METAL CHIP 22 5% 1/10W		
1893		QM	RESISTOR		R7594	1-216-801-11	METAL CHIP 22 5% 1/10W		
1894		QM	RESISTOR		R7595	1-216-801-11	METAL CHIP 22 5% 1/10W		
1895		QM	RESISTOR		R7598	1-216-864-11	SHORT CHIP 0		
1896		QM	RESISTOR		R7599	1-216-864-11	SHORT CHIP 0		
1897		QM	RESISTOR		R7621	1-216-864-11	SHORT CHIP 0		
1898		QM	RESISTOR		R7623	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1899		QM	NETWORK		RB7301	1-234-370-21	RES, NETWORK 22X4 (1005)		
1900		QM	NETWORK		RB7302	1-234-370-21	RES, NETWORK 22X4 (1005)		
1901		QM	NETWORK		RB7303	1-234-370-21	RES, NETWORK 22X4 (1005)		
1902		QM	NETWORK		RB7304	1-234-370-21	RES, NETWORK 22X4 (1005)		
1903		QM	NETWORK		RB7307	1-234-370-21	RES, NETWORK 22X4 (1005)		
1904		QM	NETWORK		RB7317	1-234-370-21	RES, NETWORK 22X4 (1005)		
1905		QM	NETWORK		RB7318	1-234-370-21	RES, NETWORK 22X4 (1005)		
1906		QM	NETWORK		RB7319	1-234-370-21	RES, NETWORK 22X4 (1005)		
1907		QM	NETWORK		RB7320	1-234-370-21	RES, NETWORK 22X4 (1005)		
1908		QM	NETWORK		RB7321	1-234-370-21	RES, NETWORK 22X4 (1005)		
1909		QM	NETWORK		RB7322	1-234-370-21	RES, NETWORK 22X4 (1005)		
1910		QM	NETWORK		RB7323	1-234-370-21	RES, NETWORK 22X4 (1005)		
1911		QM	NETWORK		RB7324	1-234-370-21	RES, NETWORK 22X4 (1005)		
1912		QM	NETWORK		RB7325	1-234-370-21	RES, NETWORK 22X4 (1005)		
1913		QM	NETWORK		RB7326	1-234-370-21	RES, NETWORK 22X4 (1005)		
1914		QM	NETWORK		RB7327	1-234-370-21	RES, NETWORK 22X4 (1005)		
1915		QM	NETWORK		RB7328	1-234-370-21	RES, NETWORK 22X4 (1005)		
1916		QM	NETWORK		RB7329	1-234-714-11	RES, NETWORK 56X4 (1005)		
1917		QM	NETWORK		RB7330	1-234-714-11	RES, NETWORK 56X4 (1005)		
1918		QM	NETWORK		RB7331	1-234-714-11	RES, NETWORK 56X4 (1005)		
1919		QM	NETWORK		RB7332	1-234-714-11	RES, NETWORK 56X4 (1005)		
1920		QM	NETWORK		RB7333	1-234-714-11	RES, NETWORK 56X4 (1005)		
1921		QM	NETWORK		RB7334	1-234-714-11	RES, NETWORK 56X4 (1005)		
1922		QM	NETWORK		RB7335	1-234-714-11	RES, NETWORK 56X4 (1005)		
1923		QM	NETWORK		RB7336	1-234-714-11	RES, NETWORK 56X4 (1005)		
1924		QM	NETWORK		RB7337	1-234-714-11	RES, NETWORK 56X4 (1005)		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1925		QM	NETWORK		RB7338	1-234-714-11	RES, NETWORK 56X4 (1005)		
1926		QM	NETWORK		RB7339	1-234-714-11	RES, NETWORK 56X4 (1005)		
1927		QM	NETWORK		RB7340	1-234-714-11	RES, NETWORK 56X4 (1005)		
1928		QM	NETWORK		RB7341	1-234-714-11	RES, NETWORK 56X4 (1005)		
1929		QM	NETWORK		RB7342	1-234-714-11	RES, NETWORK 56X4 (1005)		
1930		QM	NETWORK		RB7343	1-234-714-11	RES, NETWORK 56X4 (1005)		
1931		QM	NETWORK		RB7344	1-234-714-11	RES, NETWORK 56X4 (1005)		
1932		QM	NETWORK		RB7346	1-242-963-21	RES, NETWORK 33X4 (1005)		
1933		QM	NETWORK		RB7347	1-242-963-21	RES, NETWORK 33X4 (1005)		
1934		QM	NETWORK		RB7348	1-242-963-21	RES, NETWORK 33X4 (1005)		
1935		QM	NETWORK		RB7349	1-242-963-21	RES, NETWORK 33X4 (1005)		
1936		QM	NETWORK		RB7350	1-242-963-21	RES, NETWORK 33X4 (1005)		
1937		QM	NETWORK		RB7351	1-242-963-21	RES, NETWORK 33X4 (1005)		
1938		QM	NETWORK		RB7352	1-242-963-21	RES, NETWORK 33X4 (1005)		
1939		QM	NETWORK		RB7353	1-242-963-21	RES, NETWORK 33X4 (1005)		
1940		QM	NETWORK		RB7354	1-242-963-21	RES, NETWORK 33X4 (1005)		
1941		QM	NETWORK		RB7355	1-242-963-21	RES, NETWORK 33X4 (1005)		
1942		QM	NETWORK		RB7356	1-242-963-21	RES, NETWORK 33X4 (1005)		
1943		QM	NETWORK		RB7357	1-242-963-21	RES, NETWORK 33X4 (1005)		
1944		QM	NETWORK		RB7361	1-234-372-21	RES, NETWORK 100X4 (1005)		
1945		QM	NETWORK		RB7362	1-234-370-21	RES, NETWORK 22X4 (1005)		
1946		QM	NETWORK		RB7363	1-234-370-21	RES, NETWORK 22X4 (1005)		
1947		QM	NETWORK		RB7364	1-234-370-21	RES, NETWORK 22X4 (1005)		
1948		QM	NETWORK		RB7365	1-234-373-21	RES, NETWORK 220X4 (1005)		
1949		QM	NETWORK		RB7366	1-234-370-21	RES, NETWORK 22X4 (1005)		
1950		QM	NETWORK		RB7367	1-234-370-21	RES, NETWORK 22X4 (1005)		
1951		QM	NETWORK		RB7368	1-234-370-21	RES, NETWORK 22X4 (1005)		
1952		QM	NETWORK		RB7369	1-234-370-21	RES, NETWORK 22X4 (1005)		
1953		QM	CRYSTAL		X7300	1-813-331-21	VIBRATOR CRYSTAL		
1954		QT	CAPACITOR		C7900	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1955		QT	CAPACITOR		C7901	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1956		QT	CAPACITOR		C7902	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
1957		QT	CAPACITOR		C7903	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1958		QT	CAPACITOR		C7904	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1959		QT	CAPACITOR		C7905	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1960		QT	CAPACITOR		C7906	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1961		QT	CAPACITOR		C7907	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1962		QT	CAPACITOR		C7908	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1963		QT	CAPACITOR		C7909	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
1964		QT	CAPACITOR		C7910	1-162-995-11	CERAMIC CHIP 0.022UF 50V		
1965		QT	CAPACITOR		C7911	1-162-995-11	CERAMIC CHIP 0.022UF 50V		
1966		QT	CAPACITOR		C7912	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1967		QT	CAPACITOR		C7913	1-128-996-11	ELECT CHIP 4.7UF 20% 50V		
1968		QT	CAPACITOR		C7914	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1969		QT	CAPACITOR		C7915	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1970		QT	CAPACITOR		C7916	1-165-319-11	CERAMIC CHIP 0.1UF 50V		
1971		QT	CAPACITOR		C7917	1-128-991-21	ELECT CHIP 10UF 20% 50V		
1972		QT	CAPACITOR		C7918	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1973		QT	CAPACITOR		C7919	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1974		QT	CAPACITOR		C7920	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1975		QT	CAPACITOR		C7921	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1976		QT	CAPACITOR		C7922	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1977		QT	CAPACITOR		C7923	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1978		QT	CAPACITOR		C7924	1-135-474-21	ELECT 330UF 20% 6.3V		
1979		QT	CAPACITOR		C7925	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1980		QT	CAPACITOR		C7926	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1981		QT	CAPACITOR		C7927	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
1982		QT	CAPACITOR		C7928	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1983		QT	CAPACITOR		C7929	1-115-156-11	CERAMIC CHIP 1UF 10V		
1984		QT	CAPACITOR		C7930	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1985		QT	CAPACITOR		C7931	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1986		QT	CAPACITOR		C7932	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1987		QT	CAPACITOR		C7933	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1988		QT	CAPACITOR		C7934	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1989		QT	CAPACITOR		C7935	1-115-156-11	CERAMIC CHIP 1UF 10V		
1990		QT	CAPACITOR		C7936	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V		
1991		QT	CAPACITOR		C7937	1-119-667-11	CERAMIC CHIP 22UF 10V		
1992		QT	CAPACITOR		C7938	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1993		QT	CAPACITOR		C7939	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1994		QT	CAPACITOR		C7940	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1995		QT	CAPACITOR		C7941	1-119-667-11	CERAMIC CHIP 22UF 10V		
1996		QT	CAPACITOR		C7942	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1997		QT	CAPACITOR		C7943	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1998		QT	CAPACITOR		C7944	1-164-156-11	CERAMIC CHIP 0.1UF 25V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1999		QT	CAPACITOR		C7945	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
2000		QT	CAPACITOR		C7946	1-119-667-11	CERAMIC CHIP 22UF 10V		
2001		QT	CAPACITOR		C7947	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
2002		QT	CAPACITOR		C7948	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
2003		QT	CAPACITOR		C7949	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
2004		QT	CAPACITOR		C7950	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
2005		QT	CAPACITOR		C7951	1-107-778-11	ELECT CHIP 470UF 20% 16V		
2006		QT	CAPACITOR		C7959	1-135-474-21	ELECT 330UF 20% 6.3V		
2007		QT	CAPACITOR		C7960	1-128-991-21	ELECT CHIP 10UF 20% 50V		
2008		QT	CAPACITOR		C7961	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
2009		QT	CAPACITOR		C7962	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
2010		QT	CAPACITOR		C7965	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
2011		QT	CAPACITOR		C7968	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
2012		QT	CAPACITOR		C7969	1-165-663-21	ELECT CHIP 330UF 20% 4V		
2013		QT	CONNECTOR	*	CN7901	1-695-223-21	PIN, CONNECTOR (SMD) 10P		
2014		QT	CONNECTOR		CN7902	1-766-382-21	PIN, CONNECTOR (1.5MM)(SMD)10P		
2015		QT	CONNECTOR	*	CN7903	1-818-484-11	FFC/FPC CONNECTOR (ZIF) 80P		
2016		QT	CONNECTOR	*	CN7904	1-573-768-21	PIN, CONNECTOR (1.5MM) (SMD)5P		
2017		QT	DIODE		D7900	8-719-060-99	DIODE SML-210MT-T86		
2018		QT	DIODE		D7901	8-719-066-99	DIODE SML-210VTT86		
2019		QT	DIODE		D7902	8-719-066-99	DIODE SML-210VTT86		
2020		QT	FERRITE BEAD		FB7900	1-469-835-21	FERRITE 0UH		
2021		QT	FERRITE BEAD		FB7901	1-414-229-11	FERRITE 0UH		
2022		QT	IC		IC7900	8-752-418-81	IC CXD2099AR-T6		
2023		QT	IC		IC7901	8-749-925-00	IC TK11819MTL		
2024		QT	IC		IC7902	8-759-646-63	IC CD74HC4053M-96		
2025		QT	IC		IC7903	8-759-693-94	IC TPS2205IDBR		
2026		QT	IC		IC7904	6-804-829-01	IC LC4032V-75TN48CS3244		
2027		QT	IC		IC7905	6-706-352-01	IC XC6209F122PR		
2028		QT	COIL		L7901	1-414-755-11	INDUCTOR 22UH		
2029		QT	COIL		L7902	1-400-815-21	INDUCTOR 1.2MH		
2030		QT	COIL		L7904	1-414-754-11	INDUCTOR 10UH		
2031		QT	COIL		L7905	1-414-754-11	INDUCTOR 10UH		
2032		QT	COIL		L7906	1-414-755-11	INDUCTOR 22UH		
2033		QT	COIL		L7907	1-414-754-11	INDUCTOR 10UH		
2034		QT	COIL		L7908	1-414-754-11	INDUCTOR 10UH		
2035		QT	COIL		L7910	1-414-752-11	INDUCTOR 2.2UH		
2036		QT	COIL		L7911	1-414-752-11	INDUCTOR 2.2UH		
2037		QT	COIL		L7912	1-414-754-11	INDUCTOR 10UH		
2038		QT	TRANSISTOR		Q7900	8-729-037-52	TRANSISTOR 2SD2216J-QR(TX).SO		
2039		QT	TRANSISTOR		Q7901	8-729-047-14	TRANSISTOR 2SC3775		
2040		QT	TRANSISTOR		Q7902	8-729-037-52	TRANSISTOR 2SD2216J-QR(TX).SO		
2041		QT	TRANSISTOR		Q7903	8-729-037-52	TRANSISTOR 2SD2216J-QR(TX).SO		
2042		QT	TRANSISTOR		Q7904	8-729-037-52	TRANSISTOR 2SD2216J-QR(TX).SO		
2043		QT	TRANSISTOR		Q7905	8-729-047-14	TRANSISTOR 2SC3775		
2044		QT	TRANSISTOR		Q7906	8-729-037-52	TRANSISTOR 2SD2216J-QR(TX).SO		
2045		QT	RESISTOR		R7900	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2046		QT	RESISTOR		R7901	1-216-839-11	METAL CHIP 33K 5% 1/10W		
2047		QT	RESISTOR		R7902	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2048		QT	RESISTOR		R7903	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2049		QT	RESISTOR		R7904	1-216-809-11	METAL CHIP 100 5% 1/10W		
2050		QT	RESISTOR		R7905	1-414-226-21	FERRITE 0UH		
2051		QT	RESISTOR		R7906	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2052		QT	RESISTOR		R7907	1-216-801-11	METAL CHIP 22 5% 1/10W		
2053		QT	RESISTOR		R7908	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2054		QT	RESISTOR		R7909	1-216-789-11	METAL CHIP 2.2 5% 1/10W		
2055		QT	RESISTOR		R7910	1-216-809-11	METAL CHIP 100 5% 1/10W		
2056		QT	RESISTOR		R7911	1-216-809-11	METAL CHIP 100 5% 1/10W		
2057		QT	RESISTOR		R7912	1-216-864-11	SHORT CHIP 0		
2058		QT	RESISTOR		R7916	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2059		QT	RESISTOR		R7919	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2060		QT	RESISTOR		R7922	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2061		QT	RESISTOR		R7923	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2062		QT	RESISTOR		R7924	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2063		QT	RESISTOR		R7925	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2064		QT	RESISTOR		R7926	1-216-809-11	METAL CHIP 100 5% 1/10W		
2065		QT	RESISTOR		R7927	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2066		QT	RESISTOR		R7929	1-216-809-11	METAL CHIP 100 5% 1/10W		
2067		QT	RESISTOR		R7930	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2068		QT	RESISTOR		R7931	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2069		QT	RESISTOR		R7932	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2070		QT	RESISTOR		R7933	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2071		QT	RESISTOR		R7934	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2072		QT	RESISTOR		R7935	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2073		QT	RESISTOR		R7936	1-216-797-11	METAL CHIP 10 5% 1/10W		
2074		QT	RESISTOR		R7937	1-216-812-11	METAL CHIP 180 5% 1/10W		
2075		QT	RESISTOR		R7938	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2076		QT	RESISTOR		R7939	1-216-797-11	METAL CHIP 10 5% 1/10W		
2077		QT	RESISTOR		R7940	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2078		QT	RESISTOR		R7941	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2079		QT	RESISTOR		R7942	1-216-864-11	SHORT CHIP 0		
2080		QT	RESISTOR		R7943	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2081		QT	RESISTOR		R7944	1-216-864-11	SHORT CHIP 0		
2082		QT	RESISTOR		R7945	1-216-864-11	SHORT CHIP 0		
2083		QT	RESISTOR		R7946	1-216-864-11	SHORT CHIP 0		
2084		QT	RESISTOR		R7947	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2085		QT	RESISTOR		R7948	1-216-864-11	SHORT CHIP 0		
2086		QT	RESISTOR		R7949	1-216-864-11	SHORT CHIP 0		
2087		QT	RESISTOR		R7950	1-216-864-11	SHORT CHIP 0		
2088		QT	RESISTOR		R7951	1-216-864-11	SHORT CHIP 0		
2089		QT	RESISTOR		R7952	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2090		QT	RESISTOR		R7954	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2091		QT	RESISTOR		R7955	1-216-817-11	METAL CHIP 470 5% 1/10W		
2092		QT	RESISTOR		R7956	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2093		QT	RESISTOR		R7957	1-216-809-11	METAL CHIP 100 5% 1/10W		
2094		QT	RESISTOR		R7958	1-216-817-11	METAL CHIP 470 5% 1/10W		
2095		QT	RESISTOR		R7959	1-216-864-11	SHORT CHIP 0		
2096		QT	RESISTOR		R7960	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2097		QT	RESISTOR		R7961	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2098		QT	RESISTOR		R7962	1-216-809-11	METAL CHIP 100 5% 1/10W		
2099		QT	RESISTOR		R7963	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2100		QT	RESISTOR		R7964	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2101		QT	RESISTOR		R7965	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2102		QT	RESISTOR		R7966	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2103		QT	RESISTOR		R7967	1-216-809-11	METAL CHIP 100 5% 1/10W		
2104		QT	RESISTOR		R7968	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2105		QT	RESISTOR		R7969	1-216-809-11	METAL CHIP 100 5% 1/10W		
2106		QT	RESISTOR		R7970	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2107		QT	RESISTOR		R7971	1-216-817-11	METAL CHIP 470 5% 1/10W		
2108		QT	RESISTOR		R7972	1-216-864-11	SHORT CHIP 0		
2109		QT	RESISTOR		R7976	1-216-864-11	SHORT CHIP 0		
2110		QT	RESISTOR		R7977	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2111		QT	RESISTOR		R7988	1-216-809-11	METAL CHIP 100 5% 1/10W		
2112		QT	RESISTOR		R7989	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2113		QT	RESISTOR		R7991	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2114		QT	RESISTOR		R7992	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2115		QT	RESISTOR		R7993	1-216-805-11	METAL CHIP 47 5% 1/10W		
2116		QT	RESISTOR		R7994	1-216-805-11	METAL CHIP 47 5% 1/10W		
2117		QT	RESISTOR		R7995	1-216-805-11	METAL CHIP 47 5% 1/10W		
2118		QT	RESISTOR		R7996	1-216-805-11	METAL CHIP 47 5% 1/10W		
2119		QT	RESISTOR		R7997	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2120		QT	RESISTOR		R7998	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2121		QT	NETWORK		RB7900	1-234-371-21	RES, NETWORK 47X4 (1005)		
2122		QT	NETWORK		RB7901	1-234-371-21	RES, NETWORK 47X4 (1005)		
2123		QT	NETWORK		RB7903	1-233-981-21	RES, NETWORK (CHIP TYPE) 0		
2124		QT	NETWORK		RB7904	1-233-981-21	RES, NETWORK (CHIP TYPE) 0		
2125		QT	NETWORK		RB7906	1-233-981-21	RES, NETWORK (CHIP TYPE) 0		
2126		QT	NETWORK		RB7915	1-242-963-21	RES, NETWORK 33X4 (1005)		
2127		QT	NETWORK		RB7916	1-233-981-21	RES, NETWORK (CHIP TYPE) 0		
2128		QT	CHIP CHCKER		TP7900	1-535-757-11	CHIP, CHECKER		
2129		QT	TUNER		TU7901	8-597-905-00	TUNER UNIT,DIGITAL BTD-CA801Z		
2130		QT	CRYSTAL		X7900	1-813-330-21	OSCILLATOR, CRYSTAL		
2131		DIC3	CAPACITOR		C4000	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2132		DIC3	CAPACITOR		C4001	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2133		DIC3	CAPACITOR		C4002	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2134		DIC3	CAPACITOR		C4003	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2135		DIC3	CAPACITOR		C4004	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2136		DIC3	CAPACITOR		C4005	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2137		DIC3	CAPACITOR		C4006	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2138		DIC3	CAPACITOR		C4007	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2139		DIC3	CAPACITOR		C4008	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2140		DIC3	CAPACITOR		C4009	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2141		DIC3	CAPACITOR		C4010	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2142		DIC3	CAPACITOR		C4011	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
2143		DIC3	CAPACITOR		C4012	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
2144		DIC3	CAPACITOR		C4013	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
2145		DIC3	CAPACITOR		C4014	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
2146		DIC3	CAPACITOR		C4015	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2147		DIC3	CAPACITOR		C4016	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2148		DIC3	CAPACITOR		C4017	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2149		DIC3	CAPACITOR		C4018	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
2150		DIC3	CAPACITOR		C4019	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2151		DIC3	CAPACITOR		C4020	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
2152		DIC3	CAPACITOR		C4021	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
2153		DIC3	CAPACITOR		C4022	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
2154		DIC3	CAPACITOR		C4023	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2155		DIC3	CAPACITOR		C4024	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2156		DIC3	CAPACITOR		C4025	1-125-838-11	CERAMIC CHIP 2.2UF 10% 6.3V		
2157		DIC3	CAPACITOR		C4026	1-125-838-11	CERAMIC CHIP 2.2UF 10% 6.3V		
2158		DIC3	CAPACITOR		C4033	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2159		DIC3	CAPACITOR		C4037	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2160		DIC3	CAPACITOR		C4041	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2161		DIC3	CAPACITOR		C4201	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2162		DIC3	CAPACITOR		C4202	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2163		DIC3	CAPACITOR		C4203	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2164		DIC3	CAPACITOR		C4204	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2165		DIC3	CAPACITOR		C4205	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2166		DIC3	CAPACITOR		C4206	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2167		DIC3	CAPACITOR		C4207	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
2168		DIC3	CAPACITOR		C4208	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
2169		DIC3	CAPACITOR		C4209	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
2170		DIC3	CAPACITOR		C4210	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2171		DIC3	CAPACITOR		C4211	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2172		DIC3	CAPACITOR		C4212	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2173		DIC3	CAPACITOR		C4213	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
2174		DIC3	CAPACITOR		C4214	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2175		DIC3	CAPACITOR		C4215	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2176		DIC3	CAPACITOR		C4216	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2177		DIC3	CAPACITOR		C4217	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2178		DIC3	CAPACITOR		C4218	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2179		DIC3	CAPACITOR		C4219	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2180		DIC3	CAPACITOR		C4220	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2181		DIC3	CAPACITOR		C4221	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2182		DIC3	CAPACITOR		C4222	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2183		DIC3	CAPACITOR		C4223	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2184		DIC3	CAPACITOR		C4224	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2185		DIC3	CAPACITOR		C4225	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2186		DIC3	CAPACITOR		C4226	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2187		DIC3	CAPACITOR		C4227	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2188		DIC3	CAPACITOR		C4228	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2189		DIC3	CAPACITOR		C4229	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2190		DIC3	CAPACITOR		C4230	1-100-581-81	CERAMIC CHIP 4700PF 10% 50V		
2191		DIC3	CAPACITOR		C4246	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2192		DIC3	CAPACITOR		C4300	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2193		DIC3	CAPACITOR		C4301	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2194		DIC3	CAPACITOR		C4302	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2195		DIC3	CAPACITOR		C4303	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2196		DIC3	CAPACITOR		C4304	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2197		DIC3	CAPACITOR		C4305	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2198		DIC3	CAPACITOR		C4306	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2199		DIC3	CAPACITOR		C4307	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2200		DIC3	CAPACITOR		C4308	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2201		DIC3	CAPACITOR		C4309	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2202		DIC3	CAPACITOR		C4310	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2203		DIC3	CAPACITOR		C4311	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2204		DIC3	CAPACITOR		C4312	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2205		DIC3	CAPACITOR		C4313	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2206		DIC3	CAPACITOR		C4314	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2207		DIC3	CAPACITOR		C4315	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2208		DIC3	CAPACITOR		C4316	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2209		DIC3	CAPACITOR		C4317	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2210		DIC3	CAPACITOR		C4318	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2211		DIC3	CAPACITOR		C4319	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2212		DIC3	CAPACITOR		C4320	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2213		DIC3	CAPACITOR		C4321	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2214		DIC3	CAPACITOR		C4322	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2215		DIC3	CAPACITOR		C4323	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2216		DIC3	CAPACITOR		C4324	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2217		DIC3	CAPACITOR		C4325	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2218		DIC3	CAPACITOR		C4326	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2219		DIC3	CAPACITOR		C4327	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2220		DIC3	CAPACITOR		C4328	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2221		DIC3	CAPACITOR		C4329	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2222		DIC3	CAPACITOR		C4330	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2223		DIC3	CAPACITOR		C4331	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2224		DIC3	CAPACITOR		C4332	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2225		DIC3	CAPACITOR		C4333	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2226		DIC3	CAPACITOR		C4334	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2227		DIC3	CAPACITOR		C4335	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2228		DIC3	CAPACITOR		C4336	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2229		DIC3	CAPACITOR		C4337	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2230		DIC3	CAPACITOR		C4338	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2231		DIC3	CAPACITOR		C4339	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2232		DIC3	CAPACITOR		C4340	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2233		DIC3	CAPACITOR		C4342	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2234		DIC3	CAPACITOR		C4343	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2235		DIC3	CAPACITOR		C4344	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2236		DIC3	CAPACITOR		C4345	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2237		DIC3	CAPACITOR		C4346	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2238		DIC3	CAPACITOR		C4347	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2239		DIC3	CAPACITOR		C4349	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2240		DIC3	CAPACITOR		C4351	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
2241		DIC3	CAPACITOR		C4354	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2242		DIC3	CAPACITOR		C4356	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2243		DIC3	CAPACITOR		C4357	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2244		DIC3	CAPACITOR		C4358	1-115-152-11	ELECT CHIP 22UF 20.00% 6.3V		
2245		DIC3	CAPACITOR		C4359	1-115-152-11	ELECT CHIP 22UF 20.00% 6.3V		
2246		DIC3	CAPACITOR		C4360	1-115-152-11	ELECT CHIP 22UF 20.00% 6.3V		
2247		DIC3	CAPACITOR		C4361	1-115-152-11	ELECT CHIP 22UF 20.00% 6.3V		
2248		DIC3	CAPACITOR		C4362	1-115-152-11	ELECT CHIP 22UF 20.00% 6.3V		
2249		DIC3	CAPACITOR		C4365	1-126-396-11	ELECT CHIP 47UF 20.00% 16V		
2250		DIC3	CAPACITOR		C4366	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2251		DIC3	CAPACITOR		C4367	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2252		DIC3	CAPACITOR		C4368	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
2253		DIC3	CAPACITOR		C4369	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
2254		DIC3	CAPACITOR		C4370	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
2255		DIC3	CAPACITOR		C4371	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
2256		DIC3	CAPACITOR		C4372	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2257		DIC3	CAPACITOR		C4373	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2258		DIC3	CAPACITOR		C4374	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2259		DIC3	CAPACITOR		C4375	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
2260		DIC3	CAPACITOR		C4376	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
2261		DIC3	CAPACITOR		C4377	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
2262		DIC3	CAPACITOR		C4378	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2263		DIC3	CAPACITOR		C4379	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2264		DIC3	CAPACITOR		C4380	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2265		DIC3	CAPACITOR		C4381	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2266		DIC3	CAPACITOR		C4382	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2267		DIC3	CAPACITOR		C4384	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
2268		DIC3	CAPACITOR		C4385	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2269		DIC3	CAPACITOR		C4386	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2270		DIC3	CAPACITOR		C4387	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2271		DIC3	CAPACITOR		C4389	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2272		DIC3	CAPACITOR		C4390	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2273		DIC3	CAPACITOR		C4391	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2274		DIC3	CAPACITOR		C4392	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2275		DIC3	CAPACITOR		C4394	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2276		DIC3	CAPACITOR		C4395	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2277		DIC3	CAPACITOR		C4396	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2278		DIC3	CAPACITOR		C4402	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2279		DIC3	CAPACITOR		C4404	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2280		DIC3	CAPACITOR		C4405	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2281		DIC3	CAPACITOR		C4407	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2282		DIC3	CAPACITOR		C4408	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2283		DIC3	CAPACITOR		C4409	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2284		DIC3	CAPACITOR		C4411	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2285		DIC3	CAPACITOR		C4414	1-126-390-11	ELECT CHIP 22UF 20.00% 6.3V		
2286		DIC3	CAPACITOR		C4500	1-165-643-21	ELECT CHIP 150UF 20% 4V		
2287		DIC3	CAPACITOR		C4501	1-165-643-21	ELECT CHIP 150UF 20% 4V		
2288		DIC3	CAPACITOR		C4502	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2289		DIC3	CAPACITOR		C4503	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2290		DIC3	CAPACITOR		C4504	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2291		DIC3	CAPACITOR		C4505	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2292		DIC3	CAPACITOR		C4506	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2293		DIC3	CAPACITOR		C4507	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2294		DIC3	CAPACITOR		C4508	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2295		DIC3	CAPACITOR		C4509	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2296		DIC3	CAPACITOR		C4510	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2297		DIC3	CAPACITOR		C4511	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2298		DIC3	CAPACITOR		C4512	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2299		DIC3	CAPACITOR		C4513	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2300		DIC3	CAPACITOR		C4514	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2301		DIC3	CAPACITOR		C4515	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2302		DIC3	CAPACITOR		C4516	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2303		DIC3	CAPACITOR		C4517	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2304		DIC3	CAPACITOR		C4518	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2305		DIC3	CAPACITOR		C4519	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2306		DIC3	CAPACITOR		C4520	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2307		DIC3	CAPACITOR		C4521	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2308		DIC3	CAPACITOR		C4522	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2309		DIC3	CAPACITOR		C4523	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2310		DIC3	CAPACITOR		C4524	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2311		DIC3	CAPACITOR		C4525	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2312		DIC3	CAPACITOR		C4526	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2313		DIC3	CAPACITOR		C4527	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2314		DIC3	CAPACITOR		C4528	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2315		DIC3	CAPACITOR		C4529	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2316		DIC3	CAPACITOR		C4530	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2317		DIC3	CAPACITOR		C4531	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2318		DIC3	CAPACITOR		C4532	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2319		DIC3	CAPACITOR		C4533	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2320		DIC3	CAPACITOR		C4534	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2321		DIC3	CAPACITOR		C4535	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2322		DIC3	CAPACITOR		C4536	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2323		DIC3	CAPACITOR		C4537	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2324		DIC3	CAPACITOR		C4538	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2325		DIC3	CAPACITOR		C4539	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2326		DIC3	CAPACITOR		C4540	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2327		DIC3	CAPACITOR		C4541	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2328		DIC3	CAPACITOR		C4542	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2329		DIC3	CAPACITOR		C4543	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2330		DIC3	CAPACITOR		C4544	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2331		DIC3	CAPACITOR		C4545	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2332		DIC3	CAPACITOR		C4546	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2333		DIC3	CAPACITOR		C4547	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2334		DIC3	CAPACITOR		C4548	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V		
2335		DIC3	CAPACITOR		C4549	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2336		DIC3	CAPACITOR		C4550	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2337		DIC3	CAPACITOR		C4551	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2338		DIC3	CAPACITOR		C4552	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2339		DIC3	CAPACITOR		C4553	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2340		DIC3	CAPACITOR		C4554	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2341		DIC3	CAPACITOR		C4555	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2342		DIC3	CAPACITOR		C4556	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2343		DIC3	CAPACITOR		C4557	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2344		DIC3	CAPACITOR		C4558	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2345		DIC3	CAPACITOR		C4559	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2346		DIC3	CAPACITOR		C4561	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2347		DIC3	CAPACITOR		C4562	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2348		DIC3	CAPACITOR		C4563	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2349		DIC3	CAPACITOR		C4564	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2350		DIC3	CAPACITOR		C4565	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2351		DIC3	CAPACITOR		C4566	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2352		DIC3	CAPACITOR		C4567	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2353		DIC3	CAPACITOR		C4568	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2354		DIC3	CAPACITOR		C4569	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2355		DIC3	CAPACITOR		C4570	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2356		DIC3	CAPACITOR		C4571	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2357		DIC3	CAPACITOR		C4572	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2358		DIC3	CAPACITOR		C4573	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2359		DIC3	CAPACITOR		C4574	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2360		DIC3	CAPACITOR		C4575	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2361		DIC3	CAPACITOR		C4576	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2362		DIC3	CAPACITOR		C4577	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2363		DIC3	CAPACITOR		C4578	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2364		DIC3	CAPACITOR		C4579	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2365		DIC3	CAPACITOR		C4580	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2366		DIC3	CAPACITOR		C4581	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2367		DIC3	CAPACITOR		C4582	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2368		DIC3	CAPACITOR		C4583	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2369		DIC3	CAPACITOR		C4584	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2370		DIC3	CAPACITOR		C4585	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2371		DIC3	CAPACITOR		C4586	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
2372		DIC3	CAPACITOR		C4587	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2373		DIC3	CAPACITOR		C4588	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2374		DIC3	CAPACITOR		C4589	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2375		DIC3	CAPACITOR		C4590	1-131-661-21	ELECT CHIP 100UF 20% 10V		
2376		DIC3	CAPACITOR		C4600	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2377		DIC3	CAPACITOR		C4601	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2378		DIC3	CAPACITOR		C4602	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2379		DIC3	CAPACITOR		C4603	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2380		DIC3	CAPACITOR		C4604	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2381		DIC3	CAPACITOR		C4605	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2382		DIC3	CAPACITOR		C4606	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2383		DIC3	CAPACITOR		C4607	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2384		DIC3	CAPACITOR		C4608	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2385		DIC3	CAPACITOR		C4609	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2386		DIC3	CAPACITOR		C4610	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2387		DIC3	CAPACITOR		C4611	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2388		DIC3	CAPACITOR		C4612	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2389		DIC3	CAPACITOR		C4613	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2390		DIC3	CAPACITOR		C4614	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2391		DIC3	CAPACITOR		C4615	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2392		DIC3	CAPACITOR		C4616	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2393		DIC3	CAPACITOR		C4617	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2394		DIC3	CAPACITOR		C4618	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2395		DIC3	CAPACITOR		C4620	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2396		DIC3	CAPACITOR		C4621	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2397		DIC3	CAPACITOR		C4622	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2398		DIC3	CAPACITOR		C4623	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2399		DIC3	CAPACITOR		C4624	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2400		DIC3	CAPACITOR		C4625	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2401		DIC3	CAPACITOR		C4626	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2402		DIC3	CAPACITOR		C4627	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2403		DIC3	CAPACITOR		C4628	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2404		DIC3	CAPACITOR		C4629	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2405		DIC3	CAPACITOR		C4630	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2406		DIC3	CAPACITOR		C4631	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2407		DIC3	CAPACITOR		C4633	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2408		DIC3	CAPACITOR		C4634	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2409		DIC3	CAPACITOR		C4635	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2410		DIC3	CAPACITOR		C4636	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2411		DIC3	CAPACITOR		C4637	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2412		DIC3	CAPACITOR		C4638	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2413		DIC3	CAPACITOR		C4639	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2414		DIC3	CAPACITOR		C4640	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2415		DIC3	CAPACITOR		C4641	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2416		DIC3	CAPACITOR		C4644	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2417		DIC3	CAPACITOR		C4645	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2418		DIC3	CAPACITOR		C4646	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2419		DIC3	CAPACITOR		C4647	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2420		DIC3	CAPACITOR		C4648	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2421		DIC3	CAPACITOR		C4649	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2422		DIC3	CAPACITOR		C4650	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2423		DIC3	CAPACITOR		C4651	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2424		DIC3	CAPACITOR		C4652	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2425		DIC3	CAPACITOR		C4653	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2426		DIC3	CAPACITOR		C4654	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2427		DIC3	CAPACITOR		C4655	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2428		DIC3	CAPACITOR		C4656	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2429		DIC3	CAPACITOR		C4657	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2430		DIC3	CAPACITOR		C4658	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2431		DIC3	CAPACITOR		C4659	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2432		DIC3	CAPACITOR		C4660	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2433		DIC3	CAPACITOR		C4661	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2434		DIC3	CAPACITOR		C4662	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
2435		DIC3	CAPACITOR		C4663	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2436		DIC3	CAPACITOR		C4664	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2437		DIC3	CAPACITOR		C4665	1-100-159-91	CERAMIC CHIP 22UF 10% 6.3V		
2438		DIC3	CAPACITOR		C4666	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2439		DIC3	CAPACITOR		C4667	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2440		DIC3	CAPACITOR		C4668	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2441		DIC3	CAPACITOR		C4669	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2442		DIC3	CAPACITOR		C4670	1-128-934-91	CERAMIC CHIP 0.33UF 20% 10V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2443		DIC3	CAPACITOR		C4671	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2444		DIC3	CAPACITOR		C4672	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2445		DIC3	CAPACITOR		C4673	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2446		DIC3	CAPACITOR		C4674	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2447		DIC3	CAPACITOR		C4675	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2448		DIC3	CAPACITOR		C4676	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2449		DIC3	CAPACITOR		C4677	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2450		DIC3	CAPACITOR		C4678	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2451		DIC3	CAPACITOR		C4679	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2452		DIC3	CAPACITOR		C4683	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V		
2453		DIC3	CAPACITOR		C4684	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V		
2454		DIC3	CAPACITOR		C4685	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V		
2455		DIC3	CAPACITOR		C4686	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V		
2456		DIC3	CAPACITOR		C4687	1-126-401-21	ELECT CHIP 1UF 20.00% 50V		
2457		DIC3	CAPACITOR		C4688	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V		
2458		DIC3	CAPACITOR		C4689	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V		
2459		DIC3	CAPACITOR		C4690	1-100-159-91	CERAMIC CHIP 22UF 10% 6.3V		
2460		DIC3	CAPACITOR		C4691	1-100-159-91	CERAMIC CHIP 22UF 10% 6.3V		
2461		DIC3	CAPACITOR		C4692	1-100-159-91	CERAMIC CHIP 22UF 10% 6.3V		
2462		DIC3	CAPACITOR		C4694	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2463		DIC3	CAPACITOR		C4695	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2464		DIC3	CAPACITOR		C4701	1-100-159-91	CERAMIC CHIP 22UF 10% 6.3V		
2465		DIC3	CAPACITOR		C4702	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2466		DIC3	CAPACITOR		C4703	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2467		DIC3	CAPACITOR		C4704	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2468		DIC3	CAPACITOR		C4706	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2469		DIC3	CAPACITOR		C4707	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2470		DIC3	CAPACITOR		C4708	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2471		DIC3	CAPACITOR		C4709	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2472		DIC3	CAPACITOR		C4710	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2473		DIC3	CAPACITOR		C4713	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
2474		DIC3	CAPACITOR		C4714	1-164-854-11	CERAMIC CHIP 15PF 5.00% 50V		
2475		DIC3	CAPACITOR		C4715	1-164-938-11	CERAMIC CHIP 0.0015UF 10.00% 50V		
2476		DIC3	CAPACITOR		C4716	1-164-938-11	CERAMIC CHIP 0.0015UF 10.00% 50V		
2477		DIC3	CAPACITOR		C4800	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2478		DIC3	CAPACITOR		C4801	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2479		DIC3	CAPACITOR		C4802	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2480		DIC3	CAPACITOR		C4803	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2481		DIC3	CAPACITOR		C4804	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2482		DIC3	CAPACITOR		C4805	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2483		DIC3	CAPACITOR		C4806	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2484		DIC3	CAPACITOR		C4807	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2485		DIC3	CAPACITOR		C4808	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2486		DIC3	CAPACITOR		C4809	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2487		DIC3	CAPACITOR		C4810	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2488		DIC3	CAPACITOR		C4811	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2489		DIC3	CAPACITOR		C4812	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2490		DIC3	CAPACITOR		C4813	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2491		DIC3	CAPACITOR		C4815	1-117-743-81	CERAMIC CHIP 5PF 0.1PF 16V		
2492		DIC3	CAPACITOR		C4816	1-117-743-81	CERAMIC CHIP 5PF 0.1PF 16V		
2493		DIC3	CAPACITOR		C4817	1-117-743-81	CERAMIC CHIP 5PF 0.1PF 16V		
2494		DIC3	CAPACITOR		C4818	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2495		DIC3	CAPACITOR		C4819	1-117-743-81	CERAMIC CHIP 5PF 0.1PF 16V		
2496		DIC3	CAPACITOR		C4820	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2497		DIC3	CAPACITOR		C4821	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2498		DIC3	CAPACITOR		C4822	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2499		DIC3	CAPACITOR		C4823	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2500		DIC3	CAPACITOR		C4824	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2501		DIC3	CAPACITOR		C4825	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2502		DIC3	CAPACITOR		C4826	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2503		DIC3	CAPACITOR		C4827	1-126-401-21	ELECT CHIP 1UF 20.00% 50V		
2504		DIC3	CAPACITOR		C4828	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2505		DIC3	CAPACITOR		C4829	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2506		DIC3	CAPACITOR		C4830	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2507		DIC3	CAPACITOR		C4831	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2508		DIC3	CAPACITOR		C4832	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2509		DIC3	CAPACITOR		C4833	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2510		DIC3	CAPACITOR		C4835	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2511		DIC3	CAPACITOR		C4836	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2512		DIC3	CAPACITOR		C4837	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2513		DIC3	CAPACITOR		C4838	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
2514		DIC3	CAPACITOR		C4839	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2515		DIC3	CAPACITOR		C4840	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2516		DIC3	CAPACITOR		C4841	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2517		DIC3	CAPACITOR		C4842	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2518		DIC3	CAPACITOR		C4843	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2519		DIC3	CAPACITOR		C4844	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2520		DIC3	CAPACITOR		C4845	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2521		DIC3	CAPACITOR		C4846	1-117-743-81	CERAMIC CHIP 5PF 0.1PF 16V		
2522		DIC3	CAPACITOR		C4847	1-117-743-81	CERAMIC CHIP 5PF 0.1PF 16V		
2523		DIC3	CAPACITOR		C4848	1-117-743-81	CERAMIC CHIP 5PF 0.1PF 16V		
2524		DIC3	CAPACITOR		C4849	1-117-743-81	CERAMIC CHIP 5PF 0.1PF 16V		
2525		DIC3	CAPACITOR		C4850	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2526		DIC3	CAPACITOR		C4851	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2527		DIC3	CAPACITOR		C4852	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2528		DIC3	CAPACITOR		C4853	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2529		DIC3	CAPACITOR		C4854	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2530		DIC3	CAPACITOR		C4855	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2531		DIC3	CAPACITOR		C4856	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2532		DIC3	CAPACITOR		C4857	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2533		DIC3	CAPACITOR		C4858	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2534		DIC3	CAPACITOR		C4860	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2535		DIC3	CAPACITOR		C4861	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2536		DIC3	CAPACITOR		C4862	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2537		DIC3	CAPACITOR		C4863	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2538		DIC3	CAPACITOR		C4864	1-126-401-21	ELECT CHIP 1UF 20.00% 50V		
2539		DIC3	CAPACITOR		C4865	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2540		DIC3	CAPACITOR		C4866	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2541		DIC3	CAPACITOR		C4867	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2542		DIC3	CAPACITOR		C4869	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2543		DIC3	CAPACITOR		C4870	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2544		DIC3	CAPACITOR		C4871	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2545		DIC3	CAPACITOR		C4872	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2546		DIC3	CAPACITOR		C4873	1-126-390-11	ELECT CHIP 22UF 20.00% 6.3V		
2547		DIC3	CAPACITOR		C4874	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2548		DIC3	CAPACITOR		C4875	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2549		DIC3	CAPACITOR		C4876	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
2550		DIC3	CAPACITOR		C4877	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
2551		DIC3	CAPACITOR		C4878	1-126-412-11	ELECT CHIP 220UF 20.00% 4V		
2552		DIC3	CAPACITOR		C4879	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2553		DIC3	CAPACITOR		C4880	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2554		DIC3	CAPACITOR		C4881	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2555		DIC3	CAPACITOR		C4882	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
2556		DIC3	CONNECTOR	*	CN4200	1-817-752-21	CONNECTOR (RECEPTACLE) 14P		
2557		DIC3	CONNECTOR	*	CN4201	1-817-752-21	CONNECTOR (RECEPTACLE) 14P		
2558		DIC3	CONNECTOR		CN4600	1-770-851-21	PIN, CONNECTOR (PC BOARD) 6P		
2559		DIC3	DIODE		D4000	6-500-294-01	DIODE PTZ-TE25-3.9B		
2560		DIC3	DIODE		D4001	6-500-294-01	DIODE PTZ-TE25-3.9B		
2561		DIC3	DIODE		D4004	8-719-050-38	DIODE M1MA152WK-T1		
2562		DIC3	DIODE		D4005	8-719-050-37	DIODE M1MA152WA-T1		
2563		DIC3	DIODE		D4013	6-500-619-01	DIODE RB520S-40TE61		
2564		DIC3	DIODE		D4600	8-719-045-61	DIODE SEC1901C		
2565		DIC3	FERRITE BEAD		FB4002	1-414-228-11	FERRITE 0UH		
2566		DIC3	FERRITE BEAD		FB4003	1-414-228-11	FERRITE 0UH		
2567		DIC3	FERRITE BEAD		FB4004	1-400-461-21	FERRITE 0UH		
2568		DIC3	FERRITE BEAD		FB4005	1-400-461-21	FERRITE 0UH		
2569		DIC3	FERRITE BEAD		FB4006	1-400-461-21	FERRITE 0UH		
2570		DIC3	FERRITE BEAD		FB4007	1-400-461-21	FERRITE 0UH		
2571		DIC3	FERRITE BEAD		FB4008	1-400-461-21	FERRITE 0UH		
2572		DIC3	FERRITE BEAD		FB4009	1-400-461-21	FERRITE 0UH		
2573		DIC3	FERRITE BEAD		FB4010	1-400-461-21	FERRITE 0UH		
2574		DIC3	FERRITE BEAD		FB4011	1-400-461-21	FERRITE 0UH		
2575		DIC3	FERRITE BEAD		FB4013	1-400-461-21	FERRITE 0UH		
2576		DIC3	FERRITE BEAD		FB4014	1-400-461-21	FERRITE 0UH		
2577		DIC3	FERRITE BEAD		FB4015	1-400-461-21	FERRITE 0UH		
2578		DIC3	FERRITE BEAD		FB4500	1-469-979-21	FERRITE 0UH		
2579		DIC3	FERRITE BEAD		FB4501	1-414-445-11	FERRITE 0UH		
2580		DIC3	FERRITE BEAD		FB4502	1-414-445-11	FERRITE 0UH		
2581		DIC3	FERRITE BEAD		FB4503	1-414-445-11	FERRITE 0UH		
2582		DIC3	FERRITE BEAD		FB4504	1-414-445-11	FERRITE 0UH		
2583		DIC3	FERRITE BEAD		FB4600	1-469-379-11	FERRITE 0UH		
2584		DIC3	FERRITE BEAD		FB4601	1-469-379-11	FERRITE 0UH		
2585		DIC3	FERRITE BEAD		FB4602	1-469-379-11	FERRITE 0UH		
2586		DIC3	FERRITE BEAD		FB4603	1-469-379-11	FERRITE 0UH		
2587		DIC3	FERRITE BEAD		FB4604	1-469-379-11	FERRITE 0UH		
2588		DIC3	FERRITE BEAD		FB4605	1-469-379-11	FERRITE 0UH		
2589		DIC3	FERRITE BEAD		FB4606	1-414-445-11	FERRITE 0UH		
2590		DIC3	FERRITE BEAD		FB4607	1-414-445-11	FERRITE 0UH		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2591		DIC3	FERRITE BEAD		FB4608	1-469-379-11	FERRITE 0UH		
2592		DIC3	FERRITE BEAD		FB4609	1-414-445-11	FERRITE 0UH		
2593		DIC3	FERRITE BEAD		FB4800	1-469-379-11	FERRITE 0UH		
2594		DIC3	FERRITE BEAD		FB4802	1-469-379-11	FERRITE 0UH		
2595		DIC3	FERRITE BEAD		FB4806	1-469-379-11	FERRITE 0UH		
2596		DIC3	FERRITE BEAD		FB4808	1-414-864-11	FERRITE 0UH		
2597		DIC3	FERRITE BEAD		FB4809	1-414-864-11	FERRITE 0UH		
2598		DIC3	FILTER		FL4000	1-234-494-21	FILTER, EMI REMOVAL (SMD)		
2599		DIC3	FILTER		FL4001	1-234-494-21	FILTER, EMI REMOVAL (SMD)		
2600		DIC3	FILTER		FL4002	1-234-494-21	FILTER, EMI REMOVAL (SMD)		
2601		DIC3	FILTER		FL4300	1-234-560-21	FILTER, LOW PASS		
2602		DIC3	FILTER		FL4301	1-234-560-21	FILTER, LOW PASS		
2603		DIC3	FILTER		FL4302	1-234-177-21	FERRITE 0UH		
2604		DIC3	IC		IC4000	6-706-893-01	IC TPS54350PWPR		
2605		DIC3	IC		IC4001	6-706-893-01	IC TPS54350PWPR		
2606		DIC3	IC	*	IC4002	6-703-107-01	IC SN74LVC2G66DCUR		
2607		DIC3	IC		IC4004	6-705-771-01	IC SN74LVC1G32DCKR		
2608		DIC3	IC		IC4200	6-704-632-01	IC THC63LVD104A		
2609		DIC3	IC		IC4201	6-704-632-01	IC THC63LVD104A		
2610		DIC3	IC		IC4202	6-701-680-01	IC PST3629NR		
2611		DIC3	IC		IC4300	8-753-209-17	IC CXD3807GB		
2612		DIC3	IC		IC4301	6-705-403-01	IC PQ070XZ01ZPH		
2613		DIC3	IC		IC4302	6-706-892-01	IC SM5302AS-G-ET		
2614		DIC3	IC		IC4303	6-706-892-01	IC SM5302AS-G-ET		
2615		DIC3	IC		IC4304	6-706-873-01	IC MT48LC4M16A2P-75-Y14W-G		
2616		DIC3	IC		IC4305	8-759-680-92	IC MAX4018EEE-TG068		
2617		DIC3	IC		IC4502	8-759-592-47	IC TC7SZ08FU(TE85R)		
2618		DIC3	IC		IC4503	6-706-155-01	IC MT48LC2M32B2P-6-Y14W		
2619		DIC3	IC		IC4504	6-706-155-01	IC MT48LC2M32B2P-6-Y14W		
2620		DIC3	IC		IC4505	8-752-421-30	IC CXD3803GB		
2621		DIC3	IC		IC4506	6-804-680-01	IC CY25104ZXC-2		
2622		DIC3	IC		IC4507	6-804-680-01	IC CY25104ZXC-2		
2623		DIC3	IC		IC4508	6-804-677-01	IC CY22392ZXC-364		
2624		DIC3	IC		IC4600	6-804-678-01	IC CY22392ZXC-363		
2625		DIC3	IC		IC4601	8-759-331-27	IC MM1096AFF		
2626		DIC3	IC		IC4602	6-703-589-01	IC SN74LVC1G125DCKR		
2627		DIC3	IC		IC4603	6-804-679-01	IC CY25104ZXC-1		
2628		DIC3	IC		IC4604	6-703-589-01	IC SN74LVC1G125DCKR		
2629		DIC3	IC		IC4608	6-703-589-01	IC SN74LVC1G125DCKR		
2630		DIC3	IC		IC4609	6-703-589-01	IC SN74LVC1G125DCKR		
2631		DIC3	IC		IC4610	8-753-228-04	IC CXD4703GB-1		
2632		DIC3	IC		IC4611	8-759-836-78	IC RN5VD53AA-TL		
2633		DIC3	IC		IC4612	8-759-474-95	IC RN5VD42AA-TL-FA		
2634		DIC3	IC		IC4613	8-759-524-77	IC RN5VD21AA-TL-FA		
2635		DIC3	IC		IC4614	6-704-353-01	IC SN74LVC2G34DCKR		
2636		DIC3	IC		IC4615	6-704-353-01	IC SN74LVC2G34DCKR		
2637		DIC3	IC		IC4800	6-706-784-01	IC HY5DU283222AFP-36		
2638		DIC3	IC		IC4801	6-804-681-01	IC MBM29DL32TF70TN-KE1-WE1		
2639		DIC3	IC		IC4802	6-706-784-01	IC HY5DU283222AFP-36		
2640		DIC3	IC		IC4803	6-704-520-01	IC MAX1809EEE+TG068		
2641		DIC3	COIL		L4000	1-416-344-11	INDUCTOR 10UH		
2642		DIC3	COIL		L4001	1-416-344-11	INDUCTOR 10UH		
2643		DIC3	COIL		L4002	1-424-918-21	INDUCTOR 10UH		
2644		DIC3	COIL		L4003	1-424-918-21	INDUCTOR 10UH		
2645		DIC3	COIL		L4200	1-469-555-21	INDUCTOR 10UH		
2646		DIC3	COIL		L4201	1-469-555-21	INDUCTOR 10UH		
2647		DIC3	COIL		L4300	1-469-549-21	INDUCTOR 1UH		
2648		DIC3	COIL		L4301	1-469-555-21	INDUCTOR 10UH		
2649		DIC3	COIL		L4302	1-469-549-21	INDUCTOR 1UH		
2650		DIC3	COIL		L4305	1-469-549-21	INDUCTOR 1UH		
2651		DIC3	COIL		L4306	1-469-549-21	INDUCTOR 1UH		
2652		DIC3	COIL		L4307	1-469-549-21	INDUCTOR 1UH		
2653		DIC3	COIL		L4308	1-469-555-21	INDUCTOR 10UH		
2654		DIC3	COIL		L4309	1-469-555-21	INDUCTOR 10UH		
2655		DIC3	COIL		L4310	1-469-555-21	INDUCTOR 10UH		
2656		DIC3	COIL		L4311	1-412-029-11	INDUCTOR 10UH		
2657		DIC3	COIL		L4312	1-412-029-11	INDUCTOR 10UH		
2658		DIC3	COIL		L4313	1-469-549-21	INDUCTOR 1UH		
2659		DIC3	COIL		L4314	1-469-549-21	INDUCTOR 1UH		
2660		DIC3	COIL		L4315	1-469-549-21	INDUCTOR 1UH		
2661		DIC3	COIL		L4316	1-469-549-21	INDUCTOR 1UH		
2662		DIC3	COIL		L4501	1-412-029-11	INDUCTOR 10UH		
2663		DIC3	COIL		L4502	1-469-555-21	INDUCTOR 10UH		
2664		DIC3	COIL		L4503	1-412-029-11	INDUCTOR 10UH		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2665		DIC3	COIL		L4504	1-412-029-11	INDUCTOR 10UH		
2666		DIC3	COIL		L4600	1-469-555-21	INDUCTOR 10UH		
2667		DIC3	COIL		L4601	1-469-553-21	INDUCTOR 4.7UH		
2668		DIC3	COIL		L4800	1-419-630-21	INDUCTOR 4.7UH		
2669		DIC3	IC LINK	△	PS4000	1-576-731-21	IC LINK 2.5A 24V		
2670		DIC3	IC LINK	△	PS4001	1-576-731-21	IC LINK 2.5A 24V		
2671		DIC3	IC LINK	△	PS4002	1-576-731-21	IC LINK 2.5A 24V		
2672		DIC3	IC LINK	△	PS4003	1-576-731-21	IC LINK 2.5A 24V		
2673		DIC3	IC LINK	△	PS5201	1-576-398-21	IC LINK 2.5A 72V		
2674		DIC3	TRANSISTOR		Q4000	8-729-054-68	TRANSISTOR FDS6986S		
2675		DIC3	TRANSISTOR		Q4001	8-729-054-68	TRANSISTOR FDS6986S		
2676		DIC3	TRANSISTOR		Q4006	6-550-586-01	TRANSISTOR 2PA1576R-115		
2677		DIC3	TRANSISTOR		Q4007	6-550-586-01	TRANSISTOR 2PA1576R-115		
2678		DIC3	TRANSISTOR		Q4009	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
2679		DIC3	TRANSISTOR		Q4012	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
2680		DIC3	TRANSISTOR		Q4016	8-729-029-14	TRANSISTOR DTC144EUA-T106		
2681		DIC3	TRANSISTOR		Q4200	8-729-028-97	TRANSISTOR DTC114TUA-T106		
2682		DIC3	TRANSISTOR		Q4300	8-729-122-63	TRANSISTOR 2SA1226-E4		
2683		DIC3	TRANSISTOR		Q4301	8-729-122-63	TRANSISTOR 2SA1226-E4		
2684		DIC3	TRANSISTOR		Q4302	8-729-117-73	TRANSISTOR 2SC4178-F14		
2685		DIC3	TRANSISTOR		Q4303	8-729-117-73	TRANSISTOR 2SC4178-F14		
2686		DIC3	TRANSISTOR		Q4304	8-729-117-73	TRANSISTOR 2SC4178-F14		
2687		DIC3	TRANSISTOR		Q4305	8-729-117-73	TRANSISTOR 2SC4178-F14		
2688		DIC3	TRANSISTOR		Q4306	8-729-117-73	TRANSISTOR 2SC4178-F14		
2689		DIC3	TRANSISTOR		Q4307	8-729-122-63	TRANSISTOR 2SA1226-E4		
2690		DIC3	TRANSISTOR		Q4308	8-729-122-63	TRANSISTOR 2SA1226-E4		
2691		DIC3	TRANSISTOR		Q4309	8-729-117-73	TRANSISTOR 2SC4178-F14		
2692		DIC3	TRANSISTOR		Q4310	8-729-117-73	TRANSISTOR 2SC4178-F14		
2693		DIC3	TRANSISTOR		Q4311	8-729-159-65	TRANSISTOR 2SD596-DV5		
2694		DIC3	TRANSISTOR		Q4312	8-729-122-63	TRANSISTOR 2SA1226-E4		
2695		DIC3	TRANSISTOR		Q4313	8-729-122-63	TRANSISTOR 2SA1226-E4		
2696		DIC3	TRANSISTOR		Q4314	8-729-122-63	TRANSISTOR 2SA1226-E4		
2697		DIC3	TRANSISTOR		Q4316	8-729-122-63	TRANSISTOR 2SA1226-E4		
2698		DIC3	TRANSISTOR		Q4317	8-729-122-63	TRANSISTOR 2SA1226-E4		
2699		DIC3	TRANSISTOR		Q4320	8-729-162-45	TRANSISTOR 2SB624-BV5		
2700		DIC3	TRANSISTOR		Q4600	8-729-028-97	TRANSISTOR DTC114TUA-T106		
2701		DIC3	TRANSISTOR		Q4601	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
2702		DIC3	RESISTOR		R4000	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2703		DIC3	RESISTOR		R4009	1-218-929-11	RES-CHIP 10 5% 1/16W		
2704		DIC3	RESISTOR		R4011	1-218-929-11	RES-CHIP 10 5% 1/16W		
2705		DIC3	RESISTOR		R4012	1-218-929-11	RES-CHIP 10 5% 1/16W		
2706		DIC3	RESISTOR		R4013	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
2707		DIC3	RESISTOR		R4014	1-218-933-11	RES-CHIP 22 5% 1/16W		
2708		DIC3	RESISTOR		R4015	1-218-973-11	RES-CHIP 47K 5% 1/16W		
2709		DIC3	RESISTOR		R4016	1-218-933-11	RES-CHIP 22 5% 1/16W		
2710		DIC3	RESISTOR		R4020	1-218-929-11	RES-CHIP 10 5% 1/16W		
2711		DIC3	RESISTOR		R4021	1-218-929-11	RES-CHIP 10 5% 1/16W		
2712		DIC3	RESISTOR		R4022	1-218-929-11	RES-CHIP 10 5% 1/16W		
2713		DIC3	RESISTOR		R4024	1-218-929-11	RES-CHIP 10 5% 1/16W		
2714		DIC3	RESISTOR		R4025	1-218-937-11	RES-CHIP 47 5% 1/16W		
2715		DIC3	RESISTOR		R4026	1-218-937-11	RES-CHIP 47 5% 1/16W		
2716		DIC3	RESISTOR		R4027	1-218-929-11	RES-CHIP 10 5% 1/16W		
2717		DIC3	RESISTOR		R4028	1-218-937-11	RES-CHIP 47 5% 1/16W		
2718		DIC3	RESISTOR		R4029	1-218-937-11	RES-CHIP 47 5% 1/16W		
2719		DIC3	RESISTOR		R4030	1-218-937-11	RES-CHIP 47 5% 1/16W		
2720		DIC3	RESISTOR		R4031	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2721		DIC3	RESISTOR		R4032	1-218-929-11	RES-CHIP 10 5% 1/16W		
2722		DIC3	RESISTOR		R4036	1-218-929-11	RES-CHIP 10 5% 1/16W		
2723		DIC3	RESISTOR		R4037	1-218-929-11	RES-CHIP 10 5% 1/16W		
2724		DIC3	RESISTOR		R4038	1-208-931-11	METAL CHIP 68K 0.5% 1/16W		
2725		DIC3	RESISTOR		R4039	1-208-893-11	METAL CHIP 1.8K 0.5% 1/16W		
2726		DIC3	RESISTOR		R4040	1-208-931-11	METAL CHIP 68K 0.5% 1/16W		
2727		DIC3	RESISTOR		R4041	1-208-893-11	METAL CHIP 1.8K 0.5% 1/16W		
2728		DIC3	RESISTOR		R4042	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2729		DIC3	RESISTOR		R4043	1-218-929-11	RES-CHIP 10 5% 1/16W		
2730		DIC3	RESISTOR		R4044	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2731		DIC3	RESISTOR		R4045	1-218-933-11	RES-CHIP 22 5% 1/16W		
2732		DIC3	RESISTOR		R4046	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2733		DIC3	RESISTOR		R4047	1-218-933-11	RES-CHIP 22 5% 1/16W		
2734		DIC3	RESISTOR		R4048	1-218-945-11	RES-CHIP 220 5% 1/16W		
2735		DIC3	RESISTOR		R4049	1-218-945-11	RES-CHIP 220 5% 1/16W		
2736		DIC3	RESISTOR		R4050	1-218-958-11	METAL CHIP 2.7K 5% 1/16W		
2737		DIC3	RESISTOR		R4051	1-208-663-11	METAL CHIP 150 0.5% 1/16W		
2738		DIC3	RESISTOR		R4052	1-208-885-11	METAL CHIP 820 0.5% 1/16W		

No.	#	Board	Type	Δ / [*]	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2739		DIC3	RESISTOR		R4053	1-208-663-11	METAL CHIP 150 0.5% 1/16W		
2740		DIC3	RESISTOR		R4054	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
2741		DIC3	RESISTOR		R4055	1-218-945-11	RES-CHIP 220 5% 1/16W		
2742		DIC3	RESISTOR		R4056	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
2743		DIC3	RESISTOR		R4057	1-218-945-11	RES-CHIP 220 5% 1/16W		
2744		DIC3	RESISTOR		R4058	1-218-929-11	RES-CHIP 10 5% 1/16W		
2745		DIC3	RESISTOR		R4059	1-218-929-11	RES-CHIP 10 5% 1/16W		
2746		DIC3	RESISTOR		R4060	1-218-929-11	RES-CHIP 10 5% 1/16W		
2747		DIC3	RESISTOR		R4061	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2748		DIC3	RESISTOR		R4062	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2749		DIC3	RESISTOR		R4063	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2750		DIC3	RESISTOR		R4067	1-218-929-11	RES-CHIP 10 5% 1/16W		
2751		DIC3	RESISTOR		R4071	1-216-864-11	SHORT CHIP 0		
2752		DIC3	RESISTOR		R4073	1-218-929-11	RES-CHIP 10 5% 1/16W		
2753		DIC3	RESISTOR		R4074	1-218-929-11	RES-CHIP 10 5% 1/16W		
2754		DIC3	RESISTOR		R4083	1-218-977-11	RES-CHIP 100K 5% 1/16W		
2755		DIC3	RESISTOR		R4084	1-218-977-11	RES-CHIP 100K 5% 1/16W		
2756		DIC3	RESISTOR		R4085	1-218-937-11	RES-CHIP 47 5% 1/16W		
2757		DIC3	RESISTOR		R4086	1-218-937-11	RES-CHIP 47 5% 1/16W		
2758		DIC3	RESISTOR		R4087	1-218-937-11	RES-CHIP 47 5% 1/16W		
2759		DIC3	RESISTOR		R4088	1-218-937-11	RES-CHIP 47 5% 1/16W		
2760		DIC3	RESISTOR		R4089	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
2761		DIC3	RESISTOR		R4090	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
2762		DIC3	RESISTOR		R4092	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2763		DIC3	RESISTOR		R4094	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2764		DIC3	RESISTOR		R4106	1-218-990-11	SHORT CHIP 0		
2765		DIC3	RESISTOR		R4107	1-218-990-11	SHORT CHIP 0		
2766		DIC3	RESISTOR		R4108	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
2767		DIC3	RESISTOR		R4109	1-218-973-11	RES-CHIP 47K 5% 1/16W		
2768		DIC3	RESISTOR		R4110	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
2769		DIC3	RESISTOR		R4115	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2770		DIC3	RESISTOR		R4118	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2771		DIC3	RESISTOR		R4135	1-218-929-11	RES-CHIP 10 5% 1/16W		
2772		DIC3	RESISTOR		R4136	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2773		DIC3	RESISTOR		R4137	1-218-929-11	RES-CHIP 10 5% 1/16W		
2774		DIC3	RESISTOR		R4200	1-218-941-11	METAL CHIP 100 5% 1/16W		
2775		DIC3	RESISTOR		R4201	1-218-941-11	METAL CHIP 100 5% 1/16W		
2776		DIC3	RESISTOR		R4202	1-218-941-11	METAL CHIP 100 5% 1/16W		
2777		DIC3	RESISTOR		R4203	1-218-941-11	METAL CHIP 100 5% 1/16W		
2778		DIC3	RESISTOR		R4204	1-218-941-11	METAL CHIP 100 5% 1/16W		
2779		DIC3	RESISTOR		R4205	1-218-941-11	METAL CHIP 100 5% 1/16W		
2780		DIC3	RESISTOR		R4206	1-218-941-11	METAL CHIP 100 5% 1/16W		
2781		DIC3	RESISTOR		R4207	1-218-941-11	METAL CHIP 100 5% 1/16W		
2782		DIC3	RESISTOR		R4208	1-218-941-11	METAL CHIP 100 5% 1/16W		
2783		DIC3	RESISTOR		R4209	1-218-941-11	METAL CHIP 100 5% 1/16W		
2784		DIC3	RESISTOR		R4211	1-216-864-11	SHORT CHIP 0		
2785		DIC3	RESISTOR		R4212	1-216-864-11	SHORT CHIP 0		
2786		DIC3	RESISTOR		R4213	1-216-864-11	SHORT CHIP 0		
2787		DIC3	RESISTOR		R4214	1-216-864-11	SHORT CHIP 0		
2788		DIC3	RESISTOR		R4215	1-216-864-11	SHORT CHIP 0		
2789		DIC3	RESISTOR		R4216	1-216-864-11	SHORT CHIP 0		
2790		DIC3	RESISTOR		R4219	1-218-990-11	SHORT CHIP 0		
2791		DIC3	RESISTOR		R4220	1-218-977-11	RES-CHIP 100K 5% 1/16W		
2792		DIC3	RESISTOR		R4221	1-218-990-11	SHORT CHIP 0		
2793		DIC3	RESISTOR		R4222	1-218-977-11	RES-CHIP 100K 5% 1/16W		
2794		DIC3	RESISTOR		R4223	1-218-935-11	RES-CHIP 33 5% 1/16W		
2795		DIC3	RESISTOR		R4224	1-218-937-11	RES-CHIP 47 5% 1/16W		
2796		DIC3	RESISTOR		R4225	1-218-935-11	RES-CHIP 33 5% 1/16W		
2797		DIC3	RESISTOR		R4226	1-218-937-11	RES-CHIP 47 5% 1/16W		
2798		DIC3	RESISTOR		R4227	1-218-937-11	RES-CHIP 47 5% 1/16W		
2799		DIC3	RESISTOR		R4228	1-218-937-11	RES-CHIP 47 5% 1/16W		
2800		DIC3	RESISTOR		R4229	1-218-935-11	RES-CHIP 33 5% 1/16W		
2801		DIC3	RESISTOR		R4230	1-218-935-11	RES-CHIP 33 5% 1/16W		
2802		DIC3	RESISTOR		R4231	1-218-935-11	RES-CHIP 33 5% 1/16W		
2803		DIC3	RESISTOR		R4232	1-218-935-11	RES-CHIP 33 5% 1/16W		
2804		DIC3	RESISTOR		R4236	1-218-990-11	SHORT CHIP 0		
2805		DIC3	RESISTOR		R4237	1-218-935-11	RES-CHIP 33 5% 1/16W		
2806		DIC3	RESISTOR		R4238	1-218-935-11	RES-CHIP 33 5% 1/16W		
2807		DIC3	RESISTOR		R4242	1-218-990-11	SHORT CHIP 0		
2808		DIC3	RESISTOR		R4243	1-218-990-11	SHORT CHIP 0		
2809		DIC3	RESISTOR		R4244	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2810		DIC3	RESISTOR		R4245	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2811		DIC3	RESISTOR		R4246	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2812		DIC3	RESISTOR		R4247	1-218-969-11	RES-CHIP 22K 5% 1/16W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2813		DIC3	RESISTOR		R4248	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2814		DIC3	RESISTOR		R4249	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2815		DIC3	RESISTOR		R4250	1-218-929-11	RES-CHIP 10 5% 1/16W		
2816		DIC3	RESISTOR		R4251	1-218-929-11	RES-CHIP 10 5% 1/16W		
2817		DIC3	RESISTOR		R4252	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2818		DIC3	RESISTOR		R4253	1-218-941-81	RES-CHIP 100 5% 1/16W		
2819		DIC3	RESISTOR		R4254	1-218-941-81	RES-CHIP 100 5% 1/16W		
2820		DIC3	RESISTOR		R4300	1-218-958-11	RES-CHIP 2.7K 5% 1/16W		
2821		DIC3	RESISTOR		R4301	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2822		DIC3	RESISTOR		R4302	1-218-929-11	RES-CHIP 10 5% 1/16W		
2823		DIC3	RESISTOR		R4303	1-218-929-11	RES-CHIP 10 5% 1/16W		
2824		DIC3	RESISTOR		R4304	1-218-929-11	RES-CHIP 10 5% 1/16W		
2825		DIC3	RESISTOR		R4305	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2826		DIC3	RESISTOR		R4306	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2827		DIC3	RESISTOR		R4307	1-218-990-11	SHORT CHIP 0		
2828		DIC3	RESISTOR		R4309	1-218-990-11	SHORT CHIP 0		
2829		DIC3	RESISTOR		R4310	1-218-929-11	RES-CHIP 10 5% 1/16W		
2830		DIC3	RESISTOR		R4312	1-218-929-11	RES-CHIP 10 5% 1/16W		
2831		DIC3	RESISTOR		R4313	1-218-990-11	SHORT CHIP 0		
2832		DIC3	RESISTOR		R4314	1-218-990-11	SHORT CHIP 0		
2833		DIC3	RESISTOR		R4315	1-218-958-11	RES-CHIP 2.7K 5% 1/16W		
2834		DIC3	RESISTOR		R4317	1-218-945-11	METAL CHIP 220 5% 1/16W		
2835		DIC3	RESISTOR		R4318	1-208-699-11	METAL CHIP 4.7K 0.5% 1/16W		
2836		DIC3	RESISTOR		R4319	1-208-699-11	METAL CHIP 4.7K 0.5% 1/16W		
2837		DIC3	RESISTOR		R4320	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2838		DIC3	RESISTOR		R4321	1-218-929-11	RES-CHIP 10 5% 1/16W		
2839		DIC3	RESISTOR		R4322	1-218-929-11	RES-CHIP 10 5% 1/16W		
2840		DIC3	RESISTOR		R4323	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2841		DIC3	RESISTOR		R4324	1-218-990-11	SHORT CHIP 0		
2842		DIC3	RESISTOR		R4326	1-218-929-11	RES-CHIP 10 5% 1/16W		
2843		DIC3	RESISTOR		R4327	1-218-990-11	SHORT CHIP 0		
2844		DIC3	RESISTOR		R4328	1-218-990-11	SHORT CHIP 0		
2845		DIC3	RESISTOR		R4330	1-218-990-11	SHORT CHIP 0		
2846		DIC3	RESISTOR		R4331	1-218-990-11	SHORT CHIP 0		
2847		DIC3	RESISTOR		R4332	1-218-929-11	RES-CHIP 10 5% 1/16W		
2848		DIC3	RESISTOR		R4333	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2849		DIC3	RESISTOR		R4334	1-218-990-11	SHORT CHIP 0		
2850		DIC3	RESISTOR		R4336	1-218-990-11	SHORT CHIP 0		
2851		DIC3	RESISTOR		R4338	1-218-990-11	SHORT CHIP 0		
2852		DIC3	RESISTOR		R4339	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2853		DIC3	RESISTOR		R4340	1-218-929-11	RES-CHIP 10 5% 1/16W		
2854		DIC3	RESISTOR		R4341	1-218-929-11	RES-CHIP 10 5% 1/16W		
2855		DIC3	RESISTOR		R4342	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2856		DIC3	RESISTOR		R4343	1-218-945-11	METAL CHIP 220 5% 1/16W		
2857		DIC3	RESISTOR		R4344	1-208-699-11	METAL CHIP 4.7K 0.5% 1/16W		
2858		DIC3	RESISTOR		R4345	1-208-699-11	METAL CHIP 4.7K 0.5% 1/16W		
2859		DIC3	RESISTOR		R4346	1-208-647-11	METAL CHIP 33 0.5% 1/16W		
2860		DIC3	RESISTOR		R4347	1-208-679-11	METAL CHIP 680 0.5% 1/16W		
2861		DIC3	RESISTOR		R4348	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
2862		DIC3	RESISTOR		R4349	1-218-929-11	RES-CHIP 10 5% 1/16W		
2863		DIC3	RESISTOR		R4352	1-218-943-11	RES-CHIP 150 5% 1/16W		
2864		DIC3	RESISTOR		R4353	1-218-943-11	RES-CHIP 150 5% 1/16W		
2865		DIC3	RESISTOR		R4362	1-218-947-11	RES-CHIP 330 5% 1/16W		
2866		DIC3	RESISTOR		R4363	1-218-947-11	RES-CHIP 330 5% 1/16W		
2867		DIC3	RESISTOR		R4364	1-218-941-11	METAL CHIP 100 5% 1/16W		
2868		DIC3	RESISTOR		R4367	1-218-941-11	METAL CHIP 100 5% 1/16W		
2869		DIC3	RESISTOR		R4368	1-218-929-11	RES-CHIP 10 5% 1/16W		
2870		DIC3	RESISTOR		R4372	1-218-990-11	SHORT CHIP 0		
2871		DIC3	RESISTOR		R4373	1-208-855-81	METAL CHIP 47 0.5% 1/16W		
2872		DIC3	RESISTOR		R4374	1-208-663-11	METAL CHIP 150 0.5% 1/16W		
2873		DIC3	RESISTOR		R4375	1-218-945-11	METAL CHIP 220 5% 1/16W		
2874		DIC3	RESISTOR		R4376	1-208-855-81	METAL CHIP 47 0.5% 1/16W		
2875		DIC3	RESISTOR		R4377	1-208-661-11	METAL CHIP 120 0.5% 1/16W		
2876		DIC3	RESISTOR		R4378	1-218-945-11	METAL CHIP 220 5% 1/16W		
2877		DIC3	RESISTOR		R4379	1-208-855-81	METAL CHIP 47 0.5% 1/16W		
2878		DIC3	RESISTOR		R4380	1-208-661-11	METAL CHIP 120 0.5% 1/16W		
2879		DIC3	RESISTOR		R4381	1-218-945-11	METAL CHIP 220 5% 1/16W		
2880		DIC3	RESISTOR		R4382	1-218-945-11	METAL CHIP 220 5% 1/16W		
2881		DIC3	RESISTOR		R4383	1-208-663-11	METAL CHIP 150 0.5% 1/16W		
2882		DIC3	RESISTOR		R4384	1-218-945-11	METAL CHIP 220 5% 1/16W		
2883		DIC3	RESISTOR		R4385	1-218-945-11	METAL CHIP 220 5% 1/16W		
2884		DIC3	RESISTOR		R4386	1-208-663-11	METAL CHIP 150 0.5% 1/16W		
2885		DIC3	RESISTOR		R4387	1-218-945-11	METAL CHIP 220 5% 1/16W		
2886		DIC3	RESISTOR		R4388	1-218-941-11	METAL CHIP 100 5% 1/16W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2887		DIC3	RESISTOR		R4389	1-218-941-11	METAL CHIP 100 5% 1/16W		
2888		DIC3	RESISTOR		R4392	1-218-990-11	SHORT CHIP 0		
2889		DIC3	RESISTOR		R4394	1-218-990-11	SHORT CHIP 0		
2890		DIC3	RESISTOR		R4395	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2891		DIC3	RESISTOR		R4396	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2892		DIC3	RESISTOR		R4398	1-208-893-11	METAL CHIP 1.8K 0.5% 1/16W		
2893		DIC3	RESISTOR		R4399	1-218-941-81	RES-CHIP 100 5% 1/16W		
2894		DIC3	RESISTOR		R4400	1-218-941-81	RES-CHIP 100 5% 1/16W		
2895		DIC3	RESISTOR		R4401	1-218-941-81	RES-CHIP 100 5% 1/16W		
2896		DIC3	RESISTOR		R4402	1-218-941-81	RES-CHIP 100 5% 1/16W		
2897		DIC3	RESISTOR		R4403	1-218-941-81	RES-CHIP 100 5% 1/16W		
2898		DIC3	RESISTOR		R4404	1-218-941-81	RES-CHIP 100 5% 1/16W		
2899		DIC3	RESISTOR		R4405	1-218-941-81	RES-CHIP 100 5% 1/16W		
2900		DIC3	RESISTOR		R4406	1-218-941-81	RES-CHIP 100 5% 1/16W		
2901		DIC3	RESISTOR		R4407	1-208-893-11	METAL CHIP 1.8K 0.5% 1/16W		
2902		DIC3	RESISTOR		R4408	1-218-990-11	SHORT CHIP 0		
2903		DIC3	RESISTOR		R4409	1-218-990-11	SHORT CHIP 0		
2904		DIC3	RESISTOR		R4410	1-218-990-11	SHORT CHIP 0		
2905		DIC3	RESISTOR		R4411	1-218-990-11	SHORT CHIP 0		
2906		DIC3	RESISTOR		R4412	1-218-990-11	SHORT CHIP 0		
2907		DIC3	RESISTOR		R4413	1-218-990-11	SHORT CHIP 0		
2908		DIC3	RESISTOR		R4414	1-218-990-11	SHORT CHIP 0		
2909		DIC3	RESISTOR		R4415	1-218-849-11	METAL CHIP 1.2K 0.5% 1/10W		
2910		DIC3	RESISTOR		R4416	1-218-990-11	SHORT CHIP 0		
2911		DIC3	RESISTOR		R4417	1-218-990-11	SHORT CHIP 0		
2912		DIC3	RESISTOR		R4418	1-218-971-11	RES-CHIP 33K 5% 1/16W		
2913		DIC3	RESISTOR		R4419	1-208-679-11	METAL CHIP 680 0.5% 1/16W		
2914		DIC3	RESISTOR		R4420	1-208-893-11	METAL CHIP 1.8K 0.5% 1/16W		
2915		DIC3	RESISTOR		R4422	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2916		DIC3	RESISTOR		R4423	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2917		DIC3	RESISTOR		R4424	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
2918		DIC3	RESISTOR		R4425	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
2919		DIC3	RESISTOR		R4426	1-208-893-11	METAL CHIP 1.8K 0.5% 1/16W		
2920		DIC3	RESISTOR		R4427	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2921		DIC3	RESISTOR		R4430	1-218-990-11	SHORT CHIP 0		
2922		DIC3	RESISTOR		R4432	1-218-849-11	METAL CHIP 1.2K 0.5% 1/10W		
2923		DIC3	RESISTOR		R4433	1-208-679-11	METAL CHIP 680 0.5% 1/16W		
2924		DIC3	RESISTOR		R4434	1-218-990-11	SHORT CHIP 0		
2925		DIC3	RESISTOR		R4435	1-218-941-81	RES-CHIP 100 5% 1/16W		
2926		DIC3	RESISTOR		R4436	1-218-939-11	RES-CHIP 68 5% 1/16W		
2927		DIC3	RESISTOR		R4437	1-218-941-81	RES-CHIP 100 5% 1/16W		
2928		DIC3	RESISTOR		R4438	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2929		DIC3	RESISTOR		R4439	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2930		DIC3	RESISTOR		R4442	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
2931		DIC3	RESISTOR		R4444	1-218-963-11	RES-CHIP 6.8K 5% 1/16W		
2932		DIC3	RESISTOR		R4447	1-218-949-11	RES-CHIP 470 5% 1/16W		
2933		DIC3	RESISTOR		R4448	1-218-990-11	SHORT CHIP 0		
2934		DIC3	RESISTOR		R4450	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
2935		DIC3	RESISTOR		R4451	1-218-990-11	SHORT CHIP 0		
2936		DIC3	RESISTOR		R4452	1-218-990-11	SHORT CHIP 0		
2937		DIC3	RESISTOR		R4453	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
2938		DIC3	RESISTOR		R4454	1-220-884-81	METAL CHIP 39 0.5% 1/16W		
2939		DIC3	RESISTOR		R4455	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
2940		DIC3	RESISTOR		R4457	1-218-990-11	SHORT CHIP 0		
2941		DIC3	RESISTOR		R4458	1-216-818-11	METAL CHIP 560 5% 1/10W		
2942		DIC3	RESISTOR		R4459	1-216-818-11	METAL CHIP 560 5% 1/10W		
2943		DIC3	RESISTOR		R4460	1-216-818-11	METAL CHIP 560 5% 1/10W		
2944		DIC3	RESISTOR		R4463	1-216-818-11	METAL CHIP 560 5% 1/10W		
2945		DIC3	RESISTOR		R4465	1-216-818-11	METAL CHIP 560 5% 1/10W		
2946		DIC3	RESISTOR		R4473	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2947		DIC3	RESISTOR		R4474	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2948		DIC3	RESISTOR		R4475	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
2949		DIC3	RESISTOR		R4476	1-208-695-11	METAL CHIP 3.3K 0.5% 1/16W		
2950		DIC3	RESISTOR		R4477	1-218-849-11	METAL CHIP 1.2K 0.5% 1/10W		
2951		DIC3	RESISTOR		R4478	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
2952		DIC3	RESISTOR		R4479	1-208-893-11	METAL CHIP 1.8K 0.5% 1/16W		
2953		DIC3	RESISTOR		R4480	1-208-661-11	METAL CHIP 120 0.5% 1/16W		
2954		DIC3	RESISTOR		R4481	1-208-661-11	METAL CHIP 120 0.5% 1/16W		
2955		DIC3	RESISTOR		R4482	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
2956		DIC3	RESISTOR		R4483	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
2957		DIC3	RESISTOR		R4484	1-220-876-81	METAL CHIP 18 0.5% 1/16W		
2958		DIC3	RESISTOR		R4485	1-218-948-11	METAL CHIP 390 5% 1/16W		
2959		DIC3	RESISTOR		R4486	1-208-687-11	METAL CHIP 1.5K 0.5% 1/16W		
2960		DIC3	RESISTOR		R4494	1-218-990-11	SHORT CHIP 0		

No.	#	Board	Type	Δ/\ast	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2961		DIC3	RESISTOR		R4495	1-218-941-11	METAL CHIP 100 5% 1/16W		
2962		DIC3	RESISTOR		R4496	1-218-941-11	METAL CHIP 100 5% 1/16W		
2963		DIC3	RESISTOR		R4497	1-218-941-11	METAL CHIP 100 5% 1/16W		
2964		DIC3	RESISTOR		R4498	1-218-941-11	METAL CHIP 100 5% 1/16W		
2965		DIC3	RESISTOR		R4500	1-218-937-11	RES-CHIP 47 5% 1/16W		
2966		DIC3	RESISTOR		R4501	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2967		DIC3	RESISTOR		R4502	1-218-935-11	RES-CHIP 33 5% 1/16W		
2968		DIC3	RESISTOR		R4503	1-218-937-11	RES-CHIP 47 5% 1/16W		
2969		DIC3	RESISTOR		R4504	1-218-990-11	SHORT CHIP 0		
2970		DIC3	RESISTOR		R4505	1-218-939-11	RES-CHIP 68 5% 1/16W		
2971		DIC3	RESISTOR		R4506	1-218-941-11	METAL CHIP 100 5% 1/16W		
2972		DIC3	RESISTOR		R4507	1-218-939-11	RES-CHIP 68 5% 1/16W		
2973		DIC3	RESISTOR		R4508	1-218-939-11	RES-CHIP 68 5% 1/16W		
2974		DIC3	RESISTOR		R4509	1-218-990-11	SHORT CHIP 0		
2975		DIC3	RESISTOR		R4510	1-218-937-11	RES-CHIP 47 5% 1/16W		
2976		DIC3	RESISTOR		R4511	1-218-937-11	RES-CHIP 47 5% 1/16W		
2977		DIC3	RESISTOR		R4512	1-218-990-11	SHORT CHIP 0		
2978		DIC3	RESISTOR		R4515	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2979		DIC3	RESISTOR		R4516	1-218-990-11	SHORT CHIP 0		
2980		DIC3	RESISTOR		R4517	1-218-989-11	RES-CHIP 1M 5% 1/16W		
2981		DIC3	RESISTOR		R4519	1-218-935-11	RES-CHIP 33 5% 1/16W		
2982		DIC3	RESISTOR		R4520	1-218-990-11	SHORT CHIP 0		
2983		DIC3	RESISTOR		R4522	1-218-935-11	RES-CHIP 33 5% 1/16W		
2984		DIC3	RESISTOR		R4523	1-218-990-11	SHORT CHIP 0		
2985		DIC3	RESISTOR		R4524	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2986		DIC3	RESISTOR		R4530	1-218-990-11	SHORT CHIP 0		
2987		DIC3	RESISTOR		R4531	1-218-935-11	RES-CHIP 33 5% 1/16W		
2988		DIC3	RESISTOR		R4535	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2989		DIC3	RESISTOR		R4536	1-218-990-11	SHORT CHIP 0		
2990		DIC3	RESISTOR		R4538	1-218-935-11	RES-CHIP 33 5% 1/16W		
2991		DIC3	RESISTOR		R4539	1-218-949-11	RES-CHIP 470 5% 1/16W		
2992		DIC3	RESISTOR		R4541	1-218-990-11	SHORT CHIP 0		
2993		DIC3	RESISTOR		R4543	1-218-990-11	SHORT CHIP 0		
2994		DIC3	RESISTOR		R4556	1-218-941-81	RES-CHIP 100 5% 1/16W		
2995		DIC3	RESISTOR		R4557	1-218-941-81	RES-CHIP 100 5% 1/16W		
2996		DIC3	RESISTOR		R4558	1-218-941-81	RES-CHIP 100 5% 1/16W		
2997		DIC3	RESISTOR		R4559	1-218-941-81	RES-CHIP 100 5% 1/16W		
2998		DIC3	RESISTOR		R4560	1-218-941-81	RES-CHIP 100 5% 1/16W		
2999		DIC3	RESISTOR		R4561	1-218-941-81	RES-CHIP 100 5% 1/16W		
3000		DIC3	RESISTOR		R4562	1-218-941-81	RES-CHIP 100 5% 1/16W		
3001		DIC3	RESISTOR		R4563	1-218-941-81	RES-CHIP 100 5% 1/16W		
3002		DIC3	RESISTOR		R4564	1-218-941-81	RES-CHIP 100 5% 1/16W		
3003		DIC3	RESISTOR		R4565	1-218-941-81	RES-CHIP 100 5% 1/16W		
3004		DIC3	RESISTOR		R4566	1-218-941-81	RES-CHIP 100 5% 1/16W		
3005		DIC3	RESISTOR		R4567	1-218-941-81	RES-CHIP 100 5% 1/16W		
3006		DIC3	RESISTOR		R4570	1-216-295-91	SHORT CHIP 0		
3007		DIC3	RESISTOR		R4571	1-216-295-91	SHORT CHIP 0		
3008		DIC3	RESISTOR		R4572	1-218-939-11	RES-CHIP 68 5% 1/16W		
3009		DIC3	RESISTOR		R4573	1-218-941-81	RES-CHIP 100 5% 1/16W		
3010		DIC3	RESISTOR		R4574	1-218-941-81	RES-CHIP 100 5% 1/16W		
3011		DIC3	RESISTOR		R4575	1-218-941-81	RES-CHIP 100 5% 1/16W		
3012		DIC3	RESISTOR		R4576	1-218-939-11	RES-CHIP 68 5% 1/16W		
3013		DIC3	RESISTOR		R4577	1-218-941-81	RES-CHIP 100 5% 1/16W		
3014		DIC3	RESISTOR		R4578	1-218-941-81	RES-CHIP 100 5% 1/16W		
3015		DIC3	RESISTOR		R4579	1-218-941-81	RES-CHIP 100 5% 1/16W		
3016		DIC3	RESISTOR		R4602	1-218-949-11	RES-CHIP 470 5% 1/16W		
3017		DIC3	RESISTOR		R4603	1-218-933-11	RES-CHIP 22 5% 1/16W		
3018		DIC3	RESISTOR		R4605	1-208-911-11	METAL CHIP 10K 0.5% 1/16W		
3019		DIC3	RESISTOR		R4609	1-218-990-11	SHORT CHIP 0		
3020		DIC3	RESISTOR		R4610	1-218-935-11	RES-CHIP 33 5% 1/16W		
3021		DIC3	RESISTOR		R4611	1-218-935-11	RES-CHIP 33 5% 1/16W		
3022		DIC3	RESISTOR		R4612	1-218-990-11	SHORT CHIP 0		
3023		DIC3	RESISTOR		R4613	1-218-935-11	RES-CHIP 33 5% 1/16W		
3024		DIC3	RESISTOR		R4614	1-208-893-11	METAL CHIP 1.8K 0.5% 1/16W		
3025		DIC3	RESISTOR		R4615	1-218-849-11	METAL CHIP 1.2K 0.5% 1/10W		
3026		DIC3	RESISTOR		R4616	1-218-990-11	SHORT CHIP 0		
3027		DIC3	RESISTOR		R4617	1-218-990-11	SHORT CHIP 0		
3028		DIC3	RESISTOR		R4618	1-218-990-11	SHORT CHIP 0		
3029		DIC3	RESISTOR		R4620	1-218-990-11	SHORT CHIP 0		
3030		DIC3	RESISTOR		R4621	1-218-990-11	SHORT CHIP 0		
3031		DIC3	RESISTOR		R4622	1-218-935-11	RES-CHIP 33 5% 1/16W		
3032		DIC3	RESISTOR		R4625	1-218-929-11	RES-CHIP 10 5% 1/16W		
3033		DIC3	RESISTOR		R4626	1-218-929-11	RES-CHIP 10 5% 1/16W		
3034		DIC3	RESISTOR		R4627	1-218-941-81	RES-CHIP 100 5% 1/16W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3035		DIC3	RESISTOR		R4628	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3036		DIC3	RESISTOR		R4631	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3037		DIC3	RESISTOR		R4634	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3038		DIC3	RESISTOR		R4635	1-218-963-11	RES-CHIP 6.8K 5% 1/16W		
3039		DIC3	RESISTOR		R4636	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3040		DIC3	RESISTOR		R4637	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3041		DIC3	RESISTOR		R4638	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3042		DIC3	RESISTOR		R4639	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3043		DIC3	RESISTOR		R4640	1-218-935-11	RES-CHIP 33 5% 1/16W		
3044		DIC3	RESISTOR		R4642	1-218-990-11	SHORT CHIP 0		
3045		DIC3	RESISTOR		R4643	1-218-935-11	RES-CHIP 33 5% 1/16W		
3046		DIC3	RESISTOR		R4644	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3047		DIC3	RESISTOR		R4647	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3048		DIC3	RESISTOR		R4648	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3049		DIC3	RESISTOR		R4649	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3050		DIC3	RESISTOR		R4652	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3051		DIC3	RESISTOR		R4653	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3052		DIC3	RESISTOR		R4654	1-218-929-11	RES-CHIP 10 5% 1/16W		
3053		DIC3	RESISTOR		R4655	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3054		DIC3	RESISTOR		R4656	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3055		DIC3	RESISTOR		R4657	1-218-941-81	RES-CHIP 100 5% 1/16W		
3056		DIC3	RESISTOR		R4658	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3057		DIC3	RESISTOR		R4659	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3058		DIC3	RESISTOR		R4660	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3059		DIC3	RESISTOR		R4661	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3060		DIC3	RESISTOR		R4666	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3061		DIC3	RESISTOR		R4667	1-218-990-11	SHORT CHIP 0		
3062		DIC3	RESISTOR		R4668	1-218-945-11	RES-CHIP 220 5% 1/16W		
3063		DIC3	RESISTOR		R4669	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3064		DIC3	RESISTOR		R4688	1-218-990-11	SHORT CHIP 0		
3065		DIC3	RESISTOR		R4690	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3066		DIC3	RESISTOR		R4691	1-218-990-11	SHORT CHIP 0		
3067		DIC3	RESISTOR		R4693	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3068		DIC3	RESISTOR		R4694	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3069		DIC3	RESISTOR		R4695	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3070		DIC3	RESISTOR		R4696	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3071		DIC3	RESISTOR		R4702	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
3072		DIC3	RESISTOR		R4704	1-218-990-11	SHORT CHIP 0		
3073		DIC3	RESISTOR		R4705	1-218-990-11	SHORT CHIP 0		
3074		DIC3	RESISTOR		R4706	1-218-937-11	RES-CHIP 47 5% 1/16W		
3075		DIC3	RESISTOR		R4707	1-218-937-11	RES-CHIP 47 5% 1/16W		
3076		DIC3	RESISTOR		R4708	1-218-929-11	RES-CHIP 10 5% 1/16W		
3077		DIC3	RESISTOR		R4710	1-218-935-11	RES-CHIP 33 5% 1/16W		
3078		DIC3	RESISTOR		R4711	1-218-937-11	RES-CHIP 47 5% 1/16W		
3079		DIC3	RESISTOR		R4712	1-218-990-11	SHORT CHIP 0		
3080		DIC3	RESISTOR		R4713	1-218-990-11	SHORT CHIP 0		
3081		DIC3	RESISTOR		R4715	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3082		DIC3	RESISTOR		R4716	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3083		DIC3	RESISTOR		R4717	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3084		DIC3	RESISTOR		R4718	1-218-969-11	RES-CHIP 22K 5% 1/16W		
3085		DIC3	RESISTOR		R4719	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3086		DIC3	RESISTOR		R4720	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3087		DIC3	RESISTOR		R4725	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3088		DIC3	RESISTOR		R4800	1-218-933-11	RES-CHIP 22 5% 1/16W		
3089		DIC3	RESISTOR		R4801	1-218-933-11	RES-CHIP 22 5% 1/16W		
3090		DIC3	RESISTOR		R4802	1-218-933-11	RES-CHIP 22 5% 1/16W		
3091		DIC3	RESISTOR		R4803	1-218-933-11	RES-CHIP 22 5% 1/16W		
3092		DIC3	RESISTOR		R4804	1-218-933-11	RES-CHIP 22 5% 1/16W		
3093		DIC3	RESISTOR		R4805	1-218-933-11	RES-CHIP 22 5% 1/16W		
3094		DIC3	RESISTOR		R4807	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3095		DIC3	RESISTOR		R4808	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3096		DIC3	RESISTOR		R4809	1-218-933-11	RES-CHIP 22 5% 1/16W		
3097		DIC3	RESISTOR		R4810	1-218-933-11	RES-CHIP 22 5% 1/16W		
3098		DIC3	RESISTOR		R4811	1-218-990-11	SHORT CHIP 0		
3099		DIC3	RESISTOR		R4812	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3100		DIC3	RESISTOR		R4813	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3101		DIC3	RESISTOR		R4814	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3102		DIC3	RESISTOR		R4815	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3103		DIC3	RESISTOR		R4816	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3104		DIC3	RESISTOR		R4817	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3105		DIC3	RESISTOR		R4818	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3106		DIC3	RESISTOR		R4819	1-218-990-11	SHORT CHIP 0		
3107		DIC3	RESISTOR		R4820	1-218-937-11	RES-CHIP 47 5% 1/16W		
3108		DIC3	RESISTOR		R4821	1-218-937-11	RES-CHIP 47 5% 1/16W		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3109		DIC3	RESISTOR		R4822	1-218-937-11	RES-CHIP 47 5% 1/16W		
3110		DIC3	RESISTOR		R4823	1-218-937-11	RES-CHIP 47 5% 1/16W		
3111		DIC3	RESISTOR		R4824	1-218-990-11	SHORT CHIP 0		
3112		DIC3	RESISTOR		R4825	1-218-933-11	RES-CHIP 22 5% 1/16W		
3113		DIC3	RESISTOR		R4826	1-218-933-11	RES-CHIP 22 5% 1/16W		
3114		DIC3	RESISTOR		R4827	1-208-911-11	METAL CHIP 10K 0.5% 1/16W		
3115		DIC3	RESISTOR		R4828	1-208-911-11	METAL CHIP 10K 0.5% 1/16W		
3116		DIC3	RESISTOR		R4829	1-218-929-11	RES-CHIP 10 5% 1/16W		
3117		DIC3	RESISTOR		R4830	1-218-975-11	RES-CHIP 68K 5% 1/16W		
3118		DIC3	RESISTOR		R4831	1-216-864-11	SHORT CHIP 0		
3119		DIC3	RESISTOR		R4832	1-218-933-11	RES-CHIP 22 5% 1/16W		
3120		DIC3	RESISTOR		R4833	1-218-933-11	RES-CHIP 22 5% 1/16W		
3121		DIC3	RESISTOR		R4834	1-218-933-11	RES-CHIP 22 5% 1/16W		
3122		DIC3	RESISTOR		R4837	1-216-295-91	SHORT CHIP 0		
3123		DIC3	RESISTOR		R4838	1-218-990-11	SHORT CHIP 0		
3124		DIC3	RESISTOR		R4839	1-218-990-11	SHORT CHIP 0		
3125		DIC3	RESISTOR		R4840	1-218-990-11	SHORT CHIP 0		
3126		DIC3	RESISTOR		R4844	1-218-941-81	RES-CHIP 100 5% 1/16W		
3127		DIC3	RESISTOR		R4845	1-218-933-11	RES-CHIP 22 5% 1/16W		
3128		DIC3	RESISTOR		R4846	1-218-933-11	RES-CHIP 22 5% 1/16W		
3129		DIC3	RESISTOR		R4850	1-218-990-11	SHORT CHIP 0		
3130		DIC3	NETWORK		RB4000	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3131		DIC3	NETWORK		RB4001	1-234-370-21	RES, NETWORK 22X4 (1005)		
3132		DIC3	NETWORK		RB4002	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3133		DIC3	NETWORK		RB4003	1-234-370-21	RES, NETWORK 22X4 (1005)		
3134		DIC3	NETWORK		RB4004	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3135		DIC3	NETWORK		RB4005	1-234-370-21	RES, NETWORK 22X4 (1005)		
3136		DIC3	NETWORK		RB4006	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3137		DIC3	NETWORK		RB4007	1-234-370-21	RES, NETWORK 22X4 (1005)		
3138		DIC3	NETWORK		RB4008	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3139		DIC3	NETWORK		RB4009	1-234-369-21	RES, NETWORK 10X4 (1005)		
3140		DIC3	NETWORK		RB4010	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3141		DIC3	NETWORK		RB4011	1-234-369-21	RES, NETWORK 10X4 (1005)		
3142		DIC3	NETWORK		RB4012	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3143		DIC3	NETWORK		RB4013	1-234-369-21	RES, NETWORK 10X4 (1005)		
3144		DIC3	NETWORK		RB4014	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3145		DIC3	NETWORK		RB4015	1-234-369-21	RES, NETWORK 10X4 (1005)		
3146		DIC3	NETWORK		RB4016	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3147		DIC3	NETWORK		RB4017	1-234-369-21	RES, NETWORK 10X4 (1005)		
3148		DIC3	NETWORK		RB4018	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3149		DIC3	NETWORK		RB4019	1-234-369-21	RES, NETWORK 10X4 (1005)		
3150		DIC3	NETWORK		RB4020	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3151		DIC3	NETWORK		RB4021	1-234-369-21	RES, NETWORK 10X4 (1005)		
3152		DIC3	NETWORK		RB4022	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3153		DIC3	NETWORK		RB4023	1-234-369-21	RES, NETWORK 10X4 (1005)		
3154		DIC3	NETWORK		RB4200	1-234-371-21	RES, NETWORK 47X4 (1005)		
3155		DIC3	NETWORK		RB4201	1-234-371-21	RES, NETWORK 47X4 (1005)		
3156		DIC3	NETWORK		RB4202	1-234-371-21	RES, NETWORK 47X4 (1005)		
3157		DIC3	NETWORK		RB4203	1-234-371-21	RES, NETWORK 47X4 (1005)		
3158		DIC3	NETWORK		RB4204	1-234-371-21	RES, NETWORK 47X4 (1005)		
3159		DIC3	NETWORK		RB4205	1-234-371-21	RES, NETWORK 47X4 (1005)		
3160		DIC3	NETWORK		RB4206	1-234-371-21	RES, NETWORK 47X4 (1005)		
3161		DIC3	NETWORK		RB4207	1-234-371-21	RES, NETWORK 47X4 (1005)		
3162		DIC3	NETWORK		RB4208	1-242-963-21	RES, NETWORK 33X4 (1005)		
3163		DIC3	NETWORK		RB4209	1-242-963-21	RES, NETWORK 33X4 (1005)		
3164		DIC3	NETWORK		RB4210	1-242-963-21	RES, NETWORK 33X4 (1005)		
3165		DIC3	NETWORK		RB4211	1-242-963-21	RES, NETWORK 33X4 (1005)		
3166		DIC3	NETWORK		RB4212	1-242-963-21	RES, NETWORK 33X4 (1005)		
3167		DIC3	NETWORK		RB4213	1-242-963-21	RES, NETWORK 33X4 (1005)		
3168		DIC3	NETWORK		RB4214	1-242-963-21	RES, NETWORK 33X4 (1005)		
3169		DIC3	NETWORK		RB4216	1-234-795-21	RES, NETWORK 0X4 (2010)		
3170		DIC3	NETWORK		RB4217	1-242-963-21	RES, NETWORK 33X4 (1005)		
3171		DIC3	NETWORK		RB4218	1-242-963-21	RES, NETWORK 33X4 (1005)		
3172		DIC3	NETWORK		RB4219	1-242-963-21	RES, NETWORK 33X4 (1005)		
3173		DIC3	NETWORK		RB4220	1-242-963-21	RES, NETWORK 33X4 (1005)		
3174		DIC3	NETWORK		RB4221	1-242-963-21	RES, NETWORK 33X4 (1005)		
3175		DIC3	NETWORK		RB4222	1-242-963-21	RES, NETWORK 33X4 (1005)		
3176		DIC3	NETWORK		RB4223	1-242-963-21	RES, NETWORK 33X4 (1005)		
3177		DIC3	NETWORK		RB4231	1-234-795-21	RES, NETWORK 0X4 (2010)		
3178		DIC3	NETWORK		RB4232	1-234-795-21	RES, NETWORK 0X4 (2010)		
3179		DIC3	NETWORK		RB4233	1-234-795-21	RES, NETWORK 0X4 (2010)		
3180		DIC3	NETWORK		RB4234	1-234-795-21	RES, NETWORK 0X4 (2010)		
3181		DIC3	NETWORK		RB4235	1-234-795-21	RES, NETWORK 0X4 (2010)		
3182		DIC3	NETWORK		RB4236	1-234-795-21	RES, NETWORK 0X4 (2010)		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3183		DIC3	NETWORK		RB4237	1-234-795-21	RES, NETWORK 0X4 (2010)		
3184		DIC3	NETWORK		RB4238	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3185		DIC3	NETWORK		RB4239	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3186		DIC3	NETWORK		RB4240	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3187		DIC3	NETWORK		RB4241	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3188		DIC3	NETWORK		RB4242	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3189		DIC3	NETWORK		RB4243	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3190		DIC3	NETWORK		RB4244	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3191		DIC3	NETWORK		RB4245	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3192		DIC3	NETWORK		RB4246	1-234-371-21	RES, NETWORK 47X4 (1005)		
3193		DIC3	NETWORK		RB4247	1-234-371-21	RES, NETWORK 47X4 (1005)		
3194		DIC3	NETWORK		RB4248	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3195		DIC3	NETWORK		RB4249	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3196		DIC3	NETWORK		RB4300	1-234-369-21	RES, NETWORK 10X4 (1005)		
3197		DIC3	NETWORK		RB4301	1-234-369-21	RES, NETWORK 10X4 (1005)		
3198		DIC3	NETWORK		RB4302	1-234-369-21	RES, NETWORK 10X4 (1005)		
3199		DIC3	NETWORK		RB4303	1-234-369-21	RES, NETWORK 10X4 (1005)		
3200		DIC3	NETWORK		RB4306	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3201		DIC3	NETWORK		RB4307	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3202		DIC3	NETWORK		RB4308	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3203		DIC3	NETWORK		RB4309	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3204		DIC3	NETWORK		RB4310	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3205		DIC3	NETWORK		RB4311	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3206		DIC3	NETWORK		RB4312	1-234-372-21	RES, NETWORK 100X4 (1005)		
3207		DIC3	NETWORK		RB4313	1-234-372-21	RES, NETWORK 100X4 (1005)		
3208		DIC3	NETWORK		RB4314	1-234-372-21	RES, NETWORK 100X4 (1005)		
3209		DIC3	NETWORK		RB4315	1-234-372-21	RES, NETWORK 100X4 (1005)		
3210		DIC3	NETWORK		RB4316	1-234-372-21	RES, NETWORK 100X4 (1005)		
3211		DIC3	NETWORK		RB4317	1-234-372-21	RES, NETWORK 100X4 (1005)		
3212		DIC3	NETWORK		RB4318	1-234-372-21	RES, NETWORK 100X4 (1005)		
3213		DIC3	NETWORK		RB4500	1-234-795-21	RES, NETWORK 0X4 (2010)		
3214		DIC3	NETWORK		RB4501	1-234-795-21	RES, NETWORK 0X4 (2010)		
3215		DIC3	NETWORK		RB4502	1-234-795-21	RES, NETWORK 0X4 (2010)		
3216		DIC3	NETWORK		RB4503	1-234-795-21	RES, NETWORK 0X4 (2010)		
3217		DIC3	NETWORK		RB4504	1-234-795-21	RES, NETWORK 0X4 (2010)		
3218		DIC3	NETWORK		RB4505	1-234-370-21	RES, NETWORK 22X4 (1005)		
3219		DIC3	NETWORK		RB4506	1-234-370-21	RES, NETWORK 22X4 (1005)		
3220		DIC3	NETWORK		RB4507	1-234-370-21	RES, NETWORK 22X4 (1005)		
3221		DIC3	NETWORK		RB4508	1-234-370-21	RES, NETWORK 22X4 (1005)		
3222		DIC3	NETWORK		RB4509	1-234-370-21	RES, NETWORK 22X4 (1005)		
3223		DIC3	NETWORK		RB4510	1-234-370-21	RES, NETWORK 22X4 (1005)		
3224		DIC3	NETWORK		RB4511	1-234-370-21	RES, NETWORK 22X4 (1005)		
3225		DIC3	NETWORK		RB4512	1-234-370-21	RES, NETWORK 22X4 (1005)		
3226		DIC3	NETWORK		RB4515	1-242-963-21	RES, NETWORK 33X4 (1005)		
3227		DIC3	NETWORK		RB4516	1-242-963-21	RES, NETWORK 33X4 (1005)		
3228		DIC3	NETWORK		RB4517	1-234-372-21	RES, NETWORK 100X4 (1005)		
3229		DIC3	NETWORK		RB4518	1-242-963-21	RES, NETWORK 33X4 (1005)		
3230		DIC3	NETWORK		RB4519	1-242-963-21	RES, NETWORK 33X4 (1005)		
3231		DIC3	NETWORK		RB4520	1-242-963-21	RES, NETWORK 33X4 (1005)		
3232		DIC3	NETWORK		RB4521	1-242-963-21	RES, NETWORK 33X4 (1005)		
3233		DIC3	NETWORK		RB4522	1-234-372-21	RES, NETWORK 100X4 (1005)		
3234		DIC3	NETWORK		RB4523	1-242-963-21	RES, NETWORK 33X4 (1005)		
3235		DIC3	NETWORK		RB4524	1-242-963-21	RES, NETWORK 33X4 (1005)		
3236		DIC3	NETWORK		RB4525	1-242-963-21	RES, NETWORK 33X4 (1005)		
3237		DIC3	NETWORK		RB4526	1-234-372-21	RES, NETWORK 100X4 (1005)		
3238		DIC3	NETWORK		RB4527	1-242-963-21	RES, NETWORK 33X4 (1005)		
3239		DIC3	NETWORK		RB4528	1-242-963-21	RES, NETWORK 33X4 (1005)		
3240		DIC3	NETWORK		RB4529	1-242-963-21	RES, NETWORK 33X4 (1005)		
3241		DIC3	NETWORK		RB4530	1-242-963-21	RES, NETWORK 33X4 (1005)		
3242		DIC3	NETWORK		RB4531	1-234-372-21	RES, NETWORK 100X4 (1005)		
3243		DIC3	NETWORK		RB4532	1-242-963-21	RES, NETWORK 33X4 (1005)		
3244		DIC3	NETWORK		RB4533	1-242-963-21	RES, NETWORK 33X4 (1005)		
3245		DIC3	NETWORK		RB4534	1-242-963-21	RES, NETWORK 33X4 (1005)		
3246		DIC3	NETWORK		RB4600	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3247		DIC3	NETWORK		RB4601	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3248		DIC3	NETWORK		RB4602	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3249		DIC3	NETWORK		RB4605	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3250		DIC3	NETWORK		RB4606	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3251		DIC3	NETWORK		RB4607	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3252		DIC3	NETWORK		RB4608	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3253		DIC3	NETWORK		RB4800	1-234-370-21	RES, NETWORK 22X4 (1005)		
3254		DIC3	NETWORK		RB4801	1-234-370-21	RES, NETWORK 22X4 (1005)		
3255		DIC3	NETWORK		RB4802	1-234-370-21	RES, NETWORK 22X4 (1005)		
3256		DIC3	NETWORK		RB4803	1-234-370-21	RES, NETWORK 22X4 (1005)		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3257		DIC3	NETWORK		RB4804	1-234-370-21	RES, NETWORK 22X4 (1005)		
3258		DIC3	NETWORK		RB4805	1-234-370-21	RES, NETWORK 22X4 (1005)		
3259		DIC3	NETWORK		RB4806	1-234-370-21	RES, NETWORK 22X4 (1005)		
3260		DIC3	NETWORK		RB4807	1-234-370-21	RES, NETWORK 22X4 (1005)		
3261		DIC3	NETWORK		RB4808	1-234-370-21	RES, NETWORK 22X4 (1005)		
3262		DIC3	NETWORK		RB4809	1-234-370-21	RES, NETWORK 22X4 (1005)		
3263		DIC3	NETWORK		RB4810	1-234-370-21	RES, NETWORK 22X4 (1005)		
3264		DIC3	NETWORK		RB4811	1-234-370-21	RES, NETWORK 22X4 (1005)		
3265		DIC3	NETWORK		RB4812	1-234-370-21	RES, NETWORK 22X4 (1005)		
3266		DIC3	NETWORK		RB4813	1-234-370-21	RES, NETWORK 22X4 (1005)		
3267		DIC3	NETWORK		RB4814	1-234-370-21	RES, NETWORK 22X4 (1005)		
3268		DIC3	NETWORK		RB4815	1-234-370-21	RES, NETWORK 22X4 (1005)		
3269		DIC3	NETWORK		RB4816	1-234-370-21	RES, NETWORK 22X4 (1005)		
3270		DIC3	NETWORK		RB4817	1-234-370-21	RES, NETWORK 22X4 (1005)		
3271		DIC3	NETWORK		RB4818	1-234-370-21	RES, NETWORK 22X4 (1005)		
3272		DIC3	NETWORK		RB4819	1-234-370-21	RES, NETWORK 22X4 (1005)		
3273		DIC3	NETWORK		RB4820	1-234-370-21	RES, NETWORK 22X4 (1005)		
3274		DIC3	NETWORK		RB4821	1-234-371-21	RES, NETWORK 47X4 (1005)		
3275		DIC3	NETWORK		RB4822	1-234-371-21	RES, NETWORK 47X4 (1005)		
3276		DIC3	NETWORK		RB4823	1-234-371-21	RES, NETWORK 47X4 (1005)		
3277		DIC3	NETWORK		RB4824	1-234-371-21	RES, NETWORK 47X4 (1005)		
3278		DIC3	NETWORK		RB4825	1-234-371-21	RES, NETWORK 47X4 (1005)		
3279		DIC3	NETWORK		RB4826	1-234-371-21	RES, NETWORK 47X4 (1005)		
3280		DIC3	NETWORK		RB4827	1-234-371-21	RES, NETWORK 47X4 (1005)		
3281		DIC3	NETWORK		RB4828	1-234-371-21	RES, NETWORK 47X4 (1005)		
3282		DIC3	NETWORK		RB4829	1-234-371-21	RES, NETWORK 47X4 (1005)		
3283		DIC3	NETWORK		RB4830	1-234-371-21	RES, NETWORK 47X4 (1005)		
3284		DIC3	NETWORK		RB4831	1-234-371-21	RES, NETWORK 47X4 (1005)		
3285		DIC3	NETWORK		RB4832	1-234-371-21	RES, NETWORK 47X4 (1005)		
3286		DIC3	NETWORK		RB4833	1-234-371-21	RES, NETWORK 47X4 (1005)		
3287		DIC3	NETWORK		RB4834	1-234-371-21	RES, NETWORK 47X4 (1005)		
3288		DIC3	NETWORK		RB4835	1-234-371-21	RES, NETWORK 47X4 (1005)		
3289		DIC3	NETWORK		RB4836	1-234-370-21	RES, NETWORK 22X4 (1005)		
3290		DIC3	NETWORK		RB4837	1-234-371-21	RES, NETWORK 47X4 (1005)		
3291		DIC3	NETWORK		RB4838	1-234-371-21	RES, NETWORK 47X4 (1005)		
3292		DIC3	NETWORK		RB4839	1-234-370-21	RES, NETWORK 22X4 (1005)		
3293		DIC3	NETWORK		RB4840	1-234-371-21	RES, NETWORK 47X4 (1005)		
3294		DIC3	NETWORK		RB4841	1-234-371-21	RES, NETWORK 47X4 (1005)		
3295		DIC3	NETWORK		RB4842	1-234-370-21	RES, NETWORK 22X4 (1005)		
3296		DIC3	NETWORK		RB4843	1-234-370-21	RES, NETWORK 22X4 (1005)		
3297		DIC3	NETWORK		RB4844	1-234-371-21	RES, NETWORK 47X4 (1005)		
3298		DIC3	NETWORK		RB4845	1-234-371-21	RES, NETWORK 47X4 (1005)		
3299		DIC3	NETWORK		RB4846	1-234-371-21	RES, NETWORK 47X4 (1005)		
3300		DIC3	NETWORK		RB4847	1-234-370-21	RES, NETWORK 22X4 (1005)		
3301		DIC3	NETWORK		RB4848	1-234-370-21	RES, NETWORK 22X4 (1005)		
3302		DIC3	NETWORK		RB4849	1-234-371-21	RES, NETWORK 47X4 (1005)		
3303		DIC3	NETWORK		RB4850	1-234-370-21	RES, NETWORK 22X4 (1005)		
3304		DIC3	NETWORK		RB4851	1-234-371-21	RES, NETWORK 47X4 (1005)		
3305		DIC3	NETWORK		RB4852	1-234-371-21	RES, NETWORK 47X4 (1005)		
3306		DIC3	NETWORK		RB4853	1-234-370-21	RES, NETWORK 22X4 (1005)		
3307		DIC3	NETWORK		RB4854	1-234-370-21	RES, NETWORK 22X4 (1005)		
3308		DIC3	NETWORK		RB4855	1-234-370-21	RES, NETWORK 22X4 (1005)		
3309		DIC3	CRYSTAL		X4500	1-813-373-11	OSCILLATOR, CRYSTAL		
3310		DIC3	CRYSTAL		X4600	1-813-373-11	OSCILLATOR, CRYSTAL		
3311		DE1	CAPACITOR		C5201	1-164-856-81	CERAMIC CHIP 18PF 5.00% 50V		
3312		DE1	CAPACITOR		C5202	1-164-856-81	CERAMIC CHIP 18PF 5.00% 50V		
3313		DE1	CAPACITOR		C5203	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3314		DE1	CAPACITOR		C5204	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3315		DE1	CAPACITOR		C5205	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3316		DE1	CAPACITOR		C5206	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3317		DE1	CAPACITOR		C5207	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3318		DE1	CAPACITOR		C5208	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3319		DE1	CAPACITOR		C5209	1-100-053-21	ELECT CHIP 220UF 20% 6.3V		
3320		DE1	CAPACITOR		C5210	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3321		DE1	CAPACITOR		C5211	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3322		DE1	CAPACITOR		C5212	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3323		DE1	CAPACITOR		C5215	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
3324		DE1	CAPACITOR		C5220	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
3325		DE1	CAPACITOR		C5221	1-100-672-11	CERAMIC CHIP 10UF 20% 16V		
3326		DE1	CAPACITOR		C5222	1-128-995-21	ELECT CHIP 100UF 20% 10V		
3327		DE1	CAPACITOR		C5225	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3328		DE1	CAPACITOR		C5226	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
3329		DE1	CAPACITOR		C5230	1-100-743-91	CERAMIC CHIP 2.2UF 20% 16V		
3330		DE1	CAPACITOR		C5231	1-165-671-21	ELECT CHIP 470UF 20% 6.3V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3331		DE1	CAPACITOR		C5232	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
3332		DE1	CAPACITOR		C5233	1-100-672-11	CERAMIC CHIP 10UF 20% 16V		
3333		DE1	CAPACITOR		C5234	1-128-995-21	ELECT CHIP 100UF 20% 10V		
3334		DE1	CAPACITOR		C5235	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
3335		DE1	CAPACITOR		C5236	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3336		DE1	CAPACITOR		C5239	1-100-743-91	CERAMIC CHIP 2.2UF 20% 16V		
3337		DE1	CAPACITOR		C5240	1-165-671-21	ELECT CHIP 470UF 20% 6.3V		
3338		DE1	CAPACITOR		C5243	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
3339		DE1	CAPACITOR		C5245	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
3340		DE1	CAPACITOR		C5250	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3341		DE1	CAPACITOR		C5254	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
3342		DE1	CAPACITOR		C5256	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
3343		DE1	CAPACITOR		C5257	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
3344		DE1	CAPACITOR		C5302	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
3345		DE1	CAPACITOR		C5303	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3346		DE1	CAPACITOR		C5304	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3347		DE1	CAPACITOR		C5305	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3348		DE1	CAPACITOR		C5306	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3349		DE1	CAPACITOR		C5307	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3350		DE1	CAPACITOR		C5308	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3351		DE1	CAPACITOR		C5309	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3352		DE1	CAPACITOR		C5310	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3353		DE1	CAPACITOR		C5311	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3354		DE1	CAPACITOR		C5312	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3355		DE1	CAPACITOR		C5313	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3356		DE1	CAPACITOR		C5314	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3357		DE1	CAPACITOR		C5315	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3358		DE1	CAPACITOR		C5316	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3359		DE1	CAPACITOR		C5317	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3360		DE1	CAPACITOR		C5318	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3361		DE1	CAPACITOR		C5319	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3362		DE1	CAPACITOR		C5320	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3363		DE1	CAPACITOR		C5321	1-135-595-11	ELECT CHIP 100UF 20% 6.3V		
3364		DE1	CAPACITOR		C5322	1-135-595-11	ELECT CHIP 100UF 20% 6.3V		
3365		DE1	CAPACITOR		C5323	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
3366		DE1	CAPACITOR		C5324	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
3367		DE1	CAPACITOR		C5325	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
3368		DE1	CAPACITOR		C5326	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
3369		DE1	CAPACITOR		C5327	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
3370		DE1	CAPACITOR		C5328	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
3371		DE1	CAPACITOR		C5329	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
3372		DE1	CAPACITOR		C5330	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
3373		DE1	CAPACITOR		C5331	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
3374		DE1	CAPACITOR		C5332	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
3375		DE1	CAPACITOR		C5333	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
3376		DE1	CAPACITOR		C5339	1-164-850-11	CERAMIC CHIP 10PF 0.50PF 50V		
3377		DE1	CAPACITOR		C5340	1-164-850-11	CERAMIC CHIP 10PF 0.50PF 50V		
3378		DE1	CAPACITOR		C5341	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
3379		DE1	CAPACITOR		C5342	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
3380		DE1	CAPACITOR		C5343	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
3381		DE1	CAPACITOR		C5344	1-100-567-81	CERAMIC CHIP 10000PF 10% 25V		
3382		DE1	CAPACITOR		C5345	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3383		DE1	CAPACITOR		C5346	1-135-595-11	ELECT CHIP 100UF 20% 6.3V		
3384		DE1	CAPACITOR		C5351	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3385		DE1	CAPACITOR		C5352	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3386		DE1	CAPACITOR		C5353	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3387		DE1	CAPACITOR		C5354	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3388		DE1	CAPACITOR		C5355	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3389		DE1	CAPACITOR		C5356	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3390		DE1	CAPACITOR		C5357	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3391		DE1	CAPACITOR		C5358	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3392		DE1	CAPACITOR		C5359	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3393		DE1	CAPACITOR		C5360	1-135-595-11	ELECT CHIP 100UF 20% 6.3V		
3394		DE1	CAPACITOR		C5361	1-135-595-11	ELECT CHIP 100UF 20% 6.3V		
3395		DE1	CAPACITOR		C5362	1-135-595-11	ELECT CHIP 100UF 20% 6.3V		
3396		DE1	CAPACITOR		C5405	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3397		DE1	CAPACITOR		C5406	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
3398		DE1	CAPACITOR		C5449	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
3399		DE1	CAPACITOR		C5451	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3400		DE1	CAPACITOR		C5453	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
3401		DE1	CAPACITOR		C5454	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3402		DE1	CAPACITOR		C5455	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
3403		DE1	CAPACITOR		C5456	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3404		DE1	CAPACITOR		C5457	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3405		DE1	CAPACITOR		C5458	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3406		DE1	CAPACITOR		C5459	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
3407		DE1	CAPACITOR		C5460	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
3408		DE1	CAPACITOR		C5461	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3409		DE1	CAPACITOR		C5462	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
3410		DE1	CAPACITOR		C5463	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3411		DE1	CONNECTOR		CN5201	1-817-194-21	PIN, CONNECTOR (SMD) 13P		
3412		DE1	CONNECTOR		CN5207	1-580-057-91	PIN, CONNECTOR 4P		
3413		DE1	CONNECTOR		CN5212	1-580-055-11	PIN, CONNECTOR 2P		
3414		DE1	CONNECTOR		CN5213	1-580-056-91	PIN, CONNECTOR 3P		
3415		DE1	CONNECTOR		CN5406	1-815-161-11	CONNECTOR, BOARD TO WIRE 31P		
3416		DE1	DIODE		D5206	8-719-080-03	DIODE RB083L-20TE25		
3417		DE1	DIODE		D5210	6-500-294-01	DIODE PTZ-TE25-3.9B		
3418		DE1	DIODE		D5211	8-719-080-03	DIODE RB083L-20TE25		
3419		DE1	DIODE		D5215	6-500-294-01	DIODE PTZ-TE25-3.9B		
3420		DE1	DIODE		D5216	6-500-137-01	DIODE BAT54HT1		
3421		DE1	DIODE		D5217	8-719-081-97	DIODE MMDL914T1		
3422		DE1	DIODE		D5218	8-719-081-97	DIODE MMDL914T1		
3423		DE1	DIODE		D5219	8-719-082-02	DIODE MM3Z3V9T1		
3424		DE1	DIODE		D5220	8-719-066-10	DIODE 1PS181-115		
3425		DE1	DIODE		D5221	8-719-066-11	DIODE 1PS184-115		
3426		DE1	DIODE		D5301	8-719-066-10	DIODE 1PS181-115		
3427		DE1	DIODE		D5302	8-719-066-11	DIODE 1PS184-115		
3428		DE1	FERRITE BEAD		FB5201	1-469-082-21	FERRITE 0UH		
3429		DE1	FERRITE BEAD		FB5203	1-469-082-21	FERRITE 0UH		
3430		DE1	FERRITE BEAD		FB5204	1-469-082-21	FERRITE 0UH		
3431		DE1	FERRITE BEAD		FB5208	1-469-082-21	FERRITE 0UH		
3432		DE1	FERRITE BEAD		FB5224	1-414-445-11	FERRITE 0UH		
3433		DE1	FERRITE BEAD		FB5236	1-469-082-21	FERRITE 0UH		
3434		DE1	FERRITE BEAD		FB5243	1-469-082-21	FERRITE 0UH		
3435		DE1	FERRITE BEAD		FB5270	1-469-082-21	FERRITE 0UH		
3436		DE1	FERRITE BEAD		FB5271	1-469-082-21	FERRITE 0UH		
3437		DE1	FERRITE BEAD		FB5273	1-469-082-21	FERRITE 0UH		
3438		DE1	FERRITE BEAD		FB5275	1-469-082-21	FERRITE 0UH		
3439		DE1	FERRITE BEAD		FB5302	1-469-855-21	FERRITE 0UH		
3440		DE1	FERRITE BEAD		FB5304	1-469-855-21	FERRITE 0UH		
3441		DE1	FERRITE BEAD		FB5403	1-469-082-21	FERRITE 0UH		
3442		DE1	FERRITE BEAD		FB5404	1-414-445-11	FERRITE 0UH		
3443		DE1	FERRITE BEAD		FB5406	1-414-445-11	FERRITE 0UH		
3444		DE1	FERRITE BEAD		FB5407	1-414-445-11	FERRITE 0UH		
3445		DE1	FERRITE BEAD		FB5670	1-469-082-21	FERRITE 0UH		
3446		DE1	FERRITE BEAD		FB5671	1-469-082-21	FERRITE 0UH		
3447		DE1	FERRITE BEAD		FB5672	1-469-082-21	FERRITE 0UH		
3448		DE1	FERRITE BEAD		FB5673	1-469-082-21	FERRITE 0UH		
3449		DE1	FERRITE BEAD		FB5674	1-469-082-21	FERRITE 0UH		
3450		DE1	FERRITE BEAD		FB5675	1-469-082-21	FERRITE 0UH		
3451		DE1	FERRITE BEAD		FB5676	1-469-082-21	FERRITE 0UH		
3452		DE1	FERRITE BEAD		FB5679	1-469-082-21	FERRITE 0UH		
3453		DE1	FERRITE BEAD		FB5680	1-469-082-21	FERRITE 0UH		
3454		DE1	FERRITE BEAD		FB5681	1-469-082-21	FERRITE 0UH		
3455		DE1	FERRITE BEAD		FB5682	1-469-082-21	FERRITE 0UH		
3456		DE1	FERRITE BEAD		FB5683	1-469-082-21	FERRITE 0UH		
3457		DE1	FERRITE BEAD		FB5684	1-469-082-21	FERRITE 0UH		
3458		DE1	FERRITE BEAD		FB5712	1-469-082-21	FERRITE 0UH		
3459		DE1	FERRITE BEAD		FB5713	1-469-082-21	FERRITE 0UH		
3460		DE1	FERRITE BEAD		FB5714	1-469-082-21	FERRITE 0UH		
3461		DE1	IC		IC5201	6-703-176-01	IC PST3627UL		
3462		DE1	IC		IC5202	6-804-648-01	IC MB90F334APMC-GE1		
3463		DE1	IC		IC5203	6-704-067-01	IC M24128-BWMN6T(A)		
3464		DE1	IC		IC5204	6-704-754-01	IC SN74AHC2G66HDCU3		
3465		DE1	IC		IC5207	6-704-407-01	IC PQ1CZ41H2ZPH		
3466		DE1	IC		IC5210	6-704-407-01	IC PQ1CZ41H2ZPH		
3467		DE1	IC		IC5302	6-706-826-01	IC CXD9816GG		
3468		DE1	IC		IC5402	6-701-762-11	IC DS90LV018ATMX		
3469		DE1	IC		IC5408	6-700-592-01	IC DS90C387VJDX		
3470		DE1	COIL		L5203	1-419-630-21	INDUCTOR 4.7UH		
3471		DE1	COIL		L5205	1-419-630-21	INDUCTOR 4.7UH		
3472		DE1	COIL		L5206	1-416-606-11	INDUCTOR 47UH		
3473		DE1	COIL		L5208	1-424-922-21	INDUCTOR 10UH		
3474		DE1	COIL		L5209	1-416-606-11	INDUCTOR 47UH		
3475		DE1	COIL		L5210	1-424-922-21	INDUCTOR 10UH		
3476		DE1	COIL		L5301	1-414-398-11	INDUCTOR 10UH		
3477		DE1	COIL		L5404	1-456-583-11	INDUCTOR 0UH		
3478		DE1	COIL		L5405	1-456-583-11	INDUCTOR 0UH		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3479		DE1	COIL		L5407	1-456-583-11	INDUCTOR 0UH		
3480		DE1	COIL		L5408	1-456-583-11	INDUCTOR 0UH		
3481		DE1	COIL		L5409	1-456-583-11	INDUCTOR 0UH		
3482		DE1	COIL		L5410	1-456-583-11	INDUCTOR 0UH		
3483		DE1	COIL		L5411	1-456-583-11	INDUCTOR 0UH		
3484		DE1	COIL		L5412	1-456-583-11	INDUCTOR 0UH		
3485		DE1	COIL		L5413	1-456-583-11	INDUCTOR 0UH		
3486		DE1	TRANSISTOR		Q5202	8-729-905-35	TRANSISTOR 2SC4081-R		
3487		DE1	TRANSISTOR		Q5203	8-729-905-35	TRANSISTOR 2SC4081-R		
3488		DE1	TRANSISTOR		Q5205	8-729-030-54	TRANSISTOR MSB1218A-RT1		
3489		DE1	TRANSISTOR		Q5208	8-729-029-14	TRANSISTOR DTC144EUA-T106		
3490		DE1	RESISTOR		R5101	1-218-929-11	RES-CHIP 10 5% 1/16W		
3491		DE1	RESISTOR		R5102	1-218-929-11	RES-CHIP 10 5% 1/16W		
3492		DE1	RESISTOR		R5103	1-218-990-11	SHORT CHIP 0		
3493		DE1	RESISTOR		R5104	1-218-990-11	SHORT CHIP 0		
3494		DE1	RESISTOR		R5155	1-218-933-11	RES-CHIP 22 5% 1/16W		
3495		DE1	RESISTOR		R5157	1-218-990-11	SHORT CHIP 0		
3496		DE1	RESISTOR		R5158	1-218-929-11	RES-CHIP 10 5% 1/16W		
3497		DE1	RESISTOR		R5159	1-218-929-11	RES-CHIP 10 5% 1/16W		
3498		DE1	RESISTOR		R5160	1-218-929-11	RES-CHIP 10 5% 1/16W		
3499		DE1	RESISTOR		R5161	1-218-929-11	RES-CHIP 10 5% 1/16W		
3500		DE1	RESISTOR		R5201	1-218-989-11	RES-CHIP 1M 5% 1/16W		
3501		DE1	RESISTOR		R5202	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3502		DE1	RESISTOR		R5205	1-218-933-11	RES-CHIP 22 5% 1/16W		
3503		DE1	RESISTOR		R5206	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3504		DE1	RESISTOR		R5207	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3505		DE1	RESISTOR		R5208	1-218-941-81	RES-CHIP 100 5% 1/16W		
3506		DE1	RESISTOR		R5209	1-218-941-81	RES-CHIP 100 5% 1/16W		
3507		DE1	RESISTOR		R5210	1-218-990-11	SHORT CHIP 0		
3508		DE1	RESISTOR		R5211	1-218-990-11	SHORT CHIP 0		
3509		DE1	RESISTOR		R5212	1-218-990-11	SHORT CHIP 0		
3510		DE1	RESISTOR		R5214	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3511		DE1	RESISTOR		R5215	1-218-941-81	RES-CHIP 100 5% 1/16W		
3512		DE1	RESISTOR		R5216	1-218-990-11	SHORT CHIP 0		
3513		DE1	RESISTOR		R5217	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3514		DE1	RESISTOR		R5218	1-218-933-11	RES-CHIP 22 5% 1/16W		
3515		DE1	RESISTOR		R5219	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3516		DE1	RESISTOR		R5222	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3517		DE1	RESISTOR		R5223	1-218-941-81	RES-CHIP 100 5% 1/16W		
3518		DE1	RESISTOR		R5224	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3519		DE1	RESISTOR		R5225	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3520		DE1	RESISTOR		R5226	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3521		DE1	RESISTOR		R5227	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3522		DE1	RESISTOR		R5228	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3523		DE1	RESISTOR		R5229	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3524		DE1	RESISTOR		R5231	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3525		DE1	RESISTOR		R5232	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3526		DE1	RESISTOR		R5234	1-218-933-11	RES-CHIP 22 5% 1/16W		
3527		DE1	RESISTOR		R5237	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3528		DE1	RESISTOR		R5238	1-218-941-81	RES-CHIP 100 5% 1/16W		
3529		DE1	RESISTOR		R5239	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3530		DE1	RESISTOR		R5240	1-218-941-81	RES-CHIP 100 5% 1/16W		
3531		DE1	RESISTOR		R5242	1-218-990-11	SHORT CHIP 0		
3532		DE1	RESISTOR		R5244	1-218-941-81	RES-CHIP 100 5% 1/16W		
3533		DE1	RESISTOR		R5245	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3534		DE1	RESISTOR		R5246	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
3535		DE1	RESISTOR		R5247	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3536		DE1	RESISTOR		R5248	1-220-880-81	METAL CHIP 27 0.5% 1/16W		
3537		DE1	RESISTOR		R5250	1-218-933-11	RES-CHIP 22 5% 1/16W		
3538		DE1	RESISTOR		R5251	1-220-880-81	METAL CHIP 27 0.5% 1/16W		
3539		DE1	RESISTOR		R5254	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3540		DE1	RESISTOR		R5255	1-218-990-11	SHORT CHIP 0		
3541		DE1	RESISTOR		R5256	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3542		DE1	RESISTOR		R5258	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3543		DE1	RESISTOR		R5259	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3544		DE1	RESISTOR		R5260	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3545		DE1	RESISTOR		R5261	1-218-933-11	RES-CHIP 22 5% 1/16W		
3546		DE1	RESISTOR		R5262	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3547		DE1	RESISTOR		R5263	1-218-933-11	RES-CHIP 22 5% 1/16W		
3548		DE1	RESISTOR		R5264	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3549		DE1	RESISTOR		R5265	1-218-933-11	RES-CHIP 22 5% 1/16W		
3550		DE1	RESISTOR		R5266	1-218-933-11	RES-CHIP 22 5% 1/16W		
3551		DE1	RESISTOR		R5267	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3552		DE1	RESISTOR		R5268	1-218-937-11	RES-CHIP 47 5% 1/16W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3553		DE1	RESISTOR		R5269	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3554		DE1	RESISTOR		R5272	1-218-941-81	RES-CHIP 100 5% 1/16W		
3555		DE1	RESISTOR		R5274	1-218-937-11	RES-CHIP 47 5% 1/16W		
3556		DE1	RESISTOR		R5276	1-218-941-81	RES-CHIP 100 5% 1/16W		
3557		DE1	RESISTOR		R5277	1-218-990-11	SHORT CHIP 0		
3558		DE1	RESISTOR		R5279	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
3559		DE1	RESISTOR		R5281	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
3560		DE1	RESISTOR		R5282	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
3561		DE1	RESISTOR		R5283	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
3562		DE1	RESISTOR		R5286	1-218-990-11	SHORT CHIP 0		
3563		DE1	RESISTOR		R5288	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3564		DE1	RESISTOR		R5289	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3565		DE1	RESISTOR		R5290	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3566		DE1	RESISTOR		R5293	1-218-941-81	RES-CHIP 100 5% 1/16W		
3567		DE1	RESISTOR		R5294	1-218-941-81	RES-CHIP 100 5% 1/16W		
3568		DE1	RESISTOR		R5295	1-218-941-81	RES-CHIP 100 5% 1/16W		
3569		DE1	RESISTOR		R5299	1-218-941-81	RES-CHIP 100 5% 1/16W		
3570		DE1	RESISTOR		R5301	1-218-990-11	SHORT CHIP 0		
3571		DE1	RESISTOR		R5302	1-218-990-11	SHORT CHIP 0		
3572		DE1	RESISTOR		R5304	1-218-990-11	SHORT CHIP 0		
3573		DE1	RESISTOR		R5307	1-218-933-11	RES-CHIP 22 5% 1/16W		
3574		DE1	RESISTOR		R5309	1-218-933-11	RES-CHIP 22 5% 1/16W		
3575		DE1	RESISTOR		R5310	1-218-933-11	RES-CHIP 22 5% 1/16W		
3576		DE1	RESISTOR		R5311	1-218-933-11	RES-CHIP 22 5% 1/16W		
3577		DE1	RESISTOR		R5312	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3578		DE1	RESISTOR		R5313	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3579		DE1	RESISTOR		R5314	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3580		DE1	RESISTOR		R5315	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3581		DE1	RESISTOR		R5316	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3582		DE1	RESISTOR		R5317	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3583		DE1	RESISTOR		R5322	1-218-941-81	RES-CHIP 100 5% 1/16W		
3584		DE1	RESISTOR		R5323	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3585		DE1	RESISTOR		R5324	1-218-941-81	RES-CHIP 100 5% 1/16W		
3586		DE1	RESISTOR		R5325	1-218-941-81	RES-CHIP 100 5% 1/16W		
3587		DE1	RESISTOR		R5332	1-218-933-11	RES-CHIP 22 5% 1/16W		
3588		DE1	RESISTOR		R5333	1-218-933-11	RES-CHIP 22 5% 1/16W		
3589		DE1	RESISTOR		R5334	1-218-989-11	RES-CHIP 1M 5% 1/16W		
3590		DE1	RESISTOR		R5335	1-208-860-81	METAL CHIP 75 0.5% 1/16W		
3591		DE1	RESISTOR		R5336	1-208-860-81	METAL CHIP 75 0.5% 1/16W		
3592		DE1	RESISTOR		R5337	1-208-860-81	METAL CHIP 75 0.5% 1/16W		
3593		DE1	RESISTOR		R5338	1-208-911-11	METAL CHIP 10K 0.5% 1/16W		
3594		DE1	RESISTOR		R5339	1-208-911-11	METAL CHIP 10K 0.5% 1/16W		
3595		DE1	RESISTOR		R5340	1-208-911-11	METAL CHIP 10K 0.5% 1/16W		
3596		DE1	RESISTOR		R5341	1-218-933-11	RES-CHIP 22 5% 1/16W		
3597		DE1	RESISTOR		R5342	1-218-933-11	RES-CHIP 22 5% 1/16W		
3598		DE1	RESISTOR		R5343	1-218-990-11	SHORT CHIP 0		
3599		DE1	RESISTOR		R5344	1-218-990-11	SHORT CHIP 0		
3600		DE1	RESISTOR		R5350	1-218-933-11	RES-CHIP 22 5% 1/16W		
3601		DE1	RESISTOR		R5351	1-218-990-11	SHORT CHIP 0		
3602		DE1	RESISTOR		R5352	1-218-945-11	RES-CHIP 220 5% 1/16W		
3603		DE1	RESISTOR		R5353	1-208-911-11	METAL CHIP 10K 0.5% 1/16W		
3604		DE1	RESISTOR		R5354	1-208-911-11	METAL CHIP 10K 0.5% 1/16W		
3605		DE1	RESISTOR		R5355	1-208-911-11	METAL CHIP 10K 0.5% 1/16W		
3606		DE1	RESISTOR		R5405	1-218-990-11	SHORT CHIP 0		
3607		DE1	RESISTOR		R5406	1-218-990-11	SHORT CHIP 0		
3608		DE1	RESISTOR		R5407	1-218-990-11	SHORT CHIP 0		
3609		DE1	RESISTOR		R5409	1-218-941-81	RES-CHIP 100 5% 1/16W		
3610		DE1	RESISTOR		R5457	1-218-933-11	RES-CHIP 22 5% 1/16W		
3611		DE1	RESISTOR		R5460	1-218-990-11	SHORT CHIP 0		
3612		DE1	RESISTOR		R5462	1-218-990-11	SHORT CHIP 0		
3613		DE1	RESISTOR		R5464	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3614		DE1	RESISTOR		R5466	1-218-990-11	SHORT CHIP 0		
3615		DE1	RESISTOR		R5485	1-218-990-11	SHORT CHIP 0		
3616		DE1	RESISTOR		R5486	1-218-990-11	SHORT CHIP 0		
3617		DE1	RESISTOR		R5487	1-218-990-11	SHORT CHIP 0		
3618		DE1	RESISTOR		R5488	1-218-990-11	SHORT CHIP 0		
3619		DE1	RESISTOR		R5489	1-218-990-11	SHORT CHIP 0		
3620		DE1	RESISTOR		R5490	1-218-990-11	SHORT CHIP 0		
3621		DE1	RESISTOR		R5491	1-218-990-11	SHORT CHIP 0		
3622		DE1	RESISTOR		R5492	1-218-990-11	SHORT CHIP 0		
3623		DE1	RESISTOR		R5493	1-218-990-11	SHORT CHIP 0		
3624		DE1	RESISTOR		R5494	1-218-990-11	SHORT CHIP 0		
3625		DE1	RESISTOR		R5495	1-218-990-11	SHORT CHIP 0		
3626		DE1	RESISTOR		R5496	1-218-990-11	SHORT CHIP 0		

No.	#	Board	Type	Δ/\ast	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3627		DE1	RESISTOR		R5497	1-218-990-11	SHORT CHIP 0		
3628		DE1	RESISTOR		R5498	1-218-990-11	SHORT CHIP 0		
3629		DE1	RESISTOR		R5499	1-218-990-11	SHORT CHIP 0		
3630		DE1	RESISTOR		R5512	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3631		DE1	RESISTOR		R5514	1-218-977-11	RES-CHIP 100K 5% 1/16W		
3632		DE1	RESISTOR		R5600	1-218-941-81	RES-CHIP 100 5% 1/16W		
3633		DE1	RESISTOR		R5601	1-218-967-11	RES-CHIP 15K 5% 1/16W		
3634		DE1	RESISTOR		R5602	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3635		DE1	RESISTOR		R5603	1-218-990-11	SHORT CHIP 0		
3636		DE1	RESISTOR		R5604	1-218-990-11	SHORT CHIP 0		
3637		DE1	RESISTOR		R5608	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3638		DE1	RESISTOR		R5610	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3639		DE1	RESISTOR		R5612	1-218-941-81	RES-CHIP 100 5% 1/16W		
3640		DE1	RESISTOR		R5614	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3641		DE1	RESISTOR		R5615	1-218-941-81	RES-CHIP 100 5% 1/16W		
3642		DE1	RESISTOR		R5617	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3643		DE1	RESISTOR		R5627	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3644		DE1	RESISTOR		R5631	1-218-948-11	METAL CHIP 390 5% 1/16W		
3645		DE1	RESISTOR		R5632	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
3646		DE1	RESISTOR		R5633	1-220-884-81	METAL CHIP 39 0.5% 1/16W		
3647		DE1	RESISTOR		R5634	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3648		DE1	RESISTOR		R5643	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3649		DE1	RESISTOR		R5644	1-208-687-11	METAL CHIP 1.5K 0.5% 1/16W		
3650		DE1	RESISTOR		R5645	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
3651		DE1	RESISTOR		R5646	1-208-661-11	METAL CHIP 120 0.5% 1/16W		
3652		DE1	RESISTOR		R5649	1-218-941-81	RES-CHIP 100 5% 1/16W		
3653		DE1	RESISTOR		R5650	1-218-941-81	RES-CHIP 100 5% 1/16W		
3654		DE1	RESISTOR		R5651	1-218-990-11	SHORT CHIP 0		
3655		DE1	RESISTOR		R5652	1-218-990-11	SHORT CHIP 0		
3656		DE1	RESISTOR		R5653	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3657		DE1	RESISTOR		R5654	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3658		DE1	RESISTOR		R5661	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3659		DE1	RESISTOR		R5662	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3660		DE1	RESISTOR		R5663	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3661		DE1	RESISTOR		R5664	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3662		DE1	RESISTOR		R5665	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3663		DE1	RESISTOR		R5666	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3664		DE1	RESISTOR		R5667	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3665		DE1	RESISTOR		R5668	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3666		DE1	RESISTOR		R5669	1-218-941-81	RES-CHIP 100 5% 1/16W		
3667		DE1	RESISTOR		R5677	1-218-933-11	RES-CHIP 22 5% 1/16W		
3668		DE1	RESISTOR		R5678	1-218-933-11	RES-CHIP 22 5% 1/16W		
3669		DE1	RESISTOR		R5685	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3670		DE1	RESISTOR		R5689	1-218-933-11	RES-CHIP 22 5% 1/16W		
3671		DE1	RESISTOR		R5690	1-218-933-11	RES-CHIP 22 5% 1/16W		
3672		DE1	RESISTOR		R5709	1-218-990-11	SHORT CHIP 0		
3673		DE1	RESISTOR		R5710	1-218-990-11	SHORT CHIP 0		
3674		DE1	RESISTOR		R5711	1-218-990-11	SHORT CHIP 0		
3675		DE1	RESISTOR		R5715	1-218-951-11	RES-CHIP 680 5% 1/16W		
3676		DE1	RESISTOR		R5718	1-218-990-11	SHORT CHIP 0		
3677		DE1	RESISTOR		R5719	1-218-990-11	SHORT CHIP 0		
3678		DE1	RESISTOR		R5720	1-218-971-11	RES-CHIP 33K 5% 1/16W		
3679		DE1	RESISTOR		R5721	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3680		DE1	RESISTOR		R5722	1-218-933-11	RES-CHIP 22 5% 1/16W		
3681		DE1	RESISTOR		R5723	1-218-933-11	RES-CHIP 22 5% 1/16W		
3682		DE1	RESISTOR		R5724	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3683		DE1	RESISTOR		R5727	1-218-941-81	RES-CHIP 100 5% 1/16W		
3684		DE1	RESISTOR		R5728	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3685		DE1	RESISTOR		R5729	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3686		DE1	RESISTOR		R5733	1-218-933-11	RES-CHIP 22 5% 1/16W		
3687		DE1	RESISTOR		R5734	1-218-933-11	RES-CHIP 22 5% 1/16W		
3688		DE1	RESISTOR		R5735	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3689		DE1	RESISTOR		R5801	1-218-990-11	SHORT CHIP 0		
3690		DE1	RESISTOR		R5802	1-218-990-11	SHORT CHIP 0		
3691		DE1	RESISTOR		R5803	1-218-990-11	SHORT CHIP 0		
3692		DE1	RESISTOR		R5804	1-218-990-11	SHORT CHIP 0		
3693		DE1	RESISTOR		R5805	1-218-990-11	SHORT CHIP 0		
3694		DE1	RESISTOR		R5806	1-218-990-11	SHORT CHIP 0		
3695		DE1	NETWORK		RB5101	1-234-369-21	RES, NETWORK 10X4 (1005)		
3696		DE1	NETWORK		RB5102	1-234-369-21	RES, NETWORK 10X4 (1005)		
3697		DE1	NETWORK		RB5103	1-234-369-21	RES, NETWORK 10X4 (1005)		
3698		DE1	NETWORK		RB5104	1-234-369-21	RES, NETWORK 10X4 (1005)		
3699		DE1	NETWORK		RB5105	1-234-369-21	RES, NETWORK 10X4 (1005)		
3700		DE1	NETWORK		RB5106	1-234-369-21	RES, NETWORK 10X4 (1005)		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3701		DE1	NETWORK		RB5107	1-234-369-21	RES, NETWORK 10X4 (1005)		
3702		DE1	NETWORK		RB5108	1-234-369-21	RES, NETWORK 10X4 (1005)		
3703		DE1	NETWORK		RB5109	1-234-369-21	RES, NETWORK 10X4 (1005)		
3704		DE1	NETWORK		RB5110	1-234-369-21	RES, NETWORK 10X4 (1005)		
3705		DE1	NETWORK		RB5111	1-234-369-21	RES, NETWORK 10X4 (1005)		
3706		DE1	NETWORK		RB5112	1-234-369-21	RES, NETWORK 10X4 (1005)		
3707		DE1	NETWORK		RB5113	1-234-369-21	RES, NETWORK 10X4 (1005)		
3708		DE1	NETWORK		RB5114	1-234-369-21	RES, NETWORK 10X4 (1005)		
3709		DE1	NETWORK		RB5213	1-234-370-21	RES, NETWORK 22X4 (1005)		
3710		DE1	NETWORK		RB5214	1-234-370-21	RES, NETWORK 22X4 (1005)		
3711		DE1	NETWORK		RB5301	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3712		DE1	NETWORK		RB5302	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3713		DE1	NETWORK		RB5303	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3714		DE1	NETWORK		RB5304	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3715		DE1	NETWORK		RB5305	1-234-370-21	RES, NETWORK 22X4 (1005)		
3716		DE1	NETWORK		RB5306	1-234-370-21	RES, NETWORK 22X4 (1005)		
3717		DE1	NETWORK		RB5307	1-234-370-21	RES, NETWORK 22X4 (1005)		
3718		DE1	NETWORK		RB5311	1-234-370-21	RES, NETWORK 22X4 (1005)		
3719		DE1	NETWORK		RB5312	1-234-370-21	RES, NETWORK 22X4 (1005)		
3720		DE1	NETWORK		RB5313	1-234-370-21	RES, NETWORK 22X4 (1005)		
3721		DE1	NETWORK		RB5317	1-234-370-21	RES, NETWORK 22X4 (1005)		
3722		DE1	NETWORK		RB5318	1-234-370-21	RES, NETWORK 22X4 (1005)		
3723		DE1	NETWORK		RB5319	1-234-370-21	RES, NETWORK 22X4 (1005)		
3724		DE1	NETWORK		RB5334	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3725		DE1	NETWORK		RB5335	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3726		DE1	NETWORK		RB5336	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3727		DE1	NETWORK		RB5337	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3728		DE1	CRYSTAL		X5201	1-813-374-21	QUARTS CRYSTAL VIBRATOR		
3729		DE1	CRYSTAL		X5302	1-813-375-21	QUARTZ CRYSTAL UNIT		
3730		M1U	CAPACITOR		C7000	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3731		M1U	CAPACITOR		C7001	1-128-993-21	ELECT CHIP 22UF 20% 10V		
3732		M1U	CAPACITOR		C7002	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3733		M1U	CAPACITOR		C7003	1-128-993-21	ELECT CHIP 22UF 20% 10V		
3734		M1U	CAPACITOR		C7004	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3735		M1U	CAPACITOR		C7005	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3736		M1U	CAPACITOR		C7006	1-128-993-21	ELECT CHIP 22UF 20% 10V		
3737		M1U	CAPACITOR		C7007	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3738		M1U	CAPACITOR		C7008	1-128-993-21	ELECT CHIP 22UF 20% 10V		
3739		M1U	CAPACITOR		C7009	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3740		M1U	CAPACITOR		C7010	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3741		M1U	CAPACITOR		C7011	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3742		M1U	CAPACITOR		C7012	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3743		M1U	CAPACITOR		C7013	1-128-993-21	ELECT CHIP 22UF 20% 10V		
3744		M1U	CAPACITOR		C7014	1-128-993-21	ELECT CHIP 22UF 20% 10V		
3745		M1U	CAPACITOR		C7015	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3746		M1U	CAPACITOR		C7016	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3747		M1U	CAPACITOR		C7017	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3748		M1U	CAPACITOR		C7020	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3749		M1U	CAPACITOR		C7021	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3750		M1U	CAPACITOR		C7022	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3751		M1U	CAPACITOR		C7023	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3752		M1U	CAPACITOR		C7024	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3753		M1U	CAPACITOR		C7025	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3754		M1U	CAPACITOR		C7028	1-164-850-11	CERAMIC CHIP 10PF 0.50PF 50V		
3755		M1U	CAPACITOR		C7029	1-164-850-11	CERAMIC CHIP 10PF 0.50PF 50V		
3756		M1U	CAPACITOR		C7030	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3757		M1U	CAPACITOR		C7031	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3758		M1U	CAPACITOR		C7032	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
3759		M1U	CAPACITOR		C7033	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V		
3760		M1U	CAPACITOR		C7034	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3761		M1U	CAPACITOR		C7035	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3762		M1U	CAPACITOR		C7036	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3763		M1U	CAPACITOR		C7037	1-164-854-11	CERAMIC CHIP 15PF 5.00% 50V		
3764		M1U	CAPACITOR		C7038	1-164-852-11	CERAMIC CHIP 12PF 5.00% 50V		
3765		M1U	CAPACITOR		C7039	1-115-156-11	CERAMIC CHIP 1UF 10V		
3766		M1U	CAPACITOR		C7040	1-107-726-91	CERAMIC CHIP 0.01UF 10.00% 16V		
3767		M1U	CAPACITOR		C7041	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
3768		M1U	CAPACITOR		C7043	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3769		M1U	CAPACITOR		C7044	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3770		M1U	CAPACITOR		C7045	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3771		M1U	CAPACITOR		C7046	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3772		M1U	CAPACITOR		C7047	1-164-872-11	CERAMIC CHIP 82PF 5.00% 50V		
3773		M1U	CAPACITOR		C7048	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3774		M1U	CAPACITOR		C7049	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3775		M1U	CAPACITOR		C7050	1-164-872-11	CERAMIC CHIP 82PF 5.00% 50V		
3776		M1U	CAPACITOR		C7051	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3777		M1U	CAPACITOR		C7052	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
3778		M1U	CAPACITOR		C7053	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
3779		M1U	CAPACITOR		C7054	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
3780		M1U	CAPACITOR		C7055	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
3781		M1U	CAPACITOR		C7056	1-137-987-81	CERAMIC CHIP 0.068UF 10% 10V		
3782		M1U	CAPACITOR		C7057	1-137-987-81	CERAMIC CHIP 0.068UF 10% 10V		
3783		M1U	CAPACITOR		C7058	1-137-987-81	CERAMIC CHIP 0.068UF 10% 10V		
3784		M1U	CAPACITOR		C7059	1-164-942-11	CERAMIC CHIP 0.0068UF 10.00% 16V		
3785		M1U	CAPACITOR		C7060	1-164-942-11	CERAMIC CHIP 0.0068UF 10.00% 16V		
3786		M1U	CAPACITOR		C7061	1-164-942-11	CERAMIC CHIP 0.0068UF 10.00% 16V		
3787		M1U	CAPACITOR		C7062	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3788		M1U	CAPACITOR		C7063	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3789		M1U	CAPACITOR		C7064	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3790		M1U	CAPACITOR		C7067	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3791		M1U	CAPACITOR		C7068	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3792		M1U	CAPACITOR		C7069	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3793		M1U	CAPACITOR		C7070	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3794		M1U	CAPACITOR		C7071	1-128-993-21	ELECT CHIP 22UF 20% 10V		
3795		M1U	CAPACITOR		C7072	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3796		M1U	CAPACITOR		C7073	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3797		M1U	CAPACITOR		C7550	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
3798		M1U	CAPACITOR		C7551	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
3799		M1U	CAPACITOR		C7552	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
3800		M1U	CAPACITOR		C7553	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
3801		M1U	CAPACITOR		C7554	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
3802		M1U	CAPACITOR		C7555	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
3803		M1U	CAPACITOR		C7556	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
3804		M1U	CAPACITOR		C7557	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
3805		M1U	CAPACITOR		C7558	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
3806		M1U	CAPACITOR		C7559	1-164-947-11	CERAMIC CHIP 0.01UF 50V		
3807		M1U	CAPACITOR		C7560	1-164-947-11	CERAMIC CHIP 0.01UF 50V		
3808		M1U	CAPACITOR		C7561	1-164-947-11	CERAMIC CHIP 0.01UF 50V		
3809		M1U	CAPACITOR		C7562	1-164-947-11	CERAMIC CHIP 0.01UF 50V		
3810		M1U	CAPACITOR		C7563	1-164-947-11	CERAMIC CHIP 0.01UF 50V		
3811		M1U	CAPACITOR		C7564	1-164-947-11	CERAMIC CHIP 0.01UF 50V		
3812		M1U	CAPACITOR		C7565	1-164-947-11	CERAMIC CHIP 0.01UF 50V		
3813		M1U	CAPACITOR		C7566	1-164-947-11	CERAMIC CHIP 0.01UF 50V		
3814		M1U	CAPACITOR		C7568	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3815		M1U	CAPACITOR		C7650	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3816		M1U	CAPACITOR		C7651	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3817		M1U	CAPACITOR		C7652	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3818		M1U	CAPACITOR		C7653	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3819		M1U	CAPACITOR		C7654	1-126-208-21	ELECT CHIP 47UF 20.00% 4V		
3820		M1U	CAPACITOR		C7655	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3821		M1U	CAPACITOR		C7656	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3822		M1U	CAPACITOR		C7658	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3823		M1U	CAPACITOR		C7659	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3824		M1U	CAPACITOR		C7660	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3825		M1U	CAPACITOR		C7700	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
3826		M1U	CAPACITOR		C7701	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3827		M1U	CAPACITOR		C7702	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
3828		M1U	CAPACITOR		C7703	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
3829		M1U	CAPACITOR		C7704	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3830		M1U	CAPACITOR		C7705	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3831		M1U	CAPACITOR		C7706	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3832		M1U	CAPACITOR		C7707	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3833		M1U	CAPACITOR		C7708	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3834		M1U	CAPACITOR		C7709	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
3835		M1U	CAPACITOR		C7710	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3836		M1U	CAPACITOR		C7711	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3837		M1U	CAPACITOR		C7712	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3838		M1U	CAPACITOR		C7713	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3839		M1U	CAPACITOR		C7714	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3840		M1U	CAPACITOR		C7715	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3841		M1U	CAPACITOR		C7716	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3842		M1U	CAPACITOR		C7717	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3843		M1U	CAPACITOR		C7718	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3844		M1U	CAPACITOR		C7719	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3845		M1U	CAPACITOR		C7720	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3846		M1U	CAPACITOR		C7721	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3847		M1U	CAPACITOR		C7722	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3848		M1U	CAPACITOR		C7723	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3849		M1U	CAPACITOR		C7724	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3850		M1U	CAPACITOR		C7725	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3851		M1U	CAPACITOR		C7726	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3852		M1U	CAPACITOR		C7727	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3853		M1U	CAPACITOR		C7728	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3854		M1U	CAPACITOR		C7730	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3855		M1U	CAPACITOR		C7731	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3856		M1U	CAPACITOR		C7732	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3857		M1U	CAPACITOR		C7733	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3858		M1U	CAPACITOR		C7734	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3859		M1U	CAPACITOR		C7735	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3860		M1U	CAPACITOR		C7736	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3861		M1U	CAPACITOR		C7737	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3862		M1U	CAPACITOR		C7738	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3863		M1U	CAPACITOR		C7739	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3864		M1U	CAPACITOR		C7740	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3865		M1U	CAPACITOR		C7741	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3866		M1U	CAPACITOR		C7742	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3867		M1U	CAPACITOR		C7743	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3868		M1U	CAPACITOR		C7744	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3869		M1U	CAPACITOR		C7745	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3870		M1U	CAPACITOR		C7746	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3871		M1U	CAPACITOR		C7748	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3872		M1U	CAPACITOR		C7749	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3873		M1U	CAPACITOR		C7750	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
3874		M1U	CAPACITOR		C7752	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3875		M1U	CAPACITOR		C7753	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3876		M1U	CAPACITOR		C7755	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3877		M1U	CAPACITOR		C7756	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V		
3878		M1U	CAPACITOR		C7760	1-128-994-21	ELECT CHIP 47UF 20% 10V		
3879		M1U	CAPACITOR		C7761	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3880		M1U	CAPACITOR		C7763	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
3881		M1U	CAPACITOR		C7764	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3882		M1U	CAPACITOR		C7767	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3883		M1U	CAPACITOR		C7768	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
3884		M1U	CAPACITOR		C7769	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3885		M1U	CAPACITOR		C7954	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3886		M1U	CAPACITOR		C7957	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3887		M1U	CAPACITOR		C7962	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3888		M1U	CAPACITOR		C7963	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3889		M1U	CAPACITOR		C7964	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3890		M1U	CONNECTOR		CN7001	1-779-331-11	CONNECTOR, FFC/FPC 14P		
3891		M1U	CONNECTOR	*	CN7002	1-691-551-11	PIN, CONNECTOR (SMD) 8P		
3892		M1U	CONNECTOR	*	CN7650	1-818-562-21	CONNECTOR (RECEPTACLE) 17P		
3893		M1U	DIODE		D7000	8-719-081-97	DIODE MMDL914T1		
3894		M1U	DIODE		D7001	8-719-050-37	DIODE M1MA152WA-T1		
3895		M1U	DIODE		D7002	8-719-050-38	DIODE M1MA152WK-T1		
3896		M1U	DIODE		D7003	8-719-050-37	DIODE M1MA152WA-T1		
3897		M1U	DIODE		D7004	8-719-050-38	DIODE M1MA152WK-T1		
3898		M1U	DIODE		D7005	8-719-050-38	DIODE M1MA152WK-T1		
3899		M1U	DIODE		D7006	8-719-050-38	DIODE M1MA152WK-T1		
3900		M1U	DIODE		D7007	8-719-083-58	DIODE UDZSTE-173.9B		
3901		M1U	DIODE		D7008	8-719-083-58	DIODE UDZSTE-173.9B		
3902		M1U	DIODE		D7009	8-719-050-37	DIODE M1MA152WA-T1		
3903		M1U	DIODE		D7010	8-719-050-38	DIODE M1MA152WK-T1		
3904		M1U	DIODE		D7011	8-719-050-38	DIODE M1MA152WK-T1		
3905		M1U	FERRITE BEAD		FB7000	1-469-082-21	FERRITE 0UH		
3906		M1U	FERRITE BEAD		FB7001	1-469-082-21	FERRITE 0UH		
3907		M1U	FERRITE BEAD		FB7002	1-469-082-21	FERRITE 0UH		
3908		M1U	FERRITE BEAD		FB7003	1-469-082-21	FERRITE 0UH		
3909		M1U	FERRITE BEAD		FB7004	1-469-082-21	FERRITE 0UH		
3910		M1U	FERRITE BEAD		FB7005	1-469-082-21	FERRITE 0UH		
3911		M1U	FERRITE BEAD		FB7006	1-469-082-21	FERRITE 0UH		
3912		M1U	FERRITE BEAD		FB7007	1-469-082-21	FERRITE 0UH		
3913		M1U	FERRITE BEAD		FB7008	1-469-082-21	FERRITE 0UH		
3914		M1U	FERRITE BEAD		FB7009	1-469-082-21	FERRITE 0UH		
3915		M1U	FERRITE BEAD		FB7010	1-469-082-21	FERRITE 0UH		
3916		M1U	FERRITE BEAD		FB7011	1-469-082-21	FERRITE 0UH		
3917		M1U	FERRITE BEAD		FB7012	1-469-082-21	FERRITE 0UH		
3918		M1U	FERRITE BEAD		FB7013	1-469-082-21	FERRITE 0UH		
3919		M1U	FERRITE BEAD		FB7014	1-469-082-21	FERRITE 0UH		
3920		M1U	FERRITE BEAD		FB7015	1-469-082-21	FERRITE 0UH		
3921		M1U	FERRITE BEAD		FB7016	1-469-082-21	FERRITE 0UH		
3922		M1U	FERRITE BEAD		FB7017	1-469-082-21	FERRITE 0UH		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3923		M1U	FERRITE BEAD		FB7018	1-469-082-21	FERRITE 0UH		
3924		M1U	FERRITE BEAD		FB7019	1-469-082-21	FERRITE 0UH		
3925		M1U	FERRITE BEAD		FB7020	1-469-082-21	FERRITE 0UH		
3926		M1U	FERRITE BEAD		FB7021	1-469-082-21	FERRITE 0UH		
3927		M1U	FERRITE BEAD		FB7022	1-469-082-21	FERRITE 0UH		
3928		M1U	FERRITE BEAD		FB7023	1-469-082-21	FERRITE 0UH		
3929		M1U	FERRITE BEAD		FB7024	1-469-082-21	FERRITE 0UH		
3930		M1U	FERRITE BEAD		FB7025	1-469-082-21	FERRITE 0UH		
3931		M1U	FERRITE BEAD		FB7026	1-469-082-21	FERRITE 0UH		
3932		M1U	FERRITE BEAD		FB7027	1-469-082-21	FERRITE 0UH		
3933		M1U	FERRITE BEAD		FB7028	1-469-082-21	FERRITE 0UH		
3934		M1U	FERRITE BEAD		FB7029	1-469-082-21	FERRITE 0UH		
3935		M1U	FERRITE BEAD		FB7030	1-469-082-21	FERRITE 0UH		
3936		M1U	FERRITE BEAD		FB7031	1-469-082-21	FERRITE 0UH		
3937		M1U	FERRITE BEAD		FB7032	1-469-082-21	FERRITE 0UH		
3938		M1U	FERRITE BEAD		FB7033	1-469-082-21	FERRITE 0UH		
3939		M1U	FERRITE BEAD		FB7034	1-469-082-21	FERRITE 0UH		
3940		M1U	FERRITE BEAD		FB7035	1-469-082-21	FERRITE 0UH		
3941		M1U	FERRITE BEAD		FB7036	1-469-082-21	FERRITE 0UH		
3942		M1U	FERRITE BEAD		FB7037	1-469-082-21	FERRITE 0UH		
3943		M1U	FERRITE BEAD		FB7038	1-469-082-21	FERRITE 0UH		
3944		M1U	FERRITE BEAD		FB7040	1-469-082-21	FERRITE 0UH		
3945		M1U	FERRITE BEAD		FB7041	1-469-082-21	FERRITE 0UH		
3946		M1U	FERRITE BEAD		FB7042	1-469-082-21	FERRITE 0UH		
3947		M1U	FERRITE BEAD		FB7043	1-469-082-21	FERRITE 0UH		
3948		M1U	FERRITE BEAD		FB7044	1-469-082-21	FERRITE 0UH		
3949		M1U	FERRITE BEAD		FB7045	1-469-082-21	FERRITE 0UH		
3950		M1U	FERRITE BEAD		FB7046	1-469-082-21	FERRITE 0UH		
3951		M1U	FERRITE BEAD		FB7047	1-469-082-21	FERRITE 0UH		
3952		M1U	FERRITE BEAD		FB7048	1-469-082-21	FERRITE 0UH		
3953		M1U	FERRITE BEAD		FB7049	1-469-082-21	FERRITE 0UH		
3954		M1U	FERRITE BEAD		FB7050	1-469-082-21	FERRITE 0UH		
3955		M1U	FERRITE BEAD		FB7051	1-469-082-21	FERRITE 0UH		
3956		M1U	FERRITE BEAD		FB7052	1-469-082-21	FERRITE 0UH		
3957		M1U	FERRITE BEAD		FB7053	1-469-082-21	FERRITE 0UH		
3958		M1U	FERRITE BEAD		FB7056	1-469-082-21	FERRITE 0UH		
3959		M1U	FERRITE BEAD		FB7057	1-469-082-21	FERRITE 0UH		
3960		M1U	FERRITE BEAD		FB7650	1-414-921-11	FERRITE 0UH		
3961		M1U	FERRITE BEAD		FB7651	1-414-921-11	FERRITE 0UH		
3962		M1U	FERRITE BEAD		FB7652	1-414-921-11	FERRITE 0UH		
3963		M1U	FERRITE BEAD		FB7950	1-414-445-11	FERRITE 0UH		
3964		M1U	FILTER		FL7700	1-234-560-21	FILTER, LOW PASS		
3965		M1U	FILTER		FL7701	1-234-560-21	FILTER, LOW PASS		
3966		M1U	IC		IC7000	6-704-879-01	IC NJU7223DL1-25		
3967		M1U	IC		IC7001	8-759-695-94	IC TAR5S33(TE85R)		
3968		M1U	IC		IC7002	8-753-236-03	IC CXQ91F318A-106R		
3969		M1U	IC		IC7003	6-801-402-01	IC BD4729GTR		
3970		M1U	IC		IC7004	6-702-688-01	IC M24C64-WMN6T(B)		
3971		M1U	IC		IC7005	8-759-596-29	IC SN74LV4066APWR		
3972		M1U	IC		IC7006	6-703-224-01	IC S-80828CNNB-B8NT2G		
3973		M1U	IC		IC7551	6-706-535-01	IC CXD9827GP		
3974		M1U	IC		IC7552	6-700-599-01	IC TC7SA08FU(TE85R)		
3975		M1U	IC		IC7650	6-704-632-01	IC THC63LVD104A		
3976		M1U	IC		IC7700	6-705-403-01	IC PQ070XZ01ZPH		
3977		M1U	IC		IC7701	8-753-209-17	IC CXD3807GB		
3978		M1U	IC		IC7702	8-759-680-92	IC MAX4018EEE-TG068		
3979		M1U	COIL		L7000	1-469-555-21	INDUCTOR 10UH		
3980		M1U	COIL		L7001	1-469-555-21	INDUCTOR 10UH		
3981		M1U	COIL		L7002	1-469-555-21	INDUCTOR 10UH		
3982		M1U	COIL		L7003	1-469-555-21	INDUCTOR 10UH		
3983		M1U	COIL		L7004	1-469-555-21	INDUCTOR 10UH		
3984		M1U	COIL		L7005	1-469-555-21	INDUCTOR 10UH		
3985		M1U	COIL		L7009	1-469-549-21	INDUCTOR 1UH		
3986		M1U	COIL		L7550	1-469-555-21	INDUCTOR 10UH		
3987		M1U	COIL		L7552	1-469-549-21	INDUCTOR 1UH		
3988		M1U	COIL		L7700	1-469-549-21	INDUCTOR 1UH		
3989		M1U	COIL		L7701	1-469-549-21	INDUCTOR 1UH		
3990		M1U	COIL		L7702	1-469-549-21	INDUCTOR 1UH		
3991		M1U	COIL		L7703	1-469-549-21	INDUCTOR 1UH		
3992		M1U	COIL		L7704	1-469-549-21	INDUCTOR 1UH		
3993		M1U	COIL		L7705	1-469-549-21	INDUCTOR 1UH		
3994		M1U	COIL		L7706	1-469-549-21	INDUCTOR 1UH		
3995		M1U	COIL		L7707	1-469-549-21	INDUCTOR 1UH		
3996		M1U	COIL		L7709	1-469-549-21	INDUCTOR 1UH		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3997		M1U	COIL		L7950	1-469-555-21	INDUCTOR 10UH		
3998		M1U	TRANSISTOR		Q7002	8-729-029-14	TRANSISTOR DTC144EUA-T106		
3999		M1U	TRANSISTOR		Q7003	8-729-907-00	TRANSISTOR DTC114EU		
4000		M1U	TRANSISTOR		Q7004	6-550-585-01	TRANSISTOR 2PC4081R-115		
4001		M1U	TRANSISTOR		Q7005	8-729-901-47	TRANSISTOR DTA143EK		
4002		M1U	TRANSISTOR		Q7006	6-550-585-01	TRANSISTOR 2PC4081R-115		
4003		M1U	TRANSISTOR		Q7007	6-550-585-01	TRANSISTOR 2PC4081R-115		
4004		M1U	TRANSISTOR		Q7008	6-550-585-01	TRANSISTOR 2PC4081R-115		
4005		M1U	TRANSISTOR		Q7009	6-550-586-01	TRANSISTOR 2PA1576R-115		
4006		M1U	TRANSISTOR		Q7010	8-729-029-10	TRANSISTOR DTC143TUA-T106		
4007		M1U	TRANSISTOR		Q7011	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
4008		M1U	TRANSISTOR		Q7012	8-729-907-00	TRANSISTOR DTC114EU		
4009		M1U	TRANSISTOR		Q7013	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
4010		M1U	TRANSISTOR		Q7014	8-729-029-10	TRANSISTOR DTC143TUA-T106		
4011		M1U	TRANSISTOR		Q7015	6-550-585-01	TRANSISTOR 2PC4081R-115		
4012		M1U	TRANSISTOR		Q7017	6-550-586-01	TRANSISTOR 2PA1576R-115		
4013		M1U	TRANSISTOR		Q7018	8-729-028-72	TRANSISTOR DTA113ZUA-T106		
4014		M1U	TRANSISTOR		Q7019	6-550-585-01	TRANSISTOR 2PC4081R-115		
4015		M1U	TRANSISTOR		Q7020	6-550-585-01	TRANSISTOR 2PC4081R-115		
4016		M1U	TRANSISTOR		Q7021	6-550-585-01	TRANSISTOR 2PC4081R-115		
4017		M1U	TRANSISTOR		Q7022	8-729-122-63	TRANSISTOR 2SA1226-E4		
4018		M1U	TRANSISTOR		Q7024	8-729-122-63	TRANSISTOR 2SA1226-E4		
4019		M1U	TRANSISTOR		Q7025	6-550-585-01	TRANSISTOR 2PC4081R-115		
4020		M1U	TRANSISTOR		Q7026	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
4021		M1U	TRANSISTOR		Q7027	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
4022		M1U	TRANSISTOR		Q7028	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
4023		M1U	TRANSISTOR		Q7029	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
4024		M1U	TRANSISTOR		Q7034	6-550-585-01	TRANSISTOR 2PC4081R-115		
4025		M1U	TRANSISTOR		Q7035	6-550-586-01	TRANSISTOR 2PA1576R-115		
4026		M1U	TRANSISTOR		Q7036	8-729-117-73	TRANSISTOR 2SC4178-F14		
4027		M1U	TRANSISTOR		Q7037	8-729-117-73	TRANSISTOR 2SC4178-F14		
4028		M1U	TRANSISTOR		Q7038	6-550-585-01	TRANSISTOR 2PC4081R-115		
4029		M1U	TRANSISTOR		Q7700	8-729-122-63	TRANSISTOR 2SA1226-E4		
4030		M1U	TRANSISTOR		Q7701	8-729-122-63	TRANSISTOR 2SA1226-E4		
4031		M1U	TRANSISTOR		Q7702	8-729-122-63	TRANSISTOR 2SA1226-E4		
4032		M1U	TRANSISTOR		Q7703	8-729-122-63	TRANSISTOR 2SA1226-E4		
4033		M1U	TRANSISTOR		Q7704	8-729-117-73	TRANSISTOR 2SC4178-F14		
4034		M1U	TRANSISTOR		Q7708	8-729-117-73	TRANSISTOR 2SC4178-F14		
4035		M1U	TRANSISTOR		Q7709	8-729-122-63	TRANSISTOR 2SA1226-E4		
4036		M1U	TRANSISTOR		Q7713	8-729-122-63	TRANSISTOR 2SA1226-E4		
4037		M1U	TRANSISTOR		Q7715	8-729-117-73	TRANSISTOR 2SC4178-F14		
4038		M1U	RESISTOR		R7000	1-218-985-11	RES-CHIP 470K 5% 1/16W		
4039		M1U	RESISTOR		R7009	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
4040		M1U	RESISTOR		R7010	1-218-934-11	RES-CHIP 27 5% 1/16W		
4041		M1U	RESISTOR		R7011	1-218-934-11	RES-CHIP 27 5% 1/16W		
4042		M1U	RESISTOR		R7012	1-218-933-11	RES-CHIP 22 5% 1/16W		
4043		M1U	RESISTOR		R7013	1-218-937-11	RES-CHIP 47 5% 1/16W		
4044		M1U	RESISTOR		R7014	1-218-937-11	RES-CHIP 47 5% 1/16W		
4045		M1U	RESISTOR		R7015	1-218-937-11	RES-CHIP 47 5% 1/16W		
4046		M1U	RESISTOR		R7016	1-218-973-11	RES-CHIP 47K 5% 1/16W		
4047		M1U	RESISTOR		R7021	1-218-933-11	RES-CHIP 22 5% 1/16W		
4048		M1U	RESISTOR		R7023	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4049		M1U	RESISTOR		R7024	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4050		M1U	RESISTOR		R7025	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4051		M1U	RESISTOR		R7026	1-218-937-11	RES-CHIP 47 5% 1/16W		
4052		M1U	RESISTOR		R7027	1-218-937-11	RES-CHIP 47 5% 1/16W		
4053		M1U	RESISTOR		R7028	1-218-937-11	RES-CHIP 47 5% 1/16W		
4054		M1U	RESISTOR		R7029	1-218-937-11	RES-CHIP 47 5% 1/16W		
4055		M1U	RESISTOR		R7030	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
4056		M1U	RESISTOR		R7031	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4057		M1U	RESISTOR		R7032	1-218-937-11	RES-CHIP 47 5% 1/16W		
4058		M1U	RESISTOR		R7033	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4059		M1U	RESISTOR		R7034	1-218-937-11	RES-CHIP 47 5% 1/16W		
4060		M1U	RESISTOR		R7035	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4061		M1U	RESISTOR		R7036	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4062		M1U	RESISTOR		R7037	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4063		M1U	RESISTOR		R7038	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4064		M1U	RESISTOR		R7040	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4065		M1U	RESISTOR		R7042	1-218-941-81	RES-CHIP 100 5% 1/16W		
4066		M1U	RESISTOR		R7043	1-218-937-11	RES-CHIP 47 5% 1/16W		
4067		M1U	RESISTOR		R7045	1-218-941-81	RES-CHIP 100 5% 1/16W		
4068		M1U	RESISTOR		R7046	1-218-937-11	RES-CHIP 47 5% 1/16W		
4069		M1U	RESISTOR		R7047	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4070		M1U	RESISTOR		R7048	1-218-965-11	RES-CHIP 10K 5% 1/16W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4071		M1U	RESISTOR		R7049	1-208-699-11	METAL CHIP 4.7K 0.5% 1/16W		
4072		M1U	RESISTOR		R7050	1-218-941-81	RES-CHIP 100 5% 1/16W		
4073		M1U	RESISTOR		R7051	1-218-937-11	RES-CHIP 47 5% 1/16W		
4074		M1U	RESISTOR		R7052	1-208-699-11	METAL CHIP 4.7K 0.5% 1/16W		
4075		M1U	RESISTOR		R7053	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4076		M1U	RESISTOR		R7054	1-218-937-11	RES-CHIP 47 5% 1/16W		
4077		M1U	RESISTOR		R7055	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4078		M1U	RESISTOR		R7056	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4079		M1U	RESISTOR		R7058	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4080		M1U	RESISTOR		R7059	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4081		M1U	RESISTOR		R7061	1-218-983-11	RES-CHIP 330K 5% 1/16W		
4082		M1U	RESISTOR		R7062	1-219-570-11	METAL CHIP 10M 5% 1/10W		
4083		M1U	RESISTOR		R7064	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4084		M1U	RESISTOR		R7066	1-218-937-11	RES-CHIP 47 5% 1/16W		
4085		M1U	RESISTOR		R7067	1-218-967-11	RES-CHIP 15K 5% 1/16W		
4086		M1U	RESISTOR		R7068	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4087		M1U	RESISTOR		R7069	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4088		M1U	RESISTOR		R7070	1-208-713-11	METAL CHIP 18K 0.5% 1/16W		
4089		M1U	RESISTOR		R7071	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4090		M1U	RESISTOR		R7072	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4091		M1U	RESISTOR		R7073	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4092		M1U	RESISTOR		R7074	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4093		M1U	RESISTOR		R7075	1-218-937-11	RES-CHIP 47 5% 1/16W		
4094		M1U	RESISTOR		R7076	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4095		M1U	RESISTOR		R7077	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4096		M1U	RESISTOR		R7078	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4097		M1U	RESISTOR		R7081	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4098		M1U	RESISTOR		R7085	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
4099		M1U	RESISTOR		R7086	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4100		M1U	RESISTOR		R7087	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4101		M1U	RESISTOR		R7088	1-218-937-11	RES-CHIP 47 5% 1/16W		
4102		M1U	RESISTOR		R7089	1-218-937-11	RES-CHIP 47 5% 1/16W		
4103		M1U	RESISTOR		R7090	1-218-937-11	RES-CHIP 47 5% 1/16W		
4104		M1U	RESISTOR		R7091	1-218-937-11	RES-CHIP 47 5% 1/16W		
4105		M1U	RESISTOR		R7092	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4106		M1U	RESISTOR		R7093	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4107		M1U	RESISTOR		R7094	1-218-937-11	RES-CHIP 47 5% 1/16W		
4108		M1U	RESISTOR		R7096	1-218-941-81	RES-CHIP 100 5% 1/16W		
4109		M1U	RESISTOR		R7098	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4110		M1U	RESISTOR		R7100	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4111		M1U	RESISTOR		R7101	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4112		M1U	RESISTOR		R7104	1-218-941-81	RES-CHIP 100 5% 1/16W		
4113		M1U	RESISTOR		R7105	1-218-941-81	RES-CHIP 100 5% 1/16W		
4114		M1U	RESISTOR		R7106	1-218-933-11	RES-CHIP 22 5% 1/16W		
4115		M1U	RESISTOR		R7107	1-218-967-11	RES-CHIP 15K 5% 1/16W		
4116		M1U	RESISTOR		R7108	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
4117		M1U	RESISTOR		R7109	1-220-804-11	RES-CHIP 2.2M 5% 1/16W		
4118		M1U	RESISTOR		R7110	1-218-969-11	RES-CHIP 22K 5% 1/16W		
4119		M1U	RESISTOR		R7111	1-218-937-11	RES-CHIP 47 5% 1/16W		
4120		M1U	RESISTOR		R7112	1-218-977-11	RES-CHIP 100K 5% 1/16W		
4121		M1U	RESISTOR		R7113	1-218-969-11	RES-CHIP 22K 5% 1/16W		
4122		M1U	RESISTOR		R7114	1-218-969-11	RES-CHIP 22K 5% 1/16W		
4123		M1U	RESISTOR		R7115	1-218-937-11	RES-CHIP 47 5% 1/16W		
4124		M1U	RESISTOR		R7116	1-218-973-11	RES-CHIP 47K 5% 1/16W		
4125		M1U	RESISTOR		R7117	1-218-973-11	RES-CHIP 47K 5% 1/16W		
4126		M1U	RESISTOR		R7118	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4127		M1U	RESISTOR		R7119	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4128		M1U	RESISTOR		R7120	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4129		M1U	RESISTOR		R7121	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4130		M1U	RESISTOR		R7122	1-218-941-81	RES-CHIP 100 5% 1/16W		
4131		M1U	RESISTOR		R7123	1-218-941-81	RES-CHIP 100 5% 1/16W		
4132		M1U	RESISTOR		R7124	1-218-941-81	RES-CHIP 100 5% 1/16W		
4133		M1U	RESISTOR		R7125	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4134		M1U	RESISTOR		R7126	1-218-937-11	RES-CHIP 47 5% 1/16W		
4135		M1U	RESISTOR		R7127	1-218-973-11	RES-CHIP 47K 5% 1/16W		
4136		M1U	RESISTOR		R7128	1-218-949-11	RES-CHIP 470 5% 1/16W		
4137		M1U	RESISTOR		R7129	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4138		M1U	RESISTOR		R7130	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4139		M1U	RESISTOR		R7131	1-216-817-11	METAL CHIP 470 5% 1/10W		
4140		M1U	RESISTOR		R7132	1-218-973-11	RES-CHIP 47K 5% 1/16W		
4141		M1U	RESISTOR		R7133	1-218-977-11	RES-CHIP 100K 5% 1/16W		
4142		M1U	RESISTOR		R7134	1-218-973-11	RES-CHIP 47K 5% 1/16W		
4143		M1U	RESISTOR		R7135	1-218-990-11	SHORT CHIP 0		
4144		M1U	RESISTOR		R7136	1-218-990-11	SHORT CHIP 0		

No.	#	Board	Type	Δ/\ast	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4145		M1U	RESISTOR		R7137	1-218-973-11	RES-CHIP 47K 5% 1/16W		
4146		M1U	RESISTOR		R7138	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4147		M1U	RESISTOR		R7139	1-218-973-11	RES-CHIP 47K 5% 1/16W		
4148		M1U	RESISTOR		R7140	1-218-990-11	SHORT CHIP 0		
4149		M1U	RESISTOR		R7141	1-218-990-11	SHORT CHIP 0		
4150		M1U	RESISTOR		R7142	1-218-956-11	RES-CHIP 1.8K 5% 1/16W		
4151		M1U	RESISTOR		R7145	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
4152		M1U	RESISTOR		R7146	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4153		M1U	RESISTOR		R7147	1-218-973-11	RES-CHIP 47K 5% 1/16W		
4154		M1U	RESISTOR		R7148	1-218-933-11	RES-CHIP 22 5% 1/16W		
4155		M1U	RESISTOR		R7150	1-218-949-11	RES-CHIP 470 5% 1/16W		
4156		M1U	RESISTOR		R7151	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
4157		M1U	RESISTOR		R7152	1-218-990-11	SHORT CHIP 0		
4158		M1U	RESISTOR		R7154	1-218-933-11	RES-CHIP 22 5% 1/16W		
4159		M1U	RESISTOR		R7155	1-218-973-11	RES-CHIP 47K 5% 1/16W		
4160		M1U	RESISTOR		R7156	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4161		M1U	RESISTOR		R7158	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4162		M1U	RESISTOR		R7159	1-218-990-11	SHORT CHIP 0		
4163		M1U	RESISTOR		R7160	1-218-937-11	RES-CHIP 47 5% 1/16W		
4164		M1U	RESISTOR		R7161	1-218-937-11	RES-CHIP 47 5% 1/16W		
4165		M1U	RESISTOR		R7162	1-218-990-11	SHORT CHIP 0		
4166		M1U	RESISTOR		R7163	1-218-989-11	RES-CHIP 1M 5% 1/16W		
4167		M1U	RESISTOR		R7164	1-208-691-11	METAL CHIP 2.2K 0.5% 1/16W		
4168		M1U	RESISTOR		R7165	1-208-699-11	METAL CHIP 4.7K 0.5% 1/16W		
4169		M1U	RESISTOR		R7166	1-208-711-11	METAL CHIP 15K 0.5% 1/16W		
4170		M1U	RESISTOR		R7167	1-218-937-11	RES-CHIP 47 5% 1/16W		
4171		M1U	RESISTOR		R7168	1-218-849-11	METAL CHIP 1.2K 0.5% 1/10W		
4172		M1U	RESISTOR		R7169	1-218-989-11	RES-CHIP 1M 5% 1/16W		
4173		M1U	RESISTOR		R7170	1-208-691-11	METAL CHIP 2.2K 0.5% 1/16W		
4174		M1U	RESISTOR		R7171	1-208-699-11	METAL CHIP 4.7K 0.5% 1/16W		
4175		M1U	RESISTOR		R7172	1-208-711-11	METAL CHIP 15K 0.5% 1/16W		
4176		M1U	RESISTOR		R7173	1-218-937-11	RES-CHIP 47 5% 1/16W		
4177		M1U	RESISTOR		R7174	1-218-849-11	METAL CHIP 1.2K 0.5% 1/10W		
4178		M1U	RESISTOR		R7175	1-218-990-11	SHORT CHIP 0		
4179		M1U	RESISTOR		R7176	1-218-990-11	SHORT CHIP 0		
4180		M1U	RESISTOR		R7177	1-218-990-11	SHORT CHIP 0		
4181		M1U	RESISTOR		R7183	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4182		M1U	RESISTOR		R7184	1-218-977-11	RES-CHIP 100K 5% 1/16W		
4183		M1U	RESISTOR		R7185	1-218-977-11	RES-CHIP 100K 5% 1/16W		
4184		M1U	RESISTOR		R7186	1-218-990-11	SHORT CHIP 0		
4185		M1U	RESISTOR		R7187	1-218-990-11	SHORT CHIP 0		
4186		M1U	RESISTOR		R7188	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
4187		M1U	RESISTOR		R7189	1-218-967-11	RES-CHIP 15K 5% 1/16W		
4188		M1U	RESISTOR		R7190	1-218-990-11	SHORT CHIP 0		
4189		M1U	RESISTOR		R7191	1-218-941-81	RES-CHIP 100 5% 1/16W		
4190		M1U	RESISTOR		R7192	1-218-941-81	RES-CHIP 100 5% 1/16W		
4191		M1U	RESISTOR		R7193	1-218-941-81	RES-CHIP 100 5% 1/16W		
4192		M1U	RESISTOR		R7194	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4193		M1U	RESISTOR		R7197	1-218-990-11	SHORT CHIP 0		
4194		M1U	RESISTOR		R7200	1-218-990-11	SHORT CHIP 0		
4195		M1U	RESISTOR		R7201	1-218-977-11	RES-CHIP 100K 5% 1/16W		
4196		M1U	RESISTOR		R7202	1-218-973-11	RES-CHIP 47K 5% 1/16W		
4197		M1U	RESISTOR		R7203	1-218-973-11	RES-CHIP 47K 5% 1/16W		
4198		M1U	RESISTOR		R7204	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4199		M1U	RESISTOR		R7205	1-218-849-11	METAL CHIP 1.2K 0.5% 1/10W		
4200		M1U	RESISTOR		R7206	1-218-849-11	METAL CHIP 1.2K 0.5% 1/10W		
4201		M1U	RESISTOR		R7207	1-218-849-11	METAL CHIP 1.2K 0.5% 1/10W		
4202		M1U	RESISTOR		R7208	1-218-945-11	METAL CHIP 220 5% 1/16W		
4203		M1U	RESISTOR		R7209	1-218-945-11	METAL CHIP 220 5% 1/16W		
4204		M1U	RESISTOR		R7210	1-218-945-11	METAL CHIP 220 5% 1/16W		
4205		M1U	RESISTOR		R7211	1-218-941-81	RES-CHIP 100 5% 1/16W		
4206		M1U	RESISTOR		R7212	1-218-941-81	RES-CHIP 100 5% 1/16W		
4207		M1U	RESISTOR		R7213	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4208		M1U	RESISTOR		R7214	1-218-937-11	RES-CHIP 47 5% 1/16W		
4209		M1U	RESISTOR		R7215	1-218-937-11	RES-CHIP 47 5% 1/16W		
4210		M1U	RESISTOR		R7216	1-218-937-11	RES-CHIP 47 5% 1/16W		
4211		M1U	RESISTOR		R7217	1-218-937-11	RES-CHIP 47 5% 1/16W		
4212		M1U	RESISTOR		R7218	1-218-990-11	SHORT CHIP 0		
4213		M1U	RESISTOR		R7220	1-218-990-11	SHORT CHIP 0		
4214		M1U	RESISTOR		R7221	1-218-990-11	SHORT CHIP 0		
4215		M1U	RESISTOR		R7230	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4216		M1U	RESISTOR		R7231	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4217		M1U	RESISTOR		R7232	1-218-990-11	SHORT CHIP 0		
4218		M1U	RESISTOR		R7233	1-218-990-11	SHORT CHIP 0		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4219		M1U	RESISTOR		R7234	1-218-933-11	RES-CHIP 22 5% 1/16W		
4220		M1U	RESISTOR		R7235	1-218-933-11	RES-CHIP 22 5% 1/16W		
4221		M1U	RESISTOR		R7240	1-218-933-11	RES-CHIP 22 5% 1/16W		
4222		M1U	RESISTOR		R7241	1-218-933-11	RES-CHIP 22 5% 1/16W		
4223		M1U	RESISTOR		R7242	1-218-990-11	SHORT CHIP 0		
4224		M1U	RESISTOR		R7243	1-218-933-11	RES-CHIP 22 5% 1/16W		
4225		M1U	RESISTOR		R7245	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
4226		M1U	RESISTOR		R7246	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
4227		M1U	RESISTOR		R7247	1-218-990-11	SHORT CHIP 0		
4228		M1U	RESISTOR		R7248	1-218-945-11	METAL CHIP 220 5% 1/16W		
4229		M1U	RESISTOR		R7249	1-208-671-11	METAL CHIP 330 0.5% 1/16W		
4230		M1U	RESISTOR		R7250	1-218-990-11	SHORT CHIP 0		
4231		M1U	RESISTOR		R7251	1-218-945-11	METAL CHIP 220 5% 1/16W		
4232		M1U	RESISTOR		R7252	1-208-671-11	METAL CHIP 330 0.5% 1/16W		
4233		M1U	RESISTOR		R7253	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4234		M1U	RESISTOR		R7254	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4235		M1U	RESISTOR		R7255	1-218-990-11	SHORT CHIP 0		
4236		M1U	RESISTOR		R7257	1-218-990-11	SHORT CHIP 0		
4237		M1U	RESISTOR		R7258	1-218-990-11	SHORT CHIP 0		
4238		M1U	RESISTOR		R7259	1-218-990-11	SHORT CHIP 0		
4239		M1U	RESISTOR		R7261	1-218-990-11	SHORT CHIP 0		
4240		M1U	RESISTOR		R7262	1-218-990-11	SHORT CHIP 0		
4241		M1U	RESISTOR		R7264	1-218-990-11	SHORT CHIP 0		
4242		M1U	RESISTOR		R7265	1-218-933-11	RES-CHIP 22 5% 1/16W		
4243		M1U	RESISTOR		R7266	1-218-933-11	RES-CHIP 22 5% 1/16W		
4244		M1U	RESISTOR		R7267	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
4245		M1U	RESISTOR		R7268	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4246		M1U	RESISTOR		R7270	1-216-864-11	SHORT CHIP 0		
4247		M1U	RESISTOR		R7271	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4248		M1U	RESISTOR		R7272	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4249		M1U	RESISTOR		R7554	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4250		M1U	RESISTOR		R7555	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4251		M1U	RESISTOR		R7556	1-218-933-11	RES-CHIP 22 5% 1/16W		
4252		M1U	RESISTOR		R7557	1-218-933-11	RES-CHIP 22 5% 1/16W		
4253		M1U	RESISTOR		R7558	1-218-933-11	RES-CHIP 22 5% 1/16W		
4254		M1U	RESISTOR		R7559	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4255		M1U	RESISTOR		R7560	1-218-933-11	RES-CHIP 22 5% 1/16W		
4256		M1U	RESISTOR		R7561	1-218-933-11	RES-CHIP 22 5% 1/16W		
4257		M1U	RESISTOR		R7562	1-218-933-11	RES-CHIP 22 5% 1/16W		
4258		M1U	RESISTOR		R7563	1-218-933-11	RES-CHIP 22 5% 1/16W		
4259		M1U	RESISTOR		R7564	1-218-933-11	RES-CHIP 22 5% 1/16W		
4260		M1U	RESISTOR		R7565	1-218-933-11	RES-CHIP 22 5% 1/16W		
4261		M1U	RESISTOR		R7567	1-218-990-11	SHORT CHIP 0		
4262		M1U	RESISTOR		R7569	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4263		M1U	RESISTOR		R7570	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4264		M1U	RESISTOR		R7571	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4265		M1U	RESISTOR		R7572	1-218-937-11	RES-CHIP 47 5% 1/16W		
4266		M1U	RESISTOR		R7573	1-218-937-11	RES-CHIP 47 5% 1/16W		
4267		M1U	RESISTOR		R7574	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4268		M1U	RESISTOR		R7577	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4269		M1U	RESISTOR		R7578	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4270		M1U	RESISTOR		R7580	1-218-929-11	RES-CHIP 10 5% 1/16W		
4271		M1U	RESISTOR		R7581	1-218-929-11	RES-CHIP 10 5% 1/16W		
4272		M1U	RESISTOR		R7582	1-218-990-11	SHORT CHIP 0		
4273		M1U	RESISTOR		R7585	1-218-990-11	SHORT CHIP 0		
4274		M1U	RESISTOR		R7586	1-218-990-11	SHORT CHIP 0		
4275		M1U	RESISTOR		R7650	1-216-809-11	METAL CHIP 100 5% 1/10W		
4276		M1U	RESISTOR		R7651	1-216-809-11	METAL CHIP 100 5% 1/10W		
4277		M1U	RESISTOR		R7652	1-216-809-11	METAL CHIP 100 5% 1/10W		
4278		M1U	RESISTOR		R7653	1-216-809-11	METAL CHIP 100 5% 1/10W		
4279		M1U	RESISTOR		R7654	1-216-809-11	METAL CHIP 100 5% 1/10W		
4280		M1U	RESISTOR		R7655	1-216-809-11	METAL CHIP 100 5% 1/10W		
4281		M1U	RESISTOR		R7656	1-218-933-11	RES-CHIP 22 5% 1/16W		
4282		M1U	RESISTOR		R7657	1-218-933-11	RES-CHIP 22 5% 1/16W		
4283		M1U	RESISTOR		R7659	1-216-295-91	SHORT CHIP 0		
4284		M1U	RESISTOR		R7660	1-218-977-11	RES-CHIP 100K 5% 1/16W		
4285		M1U	RESISTOR		R7661	1-218-933-11	RES-CHIP 22 5% 1/16W		
4286		M1U	RESISTOR		R7700	1-218-990-11	SHORT CHIP 0		
4287		M1U	RESISTOR		R7701	1-218-990-11	SHORT CHIP 0		
4288		M1U	RESISTOR		R7702	1-218-990-11	SHORT CHIP 0		
4289		M1U	RESISTOR		R7706	1-218-933-11	RES-CHIP 22 5% 1/16W		
4290		M1U	RESISTOR		R7707	1-218-933-11	RES-CHIP 22 5% 1/16W		
4291		M1U	RESISTOR		R7708	1-218-933-11	RES-CHIP 22 5% 1/16W		
4292		M1U	RESISTOR		R7709	1-218-929-11	RES-CHIP 10 5% 1/16W		

No.	#	Board	Type	Δ/\ast	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4293		M1U	RESISTOR		R7712	1-218-958-11	RES-CHIP 2.7K 5% 1/16W		
4294		M1U	RESISTOR		R7713	1-218-971-11	RES-CHIP 33K 5% 1/16W		
4295		M1U	RESISTOR		R7714	1-218-990-11	SHORT CHIP 0		
4296		M1U	RESISTOR		R7716	1-218-990-11	SHORT CHIP 0		
4297		M1U	RESISTOR		R7717	1-218-929-11	RES-CHIP 10 5% 1/16W		
4298		M1U	RESISTOR		R7718	1-218-929-11	RES-CHIP 10 5% 1/16W		
4299		M1U	RESISTOR		R7719	1-218-929-11	RES-CHIP 10 5% 1/16W		
4300		M1U	RESISTOR		R7720	1-218-990-11	SHORT CHIP 0		
4301		M1U	RESISTOR		R7721	1-218-990-11	SHORT CHIP 0		
4302		M1U	RESISTOR		R7722	1-218-958-11	RES-CHIP 2.7K 5% 1/16W		
4303		M1U	RESISTOR		R7723	1-218-945-11	METAL CHIP 220 5% 1/16W		
4304		M1U	RESISTOR		R7724	1-208-699-11	METAL CHIP 4.7K 0.5% 1/16W		
4305		M1U	RESISTOR		R7725	1-208-699-11	METAL CHIP 4.7K 0.5% 1/16W		
4306		M1U	RESISTOR		R7726	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4307		M1U	RESISTOR		R7727	1-218-990-11	SHORT CHIP 0		
4308		M1U	RESISTOR		R7728	1-218-929-11	RES-CHIP 10 5% 1/16W		
4309		M1U	RESISTOR		R7729	1-218-929-11	RES-CHIP 10 5% 1/16W		
4310		M1U	RESISTOR		R7730	1-218-929-11	RES-CHIP 10 5% 1/16W		
4311		M1U	RESISTOR		R7731	1-218-990-11	SHORT CHIP 0		
4312		M1U	RESISTOR		R7733	1-218-929-11	RES-CHIP 10 5% 1/16W		
4313		M1U	RESISTOR		R7734	1-218-990-11	SHORT CHIP 0		
4314		M1U	RESISTOR		R7735	1-218-990-11	SHORT CHIP 0		
4315		M1U	RESISTOR		R7737	1-218-990-11	SHORT CHIP 0		
4316		M1U	RESISTOR		R7738	1-218-990-11	SHORT CHIP 0		
4317		M1U	RESISTOR		R7739	1-218-929-11	RES-CHIP 10 5% 1/16W		
4318		M1U	RESISTOR		R7740	1-218-990-11	SHORT CHIP 0		
4319		M1U	RESISTOR		R7742	1-218-990-11	SHORT CHIP 0		
4320		M1U	RESISTOR		R7744	1-218-929-11	RES-CHIP 10 5% 1/16W		
4321		M1U	RESISTOR		R7745	1-218-929-11	RES-CHIP 10 5% 1/16W		
4322		M1U	RESISTOR		R7746	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4323		M1U	RESISTOR		R7747	1-218-945-11	METAL CHIP 220 5% 1/16W		
4324		M1U	RESISTOR		R7748	1-208-699-11	METAL CHIP 4.7K 0.5% 1/16W		
4325		M1U	RESISTOR		R7749	1-208-699-11	METAL CHIP 4.7K 0.5% 1/16W		
4326		M1U	RESISTOR		R7750	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4327		M1U	RESISTOR		R7751	1-218-943-11	RES-CHIP 150 5% 1/16W		
4328		M1U	RESISTOR		R7752	1-218-943-11	RES-CHIP 150 5% 1/16W		
4329		M1U	RESISTOR		R7753	1-218-947-11	RES-CHIP 330 5% 1/16W		
4330		M1U	RESISTOR		R7754	1-218-947-11	RES-CHIP 330 5% 1/16W		
4331		M1U	RESISTOR		R7755	1-218-929-11	RES-CHIP 10 5% 1/16W		
4332		M1U	RESISTOR		R7756	1-218-929-11	RES-CHIP 10 5% 1/16W		
4333		M1U	RESISTOR		R7757	1-218-929-11	RES-CHIP 10 5% 1/16W		
4334		M1U	RESISTOR		R7758	1-220-174-11	METAL CHIP 200 5% 1/16W		
4335		M1U	RESISTOR		R7759	1-218-929-11	RES-CHIP 10 5% 1/16W		
4336		M1U	RESISTOR		R7760	1-218-929-11	RES-CHIP 10 5% 1/16W		
4337		M1U	RESISTOR		R7761	1-220-174-11	METAL CHIP 200 5% 1/16W		
4338		M1U	RESISTOR		R7762	1-220-174-11	METAL CHIP 200 5% 1/16W		
4339		M1U	RESISTOR		R7763	1-220-174-11	METAL CHIP 200 5% 1/16W		
4340		M1U	RESISTOR		R7764	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4341		M1U	RESISTOR		R7765	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4342		M1U	RESISTOR		R7766	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
4343		M1U	RESISTOR		R7767	1-220-876-81	METAL CHIP 18 0.5% 1/16W		
4344		M1U	RESISTOR		R7768	1-208-647-11	METAL CHIP 33 0.5% 1/16W		
4345		M1U	RESISTOR		R7769	1-218-945-11	METAL CHIP 220 5% 1/16W		
4346		M1U	RESISTOR		R7770	1-218-941-11	METAL CHIP 100 5% 1/16W		
4347		M1U	RESISTOR		R7771	1-218-945-11	METAL CHIP 220 5% 1/16W		
4348		M1U	RESISTOR		R7772	1-208-679-11	METAL CHIP 680 0.5% 1/16W		
4349		M1U	RESISTOR		R7773	1-208-687-11	METAL CHIP 1.5K 0.5% 1/16W		
4350		M1U	RESISTOR		R7774	1-218-948-11	METAL CHIP 390 5% 1/16W		
4351		M1U	RESISTOR		R7775	1-216-295-91	SHORT CHIP 0		
4352		M1U	RESISTOR		R7781	1-218-945-11	METAL CHIP 220 5% 1/16W		
4353		M1U	RESISTOR		R7782	1-218-941-11	METAL CHIP 100 5% 1/16W		
4354		M1U	RESISTOR		R7783	1-218-945-11	METAL CHIP 220 5% 1/16W		
4355		M1U	RESISTOR		R7784	1-218-990-11	SHORT CHIP 0		
4356		M1U	RESISTOR		R7788	1-218-990-11	SHORT CHIP 0		
4357		M1U	RESISTOR		R7790	1-218-990-11	SHORT CHIP 0		
4358		M1U	RESISTOR		R7791	1-218-990-11	SHORT CHIP 0		
4359		M1U	RESISTOR		R7792	1-218-849-11	METAL CHIP 1.2K 0.5% 1/10W		
4360		M1U	RESISTOR		R7794	1-218-971-11	RES-CHIP 33K 5% 1/16W		
4361		M1U	RESISTOR		R7795	1-208-679-11	METAL CHIP 680 0.5% 1/16W		
4362		M1U	RESISTOR		R7796	1-208-893-11	METAL CHIP 1.8K 0.5% 1/16W		
4363		M1U	RESISTOR		R7798	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
4364		M1U	RESISTOR		R7802	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
4365		M1U	RESISTOR		R7803	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
4366		M1U	RESISTOR		R7804	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4367		M1U	RESISTOR		R7806	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4368		M1U	RESISTOR		R7807	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4369		M1U	RESISTOR		R7811	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
4370		M1U	RESISTOR		R7812	1-208-893-11	METAL CHIP 1.8K 0.5% 1/16W		
4371		M1U	RESISTOR		R7813	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4372		M1U	RESISTOR		R7816	1-218-849-11	METAL CHIP 1.2K 0.5% 1/10W		
4373		M1U	RESISTOR		R7817	1-208-679-11	METAL CHIP 680 0.5% 1/16W		
4374		M1U	RESISTOR		R7818	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4375		M1U	RESISTOR		R7819	1-218-953-11	RES-CHIP 1K 5% 1/16W		
4376		M1U	RESISTOR		R7821	1-218-963-11	RES-CHIP 6.8K 5% 1/16W		
4377		M1U	RESISTOR		R7824	1-218-949-11	RES-CHIP 470 5% 1/16W		
4378		M1U	RESISTOR		R7828	1-218-990-11	SHORT CHIP 0		
4379		M1U	RESISTOR		R7829	1-218-990-11	SHORT CHIP 0		
4380		M1U	RESISTOR		R7952	1-218-990-11	SHORT CHIP 0		
4381		M1U	RESISTOR		R7954	1-218-990-11	SHORT CHIP 0		
4382		M1U	RESISTOR		R7958	1-218-935-11	RES-CHIP 33 5% 1/16W		
4383		M1U	RESISTOR		R8022	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4384		M1U	RESISTOR		R8023	1-218-965-11	RES-CHIP 10K 5% 1/16W		
4385		M1U	NETWORK		RB7000	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4386		M1U	NETWORK		RB7001	1-234-371-21	RES, NETWORK 47X4 (1005)		
4387		M1U	NETWORK		RB7002	1-234-371-21	RES, NETWORK 47X4 (1005)		
4388		M1U	NETWORK		RB7003	1-234-371-21	RES, NETWORK 47X4 (1005)		
4389		M1U	NETWORK		RB7004	1-234-371-21	RES, NETWORK 47X4 (1005)		
4390		M1U	NETWORK		RB7005	1-234-371-21	RES, NETWORK 47X4 (1005)		
4391		M1U	NETWORK		RB7563	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4392		M1U	NETWORK		RB7564	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4393		M1U	NETWORK		RB7565	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4394		M1U	NETWORK		RB7566	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4395		M1U	NETWORK		RB7567	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4396		M1U	NETWORK		RB7568	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4397		M1U	NETWORK		RB7569	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4398		M1U	NETWORK		RB7570	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4399		M1U	NETWORK		RB7571	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4400		M1U	NETWORK		RB7572	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4401		M1U	NETWORK		RB7573	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4402		M1U	NETWORK		RB7574	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4403		M1U	NETWORK		RB7575	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4404		M1U	NETWORK		RB7576	1-234-370-21	RES, NETWORK 22X4 (1005)		
4405		M1U	NETWORK		RB7577	1-234-370-21	RES, NETWORK 22X4 (1005)		
4406		M1U	NETWORK		RB7578	1-234-370-21	RES, NETWORK 22X4 (1005)		
4407		M1U	NETWORK		RB7579	1-234-370-21	RES, NETWORK 22X4 (1005)		
4408		M1U	NETWORK		RB7580	1-234-370-21	RES, NETWORK 22X4 (1005)		
4409		M1U	NETWORK		RB7581	1-234-370-21	RES, NETWORK 22X4 (1005)		
4410		M1U	NETWORK		RB7582	1-234-370-21	RES, NETWORK 22X4 (1005)		
4411		M1U	NETWORK		RB7583	1-234-370-21	RES, NETWORK 22X4 (1005)		
4412		M1U	NETWORK		RB7584	1-234-370-21	RES, NETWORK 22X4 (1005)		
4413		M1U	NETWORK		RB7585	1-234-370-21	RES, NETWORK 22X4 (1005)		
4414		M1U	NETWORK		RB7586	1-234-370-21	RES, NETWORK 22X4 (1005)		
4415		M1U	NETWORK		RB7587	1-234-370-21	RES, NETWORK 22X4 (1005)		
4416		M1U	NETWORK		RB7650	1-234-370-21	RES, NETWORK 22X4 (1005)		
4417		M1U	NETWORK		RB7651	1-234-370-21	RES, NETWORK 22X4 (1005)		
4418		M1U	NETWORK		RB7652	1-234-370-21	RES, NETWORK 22X4 (1005)		
4419		M1U	NETWORK		RB7653	1-234-370-21	RES, NETWORK 22X4 (1005)		
4420		M1U	NETWORK		RB7654	1-234-370-21	RES, NETWORK 22X4 (1005)		
4421		M1U	NETWORK		RB7655	1-234-370-21	RES, NETWORK 22X4 (1005)		
4422		M1U	NETWORK		RB7656	1-234-370-21	RES, NETWORK 22X4 (1005)		
4423		M1U	NETWORK		RB7657	1-234-370-21	RES, NETWORK 22X4 (1005)		
4424		M1U	NETWORK		RB7700	1-234-795-21	RES, NETWORK 0X4 (2010)		
4425		M1U	NETWORK		RB7701	1-234-795-21	RES, NETWORK 0X4 (2010)		
4426		M1U	NETWORK		RB7702	1-234-795-21	RES, NETWORK 0X4 (2010)		
4427		M1U	NETWORK		RB7703	1-234-795-21	RES, NETWORK 0X4 (2010)		
4428		M1U	NETWORK		RB7708	1-234-370-21	RES, NETWORK 22X4 (1005)		
4429		M1U	NETWORK		RB7709	1-234-370-21	RES, NETWORK 22X4 (1005)		
4430		M1U	NETWORK		RB7710	1-234-370-21	RES, NETWORK 22X4 (1005)		
4431		M1U	NETWORK		RB7711	1-234-370-21	RES, NETWORK 22X4 (1005)		
4432		M1U	NETWORK		RB7712	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4433		M1U	NETWORK		RB7713	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4434		M1U	NETWORK		RB7714	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4435		M1U	NETWORK		RB7715	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4436		M1U	NETWORK		RB7716	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4437		M1U	NETWORK		RB7717	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4438		M1U	NETWORK		RB7718	1-234-369-21	RES, NETWORK 10X4 (1005)		
4439		M1U	NETWORK		RB7719	1-234-369-21	RES, NETWORK 10X4 (1005)		
4440		M1U	NETWORK		RB7720	1-234-369-21	RES, NETWORK 10X4 (1005)		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4441		M1U	NETWORK		RB7721	1-234-369-21	RES, NETWORK 10X4 (1005)		
4442		M1U	NETWORK		RB7722	1-234-369-21	RES, NETWORK 10X4 (1005)		
4443		M1U	NETWORK		RB7723	1-234-369-21	RES, NETWORK 10X4 (1005)		
4444		M1U	CRYSTAL		X7000	1-795-753-21	VIBRATOR, CERAMIC		
4445		M1U	CRYSTAL		X7001	1-781-696-21	VIBRATOR, CRYSTAL		
4446		M1U	CRYSTAL		X7002	1-813-113-11	VIBRATOR, CRYSTAL		
4447		M1U	CRYSTAL		X7950	1-813-373-11	OSCILLATOR, CRYSTAL		
4448		P	CAPACITOR		C9507	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4449		P	CAPACITOR		C9508	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4450		P	CAPACITOR		C9509	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
4451		P	CAPACITOR		C9510	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
4452		P	CAPACITOR		C9511	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
4453		P	CAPACITOR		C9513	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
4454		P	CAPACITOR		C9514	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4455		P	CAPACITOR		C9515	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4456		P	CAPACITOR		C9516	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4457		P	CAPACITOR		C9517	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4458		P	CAPACITOR		C9519	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4459		P	CAPACITOR		C9521	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
4460		P	CAPACITOR		C9523	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
4461		P	CAPACITOR		C9524	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4462		P	CAPACITOR		C9525	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4463		P	CAPACITOR		C9526	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4464		P	CAPACITOR		C9527	1-164-505-11	CERAMIC CHIP 2.2UF 16V		
4465		P	CAPACITOR		C9528	1-126-246-11	ELECT CHIP 220UF 20.00% 4V		
4466		P	CAPACITOR		C9529	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4467		P	CAPACITOR		C9530	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4468		P	CAPACITOR		C9531	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4469		P	CAPACITOR		C9532	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4470		P	CAPACITOR		C9533	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4471		P	CAPACITOR		C9534	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4472		P	CAPACITOR		C9535	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4473		P	CAPACITOR		C9537	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4474		P	CAPACITOR		C9538	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
4475		P	CAPACITOR		C9540	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4476		P	CAPACITOR		C9541	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4477		P	CAPACITOR		C9542	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4478		P	CAPACITOR		C9543	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
4479		P	CAPACITOR		C9545	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
4480		P	CAPACITOR		C9546	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
4481		P	CAPACITOR		C9547	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4482		P	CAPACITOR		C9549	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4483		P	CAPACITOR		C9550	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4484		P	CAPACITOR		C9551	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4485		P	CAPACITOR		C9552	1-126-246-11	ELECT CHIP 220UF 20.00% 4V		
4486		P	CAPACITOR		C9553	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
4487		P	CAPACITOR		C9554	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4488		P	CAPACITOR		C9555	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4489		P	CAPACITOR		C9557	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4490		P	CAPACITOR		C9558	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4491		P	CAPACITOR		C9559	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4492		P	CAPACITOR		C9560	1-126-246-11	ELECT CHIP 220UF 20.00% 4V		
4493		P	CAPACITOR		C9561	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
4494		P	CAPACITOR		C9562	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4495		P	CAPACITOR		C9563	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4496		P	CAPACITOR		C9571	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4497		P	CAPACITOR		C9575	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4498		P	CAPACITOR		C9576	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4499		P	CAPACITOR		C9578	1-162-916-11	CERAMIC CHIP 12PF 5.00% 50V		
4500		P	CAPACITOR		C9579	1-162-916-11	CERAMIC CHIP 12PF 5.00% 50V		
4501		P	CAPACITOR		C9583	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4502		P	CAPACITOR		C9584	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4503		P	CAPACITOR		C9585	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4504		P	CAPACITOR		C9587	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4505		P	CAPACITOR		C9623	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4506		P	CAPACITOR		C9824	1-162-919-11	CERAMIC CHIP 22PF 5.00% 50V		
4507		P	CAPACITOR		C9825	1-162-919-11	CERAMIC CHIP 22PF 5.00% 50V		
4508		P	CAPACITOR		C9826	1-162-919-11	CERAMIC CHIP 22PF 5.00% 50V		
4509		P	CAPACITOR		C9828	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4510		P	CAPACITOR		C9830	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4511		P	CAPACITOR		C9831	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4512		P	CAPACITOR		C9832	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4513		P	CAPACITOR		C9833	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4514		P	CAPACITOR		C9835	1-100-588-21	ELECT CHIP 1000UF 20% 6.3V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4515		P	CAPACITOR		C9836	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4516		P	CAPACITOR		C9839	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
4517		P	CAPACITOR		C9841	1-100-118-21	ELECT CHIP 82UF 20% 16V		
4518		P	CAPACITOR		C9842	1-137-897-21	ELECT CHIP 150UF 20% 4V		
4519		P	CAPACITOR		C9843	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4520		P	CONNECTOR		CN9500	1-818-737-11	HDMI CONNECTOR		
4521		P	CONNECTOR	*	CN9504	1-564-595-11	PLUG, CONNECTOR 14P		
4522		P	DIODE		D9501	6-500-294-01	DIODE PTZ-TE25-3.9B		
4523		P	DIODE		D9502	8-719-977-28	DIODE DTZ10B		
4524		P	DIODE		D9503	8-719-977-28	DIODE DTZ10B		
4525		P	DIODE		D9506	8-719-404-50	DIODE MA111-TX		
4526		P	DIODE		D9507	8-719-404-50	DIODE MA111-TX		
4527		P	FERRITE BEAD		FB9504	1-414-235-22	FERRITE 0UH		
4528		P	FERRITE BEAD		FB9505	1-414-235-22	FERRITE 0UH		
4529		P	FERRITE BEAD		FB9506	1-414-235-22	FERRITE 0UH		
4530		P	FERRITE BEAD		FB9507	1-414-235-22	FERRITE 0UH		
4531		P	FERRITE BEAD		FB9508	1-414-235-22	FERRITE 0UH		
4532		P	FERRITE BEAD		FB9509	1-414-235-22	FERRITE 0UH		
4533		P	FERRITE BEAD		FB9510	1-414-235-22	FERRITE 0UH		
4534		P	FERRITE BEAD		FB9512	1-414-235-22	FERRITE 0UH		
4535		P	FILTER	*	FL9501	1-813-308-11	INDUCTOR 0UH		
4536		P	FILTER	*	FL9504	1-813-308-11	INDUCTOR 0UH		
4537		P	FILTER	*	FL9505	1-813-308-11	INDUCTOR 0UH		
4538		P	FILTER	*	FL9506	1-813-308-11	INDUCTOR 0UH		
4539		P	IC		IC9500	6-706-257-01	IC FMS6418AM16X		
4540		P	IC		IC9502	6-704-819-01	IC CS4335-KSZR		
4541		P	IC		IC9503	6-704-407-01	IC PQ1CZ41H2ZPH		
4542		P	IC		IC9504	8-759-640-39	IC BR24C02F-WE2		
4543		P	IC		IC9505	6-704-499-01	IC SII9993CTG100		
4544		P	IC		IC9506	6-703-042-01	IC CD4052BNSR		
4545		P	IC		IC9509	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
4546		P	IC		IC9514	8-759-331-71	IC NJM4558E(TE2)		
4547		P	IC		IC9517	6-804-248-01	IC HD64F3694FXV-DA4		
4548		P	IC		IC9521	8-759-473-95	IC UPC2905T-E1		
4549		P	IC		IC9522	6-801-402-01	IC BD4729GTR		
4550		P	JACK		J9503	1-793-725-11	JACK BLOCK, PIN 2P		
4551		P	COIL		L9501	1-416-948-21	INDUCTOR 10UH		
4552		P	COIL		L9502	1-400-303-21	INDUCTOR 68UH		
4553		P	IC LINK	△	PS9500	1-576-415-21	FUSE 2A 32V		
4554		P	TRANSISTOR		Q9502	8-729-027-43	TRANSISTOR DTC114EKA-T146		
4555		P	TRANSISTOR		Q9503	8-729-027-62	TRANSISTOR DTC144WKA-T146		
4556		P	TRANSISTOR		Q9506	8-729-027-43	TRANSISTOR DTC114EKA-T146		
4557		P	TRANSISTOR		Q9511	8-729-027-43	TRANSISTOR DTC114EKA-T146		
4558		P	TRANSISTOR		Q9514	8-729-027-62	TRANSISTOR DTC144WKA-T146		
4559		P	TRANSISTOR		Q9516	8-729-421-22	TRANSISTOR UN2211		
4560		P	TRANSISTOR		Q9517	8-729-027-43	TRANSISTOR DTC114EKA-T146		
4561		P	RESISTOR		R9501	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4562		P	RESISTOR		R9502	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4563		P	RESISTOR		R9505	1-216-841-11	METAL CHIP 47K 5% 1/10W		
4564		P	RESISTOR		R9507	1-216-857-11	METAL CHIP 1M 5% 1/10W		
4565		P	RESISTOR		R9508	1-216-857-11	METAL CHIP 1M 5% 1/10W		
4566		P	RESISTOR		R9509	1-216-857-11	METAL CHIP 1M 5% 1/10W		
4567		P	RESISTOR		R9510	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4568		P	RESISTOR		R9511	1-216-803-11	METAL CHIP 33 5% 1/10W		
4569		P	RESISTOR		R9512	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4570		P	RESISTOR		R9513	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4571		P	RESISTOR		R9514	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4572		P	RESISTOR		R9518	1-216-864-11	SHORT CHIP 0		
4573		P	RESISTOR		R9519	1-216-803-11	METAL CHIP 33 5% 1/10W		
4574		P	RESISTOR		R9520	1-216-816-11	METAL CHIP 390 5% 1/10W		
4575		P	RESISTOR		R9526	1-218-716-11	METAL CHIP 10K 0.5% 1/10W		
4576		P	RESISTOR		R9528	1-216-837-11	METAL CHIP 22K 5% 1/10W		
4577		P	RESISTOR		R9529	1-216-850-11	METAL CHIP 270K 5% 1/10W		
4578		P	RESISTOR		R9530	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4579		P	RESISTOR		R9531	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
4580		P	RESISTOR		R9532	1-218-694-11	METAL CHIP 1.2K 0.5% 1/10W		
4581		P	RESISTOR		R9533	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4582		P	RESISTOR		R9534	1-218-686-11	METAL CHIP 560 0.5% 1/10W		
4583		P	RESISTOR		R9535	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4584		P	RESISTOR		R9538	1-218-823-11	METAL CHIP 100 0.5% 1/10W		
4585		P	RESISTOR		R9539	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4586		P	RESISTOR		R9540	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
4587		P	RESISTOR		R9541	1-218-694-11	METAL CHIP 1.2K 0.5% 1/10W		
4588		P	RESISTOR		R9542	1-216-850-11	METAL CHIP 270K 5% 1/10W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4589		P	RESISTOR		R9543	1-218-686-11	METAL CHIP 560 0.5% 1/10W		
4590		P	RESISTOR		R9544	1-218-706-11	METAL CHIP 3.9K 0.5% 1/10W		
4591		P	RESISTOR		R9546	1-218-706-11	METAL CHIP 3.9K 0.5% 1/10W		
4592		P	RESISTOR		R9547	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4593		P	RESISTOR		R9548	1-218-716-11	METAL CHIP 10K 0.5% 1/10W		
4594		P	RESISTOR		R9552	1-216-817-11	METAL CHIP 470 5% 1/10W		
4595		P	RESISTOR		R9555	1-218-706-11	METAL CHIP 3.9K 0.5% 1/10W		
4596		P	RESISTOR		R9556	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
4597		P	RESISTOR		R9557	1-218-706-11	METAL CHIP 3.9K 0.5% 1/10W		
4598		P	RESISTOR		R9558	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
4599		P	RESISTOR		R9559	1-216-809-11	METAL CHIP 100 5% 1/10W		
4600		P	RESISTOR		R9560	1-216-864-11	SHORT CHIP 0		
4601		P	RESISTOR		R9562	1-216-809-11	METAL CHIP 100 5% 1/10W		
4602		P	RESISTOR		R9563	1-218-706-11	METAL CHIP 3.9K 0.5% 1/10W		
4603		P	RESISTOR		R9564	1-216-837-11	METAL CHIP 22K 5% 1/10W		
4604		P	RESISTOR		R9565	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4605		P	RESISTOR		R9566	1-216-864-11	SHORT CHIP 0		
4606		P	RESISTOR		R9569	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4607		P	RESISTOR		R9572	1-216-837-11	METAL CHIP 22K 5% 1/10W		
4608		P	RESISTOR		R9574	1-216-809-11	METAL CHIP 100 5% 1/10W		
4609		P	RESISTOR		R9575	1-216-809-11	METAL CHIP 100 5% 1/10W		
4610		P	RESISTOR		R9576	1-216-864-11	SHORT CHIP 0		
4611		P	RESISTOR		R9577	1-216-864-11	SHORT CHIP 0		
4612		P	RESISTOR		R9580	1-216-809-11	METAL CHIP 100 5% 1/10W		
4613		P	RESISTOR		R9581	1-216-809-11	METAL CHIP 100 5% 1/10W		
4614		P	RESISTOR		R9582	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4615		P	RESISTOR		R9584	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4616		P	RESISTOR		R9585	1-216-809-11	METAL CHIP 100 5% 1/10W		
4617		P	RESISTOR		R9586	1-216-809-11	METAL CHIP 100 5% 1/10W		
4618		P	RESISTOR		R9592	1-216-809-11	METAL CHIP 100 5% 1/10W		
4619		P	RESISTOR		R9595	1-216-817-11	METAL CHIP 470 5% 1/10W		
4620		P	RESISTOR		R9597	1-216-803-11	METAL CHIP 33 5% 1/10W		
4621		P	RESISTOR		R9602	1-216-809-11	METAL CHIP 100 5% 1/10W		
4622		P	RESISTOR		R9606	1-216-864-11	SHORT CHIP 0		
4623		P	RESISTOR		R9612	1-216-864-11	SHORT CHIP 0		
4624		P	RESISTOR		R9614	1-216-809-11	METAL CHIP 100 5% 1/10W		
4625		P	RESISTOR		R9615	1-216-809-11	METAL CHIP 100 5% 1/10W		
4626		P	RESISTOR		R9616	1-216-809-11	METAL CHIP 100 5% 1/10W		
4627		P	RESISTOR		R9623	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4628		P	RESISTOR		R9624	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4629		P	RESISTOR		R9625	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4630		P	RESISTOR		R9626	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4631		P	RESISTOR		R9627	1-216-809-11	METAL CHIP 100 5% 1/10W		
4632		P	RESISTOR		R9850	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4633		P	RESISTOR		R9851	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4634		P	RESISTOR		R9852	1-218-644-11	METAL CHIP 10 0.5% 1/10W		
4635		P	RESISTOR		R9853	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4636		P	RESISTOR		R9854	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4637		P	RESISTOR		R9860	1-218-706-11	METAL CHIP 3.9K 0.5% 1/10W		
4638		P	RESISTOR		R9864	1-218-701-11	METAL CHIP 2.4K 0.5% 1/10W		
4639		P	RESISTOR		R9866	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4640		P	RESISTOR		R9868	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4641		P	RESISTOR		R9869	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4642		P	RESISTOR		R9882	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4643		P	RESISTOR		R9883	1-216-838-11	METAL CHIP 27K 5% 1/10W		
4644		P	RESISTOR		R9884	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4645		P	RESISTOR		R9888	1-218-847-11	METAL CHIP 1K 0.5% 1/10W		
4646		P	RESISTOR		R9890	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4647		P	RESISTOR		R9891	1-216-809-11	METAL CHIP 100 5% 1/10W		
4648		P	NETWORK		RB9500	1-234-524-21	RES, CHIP NETWORK 33 (3216)		
4649		P	NETWORK		RB9510	1-233-576-11	RES, CHIP NETWORK 100 (3216)		
4650		P	NETWORK		RB9511	1-233-574-11	RES, CHIP NETWORK 10 (3216)		
4651		P	NETWORK		RB9512	1-233-574-11	RES, CHIP NETWORK 10 (3216)		
4652		P	NETWORK		RB9516	1-236-908-11	RES, CHIP NETWORK 10K		
4653		P	NETWORK		RB9517	1-236-908-11	RES, CHIP NETWORK 10K		
4654		P	VARISTOR		VD9500	6-500-701-01	DIODE PGB0010603NR		
4655		P	VARISTOR		VD9501	6-500-701-01	DIODE PGB0010603NR		
4656		P	VARISTOR		VD9502	6-500-701-01	DIODE PGB0010603NR		
4657		P	VARISTOR		VD9503	6-500-701-01	DIODE PGB0010603NR		
4658		P	VARISTOR		VD9504	6-500-701-01	DIODE PGB0010603NR		
4659		P	VARISTOR		VD9505	6-500-701-01	DIODE PGB0010603NR		
4660		P	VARISTOR		VD9506	6-500-701-01	DIODE PGB0010603NR		
4661		P	VARISTOR		VD9507	6-500-701-01	DIODE PGB0010603NR		
4662		P	VARISTOR		VD9518	6-500-701-01	DIODE PGB0010603NR		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4663		P	VARISTOR		VD9519	6-500-701-01	DIODE PGB0010603NR		
4664		P	CRYSTAL		X9501	1-767-984-21	VIBRATOR, CRYSTAL		
4665		J2NU	CONNECTOR		CN8402	1-818-862-11	BOARD TO BOARD CONNECTOR 120P		
4666		H3	CAPACITOR		C1200	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4667		H3	CAPACITOR		C1201	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4668		H3	CAPACITOR		C1203	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4669		H3	CONNECTOR		CN1200	1-770-627-21	PIN, CONNECTOR 10P		
4670		H3	CONNECTOR		CN1201	1-580-056-91	PIN, CONNECTOR 3P		
4671		H3	LEAD PIN	*	CP1201	4-042-408-02	PIN(45), WIRE		
4672		H3	LEAD PIN	*	CP1202	4-042-408-02	PIN(45), WIRE		
4673		H3	DIODE		D1200	8-719-036-66	DIODE RD2.2SB-T1		
4674		H3	DIODE		D1201	8-719-036-66	DIODE RD2.2SB-T1		
4675		H3	DIODE		D1202	8-719-036-66	DIODE RD2.2SB-T1		
4676		H3	DIODE		D1203	8-719-081-23	DIODE L-53SRD-H-F01		
4677		H3	DIODE		D1204	6-500-425-01	DIODE SELU1E50CM		
4678		H3	DIODE		D1205	6-500-487-01	DIODE SMLU12D16W		
4679		H3	DIODE		D1206	8-719-081-23	DIODE L-53SRD-H-F01		
4680		H3	TRANSISTOR		Q1201	8-729-028-73	TRANSISTOR DTA114EUA-T106		
4681		H3	TRANSISTOR		Q1203	8-729-907-00	TRANSISTOR DTC114EU		
4682		H3	TRANSISTOR		Q1204	8-729-907-00	TRANSISTOR DTC114EU		
4683		H3	TRANSISTOR		Q1205	8-729-028-73	TRANSISTOR DTA114EUA-T106		
4684		H3	TRANSISTOR		Q1206	8-729-907-00	TRANSISTOR DTC114EU		
4685		H3	TRANSISTOR		Q1207	8-729-907-00	TRANSISTOR DTC114EU		
4686		H3	RESISTOR		R1200	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4687		H3	RESISTOR		R1203	1-216-817-11	METAL CHIP 470 5% 1/10W		
4688		H3	RESISTOR		R1204	1-216-864-11	SHORT CHIP 0		
4689		H3	RESISTOR		R1207	1-216-864-11	SHORT CHIP 0		
4690		H3	RESISTOR		R1210	1-216-812-11	METAL CHIP 180 5% 1/10W		
4691		H3	RESISTOR		R1212	1-216-812-11	METAL CHIP 180 5% 1/10W		
4692		H3	RESISTOR		R1213	1-216-811-11	METAL CHIP 150 5% 1/10W		
4693		H3	RESISTOR		R1214	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4694		H3	RESISTOR		R1216	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4695		H3	RESISTOR		R1217	1-216-864-11	SHORT CHIP 0		
4696		H3	RESISTOR		R1218	1-216-809-11	METAL CHIP 100 5% 1/10W		
4697		H3	RESISTOR		R1219	1-216-864-11	SHORT CHIP 0		
4698		H4	CONNECTOR		CN1501	1-580-056-91	PIN, CONNECTOR 3P		
4699		H4	DIODE		D1501	6-500-870-01	DIODE NSPW500BS-A0		
4700		H4	DIODE		D1503	6-500-870-01	DIODE NSPW500BS-A0		
4701		H4	DIODE		D1505	6-500-870-01	DIODE NSPW500BS-A0		
4702		H4	DIODE		D1507	6-500-870-01	DIODE NSPW500BS-A0		
4703		H4	DIODE		D1509	6-500-870-01	DIODE NSPW500BS-A0		
4704		H4	DIODE		D1511	6-500-870-01	DIODE NSPW500BS-A0		
4705		H4	DIODE		D1513	6-500-870-01	DIODE NSPW500BS-A0		
4706		H4	TRANSISTOR		Q1501	8-729-907-00	TRANSISTOR DTC114EU		
4707		H4	TRANSISTOR		Q1502	8-729-907-00	TRANSISTOR DTC114EU		
4708		H4	TRANSISTOR		Q1503	8-729-907-00	TRANSISTOR DTC114EU		
4709		H4	TRANSISTOR		Q1504	8-729-907-00	TRANSISTOR DTC114EU		
4710		H4	TRANSISTOR		Q1505	8-729-907-00	TRANSISTOR DTC114EU		
4711		H4	TRANSISTOR		Q1506	8-729-907-00	TRANSISTOR DTC114EU		
4712		H4	TRANSISTOR		Q1507	8-729-907-00	TRANSISTOR DTC114EU		
4713		H4	RESISTOR		R1501	1-216-809-11	METAL CHIP 100 5% 1/10W		
4714		H4	RESISTOR		R1502	1-216-809-11	METAL CHIP 100 5% 1/10W		
4715		H4	RESISTOR		R1503	1-216-809-11	METAL CHIP 100 5% 1/10W		
4716		H4	RESISTOR		R1504	1-216-809-11	METAL CHIP 100 5% 1/10W		
4717		H4	RESISTOR		R1511	1-216-809-11	METAL CHIP 100 5% 1/10W		
4718		H4	RESISTOR		R1512	1-216-809-11	METAL CHIP 100 5% 1/10W		
4719		H4	RESISTOR		R1513	1-216-809-11	METAL CHIP 100 5% 1/10W		
4720		H5	CAPACITOR		C1601	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
4721		H5	CAPACITOR		C1602	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4722		H5	CONNECTOR		CN1601	1-691-550-91	PIN, CONNECTOR 3P		
4723		H5	IC		IC1601	6-600-389-01	IC GP1UM26SRK1F		
4724		H5	RESISTOR		R1601	1-216-805-11	METAL CHIP 47 5% 1/10W		
4725		H1U	CAPACITOR		C1051	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
4726		H1U	CAPACITOR		C1052	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
4727		H1U	CONNECTOR		CN1051	1-580-756-91	PIN, CONNECTOR 7P		
4728		H1U	RESISTOR		R1051	1-218-684-11	METAL CHIP 470 0.5% 1/10W		
4729		H1U	RESISTOR		R1052	1-218-688-11	METAL CHIP 680 0.5% 1/10W		
4730		H1U	RESISTOR		R1053	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
4731		H1U	RESISTOR		R1054	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W		
4732		H1U	SWITCH		S1051	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)		
4733		H1U	SWITCH		S1052	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)		
4734		H1U	SWITCH		S1053	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)		
4735		H1U	SWITCH		S1054	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)		
4736		H1U	SWITCH		S1055	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4737		H1U	SWITCH		S1056	1-692-539-11	SWITCH, KEYBOARD		
4738		F	CAPACITOR	△	C6002	1-165-531-11	MYLAR 1UF 10 275V		
4739		F	CAPACITOR	△	C6004	1-165-529-31	MYLAR 0.22UF 10 0V		
4740		F	CAPACITOR	△	C6005	1-119-886-51	CERAMIC 470PF 10.00% 250V		
4741		F	CAPACITOR	△	C6006	1-119-886-51	CERAMIC 470PF 10.00% 250V		
4742		F	CONNECTOR	*	CN6001	1-580-843-11	PIN, CONNECTOR (POWER)		
4743		F	CONNECTOR	*	CN6018	1-580-843-11	PIN, CONNECTOR (POWER)		
4744		F	CONNECTOR		CN6051	1-695-915-11	TAB (CONTACT)		
4745		F	CONNECTOR		CN6052	1-695-915-11	TAB (CONTACT)		
4746		F	FUSE	△	F6001	1-576-764-11	FUSE 10A 250V		
4747		F	FUSE HOLDER		FH6001	1-576-766-11	FUSE HOLDER 14A 250V		
4748		F	FUSE HOLDER		FH6002	1-576-766-11	FUSE HOLDER 14A 250V		
4749		F	COIL	△	L6002	1-456-856-21	LINE FILTER COIL		
4750		F	COIL	△	L6003	1-456-856-21	LINE FILTER COIL		
4751		F	RESISTOR	△	R6001	1-247-289-00	METAL 8.2M 5% 1W		
4752		F	RESISTOR		R6002	1-219-759-11	METAL 1M 5% 1/2W		
4753		F	VARISTOR	△	VD6001	1-805-483-21	VARISTOR		
4754		F	VARISTOR	△	VD6002	1-805-483-21	VARISTOR		
4755		G1	CAPACITOR	△	C6008	1-165-531-11	MYLAR 1UF 10 275V		
4756		G1	CAPACITOR		C6101	1-115-350-51	CERAMIC 0.0047UF 2KV		
4757		G1	CAPACITOR		C6102	1-115-350-51	CERAMIC 0.0047UF 2KV		
4758		G1	CAPACITOR		C6103	1-115-350-51	CERAMIC 0.0047UF 2KV		
4759		G1	CAPACITOR		C6104	1-115-350-51	CERAMIC 0.0047UF 2KV		
4760		G1	CAPACITOR		C6105	1-107-974-11	CERAMIC 47PF 5.00% 2KV		
4761		G1	CAPACITOR		C6106	1-107-680-91	ELECT 22UF 20.00% 450V		
4762		G1	CAPACITOR		C6107	1-164-646-11	CERAMIC 2200PF 10.00% 500V		
4763		G1	CAPACITOR		C6108	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4764		G1	CAPACITOR	△	C6111	1-119-886-51	CERAMIC 470PF 10.00% 250V		
4765		G1	CAPACITOR		C6113	1-165-729-31	ELECT 470UF 20% 16V		
4766		G1	CAPACITOR		C6114	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4767		G1	CAPACITOR		C6115	1-128-526-11	ELECT CHIP 100UF 20.00% 25V		
4768		G1	CAPACITOR		C6116	1-107-910-11	ELECT 100UF 20.00% 50V		
4769		G1	CAPACITOR		C6117	1-107-905-11	ELECT 4.7UF 20.00% 50V		
4770		G1	CAPACITOR		C6118	1-107-903-11	ELECT 2.2UF 20.00% 50V		
4771		G1	CAPACITOR		C6119	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
4772		G1	CAPACITOR		C6120	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
4773		G1	CAPACITOR		C6121	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
4774		G1	CAPACITOR		C6202	1-104-760-11	CERAMIC CHIP 0.047UF 10.00% 50V		
4775		G1	CAPACITOR		C6203	1-115-350-51	CERAMIC 0.0047UF 2KV		
4776		G1	CAPACITOR		C6204	1-115-350-51	CERAMIC 0.0047UF 2KV		
4777		G1	CAPACITOR		C6205	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V		
4778		G1	CAPACITOR		C6206	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
4779		G1	CAPACITOR		C6208	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
4780		G1	CAPACITOR		C6209	1-115-350-51	CERAMIC 0.0047UF 2KV		
4781		G1	CAPACITOR		C6210	1-115-350-51	CERAMIC 0.0047UF 2KV		
4782		G1	CAPACITOR		C6212	1-112-024-21	MYLAR 1UF 10% 450V		
4783		G1	CAPACITOR		C6213	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
4784		G1	CAPACITOR		C6214	1-100-804-11	MYLAR 2.2UF 10% 450V		
4785		G1	CAPACITOR		C6215	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
4786		G1	CAPACITOR		C6216	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
4787		G1	CAPACITOR		C6217	1-162-962-11	CERAMIC CHIP 470PF 10.00% 50V		
4788		G1	CAPACITOR	△	C6218	1-119-886-51	CERAMIC 470PF 10.00% 250V		
4789		G1	CAPACITOR		C6219	1-128-526-11	ELECT 100UF 20.00% 25V		
4790		G1	CAPACITOR		C6220	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V		
4791		G1	CAPACITOR		C6221	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
4792		G1	CAPACITOR		C6222	1-107-889-11	ELECT 220UF 20.00% 25V		
4793		G1	CAPACITOR		C6223	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
4794		G1	CAPACITOR		C6225	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
4795		G1	CAPACITOR		C6226	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V		
4796		G1	CAPACITOR		C6227	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
4797		G1	CAPACITOR		C6228	1-107-906-11	ELECT 10UF 20.00% 50V		
4798		G1	CAPACITOR		C6229	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V		
4799		G1	CAPACITOR		C6230	1-104-760-11	CERAMIC CHIP 0.047UF 10.00% 50V		
4800		G1	CAPACITOR		C6231	1-100-613-81	CERAMIC 470PF 5% 1KV		
4801		G1	CAPACITOR		C6232	1-100-613-81	CERAMIC 470PF 5% 1KV		
4802		G1	CAPACITOR		C6233	1-163-145-00	CERAMIC CHIP 0.0015UF 5.00% 50V		
4803		G1	CAPACITOR		C6234	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V		
4804		G1	CAPACITOR		C6235	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
4805		G1	CAPACITOR		C6236	1-100-613-81	CERAMIC 470PF 5% 1KV		
4806		G1	CAPACITOR		C6237	1-100-613-81	CERAMIC 470PF 5% 1KV		
4807		G1	CAPACITOR		C6238	1-112-025-11	ELECT 270UF 20% 450V		
4808		G1	CAPACITOR		C6239	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
4809		G1	CAPACITOR		C6240	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4810		G1	CAPACITOR		C6241	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4811		G1	CAPACITOR		C6242	1-112-025-11	ELECT 270UF 20% 450V		
4812		G1	CAPACITOR		C6243	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
4813		G1	CAPACITOR		C6244	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4814		G1	CAPACITOR		C6245	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
4815		G1	CAPACITOR		C6246	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
4816		G1	CAPACITOR		C6247	1-107-905-11	ELECT 4.7UF 20.00% 50V		
4817		G1	CAPACITOR		C6248	1-107-888-11	ELECT 47UF 20.00% 25V		
4818		G1	CAPACITOR		C6249	1-107-905-11	ELECT 4.7UF 20.00% 50V		
4819		G1	CAPACITOR		C6250	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4820		G1	CAPACITOR		C6251	1-107-902-11	ELECT 1UF 20.00% 50V		
4821		G1	CAPACITOR		C6252	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4822		G1	CAPACITOR		C6253	1-107-910-11	ELECT CHIP 100UF 20.00% 50V		
4823		G1	CAPACITOR		C6254	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4824		G1	CAPACITOR		C6255	1-112-025-11	ELECT 270UF 20% 450V		
4825		G1	CAPACITOR		C6256	1-112-025-11	ELECT 270UF 20% 450V		
4826		G1	CAPACITOR		C6901	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4827		G1	CAPACITOR		C6905	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4828		G1	CONNECTOR	*	CN6014	1-580-843-11	PIN, CONNECTOR (POWER)		
4829		G1	CONNECTOR		CN6901	1-573-806-91	PIN, CONNECTOR 6P		
4830		G1	DIODE		D6021	8-719-081-97	DIODE MMDL914T1		
4831		G1	DIODE		D6100	8-719-077-76	DIODE D2SB60A-F04		
4832		G1	DIODE		D6101	8-719-069-55	DIODE UDZSTE-175.6B		
4833		G1	DIODE		D6102	6-500-849-01	DIODE ERA22-08KFLB		
4834		G1	DIODE		D6103	6-500-567-31	DIODE 10ERB20-TB3		
4835		G1	DIODE		D6104	6-500-567-31	DIODE 10ERB20-TB3		
4836		G1	DIODE		D6105	6-500-567-31	DIODE 10ERB20-TB3		
4837		G1	DIODE		D6106	8-719-080-75	DIODE M1FL20U-4063		
4838		G1	DIODE		D6201	8-719-304-63	DIODE RM11C		
4839		G1	DIODE		D6202	6-500-254-01	DIODE MM3Z7V5T1		
4840		G1	DIODE		D6203	8-719-081-97	DIODE MMDL914T1		
4841		G1	DIODE		D6204	8-719-056-84	DIODE UDZ-TE-17-7.5B		
4842		G1	DIODE		D6205	8-719-054-89	DIODE D15XB60		
4843		G1	DIODE		D6206	8-719-081-97	DIODE MMDL914T1		
4844		G1	DIODE		D6207	8-719-071-94	DIODE HRU0103ATRF		
4845		G1	DIODE		D6208	8-719-304-63	DIODE RM11C		
4846		G1	DIODE		D6209	6-500-254-01	DIODE MM3Z7V5T1		
4847		G1	DIODE		D6210	8-719-071-94	DIODE HRU0103ATRF		
4848		G1	DIODE		D6211	8-719-071-94	DIODE HRU0103ATRF		
4849		G1	DIODE		D6212	8-719-041-97	DIODE MA113-(TX)		
4850		G1	DIODE		D6213	8-719-041-97	DIODE MA113-(TX)		
4851		G1	DIODE		D6214	8-719-082-03	DIODE MM3Z15VT1		
4852		G1	DIODE		D6215	8-719-082-03	DIODE MM3Z15VT1		
4853		G1	DIODE		D6216	8-719-304-63	DIODE RM11C		
4854		G1	DIODE		D6217	6-500-407-01	DIODE SF20L60U-4015		
4855		G1	DIODE		D6218	8-719-081-97	DIODE MMDL914T1		
4856		G1	DIODE		D6219	8-719-059-51	DIODE MA3J142E0LSO		
4857		G1	DIODE		D6220	8-719-082-03	DIODE MM3Z15VT1		
4858		G1	DIODE		D6221	8-719-082-03	DIODE MM3Z15VT1		
4859		G1	DIODE		D6222	8-719-041-97	DIODE MA113-(TX)		
4860		G1	DIODE		D6223	8-719-082-03	DIODE MM3Z15VT1		
4861		G1	DIODE		D6224	8-719-082-03	DIODE MM3Z15VT1		
4862		G1	DIODE		D6225	6-500-849-01	DIODE ERA22-08KFLB		
4863		G1	DIODE		D6226	6-500-849-01	DIODE ERA22-08KFLB		
4864		G1	DIODE		D6900	8-719-081-97	DIODE MMDL914T1		
4865		G1	IC		IC6101	6-600-279-01	IC STR-A6169		
4866		G1	IC		IC6102	8-759-682-42	IC MM1431ATT		
4867		G1	IC		IC6201	6-704-924-01	IC PQ12DZ5UJ00H		
4868		G1	IC		IC6202	6-703-132-01	IC UC3854BN		
4869		G1	IC		IC6203	8-759-058-50	IC XRA10324AF		
4870		G1	IC		IC6204	8-759-682-42	IC MM1431ATT		
4871		G1	COIL		L6101	1-412-537-31	INDUCTOR 100UH		
4872		G1	COIL		L6201	1-456-854-11	INDUCTOR 58UH		
4873		G1	COIL		L6202	1-456-855-11	INDUCTOR 100UH		
4874		G1	COIL		L6203	1-456-854-11	INDUCTOR 58UH		
4875		G1	PHOTO COUPLER	△	PH6101	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
4876		G1	PHOTO COUPLER	△	PH6904	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
4877		G1	PHOTO COUPLER	△	PH6905	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
4878		G1	TRANSISTOR		Q6201	8-729-040-89	TRANSISTOR 2SK1590-T1B		
4879		G1	TRANSISTOR		Q6202	6-550-549-01	TRANSISTOR DTC114EUAFT106		
4880		G1	TRANSISTOR		Q6203	8-729-820-86	TRANSISTOR 2SB1121-ST		
4881		G1	TRANSISTOR		Q6204	8-729-905-35	TRANSISTOR 2SC4081-R		
4882		G1	TRANSISTOR		Q6205	8-729-807-17	TRANSISTOR 2SD1621-S		
4883		G1	TRANSISTOR		Q6206	6-550-372-01	TRANSISTOR SPA20N60C3E8152		
4884		G1	TRANSISTOR		Q6207	6-550-372-01	TRANSISTOR SPA20N60C3E8152		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4885		G1	TRANSISTOR		Q6208	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
4886		G1	TRANSISTOR		Q6209	8-729-905-35	TRANSISTOR 2SC4081-R		
4887		G1	TRANSISTOR		Q6210	8-729-905-35	TRANSISTOR 2SC4081-R		
4888		G1	TRANSISTOR		Q6211	8-729-905-35	TRANSISTOR 2SC4081-R		
4889		G1	TRANSISTOR		Q6212	8-729-905-35	TRANSISTOR 2SC4081-R		
4890		G1	TRANSISTOR		Q6213	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
4891		G1	TRANSISTOR		Q6214	6-550-549-01	TRANSISTOR DTC114EUAFT106		
4892		G1	TRANSISTOR		Q6215	8-729-905-35	TRANSISTOR 2SC4081-R		
4893		G1	TRANSISTOR		Q6216	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
4894		G1	TRANSISTOR		Q6217	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
4895		G1	TRANSISTOR		Q6218	8-729-804-41	TRANSISTOR 2SB1122-S		
4896		G1	TRANSISTOR		Q6219	6-550-372-01	TRANSISTOR SPA20N60C3E8152		
4897		G1	TRANSISTOR		Q6903	6-550-549-01	TRANSISTOR DTC114EUAFT106		
4898		G1	TRANSISTOR		Q6915	8-729-023-22	TRANSISTOR 2SD2114K		
4899		G1	RESISTOR		R6003	1-216-864-11	SHORT CHIP 0		
4900		G1	RESISTOR		R6005	1-202-962-11	CEMENTED 3.3 5% 10W		
4901		G1	RESISTOR		R6006	1-202-962-11	CEMENTED 3.3 5% 10W		
4902		G1	RESISTOR		R6007	1-217-781-31	FUSIBLE 2.2 5% 5W		
4903		G1	RESISTOR		R6101	1-216-353-00	METAL OXIDE 2.2 5% 1W		
4904		G1	RESISTOR		R6102	1-249-381-11	CARBON 1 5% 1/4W		
4905		G1	RESISTOR		R6103	1-243-725-71	METAL OXIDE 100K 5% 1W		
4906		G1	RESISTOR		R6104	1-216-864-11	SHORT CHIP 0		
4907		G1	RESISTOR		R6105	1-249-393-11	CARBON 10 5% 1/4W		
4908		G1	RESISTOR		R6106	1-249-393-11	CARBON 10 5% 1/4W		
4909		G1	RESISTOR		R6107	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4910		G1	RESISTOR		R6108	1-216-817-11	METAL CHIP 470 5% 1/10W		
4911		G1	RESISTOR		R6109	1-216-839-11	METAL CHIP 33K 5% 1/10W		
4912		G1	RESISTOR		R6110	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
4913		G1	RESISTOR		R6111	1-216-864-11	SHORT CHIP 0		
4914		G1	RESISTOR		R6112	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
4915		G1	RESISTOR		R6113	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
4916		G1	RESISTOR		R6114	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
4917		G1	RESISTOR		R6115	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
4918		G1	RESISTOR		R6116	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
4919		G1	RESISTOR		R6117	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
4920		G1	RESISTOR		R6118	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
4921		G1	RESISTOR		R6119	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
4922		G1	RESISTOR		R6120	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
4923		G1	RESISTOR		R6121	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
4924		G1	RESISTOR		R6122	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
4925		G1	RESISTOR		R6123	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
4926		G1	RESISTOR		R6124	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
4927		G1	RESISTOR		R6125	1-216-841-11	METAL CHIP 47K 5% 1/10W		
4928		G1	RESISTOR		R6202	1-216-857-11	METAL CHIP 1M 5% 1/10W		
4929		G1	RESISTOR		R6203	1-218-899-11	METAL CHIP 150K 0.5% 1/16W		
4930		G1	RESISTOR		R6204	1-245-470-21	METAL 220K 1% 1/4W		
4931		G1	RESISTOR		R6205	1-245-474-21	METAL 330K 1% 1/4W		
4932		G1	RESISTOR		R6206	1-245-474-21	METAL 330K 1% 1/4W		
4933		G1	RESISTOR		R6207	1-218-895-11	METAL CHIP 100K 0.5% 1/10W		
4934		G1	RESISTOR		R6208	1-245-470-21	METAL 220K 1% 1/4W		
4935		G1	RESISTOR		R6209	1-245-474-21	METAL 330K 1% 1/4W		
4936		G1	RESISTOR		R6210	1-245-474-21	METAL 330K 1% 1/4W		
4937		G1	RESISTOR		R6211	1-218-877-11	METAL CHIP 18K 0.5% 1/10W		
4938		G1	RESISTOR		R6212	1-245-470-21	METAL 220K 1% 1/4W		
4939		G1	RESISTOR		R6213	1-245-474-21	METAL 330K 1% 1/4W		
4940		G1	RESISTOR		R6214	1-245-474-21	METAL 330K 1% 1/4W		
4941		G1	RESISTOR		R6215	1-216-121-11	RES-CHIP 1M 5% 1/10W		
4942		G1	RESISTOR		R6216	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4943		G1	RESISTOR		R6217	1-218-847-11	METAL CHIP 1K 0.5% 1/10W		
4944		G1	RESISTOR		R6218	1-218-875-11	METAL CHIP 15K 0.5% 1/10W		
4945		G1	RESISTOR		R6219	1-216-857-11	METAL CHIP 1M 5% 1/10W		
4946		G1	RESISTOR		R6220	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
4947		G1	RESISTOR		R6222	1-216-837-11	METAL CHIP 22K 5% 1/10W		
4948		G1	RESISTOR		R6223	1-243-665-11	METAL 0.05 5% 5W		
4949		G1	RESISTOR		R6224	1-243-665-11	METAL 0.05 5% 5W		
4950		G1	RESISTOR		R6225	1-249-393-11	CARBON 10 5% 1/4W		
4951		G1	RESISTOR		R6226	1-216-801-11	METAL CHIP 22 5% 1/10W		
4952		G1	RESISTOR		R6227	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4953		G1	RESISTOR		R6228	1-216-837-11	METAL CHIP 22K 5% 1/10W		
4954		G1	RESISTOR		R6229	1-249-393-11	CARBON 10 5% 1/4W		
4955		G1	RESISTOR		R6230	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4956		G1	RESISTOR		R6231	1-216-801-11	METAL CHIP 22 5% 1/10W		
4957		G1	RESISTOR		R6232	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4958		G1	RESISTOR		R6233	1-249-393-11	CARBON 10 5% 1/4W		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4959		G1	RESISTOR		R6234	1-249-401-11	CARBON 47 5% 1/4W		
4960		G1	RESISTOR		R6236	1-216-837-11	METAL CHIP 22K 5% 1/10W		
4961		G1	RESISTOR		R6237	1-249-393-11	CARBON 10 5% 1/4W		
4962		G1	RESISTOR		R6238	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
4963		G1	RESISTOR		R6239	1-216-849-11	METAL CHIP 220K 5% 1/10W		
4964		G1	RESISTOR		R6240	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4965		G1	RESISTOR		R6241	1-216-837-11	METAL CHIP 22K 5% 1/10W		
4966		G1	RESISTOR		R6242	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
4967		G1	RESISTOR		R6243	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4968		G1	RESISTOR		R6244	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
4969		G1	RESISTOR		R6245	1-218-851-11	METAL CHIP 1.5K 0.5% 1/10W		
4970		G1	RESISTOR		R6246	1-218-869-11	METAL CHIP 8.2K 0.5% 1/10W		
4971		G1	RESISTOR		R6247	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
4972		G1	RESISTOR		R6248	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
4973		G1	RESISTOR		R6249	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
4974		G1	RESISTOR		R6250	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4975		G1	RESISTOR		R6251	1-216-835-11	METAL CHIP 15K 5% 1/10W		
4976		G1	RESISTOR		R6252	1-216-837-11	METAL CHIP 22K 5% 1/10W		
4977		G1	RESISTOR		R6253	1-215-882-00	METAL OXIDE 22 5% 2W		
4978		G1	RESISTOR		R6254	1-215-882-00	METAL OXIDE 22 5% 2W		
4979		G1	RESISTOR		R6255	1-216-121-11	RES-CHIP 1M 5% 1/10W		
4980		G1	RESISTOR		R6256	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4981		G1	RESISTOR		R6257	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4982		G1	RESISTOR		R6258	1-216-841-11	METAL CHIP 47K 5% 1/10W		
4983		G1	RESISTOR		R6259	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4984		G1	RESISTOR		R6260	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4985		G1	RESISTOR		R6261	1-216-809-11	METAL CHIP 100 5% 1/10W		
4986		G1	RESISTOR		R6262	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
4987		G1	RESISTOR		R6263	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
4988		G1	RESISTOR		R6264	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
4989		G1	RESISTOR		R6265	1-216-837-11	METAL CHIP 22K 5% 1/10W		
4990		G1	RESISTOR		R6266	1-216-847-11	METAL CHIP 150K 5% 1/10W		
4991		G1	RESISTOR		R6267	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4992		G1	RESISTOR		R6268	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4993		G1	RESISTOR		R6269	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4994		G1	RESISTOR		R6270	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4995		G1	RESISTOR		R6271	1-216-841-11	METAL CHIP 47K 5% 1/10W		
4996		G1	RESISTOR		R6272	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4997		G1	RESISTOR		R6273	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4998		G1	RESISTOR		R6274	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
4999		G1	RESISTOR		R6275	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5000		G1	RESISTOR		R6276	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5001		G1	RESISTOR		R6277	1-216-797-11	METAL CHIP 10 5% 1/10W		
5002		G1	RESISTOR		R6278	1-216-849-11	METAL CHIP 220K 5% 1/10W		
5003		G1	RESISTOR		R6279	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5004		G1	RESISTOR		R6280	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5005		G1	RESISTOR		R6281	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5006		G1	RESISTOR		R6282	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W		
5007		G1	RESISTOR		R6283	1-218-831-11	METAL CHIP 220 0.5% 1/10W		
5008		G1	RESISTOR		R6284	1-218-851-11	METAL CHIP 1.5K 0.5% 1/10W		
5009		G1	RESISTOR		R6285	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5010		G1	RESISTOR		R6286	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5011		G1	RESISTOR		R6287	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5012		G1	RESISTOR		R6288	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5013		G1	RESISTOR		R6289	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5014		G1	RESISTOR		R6290	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5015		G1	RESISTOR		R6291	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5016		G1	RESISTOR		R6292	1-249-393-11	CARBON 10 5% 1/4W		
5017		G1	RESISTOR		R6293	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5018		G1	RESISTOR		R6294	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5019		G1	RESISTOR		R6297	1-249-393-11	CARBON 10 5% 1/4W		
5020		G1	RESISTOR		R6298	1-216-801-11	METAL CHIP 22 5% 1/10W		
5021		G1	RESISTOR		R6299	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5022		G1	RESISTOR		R6901	1-216-835-11	METAL CHIP 15K 5% 1/10W		
5023		G1	RESISTOR		R6902	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5024		G1	RESISTOR		R6905	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5025		G1	RESISTOR		R6910	1-216-817-11	METAL CHIP 470 5% 1/10W		
5026		G1	RESISTOR		R6911	1-216-864-11	SHORT CHIP 0		
5027		G1	VARIABLE RESISTOR		RV6201	1-225-626-91	RES, VAR, ADJ, CERMET 1K		
5028		G1	RELAY	△	RY6001	1-755-543-11	RELAY (AC POWER)		
5029		G1	RELAY	△	RY6002	1-755-543-11	RELAY (AC POWER)		
5030		G1	TRANSFORMER	△	T6101	1-443-313-11	TRANSFORMER, CONVERTER (SBT)		
5031		G1	THERMISTOR		TH6101	1-803-586-11	THERMISTOR, NTC		
5032		G1	THERMISTOR		TH6201	1-809-789-71	THERMISTOR, POSITIVE		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5033		G2N	CAPACITOR		C6301	1-137-639-21	MYLAR 0.47UF 10% 450V		
5034		G2N	CAPACITOR		C6302	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5035		G2N	CAPACITOR		C6304	1-107-905-11	ELECT 4.7UF 20.00% 50V		
5036		G2N	CAPACITOR		C6305	1-107-909-11	ELECT CHIP 47UF 20.00% 50V		
5037		G2N	CAPACITOR		C6306	1-100-831-91	CERAMIC CHIP 0.001UF 2% 50V		
5038		G2N	CAPACITOR		C6307	1-107-906-11	ELECT 10UF 20.00% 50V		
5039		G2N	CAPACITOR		C6308	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
5040		G2N	CAPACITOR		C6309	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5041		G2N	CAPACITOR		C6310	1-115-340-11	CERAMIC CHIP 0.22UF 10.00% 25V		
5042		G2N	CAPACITOR		C6311	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5043		G2N	CAPACITOR		C6313	1-107-888-11	ELECT 47UF 20.00% 25V		
5044		G2N	CAPACITOR		C6315	1-107-910-11	ELECT CHIP 100UF 20.00% 50V		
5045		G2N	CAPACITOR		C6316	1-107-824-11	CERAMIC 220PF 5.00% 1KV		
5046		G2N	CAPACITOR		C6317	1-107-824-11	CERAMIC 220PF 5.00% 1KV		
5047		G2N	CAPACITOR		C6318	1-100-919-11	FILM 0.027UF 3% 1KV		
5048		G2N	CAPACITOR		C6401	1-128-951-31	ELECT 2200UF 20% 16V		
5049		G2N	CAPACITOR		C6402	1-107-909-11	ELECT 47UF 20.00% 50V		
5050		G2N	CAPACITOR		C6403	1-107-914-11	ELECT CHIP 1000UF 20.00% 50V		
5051		G2N	CAPACITOR		C6404	1-107-929-11	ELECT 10UF 20.00% 100V		
5052		G2N	CAPACITOR		C6405	1-128-959-31	ELECT 1000UF 20% 35V		
5053		G2N	CAPACITOR		C6406	1-104-760-11	CERAMIC CHIP 0.047UF 10.00% 50V		
5054		G2N	CAPACITOR		C6407	1-128-951-31	ELECT 2200UF 20% 16V		
5055		G2N	CAPACITOR		C6408	1-128-951-31	ELECT 2200UF 20% 16V		
5056		G2N	CAPACITOR		C6409	1-107-928-11	ELECT 4.7UF 20.00% 100V		
5057		G2N	CAPACITOR		C6410	1-128-951-31	ELECT 2200UF 20% 16V		
5058		G2N	CAPACITOR		C6412	1-100-118-21	ELECT CHIP 82UF 20% 16V		
5059		G2N	CAPACITOR		C6413	1-107-877-11	ELECT 1000UF 20.00% 10V		
5060		G2N	CAPACITOR		C6414	1-107-884-11	ELECT 1000UF 20.00% 16V		
5061		G2N	CAPACITOR		C6417	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
5062		G2N	CAPACITOR		C6418	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5063		G2N	CAPACITOR		C6419	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5064		G2N	CAPACITOR		C6420	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
5065		G2N	CAPACITOR		C6421	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
5066		G2N	CAPACITOR		C6422	1-162-967-11	CERAMIC CHIP 0.0033UF 10.00% 50V		
5067		G2N	CAPACITOR		C6423	1-162-969-11	CERAMIC CHIP 0.0068UF 10.00% 25V		
5068		G2N	CAPACITOR		C6426	1-104-653-11	ELECT 220UF 20.00% 16V		
5069		G2N	CAPACITOR		C6427	1-104-652-11	ELECT 470UF 20.00% 10V		
5070		G2N	CAPACITOR		C6428	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
5071		G2N	CAPACITOR		C6429	1-127-820-11	CERAMIC CHIP 4.7UF 10% 16V		
5072		G2N	CAPACITOR		C6430	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
5073		G2N	CAPACITOR		C6431	1-135-960-91	CERAMIC CHIP 10UF 10% 25V		
5074		G2N	CAPACITOR		C6432	1-135-960-91	CERAMIC CHIP 10UF 10% 25V		
5075		G2N	CAPACITOR		C6433	1-107-888-11	ELECT 47UF 20.00% 25V		
5076		G2N	CAPACITOR		C6434	1-100-398-21	ELECT 270UF 20% 10V		
5077		G2N	CAPACITOR		C6435	1-128-528-11	ELECT 470UF 20.00% 25V		
5078		G2N	CAPACITOR		C6436	1-128-951-31	ELECT 2200UF 20% 16V		
5079		G2N	CAPACITOR		C6439	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
5080		G2N	CAPACITOR		C6443	1-128-959-31	ELECT 1000UF 20% 35V		
5081		G2N	CAPACITOR		C6445	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
5082		G2N	CAPACITOR		C6447	1-107-888-11	ELECT 47UF 20.00% 25V		
5083		G2N	CAPACITOR		C6448	1-128-528-11	ELECT 470UF 20.00% 25V		
5084		G2N	CAPACITOR		C6452	1-135-960-91	CERAMIC CHIP 10UF 10% 25V		
5085		G2N	CAPACITOR		C6453	1-128-951-31	ELECT 2200UF 20% 16V		
5086		G2N	CAPACITOR		C6464	1-107-888-11	ELECT 47UF 20.00% 25V		
5087		G2N	CAPACITOR		C6465	1-107-906-11	ELECT 10UF 20.00% 50V		
5088		G2N	CAPACITOR		C6501	1-117-227-11	MYLAR 1UF 10% 450V		
5089		G2N	CAPACITOR		C6502	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5090		G2N	CAPACITOR		C6503	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5091		G2N	CAPACITOR		C6504	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5092		G2N	CAPACITOR		C6505	1-107-906-11	ELECT 10UF 20.00% 50V		
5093		G2N	CAPACITOR		C6506	1-107-909-11	ELECT CHIP 47UF 20.00% 50V		
5094		G2N	CAPACITOR		C6507	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5095		G2N	CAPACITOR		C6508	1-100-831-91	CERAMIC CHIP 0.001UF 2% 50V		
5096		G2N	CAPACITOR		C6510	1-107-906-11	ELECT 10UF 20.00% 50V		
5097		G2N	CAPACITOR		C6511	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
5098		G2N	CAPACITOR		C6512	1-115-340-11	CERAMIC CHIP 0.22UF 10.00% 25V		
5099		G2N	CAPACITOR		C6513	1-115-340-11	CERAMIC CHIP 0.22UF 10.00% 25V		
5100		G2N	CAPACITOR		C6515	1-107-888-11	ELECT 47UF 20.00% 25V		
5101		G2N	CAPACITOR		C6516	1-107-824-11	CERAMIC 220PF 5.00% 1KV		
5102		G2N	CAPACITOR		C6517	1-107-824-11	CERAMIC 220PF 5.00% 1KV		
5103		G2N	CAPACITOR		C6518	1-100-400-11	FILM 39000PF 3% 1KV		
5104		G2N	CAPACITOR		C6601	1-165-774-31	ELECT 470UF 20% 100V		
5105		G2N	CAPACITOR		C6602	1-165-774-31	ELECT 470UF 20% 100V		
5106		G2N	CAPACITOR		C6603	1-100-727-21	ELECT(BLOCK) 3900UF 20% 100V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5107		G2N	CAPACITOR		C6604	1-102-244-00	CERAMIC 220PF 10.00% 500V		
5108		G2N	CAPACITOR		C6605	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
5109		G2N	CAPACITOR		C6606	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5110		G2N	CAPACITOR		C6607	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
5111		G2N	CAPACITOR		C6608	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
5112		G2N	CAPACITOR		C6701	1-117-228-71	MYLAR 2.2UF 10.00% 450V		
5113		G2N	CAPACITOR		C6702	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5114		G2N	CAPACITOR		C6703	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5115		G2N	CAPACITOR		C6704	1-107-907-11	ELECT 22UF 20.00% 50V		
5116		G2N	CAPACITOR		C6706	1-107-909-11	ELECT CHIP 47UF 20.00% 50V		
5117		G2N	CAPACITOR		C6707	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5118		G2N	CAPACITOR		C6708	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5119		G2N	CAPACITOR		C6709	1-100-831-91	CERAMIC CHIP 0.001UF 2% 50V		
5120		G2N	CAPACITOR		C6711	1-107-906-11	ELECT 10UF 20.00% 50V		
5121		G2N	CAPACITOR		C6712	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
5122		G2N	CAPACITOR		C6713	1-115-340-11	CERAMIC CHIP 0.22UF 10.00% 25V		
5123		G2N	CAPACITOR		C6714	1-115-340-11	CERAMIC CHIP 0.22UF 10.00% 25V		
5124		G2N	CAPACITOR		C6716	1-107-888-11	ELECT 47UF 20.00% 25V		
5125		G2N	CAPACITOR		C6718	1-100-613-81	CERAMIC 470PF 5% 1KV		
5126		G2N	CAPACITOR		C6719	1-100-613-81	CERAMIC 470PF 5% 1KV		
5127		G2N	CAPACITOR		C6720	1-100-400-11	FILM 39000PF 3% 1KV		
5128		G2N	CAPACITOR		C6721	1-100-400-11	FILM 39000PF 3% 1KV		
5129		G2N	CAPACITOR		C6801	1-112-023-11	ELECT(BLOCK) 1200UF 20 250V		
5130		G2N	CAPACITOR		C6803	1-112-023-11	ELECT(BLOCK) 1200UF 20 250V		
5131		G2N	CAPACITOR		C6805	1-112-023-11	ELECT(BLOCK) 1200UF 20 250V		
5132		G2N	CAPACITOR		C6807	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5133		G2N	CAPACITOR		C6808	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
5134		G2N	CAPACITOR		C6809	1-102-244-00	CERAMIC 220PF 10.00% 500V		
5135		G2N	CAPACITOR		C6810	1-163-017-00	CERAMIC CHIP 0.0047UF 10.00% 50V		
5136		G2N	CAPACITOR		C6811	1-107-882-91	ELECT 100UF 20.00% 16V		
5137		G2N	CAPACITOR		C6820	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
5138		G2N	CAPACITOR		C6901	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
5139		G2N	CAPACITOR		C6902	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5140		G2N	CAPACITOR		C6903	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5141		G2N	CAPACITOR		C6904	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5142		G2N	CAPACITOR		C6905	1-107-906-11	ELECT 10UF 20.00% 50V		
5143		G2N	CAPACITOR		C6906	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5144		G2N	CAPACITOR		C6907	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
5145		G2N	CAPACITOR		C6908	1-107-905-11	ELECT 4.7UF 20.00% 50V		
5146		G2N	CAPACITOR		C6911	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5147		G2N	CAPACITOR		C6918	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5148		G2N	CAPACITOR		C6921	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5149		G2N	CAPACITOR		C6929	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5150		G2N	CAPACITOR		C6930	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5151		G2N	CAPACITOR		C6931	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5152		G2N	CAPACITOR		C6932	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5153		G2N	CAPACITOR		C6933	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
5154		G2N	CAPACITOR		C6934	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5155		G2N	CAPACITOR		C6935	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5156		G2N	CAPACITOR		C6936	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5157		G2N	CAPACITOR		C6937	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5158		G2N	CAPACITOR		C6938	1-128-528-11	ELECT CHIP 470UF 20.00% 25V		
5159		G2N	CAPACITOR		C6939	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5160		G2N	CAPACITOR		C6940	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5161		G2N	CAPACITOR		C6941	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
5162		G2N	CAPACITOR		C6942	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
5163		G2N	CONNECTOR		CN6004	1-817-097-91	PIN, CONNECTOR (1.5MM)(SMD)13P		
5164		G2N	CONNECTOR	*	CN6005	1-766-175-11	PIN, CONNECTOR (PC BOARD) 5P		
5165		G2N	CONNECTOR		CN6006	1-766-383-91	PIN, CONNECTOR 12P		
5166		G2N	CONNECTOR	*	CN6008	1-770-468-21	PIN, CONNECTOR (PC BOARD) 10P		
5167		G2N	CONNECTOR		CN6009	1-785-728-21	PIN (PC BOARD), CONNECTOR 7P		
5168		G2N	CONNECTOR		CN6013	1-779-092-11	PIN, CONNECTOR (PC BOARD) 10P		
5169		G2N	CONNECTOR	*	CN6020	1-580-838-11	PIN, CONNECTOR (PC BOARD) 4P		
5170		G2N	CONNECTOR		CN6021	1-766-376-91	PIN, CONNECTOR 9P		
5171		G2N	CONNECTOR		CN6022	1-691-550-91	PIN, CONNECTOR 3P		
5172		G2N	CONNECTOR		CN6023	1-695-915-11	TAB (CONTACT)		
5173		G2N	CONNECTOR		CN6301	1-573-806-91	PIN, CONNECTOR 6P		
5174		G2N	DIODE		D6301	8-719-081-97	DIODE MMDL914T1		
5175		G2N	DIODE		D6302	8-719-082-03	DIODE MM3Z15VT1		
5176		G2N	DIODE		D6303	8-719-082-03	DIODE MM3Z15VT1		
5177		G2N	DIODE		D6304	8-719-082-03	DIODE MM3Z15VT1		
5178		G2N	DIODE		D6305	8-719-979-64	DIODE UF4005PKG23		
5179		G2N	DIODE		D6306	6-501-043-01	DIODE UMZ16NT106		
5180		G2N	DIODE		D6307	6-501-043-01	DIODE UMZ16NT106		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5181		G2N	DIODE		D6308	6-500-567-31	DIODE 10ERB20-TB3		
5182		G2N	DIODE		D6310	8-719-081-97	DIODE MMDL914T1		
5183		G2N	DIODE		D6311	8-719-080-69	DIODE M1FS4-4063		
5184		G2N	DIODE		D6313	8-719-071-94	DIODE HRU0103ATRF		
5185		G2N	DIODE		D6314	8-719-080-69	DIODE M1FS4-4063		
5186		G2N	DIODE		D6401	8-719-510-12	DIODE D10SC4M		
5187		G2N	DIODE		D6402	8-719-041-97	DIODE MA113-(TX)		
5188		G2N	DIODE		D6403	8-719-027-22	DIODE D3S6M-F		
5189		G2N	DIODE		D6404	6-500-567-31	DIODE 10ERB20-TB3		
5190		G2N	DIODE		D6405	6-500-567-31	DIODE 10ERB20-TB3		
5191		G2N	DIODE		D6406	8-719-510-12	DIODE D10SC4M		
5192		G2N	DIODE		D6407	8-719-510-12	DIODE D10SC4M		
5193		G2N	DIODE		D6408	8-719-510-12	DIODE D10SC4M		
5194		G2N	DIODE		D6409	8-719-983-37	DIODE MTZJ-T-77-36A		
5195		G2N	DIODE		D6411	8-719-081-97	DIODE MMDL914T1		
5196		G2N	DIODE		D6412	8-719-073-69	DIODE PTZ-TE25-6.2A		
5197		G2N	DIODE		D6413	8-719-081-97	DIODE MMDL914T1		
5198		G2N	DIODE		D6414	8-719-081-97	DIODE MMDL914T1		
5199		G2N	DIODE		D6415	8-719-081-97	DIODE MMDL914T1		
5200		G2N	DIODE		D6416	8-719-081-97	DIODE MMDL914T1		
5201		G2N	DIODE		D6417	8-719-510-13	DIODE D10SC4MR		
5202		G2N	DIODE		D6420	8-719-081-97	DIODE MMDL914T1		
5203		G2N	DIODE		D6421	8-719-081-97	DIODE MMDL914T1		
5204		G2N	DIODE		D6422	8-719-081-97	DIODE MMDL914T1		
5205		G2N	DIODE		D6423	8-719-081-97	DIODE MMDL914T1		
5206		G2N	DIODE		D6425	8-719-081-97	DIODE MMDL914T1		
5207		G2N	DIODE		D6501	8-719-081-97	DIODE MMDL914T1		
5208		G2N	DIODE		D6502	8-719-082-03	DIODE MM3Z15VT1		
5209		G2N	DIODE		D6503	8-719-082-03	DIODE MM3Z15VT1		
5210		G2N	DIODE		D6504	8-719-082-03	DIODE MM3Z15VT1		
5211		G2N	DIODE		D6505	8-719-979-64	DIODE UF4005PKG23		
5212		G2N	DIODE		D6506	6-501-043-01	DIODE UMZ16NT106		
5213		G2N	DIODE		D6507	6-501-043-01	DIODE UMZ16NT106		
5214		G2N	DIODE		D6511	8-719-080-69	DIODE M1FS4-4063		
5215		G2N	DIODE		D6513	8-719-071-94	DIODE HRU0103ATRF		
5216		G2N	DIODE		D6514	8-719-080-69	DIODE M1FS4-4063		
5217		G2N	DIODE		D6601	8-719-054-51	DIODE D8LC20U-4012		
5218		G2N	DIODE		D6602	6-500-254-01	DIODE MM3Z7V5T1		
5219		G2N	DIODE		D6603	8-719-081-97	DIODE MMDL914T1		
5220		G2N	DIODE		D6700	8-719-081-97	DIODE MMDL914T1		
5221		G2N	DIODE		D6701	8-719-082-03	DIODE MM3Z15VT1		
5222		G2N	DIODE		D6702	8-719-082-03	DIODE MM3Z15VT1		
5223		G2N	DIODE		D6703	8-719-082-03	DIODE MM3Z15VT1		
5224		G2N	DIODE		D6704	8-719-979-64	DIODE UF4005PKG23		
5225		G2N	DIODE		D6705	8-719-041-97	DIODE MA113-(TX)		
5226		G2N	DIODE		D6706	8-719-041-97	DIODE MA113-(TX)		
5227		G2N	DIODE		D6707	6-501-043-01	DIODE UMZ16NT106		
5228		G2N	DIODE		D6708	6-501-043-01	DIODE UMZ16NT106		
5229		G2N	DIODE		D6711	8-719-080-69	DIODE M1FS4-4063		
5230		G2N	DIODE		D6713	8-719-071-94	DIODE HRU0103ATRF		
5231		G2N	DIODE		D6714	8-719-080-69	DIODE M1FS4-4063		
5232		G2N	DIODE		D6801	6-500-439-01	DIODE D8LD40-F1		
5233		G2N	DIODE		D6802	8-719-082-03	DIODE MM3Z15VT1		
5234		G2N	DIODE		D6804	6-500-439-01	DIODE D8LD40-F1		
5235		G2N	DIODE		D6805	8-719-081-97	DIODE MMDL914T1		
5236		G2N	DIODE		D6806	8-719-081-97	DIODE MMDL914T1		
5237		G2N	DIODE		D6812	8-719-081-97	DIODE MMDL914T1		
5238		G2N	DIODE		D6901	8-719-083-61	DIODE UDZSTE-1711B		
5239		G2N	DIODE		D6902	8-719-081-97	DIODE MMDL914T1		
5240		G2N	DIODE		D6903	8-719-081-97	DIODE MMDL914T1		
5241		G2N	DIODE		D6904	8-719-081-97	DIODE MMDL914T1		
5242		G2N	DIODE		D6906	8-719-081-97	DIODE MMDL914T1		
5243		G2N	DIODE		D6907	8-719-041-97	DIODE MA113-(TX)		
5244		G2N	DIODE		D6908	8-719-041-97	DIODE MA113-(TX)		
5245		G2N	DIODE		D6912	8-719-059-50	DIODE MA3J142D0LSO		
5246		G2N	DIODE		D6914	8-719-059-50	DIODE MA3J142D0LSO		
5247		G2N	DIODE		D6920	8-719-081-97	DIODE MMDL914T1		
5248		G2N	DIODE		D6921	8-719-059-50	DIODE MA3J142D0LSO		
5249		G2N	DIODE		D6922	8-719-081-97	DIODE MMDL914T1		
5250		G2N	DIODE		D6923	8-719-081-97	DIODE MMDL914T1		
5251		G2N	FERRITE BEAD		FB6401	1-410-397-21	FERRITE 1.1UH		
5252		G2N	FERRITE BEAD		FB6402	1-410-397-21	FERRITE 1.1UH		
5253		G2N	IC		IC6301	6-706-852-01	IC CXD9841M		
5254		G2N	IC		IC6401	8-759-653-07	IC PQ09RD21		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5255		G2N	IC		IC6402	8-759-471-81	IC PQ05RD11		
5256		G2N	IC		IC6403	6-704-967-01	IC PQ20RX11J00H		
5257		G2N	IC		IC6404	8-759-581-11	IC NJM2125F(TE2)		
5258		G2N	IC		IC6405	8-759-682-42	IC MM1431ATT		
5259		G2N	IC		IC6408	6-703-249-01	IC SN105233DBTR		
5260		G2N	IC		IC6409	6-704-967-01	IC PQ20RX11J00H		
5261		G2N	IC		IC6501	6-706-852-01	IC CXD9841M		
5262		G2N	IC		IC6601	8-759-682-42	IC MM1431ATT		
5263		G2N	IC		IC6701	6-706-852-01	IC CXD9841M		
5264		G2N	IC		IC6801	8-759-682-42	IC MM1431ATT		
5265		G2N	IC		IC6902	8-759-682-42	IC MM1431ATT		
5266		G2N	IC	*	IC6903	8-759-575-27	IC BA10339F-E2		
5267		G2N	IC	*	IC6905	8-759-575-27	IC BA10339F-E2		
5268		G2N	IC		IC6906	8-759-682-42	IC MM1431ATT		
5269		G2N	IC		IC6907	8-759-581-11	IC NJM2125F(TE2)		
5270		G2N	COIL		L6301	1-406-667-11	INDUCTOR 220UH		
5271		G2N	COIL		L6400	1-412-537-31	INDUCTOR 100UH		
5272		G2N	COIL		L6401	1-406-657-11	INDUCTOR 4.7UH		
5273		G2N	COIL		L6402	1-406-657-11	INDUCTOR 4.7UH		
5274		G2N	COIL		L6403	1-412-537-31	INDUCTOR 100UH		
5275		G2N	COIL		L6404	1-406-657-11	INDUCTOR 4.7UH		
5276		G2N	COIL		L6405	1-456-787-21	INDUCTOR 10UH		
5277		G2N	COIL		L6501	1-406-665-11	INDUCTOR 100UH		
5278		G2N	COIL		L6701	1-406-977-21	INDUCTOR 100UH		
5279		G2N	COIL		L6800	1-406-656-21	INDUCTOR 3.3UH		
5280		G2N	PHOTO COUPLER	△	PH6401	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
5281		G2N	PHOTO COUPLER	△	PH6601	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
5282		G2N	PHOTO COUPLER	△	PH6801	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
5283		G2N	PHOTO COUPLER	△	PH6902	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
5284		G2N	PHOTO COUPLER	△	PH6903	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
5285		G2N	PHOTO COUPLER		PH6905	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
5286		G2N	IC LINK	△	PS6401	1-576-736-21	IC LINK 3.15A 24V		
5287		G2N	TRANSISTOR		Q6301	6-550-526-11	TRANSISTOR 2SK2842(LBS2SONY)		
5288		G2N	TRANSISTOR		Q6302	6-550-526-11	TRANSISTOR 2SK2842(LBS2SONY)		
5289		G2N	TRANSISTOR		Q6405	8-729-140-96	TRANSISTOR 2SD774-34		
5290		G2N	TRANSISTOR		Q6406	6-550-222-01	TRANSISTOR IRF7335D1-TR		
5291		G2N	TRANSISTOR		Q6407	6-550-549-01	TRANSISTOR DTC114EUAFT106		
5292		G2N	TRANSISTOR		Q6408	6-550-549-01	TRANSISTOR DTC114EUAFT106		
5293		G2N	TRANSISTOR		Q6413	6-550-549-01	TRANSISTOR DTC114EUAFT106		
5294		G2N	TRANSISTOR		Q6414	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
5295		G2N	TRANSISTOR		Q6415	8-729-905-35	TRANSISTOR 2SC4081-R		
5296		G2N	TRANSISTOR		Q6416	8-729-028-91	TRANSISTOR DTA144EUA-T106		
5297		G2N	TRANSISTOR		Q6417	8-729-029-14	TRANSISTOR DTC144EUA-T106		
5298		G2N	TRANSISTOR		Q6418	8-729-905-35	TRANSISTOR 2SC4081-R		
5299		G2N	TRANSISTOR		Q6419	8-729-046-75	TRANSISTOR SI2301DS-T1		
5300		G2N	TRANSISTOR		Q6501	8-729-040-89	TRANSISTOR 2SK1590-T1B		
5301		G2N	TRANSISTOR		Q6502	6-550-549-01	TRANSISTOR DTC114EUAFT106		
5302		G2N	TRANSISTOR		Q6503	6-550-526-11	TRANSISTOR 2SK2842(LBS2SONY)		
5303		G2N	TRANSISTOR		Q6504	6-550-526-11	TRANSISTOR 2SK2842(LBS2SONY)		
5304		G2N	TRANSISTOR		Q6600	6-550-118-01	TRANSISTOR IRLI3215-LF33		
5305		G2N	TRANSISTOR		Q6601	6-550-549-01	TRANSISTOR DTC114EUAFT106		
5306		G2N	TRANSISTOR		Q6701	8-729-040-89	TRANSISTOR 2SK1590-T1B		
5307		G2N	TRANSISTOR		Q6702	6-550-549-01	TRANSISTOR DTC114EUAFT106		
5308		G2N	TRANSISTOR		Q6703	8-729-820-86	TRANSISTOR 2SB1121-ST		
5309		G2N	TRANSISTOR		Q6704	8-729-820-86	TRANSISTOR 2SB1121-ST		
5310		G2N	TRANSISTOR		Q6705	6-550-372-01	TRANSISTOR SPA20N60C3E8152		
5311		G2N	TRANSISTOR		Q6706	6-550-372-01	TRANSISTOR SPA20N60C3E8152		
5312		G2N	TRANSISTOR		Q6801	6-550-715-01	TRANSISTOR IRFS644BYDTU		
5313		G2N	TRANSISTOR		Q6802	6-550-549-01	TRANSISTOR DTC114EUAFT106		
5314		G2N	TRANSISTOR		Q6901	8-729-905-35	TRANSISTOR 2SC4081-R		
5315		G2N	TRANSISTOR		Q6902	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
5316		G2N	TRANSISTOR		Q6903	6-550-548-01	TRANSISTOR DTA114EUAFT106		
5317		G2N	TRANSISTOR		Q6905	6-550-548-01	TRANSISTOR DTA114EUAFT106		
5318		G2N	TRANSISTOR		Q6906	6-550-548-01	TRANSISTOR DTA114EUAFT106		
5319		G2N	TRANSISTOR		Q6909	6-550-548-01	TRANSISTOR DTA114EUAFT106		
5320		G2N	TRANSISTOR		Q6910	8-729-905-35	TRANSISTOR 2SC4081-R		
5321		G2N	TRANSISTOR		Q6911	6-550-548-01	TRANSISTOR DTA114EUAFT106		
5322		G2N	TRANSISTOR		Q6912	6-550-549-01	TRANSISTOR DTC114EUAFT106		
5323		G2N	TRANSISTOR		Q6913	6-550-549-01	TRANSISTOR DTC114EUAFT106		
5324		G2N	TRANSISTOR		Q6915	6-550-548-01	TRANSISTOR DTA114EUAFT106		
5325		G2N	TRANSISTOR		Q6918	6-550-548-01	TRANSISTOR DTA114EUAFT106		
5326		G2N	TRANSISTOR		Q6919	6-550-549-01	TRANSISTOR DTC114EUAFT106		
5327		G2N	TRANSISTOR		Q6922	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
5328		G2N	TRANSISTOR		Q6923	6-550-548-01	TRANSISTOR DTA114EUAFT106		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5329		G2N	TRANSISTOR		Q6924	8-729-023-22	TRANSISTOR 2SD2114K		
5330		G2N	TRANSISTOR		Q6925	8-729-023-22	TRANSISTOR 2SD2114K		
5331		G2N	TRANSISTOR		Q6926	6-550-549-01	TRANSISTOR DTC114EUAFT106		
5332		G2N	RESISTOR		R6301	1-249-393-11	CARBON 10 5% 1/4W		
5333		G2N	RESISTOR		R6302	1-202-933-61	FUSIBLE 0.1 10% 1/2W		
5334		G2N	RESISTOR		R6303	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
5335		G2N	RESISTOR		R6304	1-249-393-11	CARBON 10 5% 1/4W		
5336		G2N	RESISTOR		R6305	1-245-478-21	METAL 470K 1% 1/4W		
5337		G2N	RESISTOR		R6306	1-245-478-21	METAL 470K 1% 1/4W		
5338		G2N	RESISTOR		R6307	1-218-877-11	METAL CHIP 18K 0.5% 1/10W		
5339		G2N	RESISTOR		R6308	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5340		G2N	RESISTOR		R6309	1-218-823-11	METAL CHIP 100 0.5% 1/10W		
5341		G2N	RESISTOR		R6311	1-249-397-11	CARBON 22 5% 1/4W		
5342		G2N	RESISTOR		R6312	1-249-397-11	CARBON 22 5% 1/4W		
5343		G2N	RESISTOR		R6313	1-218-827-11	METAL CHIP 150 0.5% 1/10W		
5344		G2N	RESISTOR		R6314	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5345		G2N	RESISTOR		R6315	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5346		G2N	RESISTOR		R6316	1-260-304-51	CARBON 10 5% 1/2W		
5347		G2N	RESISTOR		R6318	1-216-361-00	METAL OXIDE 0.22 5% 2W		
5348		G2N	RESISTOR		R6320	1-216-864-11	SHORT CHIP 0		
5349		G2N	RESISTOR		R6401	1-249-377-11	CARBON 0.47 5% 1/4W		
5350		G2N	RESISTOR		R6402	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5351		G2N	RESISTOR		R6404	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5352		G2N	RESISTOR		R6405	1-249-393-11	CARBON 10 5% 1/4W		
5353		G2N	RESISTOR		R6406	1-216-793-11	METAL CHIP 4.7 5% 1/10W		
5354		G2N	RESISTOR		R6407	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5355		G2N	RESISTOR		R6408	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5356		G2N	RESISTOR		R6409	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5357		G2N	RESISTOR		R6411	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W		
5358		G2N	RESISTOR		R6412	1-218-875-11	METAL CHIP 15K 0.5% 1/10W		
5359		G2N	RESISTOR		R6413	1-216-864-11	SHORT CHIP 0		
5360		G2N	RESISTOR		R6414	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5361		G2N	RESISTOR		R6415	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
5362		G2N	RESISTOR		R6418	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5363		G2N	RESISTOR		R6419	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5364		G2N	RESISTOR		R6420	1-218-857-11	METAL CHIP 2.7K 0.5% 1/10W		
5365		G2N	RESISTOR		R6421	1-218-861-11	METAL CHIP 3.9K 0.5% 1/10W		
5366		G2N	RESISTOR		R6422	1-218-835-11	METAL CHIP 330 0.5% 1/10W		
5367		G2N	RESISTOR		R6423	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5368		G2N	RESISTOR		R6424	1-218-887-11	METAL CHIP 47K 0.5% 1/10W		
5369		G2N	RESISTOR		R6425	1-216-864-11	SHORT CHIP 0		
5370		G2N	RESISTOR		R6426	1-218-887-11	METAL CHIP 47K 0.5% 1/10W		
5371		G2N	RESISTOR		R6428	1-216-799-11	METAL CHIP 15 5% 1/10W		
5372		G2N	RESISTOR		R6434	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5373		G2N	RESISTOR		R6436	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5374		G2N	RESISTOR		R6437	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
5375		G2N	RESISTOR		R6438	1-218-853-11	METAL CHIP 1.8K 0.5% 1/10W		
5376		G2N	RESISTOR		R6439	1-218-865-11	METAL CHIP 5.6K 0.5% 1/10W		
5377		G2N	RESISTOR		R6441	1-216-295-91	SHORT CHIP 0		
5378		G2N	RESISTOR		R6442	1-216-295-91	SHORT CHIP 0		
5379		G2N	RESISTOR		R6445	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
5380		G2N	RESISTOR		R6447	1-216-835-11	METAL CHIP 15K 5% 1/10W		
5381		G2N	RESISTOR		R6448	1-216-835-11	METAL CHIP 15K 5% 1/10W		
5382		G2N	RESISTOR		R6449	1-216-835-11	METAL CHIP 15K 5% 1/10W		
5383		G2N	RESISTOR		R6450	1-216-835-11	METAL CHIP 15K 5% 1/10W		
5384		G2N	RESISTOR		R6452	1-216-295-91	SHORT CHIP 0		
5385		G2N	RESISTOR		R6453	1-216-295-91	SHORT CHIP 0		
5386		G2N	RESISTOR		R6455	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5387		G2N	RESISTOR		R6457	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
5388		G2N	RESISTOR		R6458	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
5389		G2N	RESISTOR		R6469	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5390		G2N	RESISTOR		R6470	1-216-864-11	SHORT CHIP 0		
5391		G2N	RESISTOR		R6471	1-218-859-11	METAL CHIP 3.3K 0.5% 1/10W		
5392		G2N	RESISTOR		R6472	1-218-855-11	METAL CHIP 2.2K 0.5% 1/10W		
5393		G2N	RESISTOR		R6473	1-218-869-11	METAL CHIP 8.2K 0.5% 1/10W		
5394		G2N	RESISTOR		R6481	1-216-835-11	METAL CHIP 15K 5% 1/10W		
5395		G2N	RESISTOR		R6482	1-216-835-11	METAL CHIP 15K 5% 1/10W		
5396		G2N	RESISTOR		R6483	1-216-836-11	METAL CHIP 18K 5% 1/10W		
5397		G2N	RESISTOR		R6484	1-216-835-11	METAL CHIP 15K 5% 1/10W		
5398		G2N	RESISTOR		R6488	1-218-891-11	METAL CHIP 68K 0.5% 1/10W		
5399		G2N	RESISTOR		R6489	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5400		G2N	RESISTOR		R6490	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5401		G2N	RESISTOR		R6491	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5402		G2N	RESISTOR		R6492	1-216-821-11	METAL CHIP 1K 5% 1/10W		

No.	#	Board	Type	Δ/\ast	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5403		G2N	RESISTOR		R6493	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5404		G2N	RESISTOR		R6494	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5405		G2N	RESISTOR		R6501	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5406		G2N	RESISTOR		R6502	1-249-393-11	CARBON 10 5% 1/4W		
5407		G2N	RESISTOR		R6503	1-202-933-61	FUSIBLE 0.1 10% 1/2W		
5408		G2N	RESISTOR		R6504	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5409		G2N	RESISTOR		R6505	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W		
5410		G2N	RESISTOR		R6506	1-245-478-21	METAL 470K 1% 1/4W		
5411		G2N	RESISTOR		R6507	1-245-478-21	METAL 470K 1% 1/4W		
5412		G2N	RESISTOR		R6509	1-218-823-11	METAL CHIP 100 0.5% 1/10W		
5413		G2N	RESISTOR		R6510	1-218-875-11	METAL CHIP 15K 0.5% 1/10W		
5414		G2N	RESISTOR		R6512	1-218-823-11	METAL CHIP 100 0.5% 1/10W		
5415		G2N	RESISTOR		R6513	1-249-397-11	CARBON 22 5% 1/4W		
5416		G2N	RESISTOR		R6514	1-249-397-11	CARBON 22 5% 1/4W		
5417		G2N	RESISTOR		R6515	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5418		G2N	RESISTOR		R6516	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5419		G2N	RESISTOR		R6517	1-245-478-21	METAL 470K 1% 1/4W		
5420		G2N	RESISTOR		R6518	1-245-478-21	METAL 470K 1% 1/4W		
5421		G2N	RESISTOR		R6519	1-245-478-21	METAL 470K 1% 1/4W		
5422		G2N	RESISTOR		R6520	1-245-478-21	METAL 470K 1% 1/4W		
5423		G2N	RESISTOR		R6521	1-219-984-51	METAL 0.1 2% 2W		
5424		G2N	RESISTOR		R6522	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5425		G2N	RESISTOR		R6523	1-216-121-11	RES-CHIP 1M 5% 1/10W		
5426		G2N	RESISTOR		R6524	1-216-864-11	SHORT CHIP 0		
5427		G2N	RESISTOR		R6601	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5428		G2N	RESISTOR		R6602	1-216-864-11	SHORT CHIP 0		
5429		G2N	RESISTOR		R6603	1-217-156-00	METAL 0.22 10% 5W		
5430		G2N	RESISTOR		R6604	1-202-962-11	CEMENTED 3.3 5% 10W		
5431		G2N	RESISTOR		R6605	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5432		G2N	RESISTOR		R6606	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5433		G2N	RESISTOR		R6607	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
5434		G2N	RESISTOR		R6608	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
5435		G2N	RESISTOR		R6609	1-218-760-11	METAL CHIP 220K 0.5% 1/10W		
5436		G2N	RESISTOR		R6610	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5437		G2N	RESISTOR		R6611	1-216-797-11	METAL CHIP 10 5% 1/10W		
5438		G2N	RESISTOR		R6612	1-215-900-11	METAL OXIDE 22K 5% 2W		
5439		G2N	RESISTOR		R6701	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5440		G2N	RESISTOR		R6702	1-249-393-11	CARBON 10 5% 1/4W		
5441		G2N	RESISTOR		R6703	1-220-886-11	FUSIBLE 0.1 10% 1W		
5442		G2N	RESISTOR		R6704	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5443		G2N	RESISTOR		R6705	1-218-823-11	METAL CHIP 100 0.5% 1/10W		
5444		G2N	RESISTOR		R6706	1-218-865-11	METAL CHIP 5.6K 0.5% 1/10W		
5445		G2N	RESISTOR		R6708	1-245-478-21	METAL 470K 1% 1/4W		
5446		G2N	RESISTOR		R6709	1-245-478-21	METAL 470K 1% 1/4W		
5447		G2N	RESISTOR		R6710	1-218-875-11	METAL CHIP 15K 0.5% 1/10W		
5448		G2N	RESISTOR		R6711	1-218-895-11	METAL CHIP 100K 0.5% 1/10W		
5449		G2N	RESISTOR		R6712	1-218-825-11	METAL CHIP 120 0.5% 1/10W		
5450		G2N	RESISTOR		R6713	1-249-397-11	CARBON 22 5% 1/4W		
5451		G2N	RESISTOR		R6714	1-249-397-11	CARBON 22 5% 1/4W		
5452		G2N	RESISTOR		R6715	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5453		G2N	RESISTOR		R6716	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5454		G2N	RESISTOR		R6717	1-216-121-11	RES-CHIP 1M 5% 1/10W		
5455		G2N	RESISTOR		R6718	1-219-984-51	METAL 0.1 2% 2W		
5456		G2N	RESISTOR		R6719	1-216-864-11	SHORT CHIP 0		
5457		G2N	RESISTOR		R6720	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5458		G2N	RESISTOR		R6723	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5459		G2N	RESISTOR		R6724	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5460		G2N	RESISTOR		R6725	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5461		G2N	RESISTOR		R6726	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5462		G2N	RESISTOR		R6727	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5463		G2N	RESISTOR		R6728	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5464		G2N	RESISTOR		R6729	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5465		G2N	RESISTOR		R6730	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5466		G2N	RESISTOR		R6731	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5467		G2N	RESISTOR		R6732	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5468		G2N	RESISTOR		R6733	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5469		G2N	RESISTOR		R6734	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5470		G2N	RESISTOR		R6801	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5471		G2N	RESISTOR		R6802	1-220-820-31	CEMENTED 1.5 5% 10W		
5472		G2N	RESISTOR		R6803	1-220-820-31	CEMENTED 1.5 5% 10W		
5473		G2N	RESISTOR		R6804	1-245-703-11	METAL 22 10% 20W		
5474		G2N	RESISTOR		R6812	1-243-725-71	METAL OXIDE 100K 5% 1W		
5475		G2N	RESISTOR		R6813	1-243-725-71	METAL OXIDE 100K 5% 1W		
5476		G2N	RESISTOR		R6814	1-216-797-11	METAL CHIP 10 5% 1/10W		

No.	#	Board	Type	Δ / [*]	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5477		G2N	RESISTOR		R6815	1-208-842-11	METAL CHIP 330K 0.5% 1/10W		
5478		G2N	RESISTOR		R6816	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5479		G2N	RESISTOR		R6817	1-216-849-11	METAL CHIP 220K 5% 1/10W		
5480		G2N	RESISTOR		R6818	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
5481		G2N	RESISTOR		R6819	1-208-842-11	METAL CHIP 330K 0.5% 1/10W		
5482		G2N	RESISTOR		R6820	1-208-842-11	METAL CHIP 330K 0.5% 1/10W		
5483		G2N	RESISTOR		R6821	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5484		G2N	RESISTOR		R6838	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5485		G2N	RESISTOR		R6839	1-218-865-11	METAL CHIP 5.6K 0.5% 1/10W		
5486		G2N	RESISTOR		R6840	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
5487		G2N	RESISTOR		R6841	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
5488		G2N	RESISTOR		R6842	1-218-875-11	METAL CHIP 15K 0.5% 1/10W		
5489		G2N	RESISTOR		R6844	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5490		G2N	RESISTOR		R6846	1-216-836-11	METAL CHIP 18K 5% 1/10W		
5491		G2N	RESISTOR		R6901	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5492		G2N	RESISTOR		R6902	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5493		G2N	RESISTOR		R6903	1-216-864-11	SHORT CHIP 0		
5494		G2N	RESISTOR		R6905	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5495		G2N	RESISTOR		R6906	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5496		G2N	RESISTOR		R6907	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5497		G2N	RESISTOR		R6908	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5498		G2N	RESISTOR		R6909	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5499		G2N	RESISTOR		R6910	1-216-809-11	METAL CHIP 100 5% 1/10W		
5500		G2N	RESISTOR		R6911	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5501		G2N	RESISTOR		R6912	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5502		G2N	RESISTOR		R6913	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5503		G2N	RESISTOR		R6914	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5504		G2N	RESISTOR		R6915	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
5505		G2N	RESISTOR		R6916	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
5506		G2N	RESISTOR		R6917	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
5507		G2N	RESISTOR		R6918	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
5508		G2N	RESISTOR		R6919	1-218-879-11	METAL CHIP 22K 0.5% 1/10W		
5509		G2N	RESISTOR		R6920	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5510		G2N	RESISTOR		R6921	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5511		G2N	RESISTOR		R6932	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5512		G2N	RESISTOR		R6933	1-218-899-11	METAL CHIP 150K 0.5% 1/16W		
5513		G2N	RESISTOR		R6934	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5514		G2N	RESISTOR		R6935	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5515		G2N	RESISTOR		R6936	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5516		G2N	RESISTOR		R6937	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5517		G2N	RESISTOR		R6938	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5518		G2N	RESISTOR		R6939	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5519		G2N	RESISTOR		R6940	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5520		G2N	RESISTOR		R6941	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5521		G2N	RESISTOR		R6944	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
5522		G2N	RESISTOR		R6945	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
5523		G2N	RESISTOR		R6946	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
5524		G2N	RESISTOR		R6947	1-218-875-11	METAL CHIP 15K 0.5% 1/10W		
5525		G2N	RESISTOR		R6951	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5526		G2N	RESISTOR		R6955	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5527		G2N	RESISTOR		R6956	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5528		G2N	RESISTOR		R6957	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5529		G2N	RESISTOR		R6966	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5530		G2N	RESISTOR		R6967	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5531		G2N	RESISTOR		R6968	1-218-895-11	METAL CHIP 100K 0.5% 1/10W		
5532		G2N	RESISTOR		R6969	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5533		G2N	RESISTOR		R6970	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
5534		G2N	RESISTOR		R6971	1-208-826-11	METAL CHIP 68K 0.5% 1/10W		
5535		G2N	RESISTOR		R6972	1-208-826-11	METAL CHIP 68K 0.5% 1/10W		
5536		G2N	RESISTOR		R6973	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5537		G2N	RESISTOR		R6974	1-208-822-11	METAL CHIP 47K 0.5% 1/10W		
5538		G2N	RESISTOR		R6975	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5539		G2N	RESISTOR		R6976	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5540		G2N	RESISTOR		R6978	1-218-911-11	METAL CHIP 470K 0.5% 1/10W		
5541		G2N	RESISTOR		R6979	1-218-911-11	METAL CHIP 470K 0.5% 1/10W		
5542		G2N	RESISTOR		R6985	1-218-875-11	METAL CHIP 15K 0.5% 1/10W		
5543		G2N	RESISTOR		R6986	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5544		G2N	RESISTOR		R6987	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5545		G2N	RESISTOR		R6988	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5546		G2N	RESISTOR		R6989	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
5547		G2N	RESISTOR		R6990	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
5548		G2N	RESISTOR		R6991	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5549		G2N	RESISTOR		R6992	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5550		G2N	RESISTOR		R6993	1-216-833-11	METAL CHIP 10K 5% 1/10W		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5551		G2N	RESISTOR		R6994	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5552		G2N	RESISTOR		R6995	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5553		G2N	RESISTOR		R6996	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
5554		G2N	RESISTOR		R6997	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5555		G2N	RESISTOR		R6998	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
5556		G2N	RESISTOR		R6999	1-208-832-11	METAL CHIP 120K 0.5% 1/10W		
5557		G2N	VARIABLE RESISTOR		RV6601	1-241-768-11	RES, ADJ, CARBON 220K		
5558		G2N	VARIABLE RESISTOR		RV6801	1-223-387-21	RES, ADJ, CARBON 330K		
5559		G2N	TRANSFORMER	△	T6301	1-443-450-11	DC-DC CONVERTER TRANSFORMER		
5560		G2N	TRANSFORMER	△	T6501	1-443-449-11	CONVERTER TRANSFORMER (PIT)		
5561		G2N	TRANSFORMER	△	T6701	1-443-448-11	CONVERTER TRANSFORMER (PIT)		
5562		G2N	TRANSFORMER	△	T6702	1-443-448-11	CONVERTER TRANSFORMER (PIT)		
5563		G2N	THERMISTOR		TH6403	1-804-045-11	THERMISTOR		
5564		G2N	THERMISTOR		TH6901	1-804-045-11	THERMISTOR		
5565		QU	CAPACITOR		C7951	1-115-156-11	CERAMIC CHIP 1UF 10V		
5566		QU	CAPACITOR		C7952	1-115-156-11	CERAMIC CHIP 1UF 10V		
5567		QU	CAPACITOR		C7953	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5568		QU	CAPACITOR		C7954	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5569		QU	CONNECTOR	*	CN7951	1-573-768-21	PIN, CONNECTOR (1.5MM) (SMD)5P		
5570		QU	CONNECTOR	*	CN7952	1-818-486-11	PCMCIA CONNECTOR (SMD)		
5571		QU	CONNECTOR	*	CN7953	1-818-483-11	FFC/FPC CONNECTOR (ZIF) 80P		
5572		QU	CHIP CHCKER		TP7950	1-694-766-21	TERMINAL (ONBOARD CONTACT)		
5573		QH	CAPACITOR		C7203	1-162-910-11	CERAMIC CHIP 5PF 0.25PF 50V		
5574		QH	CAPACITOR		C7204	1-162-911-11	CERAMIC CHIP 6PF 0.50PF 50V		
5575		QH	CAPACITOR		C7205	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5576		QH	CAPACITOR		C7206	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5577		QH	CAPACITOR		C7207	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5578		QH	CAPACITOR		C7208	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5579		QH	CAPACITOR		C7209	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
5580		QH	CAPACITOR		C7210	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5581		QH	CAPACITOR		C7211	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V		
5582		QH	CAPACITOR		C7212	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
5583		QH	CAPACITOR		C7213	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5584		QH	CAPACITOR		C7215	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5585		QH	CAPACITOR		C7216	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5586		QH	CAPACITOR		C7217	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
5587		QH	CAPACITOR		C7218	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5588		QH	CAPACITOR		C7219	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5589		QH	CAPACITOR		C7220	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5590		QH	CAPACITOR		C7221	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5591		QH	CAPACITOR		C7224	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5592		QH	CAPACITOR		C7225	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5593		QH	CONNECTOR	*	CN7201	1-573-768-21	PIN, CONNECTOR (1.5MM) (SMD)5P		
5594		QH	CONNECTOR		CN7204	1-817-653-11	MEMORY STICK CONNECTOR		
5595		QH	DIODE		D7202	8-719-083-58	DIODE UDZSTE-173.9B		
5596		QH	DIODE		D7203	8-719-081-97	DIODE MMDL914T1		
5597		QH	DIODE		D7210	6-500-182-01	DIODE L-1503CB/1ID-F01		
5598		QH	DIODE		D7212	8-719-083-58	DIODE UDZSTE-173.9B		
5599		QH	FERRITE BEAD		FB7201	1-414-921-11	FERRITE 0UH		
5600		QH	FERRITE BEAD		FB7202	1-414-921-11	FERRITE 0UH		
5601		QH	FERRITE BEAD		FB7203	1-414-921-11	FERRITE 0UH		
5602		QH	IC		IC7201	6-703-076-01	IC XC6204B332MR		
5603		QH	IC		IC7202	6-704-548-01	IC 90C36LC1B-LF		
5604		QH	IC		IC7203	6-704-067-01	IC M24128-BWMN6T(A)		
5605		QH	IC		IC7204	6-801-402-01	IC BD4729GTR		
5606		QH	COIL		L7201	1-414-394-11	INDUCTOR 2.2UH		
5607		QH	TRANSISTOR		Q7201	6-550-363-01	TRANSISTOR 2SB1690KT146		
5608		QH	TRANSISTOR		Q7202	8-729-422-27	TRANSISTOR 2SD601A-Q		
5609		QH	RESISTOR		R7201	1-216-864-11	SHORT CHIP 0		
5610		QH	RESISTOR		R7202	1-414-228-11	FERRITE 0UH		
5611		QH	RESISTOR		R7203	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5612		QH	RESISTOR		R7204	1-216-809-11	METAL CHIP 100 5% 1/10W		
5613		QH	RESISTOR		R7205	1-216-813-11	METAL CHIP 220 5% 1/10W		
5614		QH	RESISTOR		R7206	1-216-857-11	METAL CHIP 1M 5% 1/10W		
5615		QH	RESISTOR		R7207	1-216-864-11	SHORT CHIP 0		
5616		QH	RESISTOR		R7209	1-414-228-11	FERRITE 0UH		
5617		QH	RESISTOR		R7210	1-216-803-11	METAL CHIP 33 5% 1/10W		
5618		QH	RESISTOR		R7211	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5619		QH	RESISTOR		R7212	1-216-803-11	METAL CHIP 33 5% 1/10W		
5620		QH	RESISTOR		R7214	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
5621		QH	RESISTOR		R7215	1-414-228-11	FERRITE 0UH		
5622		QH	RESISTOR		R7216	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5623		QH	RESISTOR		R7217	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5624		QH	RESISTOR		R7218	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		

No.	#	Board	Type	Δ /*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5625		QH	RESISTOR		R7219	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5626		QH	RESISTOR		R7221	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5627		QH	RESISTOR		R7222	1-216-811-11	METAL CHIP 150 5% 1/10W		
5628		QH	RESISTOR		R7223	1-216-809-11	METAL CHIP 100 5% 1/10W		
5629		QH	RESISTOR		R7224	1-216-809-11	METAL CHIP 100 5% 1/10W		
5630		QH	RESISTOR		R7225	1-216-809-11	METAL CHIP 100 5% 1/10W		
5631		QH	RESISTOR		R7226	1-216-864-11	SHORT CHIP 0		
5632		QH	RESISTOR		R7227	1-216-864-11	SHORT CHIP 0		
5633		QH	RESISTOR		R7228	1-216-864-11	SHORT CHIP 0		
5634		QH	RESISTOR		R7229	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5635		QH	RESISTOR		R7231	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
5636		QH	RESISTOR		R7232	1-216-864-11	SHORT CHIP 0		
5637		QH	RESISTOR		R7235	1-216-864-11	SHORT CHIP 0		
5638		QH	RESISTOR		R7236	1-216-864-11	SHORT CHIP 0		
5639		QH	CRYSTAL		X7201	1-760-965-21	VIBRATOR, CRYSTAL		

